

SAFETY

- Operate only under adult supervision.
- Select a safe place to operate this car. Never drive on or close to a street.
- Keep fingers, hair and loose clothing away from tires, hubs and motor while in operation.
- Avoid operating when controller battery is low.
- Only operate within your line of sight.
- Do not operate in the rain or drive through standing water.
- Do not over charge the battery.
- Packaging should be kept as it may contain important information.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries (Alkaline, standard - carbon-zinc, rechargeable – nickel-cadmium) or new and used batteries are not to be mixed.
- Exhausted batteries to be removed from the toy.
- The supply terminals are not to be short circuited.
- All packaging to be removed before giving to child.
- **WARNING:** strangulation hazard – long cord.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING:
CHOKING HAZARD - Small parts.
Not suitable for children under 3 years.



Manufactured and
Imported by



BROOKLYN, NY 11205
www.kidirace.com
© 2019 KIDIRACE



For Ages
3+

 


Police Car

Owner's Manual
Item # 2411



Battery Charging

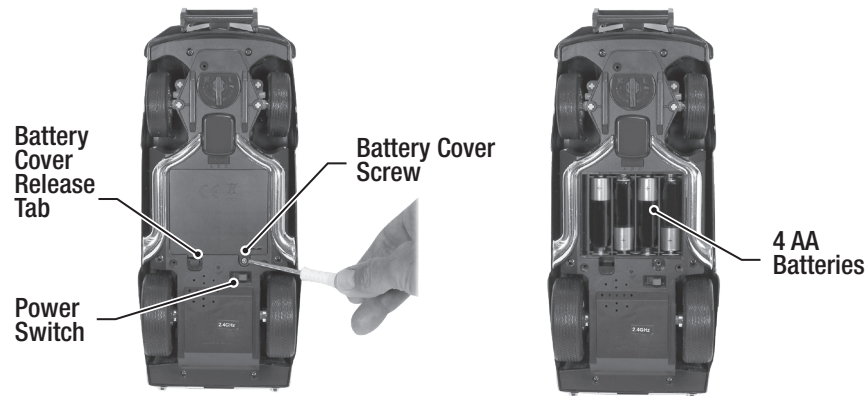


Note: Carefully remove all content from the packaging. Make sure the power switch on the car is set to the OFF position. Locate the battery compartment on the bottom of the car, and loosen the screw on the battery cover and press release tab on cover. Insert 4 AA batteries correctly by matching the + and - polarity markings as indicated. Replace the battery compartment cover and tighten screw.

Controller Batteries




Remove the battery cover screw located on the back of controller and press the battery door release tab. Open the cover and insert (2) AA batteries as shown. Close the cover and re-tighten the battery cover screw. Note: The battery terminals must be positioned as shown.

CAR ALIGNMENT

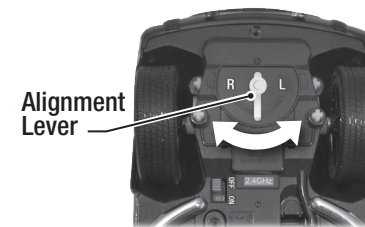

To keep the car driving straight locate the alignment level on the bottom of the car. Move the lever in the direction the car needs to go in order to drive straight. Make small adjustments.


POWER

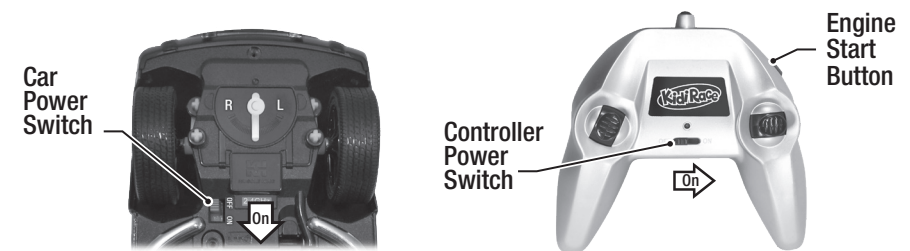

To power on, locate the on/off switch on the front controller and switch that to the on position. Next locate the on/off switch on the bottom of car and switch that to the on position. Press the right top button on the controller to start engine.

Note: Always turn the controller on first.

OPERATION

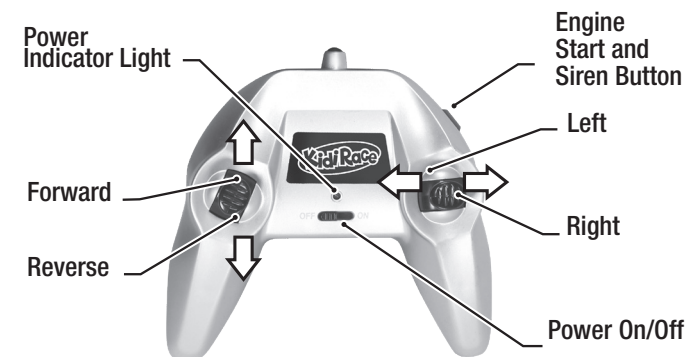

Press the engine start and the engine sound will begin. Press up on the remote toggle to move the car FORWARD. Press down remote to move the car BACKWARD. Push remote toggle right to TURN RIGHT while moving. Push remote toggle left to TURN LEFT while moving.