



# bumpboxx<sup>®</sup>

## USER GUIDE



# FEATURES

1. The bumpboxx™ Freestyle uses an all-inclusive performance audio receiver. This receiver features multiple media capabilities to play all of your music and has bumpboxx's™ proprietary built-in amplifier, all designed for our woofers & horns for a complete all-around crisp sound and deep bass kick.

2. Your bumpboxx™ Freestyle features a heavy duty rechargeable battery that can play at maximum volume for up to 8-10 hours! At normal listening volume, your bumpboxx™ Freestyle will play up to 12 hours between charges. NO DDD batteries to buy!

3. Music Media Choices:

- Bluetooth enabled, connects any Bluetooth enabled electronic device
- Bluetooth connects: Short press "mode" button to switch Bluetooth. On your smartphone, scan and select "Bumpbox" to match.
- Auxiliary Port, connects to any device with a 3.5mm auxiliary cable (Not Supplied)
- USB & SD ports for any pre-recorded music you may already have. Think demo tapes, mixes, etc...
- Microphone Inputs. Comes with wireless microphone and TRS input jack for your wired microphone



# FEATURES


## 3. Music Media Choices (Continued):

- Guitar capable with TRS input jack & separate volume control
- 1 “Line In” and 2 “Line Out” jacks. This unique bumpboxx™ feature allows you to “daisy chain” multiple bumpboxx™ Freestyle units together and play the same media through all of them at once.
- Charging port plugs directly into the side panel for charging the internal battery.

## 4. Wireless Remote

Additional features include: EQ: Bass, Treble, Volume, Microphone Volume, Guitar Volume. Perfect & portable for any event. Note the EQ button works in USB mode only!

# PANEL

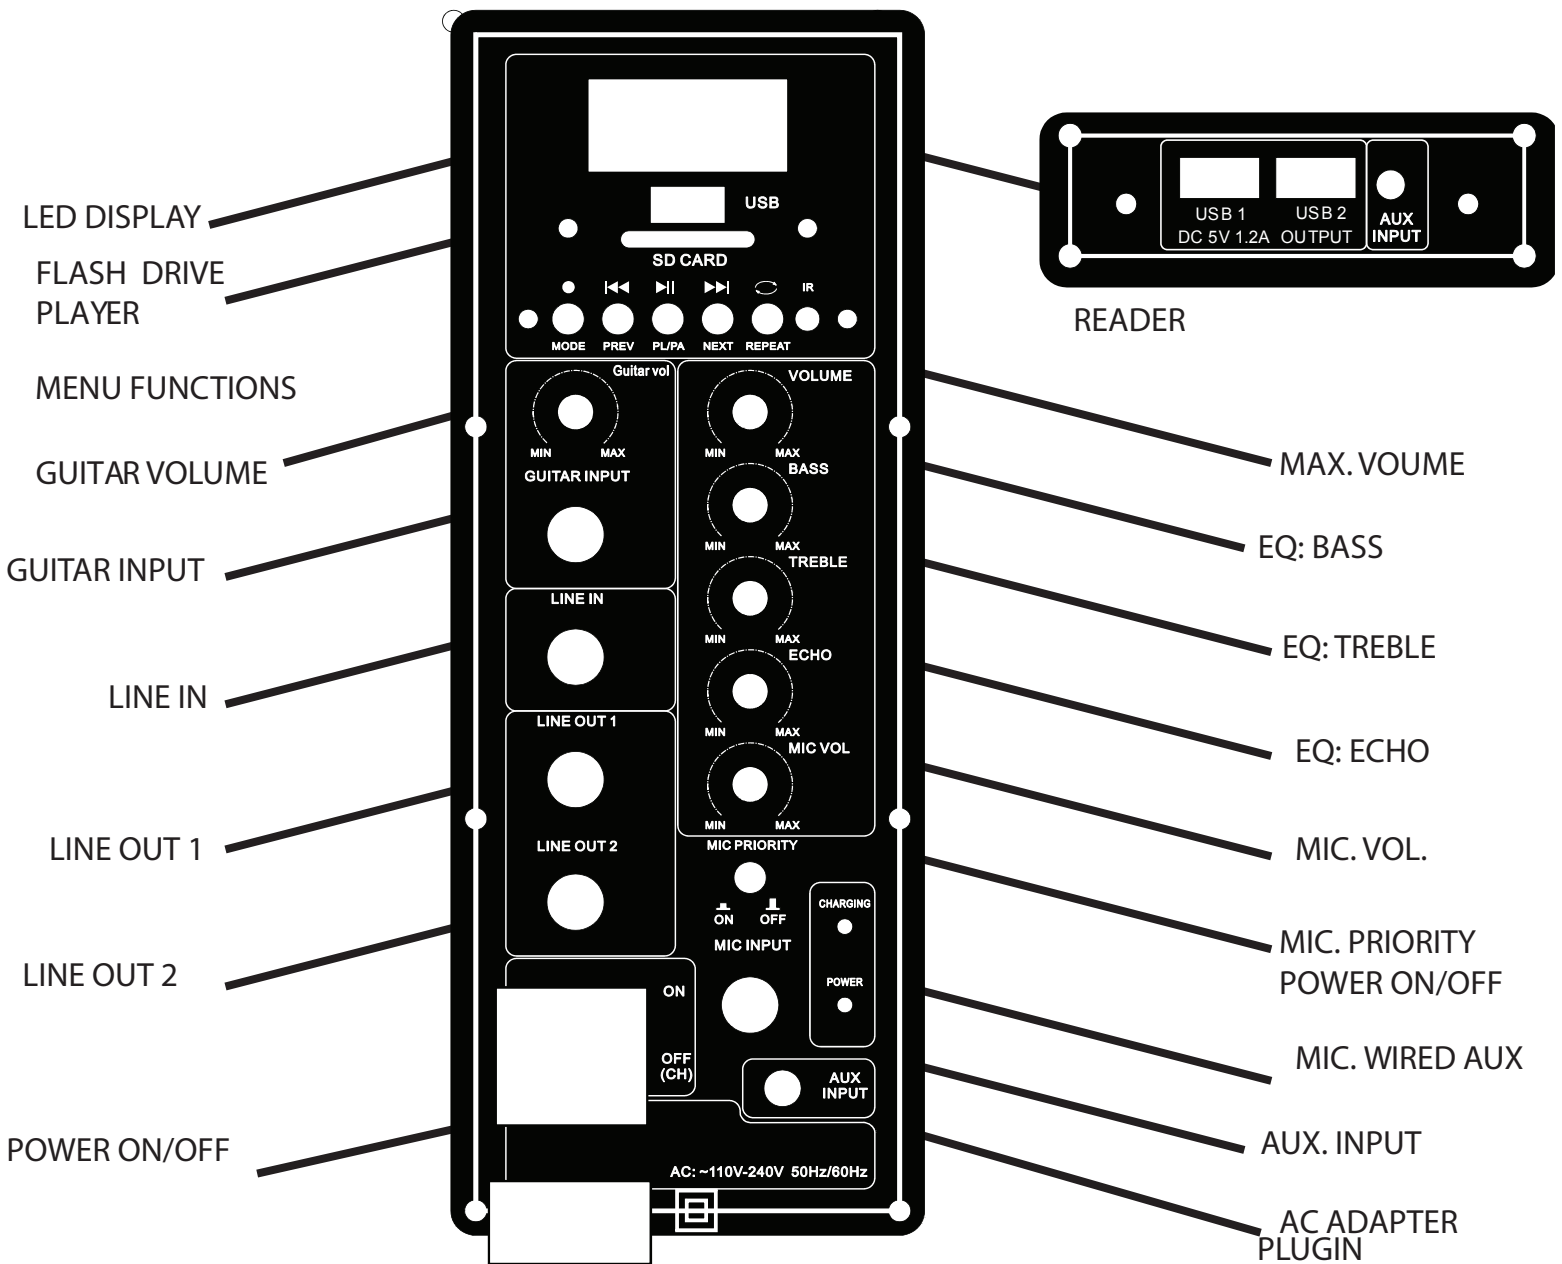



# REMOTE CONTROL FUNCTIONS

## 1. POWER BUTTON

2. **PLAY/PAUSE BUTTON:** Press the arrow keys to enter the desired track then press the play button. If you input the desired track and you are out of range it will continue to play the current track.

3. **EQ BUTTON:** The sound equalizer change mode.  
MODES: Natural, Rock, Pop, Classic, Soul, Jazz, DBB & DRS WOW.

4. **STOP BUTTON:** Will stop the current track playing.

5. **MUTE BUTTON:** Mute the current sound with this button.

6. **PREVIOUS BUTTON:** Will play the previous track in the play list.

7. **NEXT BUTTON:** Will skip to the next track in the play list.

8. **VOLUME DECREASE BUTTON:** decrease current volume.

9. **VOLUME INCREASE BUTTON:** increase current volume.

## 10. REPEAT BUTTON:

- Press once for one-time repeat all
- Press twice for random play
- Press three times for repeat all
- Press four times for repeat all


## 11. USB/SD/MMC CARD FUNCTION

12. **ARROW BUTTONS:** left & right to switch between or go backwards between specific tracks

13. **PLAY & PAUSE BUTTON** will record the USB thumb stick only



# REMOTE CONTROL FUNCTIONS

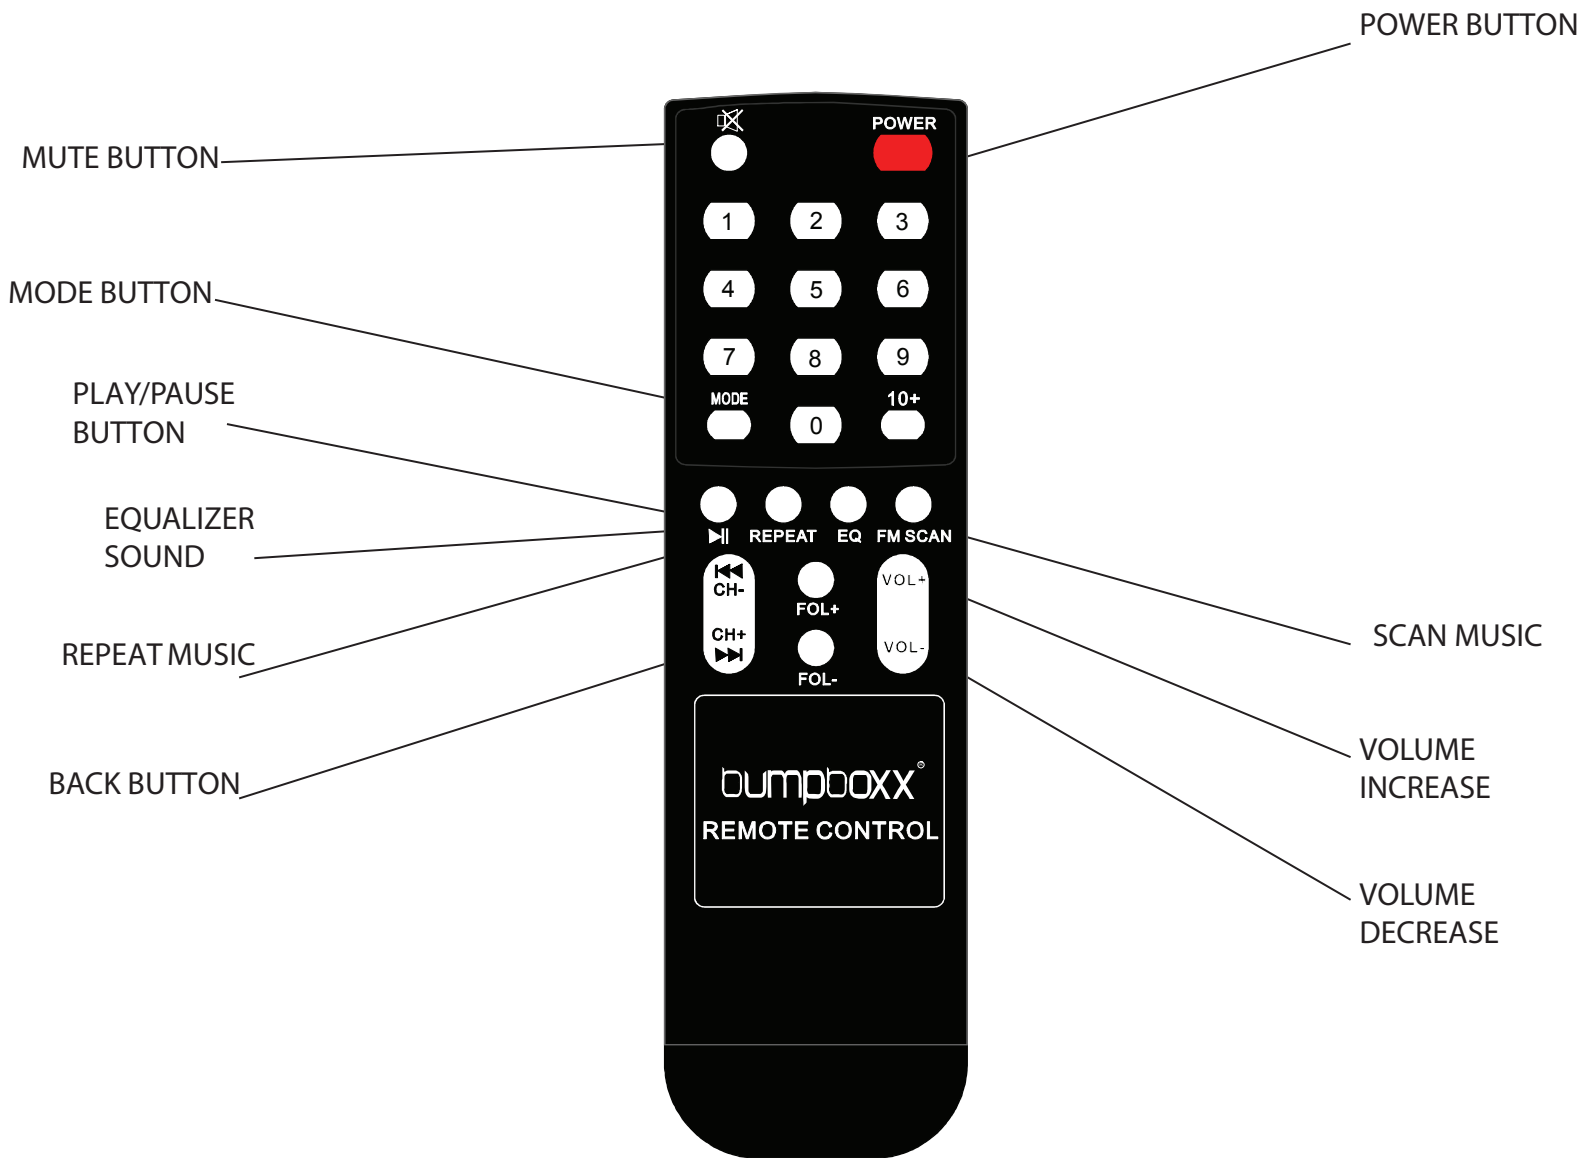



# OPERATION INSTRUCTIONS

## 1. POWER BUTTON

2. **PLAY/PAUSE BUTTON:** Press the arrow keys to enter the desired track then press the play button. If you input the desired track and you are out of range it will continue to play the current track.

3. **EQ BUTTON:** The sound equalizer change mode.  
MODES: Natural, Rock, Pop, Classic, Soul, Jazz, DBB & DRS WOW.

4. **STOP BUTTON:** Will stop the current track playing.

5. **MUTE BUTTON:** Mute the current sound with this button.

6. **PREVIOUS BUTTON:** Will play the previous track in the play list.

7. **NEXT BUTTON:** Will skip to the next track in the play list.

8. **VOLUME DECREASE BUTTON:** decrease current volume.

9. **VOLUME INCREASE BUTTON:** increase current volume.

## 10. REPEAT BUTTON:

- Press once for one-time repeat all
- Press twice for random play
- Press three times for repeat all
- Press four times for repeat all

## 11. USB/SD/MMC CARD FUNCTION

12. **ARROW BUTTONS:** left & right to switch between or go backwards between specific tracks

**NOTE:** For best longevity of battery it is advised to tip off charge after every use.



# TROUBLE-SHOOTING

## NO SOUND OR SOUND KEEPS CUTTING IN AND OUT?

Please make sure your bumpboxx is fully charged. Another reason for sound cutting out is you are out of Bluetooth range.

## I CANNOT PAIR MY BLUETOOTH TO MY BUMPBOXX

Please try turning the Bluetooth off & then on in your phone settings. Then press the Menu Button on the bumpboxx until the bluetooth “BLUE” pairing is set, you will hear a chime and then another when you pair to your Bluetooth Device.

## MY LED SOUND MOTION DISPLAY ISN'T WORKING

Please move your bumpboxx device out of direct sunlight. The LED display isn't as visible with UV rays from the sunlight.

## MY REMOTE CONTROL ISN'T WORKING

Please make sure you have fresh batteries installed or make sure you are aiming directly at the side panel. We use an IR remote so you will need to point at the side panel.

**THE BLUE LIGHT WILL BLINK WHILE CHARGING.** When your bumpboxx is fully charged it will be solid blue.

## MY VOLUME IS VERY LOW EVEN THOUGH VOLUME IS MAX

Try pressing and holding the >> button until it reads 30 in the display box. This is the volume override.



#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- -

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.