

FCC ID: 2ABQG-36882 IC: 5830A-36882



# PHANTOM


GPS RANGEFINDER www.bushnellgolf.com

#### FCC AND IC ID INFORMATION

This product complies with the FCC electronic labeling act. The FCC and IC ID numbers are listed on the **ABOUT** screen in the **SETTINGS** menu.

### To view this information:

- Press and hold (I.5 sec) the PWR button to turn on the device. If the display does not activate, connect the device to a smartphone charger (or PC) using the provided USB cable and plug it into an AC outlet.
- From the Main Menu, press the Down button to highlight "SETTINGS", then press the Select button to view the Settings menu.
- 3. Keep pressing the Down button until "ABOUT" is highlighted, then press the Select button.
- 4. The FCC and IC ID#s are located at the bottom of the screen.
- 5. Press and hold (1,5 sec) the PWR button to turn off the device.

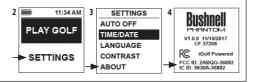









# A full user manual detailing the additional features of the Phantom and other product information can be downloaded at: <a href="www.bushnellgolf.com">www.bushnellgolf.com</a>

## A SAFETY WARNINGS:

- Do not attempt to open the Phantom. Risk of explosion if battery is replaced with incorrect type.
- Do not attempt to open, disassemble, service, or replace the internal battery. Do not crush, puncture
  or short the battery's external contacts. Properly recycle or dispose of the battery. Do not dispose
  in fire or water.
- Do not expose to strong chemicals such as gasoline and alcohol, or to temperatures above 140° F (60°C).
- The unit is IPX4 rated (resistant against water splashes from any direction), but is not fully waterproof
  and should not be submerged in water at any depth, or exposed to heavy rain or other strong streams
  of water.

▲ WARNING: Mounting accessory included with device contains a Neodymium magnet. Magnets could affect the functioning of pacemakers and implanted heart defibrillators. If you use these devices, keep sufficient distance from magnet. Warn other who wear these devices from getting too close to magnets.

- . Unsafe handling could cause jamming of fingers or skin under magnet.
- Magnet may lose part of its adhesive force permanently if exposed to temperatures above 175° F (80°C).
- Magnets produce far-reaching, strong magnetic field. They could damage TVs and laptops, computer hard drives, credit and ATM cards, data storage media, mechanical watches, hearing aids and speakers, Keep unit away from devices and objects that could be damaged by strong magnetic fields.

## Legal Disclaimer

By using this product, you agree that Vista Outdoor Inc. will not be held legally responsible for any injury or damage to you or any person or property caused by the user's improper operation and/or poor judgment while using this product, Note: See Limited Warranty in full user manual for other limitations to our liability.





