

iHome

Bluetooth®

**XT-27****TRUE WIRELESS
EARBUDS**

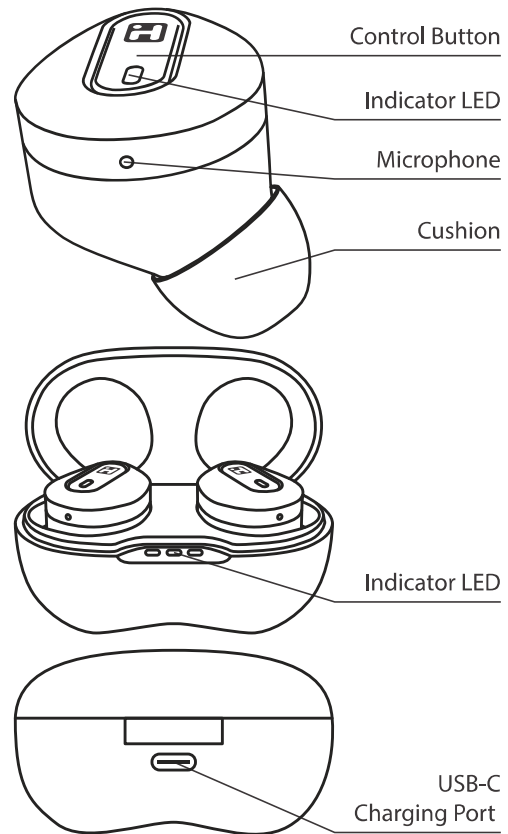
1

Package Contents:

- XT-27 True Wireless Earbuds
- Charging Travel Case
- 8 Ear Cushions in 3 sizes
(2 Small, 2 Large, 4 Medium)
- USB-A to USB-C Charging Cable
- Instruction Manual

Specifications:

Bluetooth® Version: 5.1
 Working distance: 33 ft
 Charge Connector: USB-C
 Speaker Size: Ø6 mm
 Frequency Response: 20Hz-20KHz
 Sensitivity: 85 dB+/- 1.5 dB
 Impedance: 32 Ohm
 Standby time: >20 hrs
 Charging voltage: 5V/1A
 Case Battery: 400 mAh
 Case Charge time: 1.5 hrs
 Earbuds Battery: 2 x 45 mAh
 Earbuds Charge time: ±1 hr

Operation Guide

2 3

Getting Started

Before using this device, fully charge it. Charging instructions can be found on page 6.

Open the charging case and take out the earbuds. Both LED lights will flash red and blue until one of the earbuds flashes red and blue, while the other earbud flashes blue, indicating that the right and left earbuds have synced to each other.

Pairing

1. Go to Bluetooth® Settings on your mobile device.
2. Turn Bluetooth® ON, on your device.
3. On your Bluetooth® device, select "iHome XT-27" from the list of available devices.
4. The earbud indicator LEDs will shine solid blue to indicate they are connected.

4

Basic Functions

Double click the control button on either earbud to play or pause the audio.

Right Earbud:

- Click and hold to skip to the next audio track.
- Single click to raise the volume.

Left Earbud:

- Click and hold to skip to the previous audio track.
- Single click to lower the volume.

Phone calls:

When there is an incoming call, the unit will pause the playback and ring to alert you of the call. Phone call functions work the same on either of the earbuds.

To answer an incoming call, single click the control button of the desired earbud. To end a call, double click the control button. To reject an incoming call, click and hold the control button.

*Volume controls may not work during phone calls with some smartphone models.

Troubleshootings

Earbuds do not sync with each other:

1. Place the earbuds in the case, then take out the earbuds, ensuring both earbuds are turned on.
2. On each earbud, press and hold the control surface for 5 seconds. The earbud will turn off after the LED flashes red and blue.
3. Replace the earbuds in the charging case.
4. Repeat the Getting Started process.

Earbuds do not pair to device:

1. Turn the Earbuds OFF by pressing the control surface on each earbud until the LED blinks red, and then turns off.
2. Replace the earbuds in the case. Turn your device's Bluetooth® OFF and then back ON. Then repeat the pairing process.

Charging

1. Replace the earbuds in the case.
2. Connect the USB-C charging cable to the charging port on the back of the case.
3. Plug the cable into a standard USB 5V/1A or 5V/2A.

When you plug the case into a charging mechanism the indicator lights on the front of the case flashing glow. This means the case battery is being charged.

While this is happening the lights on the buds inside the case glow solid, which indicates they are being charged.

When fully charged the case LED will glow solid and the earbud LEDs will shut off.

4. When fully charged, unplug the charging cable from the power source.

If want to charge the earbuds from the charge case internal battery, simply replace them in the case. The LED on the front of the case glows solid white and the LEDs on the buds will glow solid red.

Warnings

- Do not use this unit for anything other than its intended use.
- Do not puncture, throw, drop, bend, or modify this product.
- Do not throw this product into fire or water.
- Do not short-circuit the battery with any metal or metallic objects.
- Do not expose this product to corrosive liquids such as salt water.
- Do not operate the unit if it has been wet or moist to prevent against electric shock and/or injury to yourself and damage to the unit.
- Do not allow children to play with this product as it is not a toy, and may present a choking hazard.
- Avoid leaving your device in direct sunlight, such as on the dashboard, console, or seat of a vehicle.
- Do not leave your device, or use your device, in any area where the temperature is likely to drop below 32°F, or may exceed 140°F, such as inside a closed vehicle on a hot day.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Protect your hearing by always listening at a safe level. Prolonged use at elevated volumes may affect your hearing capacity and could result in hearing loss.
- Use the earbuds with this charging case only.
- To avoid damage to the charging case, please only use a USB 5V/1A or higher charger.
- In order to ensure the battery life, charge normally at least once a month.

FCC FCC ID: 2AHN6-AUBE212

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Warranty

Bytech NY INC. warrants this product to be materially free from defects and workmanship to the original purchaser for a period of 12 months from the original purchase date. Bytech responsibility with regard to this limited warranty shall be limited solely to repair or replacement at its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. At any time during the 12 months period following the purchase, the product fails due to defects in material or workmanship, return the defective product (with freight prepaid) with proof of purchase.

WWW.BYTECHINTL.COM
Bytech NY Inc
2585 West 13street
Brooklyn NY 11223
(718) 449-3700



©2020 BYTECH NY INC.

*All trademarks and copyrights are the property of the respective companies.