



MODEL NO.: BC-AU-BS-108

**User Manual
Lantern Speaker**



Package includes

- 1-Lantern Color Changing Speaker
- Micro USB charge cable
- User Manual

Safety instructions

- Never disassemble the Bluetooth® Speaker in an attempt to make any repairs as this could result in electrical shock, burns or product failure.
- Use extra caution when using the Bluetooth® Speaker around children.
- Do not use the speaker in extremely high or low temperatures.
- Product is not waterproof, do not use around or in water.
- Product is not covered under warranty when the product has metal rust, surface spalling and any other natural oxidation.
- Damage, shock, and/or injury can occur if these warnings are not heeded properly.

Pairing

1. Click the Power switch on the on the speaker to the ON position, to power up the speaker and enter pairing mode (the default mode.) The LED indicator light will blink while in pairing mode. You will hear a voice prompt that the speaker is ready for pairing.
2. On your Bluetooth® enabled smartphone, tablet or media player, navigate to the Bluetooth® setting menu, turn on the Bluetooth® feature, and search for new devices.
3. Search for "BC-BS-108" on the pairing device.
4. Tap this model to select it and successfully pair it with the speaker. The speaker will beep. You are now paired, connected and ready to play music.

Auxiliary Line-in (AUX-IN)

1. For other compatible music player devices, or MP3/MP4 players, please use the an auxiliary audio line cable (not included) to connect from your external device's "LINE OUT" jack to the "AUX-IN" jack of this speaker;
2. Press the "MODE" button to switch to the AUX-IN;
3. While using an external device, all functions will be controlled by the external device except for the PLAY/PAUSE button.

USB Flash Drives & TF Cards

The speaker can play MP3 files. Inserting a USB flash drive or TF card will automatically switch the speaker mode to play from that device.

Charging

- Connect the small end of the Micro USB charging cable (included) to the Micro USB port located on the back of the speaker. Connect the larger end of the cable to your computer's USB port or an AC adaptor (not included);
- The LED indicator will pulsate while charging, and stop pulsating when speaker is fully charged.

Lamp Functions

1. Once the speaker is powered up, touch the speaker grill once (on the top of the device), and the LED lamp light will be turned to white color;
2. Continuing to tap the grill will increase the brightness of the white LED lamp light. There are 3 levels of brightness, followed by the LED lamp light being turned off;
3. To change the color of the LED lamp light, press and hold the grill 3 seconds, the LED lamp light will be changed to red. Every subsequent press will cycle through 7 vibrant LED lamp light colors: Red, Green, Blue, Light Green, Light Blue, Purple, and Multi-Color mode. In multi-color mode, the speaker will automatically transition between colors by itself. To return to the white LED lamp light, press and hold the grill for 3 seconds.

Controls Index

1. MODE - Change Mode between Bluetooth® and Aux-Line
2. Long Press Volume Up; Short Press Next Song, FM-Mode: Next station
3. Long Press Volume Down; Short Press Previous Song, FM-Mode: Previous station
4. Short Press Play/ Pause, Answer / End call; Long Press for 3 seconds to disconnect Bluetooth®

After playback starts, you can control the music with your connected device or the buttons of the Bluetooth® speaker:

- Press the Play/Pause button once to answer/end calls. Press either of the volume buttons to adjust the volume on the speaker;
- Note: Volume on your device and on the speaker are controlled separately. All audio, including music, games, videos, and notifications will be routed through the speaker. In addition, on-speaker controls only when connected via Bluetooth®, and will not work when your device is connected via AUX cable.

Bluetooth® Specifications

- Bluetooth®** technology
- Bluetooth®** range: up to 33 feet (10m)
- Speaker: 5W
- Battery: 3.7V 600mAh
- Play time: up to 4 hours
- Charge time: up to 2 hours

BICONIC

Bytech NY INC. warrants this product to be free from defects in materials and workmanship to the original purchaser for a period of 12 months from the original purchase date. Bytech responsibility with regard to this limited warranty shall be limited solely to repair or replacement as its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. At any time during the 12-month period following the purchase, the product fails due to defects in material or workmanship, return the defective product (with freight prepaid) with proof of purchase. Please include \$5.00 for return shipping and handling.

WWW.BYTECHINTL.COM

Bytech NY Inc.
2585 West 13street
Brooklyn NY 11223
(718) 449-3700
©2022 BYTECH NY INC.

*All trademarks and copyrights are the property of the respective companies

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

. Increase the separation between the equipment and receiver.

. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

. Consult the dealer or an experienced radio/TV technician for help.

Caution: This device not explicitly approved by manufacturer could

. Any changes or modifications void your authority to operate this equipment. RF Exposure Information

The device was evaluated to meet general RF exposure requirements.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.