



Contains a Rechargeable  
600 mAh Built-In  
Lithium Battery



# JellyFish S P E A K E R

Notice:  
Please read user manual carefully and keep it for your records.

## Package includes:

- 1(One) JellyFish Speaker 9.1in. x 4in. x 4in. (23.2cm x 10.2cm x 10.2cm)
- 1(One) USB Type-C Cable 11.8in.(30cm)
- 1(One) User Manual

## Safety instructions

- Never disassemble the Bluetooth Speaker in an attempt to make any repairs as this could result in electrical shock, burns or product failure;
- Use extra caution in high temperatures;
- Do not use product in a hospital or on an airplane;
- Do not expose the device to direct sunlight, heat or flame;
- Product is not covered under warranty when the product has metal rust, surface spalling and any other natural oxidation;
- Damage, shock, and/or injury can occur if these warnings are not heeded;
- Device may become warm while charging;
- Make sure you always turn the product off and the power outlet off completely before unplugging the product;

- Make sure the product has plenty of ventilation;
- Do not press the buttons too hard as it could damage the product;
- Only use dry cloth to keep product clean from dust;
- Do not use chemicals on this product;
- Never try to repair this product yourself, take it to a certified technician. Trying to remove panels or repairing the unit yourself could lead to electric shock. When the unit is not in use, make sure it is correctly turned off and stored in a cool dry place;
- Do not insert foreign objects into the product;
- Avoid dropping the product, as harsh impacts could damage the product.

## CHARGING:

- Connect the small end of the Type-C USB charging cable (Included) to the Type-C USB port located on the base of the JellyFish Speaker. Connect the larger end of the cable to your computer's USB port or an AC adaptor (not included).
- The red LED indicator light stays on while charging, and when fully charged the light turns off.

## PAIRING:


1. Place speaker within 33 feet of the Bluetooth enabled device.
2. Long press the **ON/OFF** button.
3. On your Bluetooth enabled smartphone, tablet or media player, navigate to the Bluetooth setting menu, turn on the Bluetooth feature, and search for new devices.
4. Find the model's Bluetooth name "**BY-BS-179**". Connect with the model by clicking the name on the smartphone. "Connected" message will appear to indicate it connected successfully.

## Low battery alert:

When the speaker is low in battery, it will sound an alert every minute until it is connected to a power source.

## NOTE:

- The speaker will automatically power down if it has not connected to a wireless device within 5 minutes.
- The speaker will automatically power down after 5 minutes if the wireless device is disconnected.
- The speaker will automatically power down after 5 minutes if the wireless device is moved out of range.
- The speaker's volume can be adjusted on the wireless device.
- The speaker's available power will be shown on the wireless device.

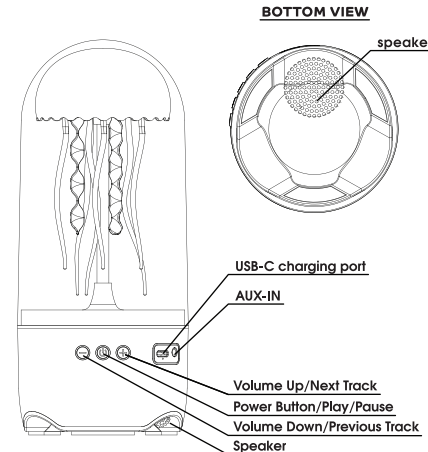

Function	Instruction
Power ON	Long press "Power button" for 3 seconds.
Power OFF	Long press "Power button" for 4 seconds.
Previous Track	Short press "-" button at the beginning of the track.
Next Track	Short press "+" button.
Volume	Long press "+" button to increase volume. Long press "-" button to decrease volume.
AUX-IN	Plug a 3.5mm AUX cable into the AUX-in port, the mode will automatically change to line-in.
Light	Default mode is breathing light, Double press "Power button" to switch between light modes: Breathing - Colorful Light - Light Off.
Jelly Fish	Double click "*" button to control movement.
FM Radio/ Bluetooth	Plug in a 30cm charging cable (included) to use as an antenna, and press the next track button to switch radio stations.
Play/Pause	Click "Power button" to Play or Pause.
TWS mode	1. Begin the TWS pairing process with both speakers disconnected from a wireless device and powered off, also make sure that the devices are forgotten from the Bluetooth connections list. 2. Press and hold the power button on both devices at the same time, the two speakers will detect each other and connect as if they were wireless earbuds. One speaker will have a flashing blue light, the other will not. This indicates that the speakers have paired to each other. 3. Pressing the "Power button" 3 times on each JellyFish speaker in quick succession will active TWS mode, Pressing "Power button" 3 times on either speaker will deactivate TWS mode. The blue lights on both speakers will flash searching for an individual wireless connection. 4. Pair the speakers with your device, the two speakers will act as though they are one connection. When the connection to the wireless device is made, both blue lights on both speakers will go out.

## Specifications

- Sound Output: 5W
- Charge Time: up to 2 hours
- Play Time: up to 6 hours
- Operating Range: 10m
- Battery: 600 mAh Built-In Rechargeable Li-Ion Battery
- Compatible with most Bluetooth® enabled tablets and smartphones.

## Frequently Asked Questions

Questions	Solutions
Unsuccessful Pairing for Connection	1. Make sure the speaker is in Bluetooth mode. 2. Make sure the speaker has not been connected with another device. 3. Check if there are many Bluetooth devices working around, which may interfere with Bluetooth connection. 4. Try to restart the Bluetooth on your phone or tablet and reconnect the speaker again.
No voice or Distortion of sound	1. Check the volume of your phone or the speaker and adjust the volume. 2. Check if the battery is too low, please recharge it.
Music breaking play	1. Check if the device is beyond the effective connection distance. 2. Check if there is any obstacle between the speaker and your device.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
FCC Radiation Exposure Statement:  
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

## WARRANTY- 12 MONTH

Please visit our website [Bytechintl.com/warranty](http://Bytechintl.com/warranty)

©2024 BYTECH NY INC.  
BYTECH™ is a registered trademark of Bytech NY INC.  
Bluetooth® is a registered trademark of SIG.Inc  
\*All Trademarks and copyrights are the property of the respective companies.  
\*Photos are for illustration purposes only.  
\*CLASS 1 LED PRODUCT

## BYTECH

Contact Info:  
2585 West 13th Street,  
Brooklyn, NY 11223  
**BYTECHintl.com**

© 2024 BYTECH NY INC.



**FCC ID: 2AHN6-AUBS179**