

iHome Bluetooth®



## AX-38 TRUE WIRELESS EARBUDS

1

### Package Contents:

- AX-38 True Wireless Earbuds
- Charging Travel Case
- 8 Ear Cushions in 3 sizes (2 Small, 2 Large, 4 Medium)
- USB Charging Cable
- Instruction Manual
- Lanyard

### Specifications:


Bluetooth® Version: 5.0  
Working distance: 33 ft  
Charge Connector: Micro USB  
Speaker Size: Ø6 mm  
Frequency Response: 20Hz - 20kHz  
Sensitivity: 105 dB ±3 dB  
Charging voltage: 5V/500 mA  
Case Battery: 400 mAh  
Case Charge time: 2 hrs  
Earbuds Battery: 2 x 50mAh  
Earbuds Charge time: 1.5 hr  
Distortion Rate: <5% at 1KHz

### Operation Guide

Indicator LED

Control Button

Microphone

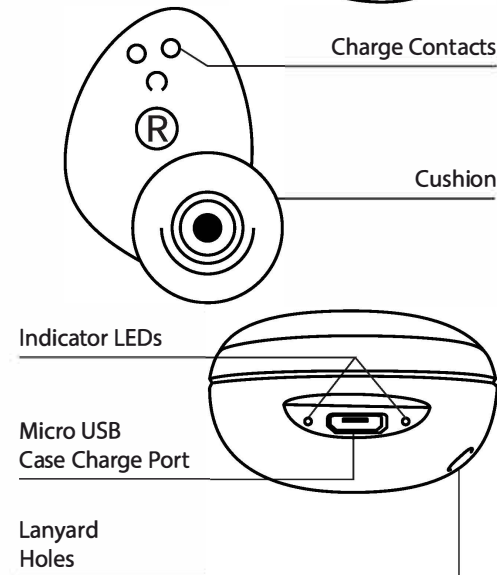

2 3

### Getting Started

Before using this device, fully charge it. Charging instructions can be found on page 6.

Open the charging case and take out the earbuds. Both LED lights will flash red and blue until one of the earbuds flashes red and blue, while the other earbud flashes blue, indicating that the right and left earbuds have synced to each other.

### Pairing

1. Go to Bluetooth® Settings on your mobile device.
2. Turn Bluetooth® ON, on your device.
3. On your Bluetooth® device, select "iHome AX-38" from the list of available devices.
4. The earbud indicator LED will flash blue to indicate they are connected.

4

### Basic Functions

On either earbud, hold the control button for 3 seconds to power on or off.

#### Right Earbud:

- Double press the control button to play or pause the audio.
- Press and hold to skip to the next audio track.
- Single press to raise the volume.

#### Left Earbud:

- Press and hold to skip to the previous audio track.
- Single press to lower the volume.

#### Phone calls

When there is an incoming call, the unit will pause the playback and ring to alert you of the call. Phone call functions work the same on either of the earbuds.\*

To answer an incoming call, single press the control button of either earbud. To end a call, double press the control button. To reject an incoming call, press and hold the control button.

\*Volume controls may not work during phone calls with some smartphone models.

pages 5 &amp; 6

pages 7 &amp; 8

back

5

### Troubleshootings

#### Earbuds do not sync with each other:

1. Place the earbuds in the case, then take out the earbuds, ensuring both earbuds are turned on.
2. On each earbud, press and hold the control surface for 5 seconds. The earbud will turn off after the LED flashes red 3 times.
3. Replace the earbuds in the charging case.
4. Repeat the Getting Started process.

#### Earbuds do not pair to device:

1. Turn the Earbuds OFF by pressing the control surface on each earbud until the LED blinks red, and then turns off.
2. Replace the earbuds in the case. Turn your device's Bluetooth® OFF and then back ON. Then repeat the pairing process.

### Charging

1. Replace the earbuds in the case.
2. Connect the Micro USB charging cable to the charging port on the front of the case.
3. Plug the cable into a standard USB 5V/500 mA or higher power output.

When you plug the case into a charging mechanism the light to the left of the case charge port turns red. This means the case battery is being charged.

While this is happening the lights on the buds inside the case will be off.

The red light on the front of the case will blink when fully charged and go out if the case is unplugged from the power source.

4. When fully charged, unplug the charging cable from the power source.

If you want to charge the earbuds from the charge case internal battery, simply replace them in the case. The indicator light to the right of the charge port will glow white to indicate case charging and will turn off when charging is complete.

6 7

### Warnings

- Do not use this unit for anything other than its intended use.
- Do not puncture, throw, drop, bend, or modify this product.
- Do not throw this product into fire or water.
- Do not short-circuit the battery with any metal or metallic objects.
- Do not expose this product to corrosive liquids such as salt water.
- Do not operate the unit if it has been wet or moist to prevent against electric shock and/or injury to yourself and damage to the unit.
- Do not allow children to play with this product as it is not a toy, and may present a choking hazard.
- Avoid leaving your device in direct sunlight, such as on the dashboard, console, or seat of a vehicle.
- Do not leave your device, or use your device, in any area where the temperature is likely to drop below 32°F, or may exceed 140°F, such as inside a closed vehicle on a hot day.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Protect your hearing by always listening at a safe level. Prolonged use at elevated volumes may affect your hearing capacity and could result in hearing loss.
- Use the earbuds with this charging case only.
- To avoid damage to the charging case, please only use a USB 5V/1A or higher charger.
- In order to ensure the battery life, charge normally at least once a month.

### FCC ID: 2AHN6-HC-AU-BE-110

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

8 9

### Warranty

Bytech NY INC. warrants this product to be materially free from defects and workmanship to the original purchaser for a period of 12 months from the original purchase date. Bytech responsibility with regard to this limited warranty shall be limited solely to repair or replacement at its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. At any time during the 12 months period following the purchase, the product fails due to defects in material or workmanship, return the defective product (with freight prepaid) with proof of purchase.

WWW.BYTECHNY.COM

Bytech NY Inc  
2585 West 13street  
Brooklyn NY 11223  
(718) 449-3700



©2020 BYTECH NY INC.

\*All trademarks and copyrights are the property of the respective companies.

#### Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### Label and Location

TWS Slider TCH AX-38  
Model No.: HC-AU-BE-110  
FCC ID: 2AHN6-HC-AU-BE-110

AX-38 User Manual v1.2 082820

Black ink only, thin glossy paper, staple saddle bound, 5 sheets front & back