

Canon

CANON INC.

Canon Europa N.V.

P.O. Box 2262, 1180 EG Amstelveen, the Netherlands

Canon UK Ltd.

Ribcon Way
Luton Bedfordshire LU4 9UR
Telephone 0870-241-2161

Canon Australia Pty. Ltd

1 Thomas Holt Drive, North Ryde, N.S.W. 2113, Australia
Telephone 805-2000, Fax 887-4484

Canon New Zealand Ltd

Fred Thomas Drive, Takapuna, P.O. Box 33-336, Auckland, New Zealand
Telephone 486-1570, Fax 486-6420

Canon Singapore Pte. Ltd

79 Anson Road #09-01/06, Singapore 079906
Telephone (65)-532-4400, Fax (65)-221-2939

Canon Hongkong Company Ltd

9/F, The Hong Kong Club Building, 3A Chater Road, Central, Hong Kong

Canon Latin America, Inc.

Sales & Enquiries: 6505 Blue Lagoon Drive Suite 325 Miami FL 33126 USA



Printed on 70% reused paper.

PUB.DIE-158
0201A/Ni9.5


© CANON INC. 2001
DY8-9020-094-000

PRINTED IN JAPAN
IMPRIME AU JAPON

Canon **MV450/MV450i**

DIGITAL VIDEO CAMCORDER

Instruction Manual

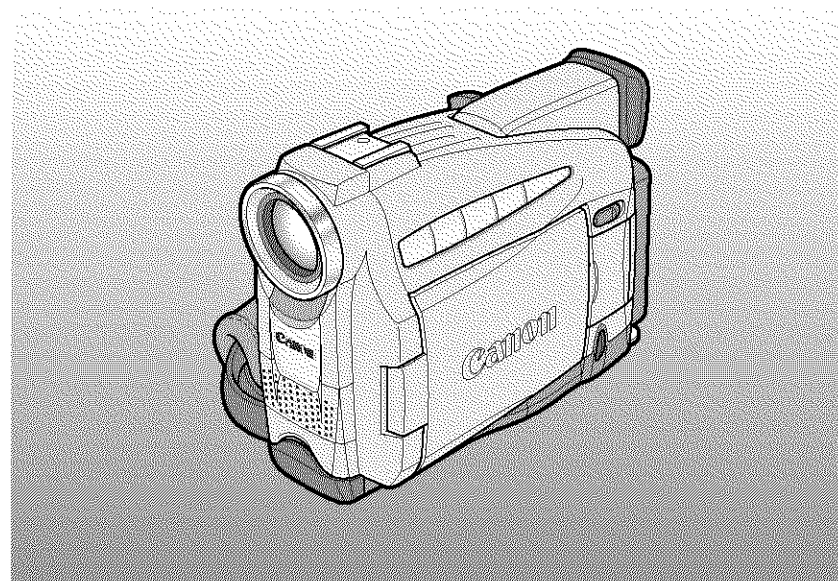

Canon

MiniDV Digital Video Cassette

MV450/MV450i

This instruction book explains the use of the MV450 and MV450i camcorders. The main difference between these models is that the MV450i includes a DV Recording and Analog Line-in Recording function. Please note that illustrations and explanations in this instruction book refer mainly to the MV450 model.

PAL

Introduction

Mastering
the Basics

Using the Full
Range of Features

Editing

Using a Memory Card

Additional
Information

Important Usage Instructions



WARNING:



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING:



TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK AND TO REDUCE ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

CAUTION:

DISCONNECT THE MAINS PLUG FROM THE SUPPLY SOCKET WHEN NOT IN USE.

For Users in the UK

When replacing the fuse only a correctly rated approved type should be used and be sure to re-fit the fuse cover.

CAUTION:

CUSTOMERS IN THE U.K. SHOULD READ THIS BEFORE USING THIS PRODUCT.

CHANGING THE FUSE

THE MAINS LEAD ON THIS PRODUCT IS FITTED WITH A NON-REWIREABLE (MOULDED) PLUG, INCORPORATING A 3 AMP FUSE. SHOULD THE FUSE NEED TO BE REPLACED AN ASTA OR BSI APPROVED BS1362 FUSE OF THE SAME RATING MUST BE USED.

ALWAYS REFIT THE FUSE COVER AFTER REPLACING THE FUSE. NEVER USE THE PLUG WITH THE FUSE COVER OMITTED.

 
CHANGING THE PLUG

IF THE FITTED PLUG IS NOT SUITABLE FOR YOUR SOCKET OUTLETS, IT SHOULD BE CUT OFF AND AN APPROPRIATE PLUG FITTED IN ITS PLACE. IF POSSIBLE FIT AN APPROPRIATE 3 AMP FUSE. IF THE NEW PLUG HAS NO FUSE, THEN FIT A 5 AMP FUSE AT THE DISTRIBUTION BOARD.

AC POWER CORD CONNECTION

The wires in the mains lead of this apparatus are coloured in accordance with the following cord.

(IMPORTANT)



As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red. Neither Blue wire or Brown wire is to be connected to the Earth pin of a 3 pin plug.

THE SEVERED PLUG MUST BE DESTROYED IMMEDIATELY TO AVOID ANY POSSIBLE ELECTRIC SHOCK HAZARD.

CA-560 identification plate is located on the bottom.

• Use of CV-150F/CV-250F DV cable is necessary to comply with the technical requirement of EMC Directive.

Contents

Introduction

Important Usage Instructions	2
Thank you for Choosing a Canon	5
Introducing the MV450/MV450i	6

Mastering The Basics

Finding Your Way Around the MV450/MV450i	7
---	---

~ Preparations ~

Powering Your Camcorder	10
Loading a Cassette	15

~ Basic Recording ~

Basic Recording	17
Zooming	21
Using the LCD Screen	23

~ Basic Playback ~

Playing Back a Cassette	26
Connections for Playback on a TV Screen	30
Tips for Making Better Videos	34

Using the Full Range of Features

~ General ... ~

Turning the Image Stabilizer Off	36
Using the Menus	37
Using the Wireless Controller	45
Adjusting the Selectable Colour Light-up Buttons	48

~ For Recording ...~

Setting the Date and Time	49
Taking Still Pictures to Cassette	52
Searching and Reviewing While Recording	54

Using the Various Recording Programs ..55

Using Digital Effects	59
Using the Multi-Image Screen	64
Audio Recording	66
Setting the Self-Timer	68

Using the VL-3 Video Light (optional)	70
--	----

Using the DM-50 Microphone (optional)	71
--	----

~ When Making Manual Adjustments ...~

Using AE Shift	72
Setting the Shutter Speed	73
Adjusting Focus Manually	75
Setting the White Balance	76

~ For Playback ...~

Displaying Date, Time and Camcorder Data (Data Code)	78
Searching the Tape (Photo Search/ Date Search)	81
Returning to a Pre-Marked Position	82

Editing

Editing to a VCR	83
Dubbing with Digital Video Equipment ..84	
Recording from a VCR, TV or Analog Camcorder-Analog Line-in (MV450i only)	88
Recording Over Existing Scenes—AV Insert Editing (MV450i only)	90
Audio Dubbing	93
Setting the Audio Mix	98
Connecting to a PC	100





Contents, cont.

Using a Memory Card

Memory Card Introduction	101
Recording Still Images to a Memory Card	105
Recording an Image from a Cassette as a Still Image	107
Recording from Another DV Device as a Still Image	108
Viewing Still Images	109
Preventing Accidental Erasure (Protect) ..	111
Erasing Still Images	112
Combining Images and Recording Them to a Cassette (Card Mix)	114
Copying Still Images from a Cassette....	117
Copying Memory Card Still Images to a Cassette	118

 For quick reference

In addition to the contents and index please refer to:







- Finding Your Way Around the MV450/MV450i ( 7)
- Screen displays ( 141)
- Troubleshooting — in case you run into any problems ( 133)
- Menu at a Glance ( 152)

Marking a Still Image for Printing (Print Mark)	119
Formatting a Memory Card.....	120
Other Information and Precautions	121

Additional information

Preparing the Camcorder.....	124
Notes on Using the Batteries.....	126
Maintenance	129
Troubleshooting.....	133
The MV450/MV450i System Diagram..	137
Optional Accessories	138
Screen Displays	141
Specifications	148
Index	149
Menu at a Glance	152

Symbols used in this instruction manual:

-  : Reference page numbers
-  : Functions that can be operated from the body of the camcorder
-  : Functions that can be operated from the wireless controller
-  : Supplementary notes for camcorder operation
-  : Operation confirmation beeps ( 20)
- Capital letters are used to refer to settings displayed in the menus and buttons labelled on the camcorder itself, e.g. Press the MENU button.

Thank you for Choosing a Canon

First, we'd like to thank you for purchasing this Canon camcorder. Its advanced technology makes it very easy to use — you will soon be making high-quality videos which will give you pleasure for years to come.


 
 
 
 
 
 
 
 

 
 
To get the most out of your new camcorder, we recommend that you read this manual thoroughly — there are many sophisticated features which will add to your recording enjoyment.

Getting started

To get started we suggest that you master the basic operations of the camcorder first, before moving on to use its full range of features.

- When connecting the camcorder to your personal computer, use the optional CV-150F or CV-250F DV cable.

Your camcorder is supplied with the following accessories:

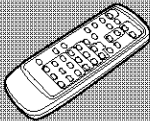
WL-D77 Wireless Controller 	Two AA batteries 
SS-700 Shoulder Strap 	Lens cap and lens cap cord 
BP-512 Battery Pack 	CA-560 Compact Power Adapter (including AC power cable) 
Lithium button battery 	S-150 S-video Cable 
STV-250N Stereo Video Cable 	PC-A10 SCART Adapter (Europe, Asia) 
MVC-6M MultiMediaCard (with pre-recorded sample images) 	Soft case for MultiMediaCard 

Introducing the MV450/MV450i

E

Introduction

IEEE 1394 DV Terminal

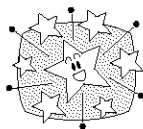

Using a DV cable, connect the MV450/MV450i to a PC equipped with a DV terminal and transfer your original images to your PC.

Extended Recording Time Function

Record for 1.5x, 2x or 3x longer than when in SP mode— up to 4 hours on an 80 minute tape.

Memory Card

Record, manage and store still images on a MultiMediaCard or a high-capacity SD Memory Card. (Both cards are inserted into the same slot in the camcorder.) Combine still images recorded on the card with your original movies or still images. Also great for easy transfer of still images to a PC.

Progressive Photo

 
Lets you record vivid, virtually blur-free still images of moving subjects onto a memory card.

Still Photos



Just press the photo button to capture still pictures.

2.5" LCD Screen



A 2.5" LCD screen makes it easy for you to shoot colourful, well composed video. It is also great for playback.

Image Stabilizer



Stabilizes your recordings even in long telephoto shots.

10x Lens and 40x (Card) / 200x (Tape) Digital Zoom

Advanced Accessory Shoe

Allows the Canon Video Light VL-3 or the Directional Stereo Microphone DM-50 (both optional) to be easily attached and powered by the camcorder's own power source.

 
Digital Effects



Advanced digital technology allows you to add special effects during recording or playback. Display 4, 9 or 16 still images at once with the multi-image screen.

Selectable Colour Light-up Buttons

Audio Dubbing





Add new sound to original sound on a prerecorded tape.


Analog Line-in Recording and AV Insert Editing (MV450i only)

Connect to a VCR or analog camcorder and record to a DV tape in the MV450i. Also, replace original images on a pre-recorded tape.


Finding Your Way Around the MV450/MV450i

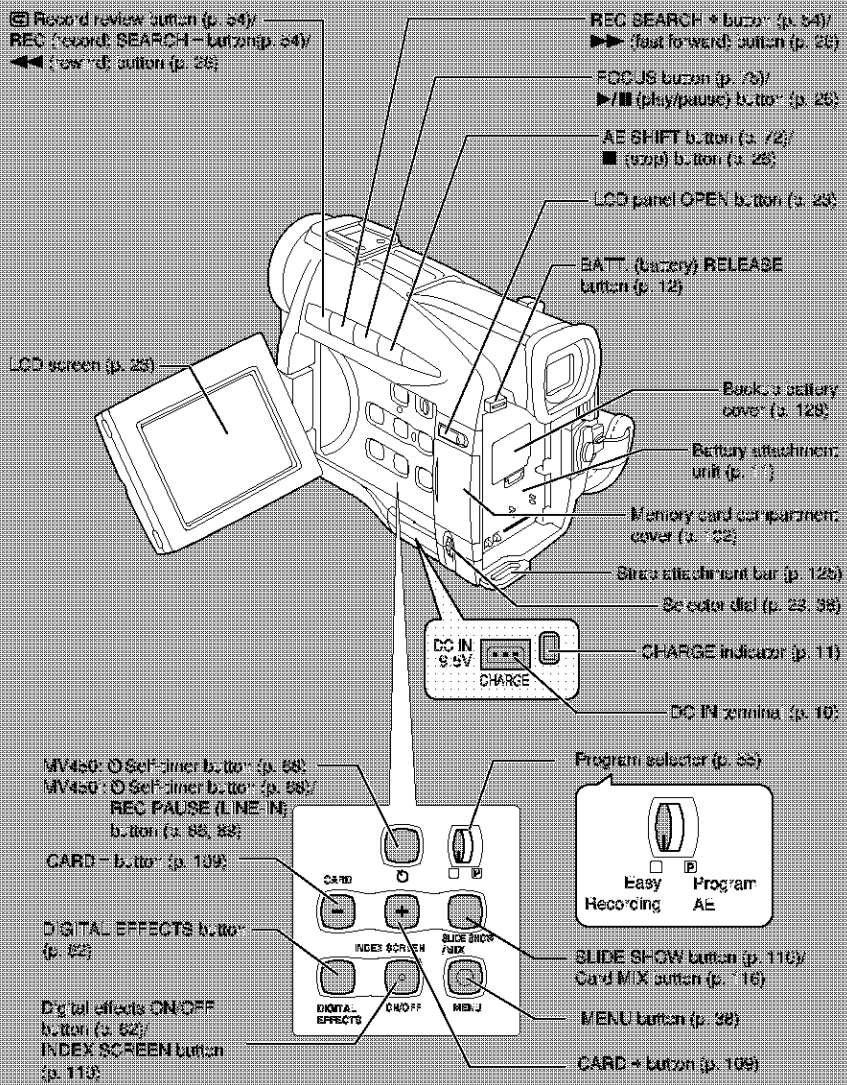


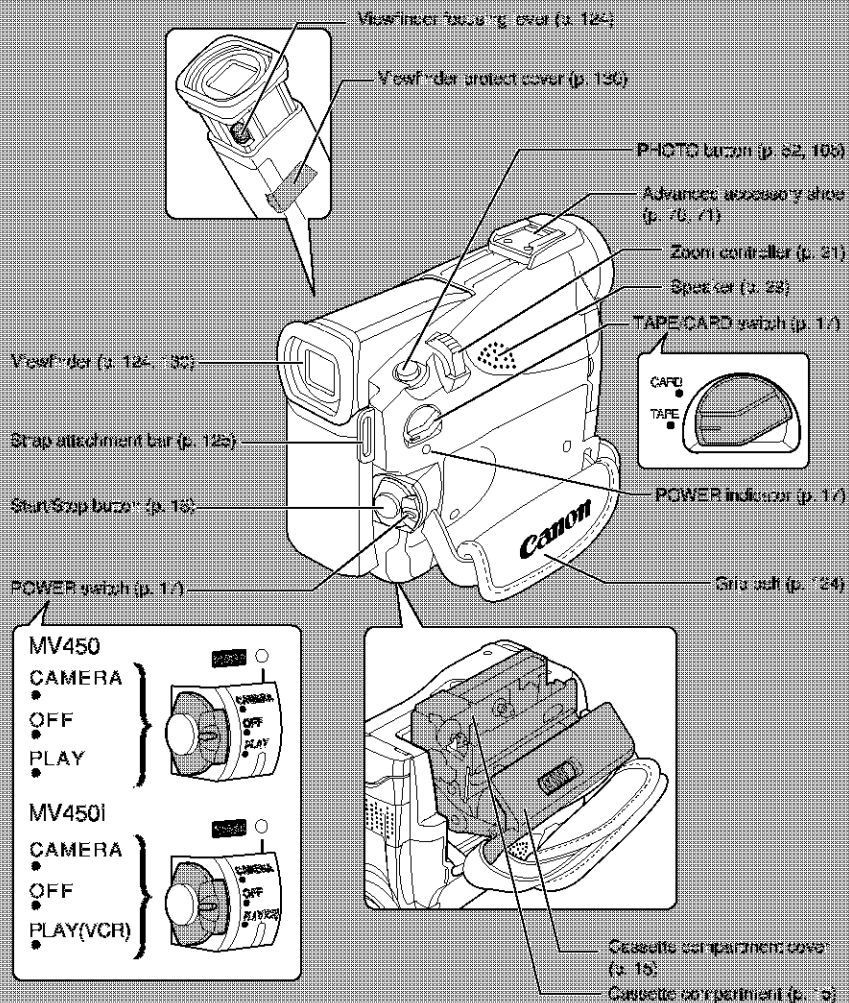


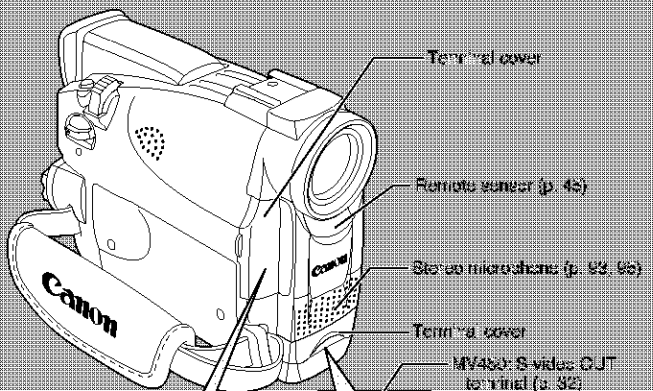

 - Ⓛ (LANC) terminal (p. 83)
- MV400: AV (audio/video) OUT terminal (p. 30)
(phones) terminal (p. 30)
- MV400: AV (audio/video) IN/OUT terminal (p. 30, 88, 207)
(phones) terminal (p. 30)
- MIC terminal (p. 66, 93, 95)




- MV400: S-video OUT terminal (p. 32)
- MV400i: S-video IN/OUT terminal (p. 32)
- MV400: DV OUT terminal (p. 34, 50)
- MV400i: DV IN/OUT terminal (p. 40, 50, 52)

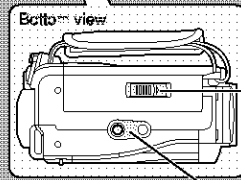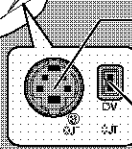

- OPEN/JECT switch (p. 5)
- Tripod socket (p. 34)

- PHOTO buzzer (p. 32, 105)
- START/STOP button (p. 18)
- MENU buzzer (p. 38)
- SELF TIMER buzzer (p. 65)
- TV SCREEN button (p. 141)
- DATA CODE button (p. 78)
- D EFFECTS: Digital effects buzzer (p. 62)
- AUDIO MONITOR button (p. 95)
- REC PAUSE button (p. 86, 87) (MV400i only)
- ZERO SET MEMORY button (p. 82)
- CARD + buttons (p. 109)
- AUDIO DUB button (p. 94, 97)
- AV INSERT button (p. 92) (MV400i only)
- REMOTE SET button (p. 46)

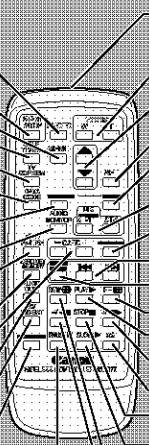

- Transmitter
- Zoom buttons (p. 21)
- Controller buttons (p. 38)
- SET button (p. 38)
- Digital effects ON/OFF button (p. 62)
- MIX BALANCE buttons (p. 38)
- SLIDE SHOW button (p. 113)
- Search buttons (p. 81)
- SEARCH SELECT buzzer (p. 81)
- FF button (p. 26)
- PLAY button (p. 26)
- + button (p. 27)
- x2 buzzer (p. 28)
- STOP button (p. 26)
- SLOW button (p. 27)
- REW button (p. 26)
- button (p. 27)
- PAUSE button (p. 27)

Powering Your Camcorder

Before operating your camcorder, you will need to use the power adapter to:

Provide power from a mains outlet


or

Charge a battery pack

Notes:


- The power adapter converts current from a household power socket (100–240 V AC, 50/60 Hz) to the DC current used by your camcorder.
- If the adapter is used next to a TV, it may cause bars to appear on the TV — move the adapter away from the TV or the aerial cable.

Connecting the camcorder to a mains outlet

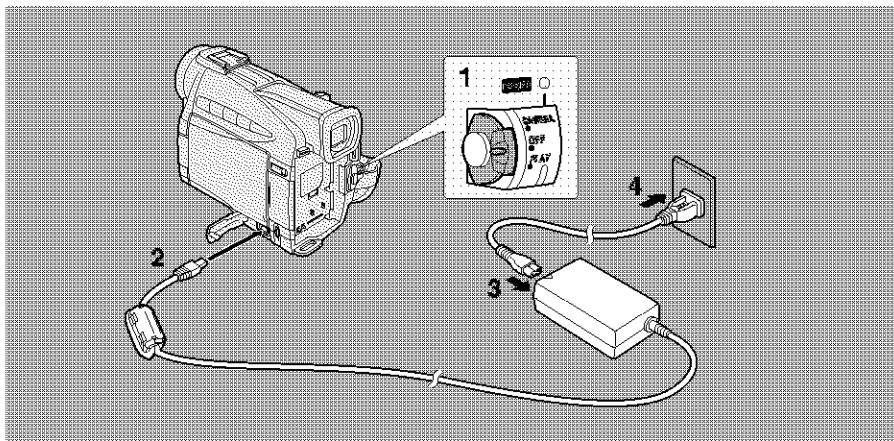

Use the power adapter to provide your camcorder with instant power from a mains outlet. Always turn the camcorder off before connecting/removing the power source.

- 1. Set the POWER switch to OFF.**
- 2. Connect the power adapter to the camcorder's DC IN terminal.**
- 3. Connect the power cable to the power adapter.**
- 4. Plug the power cable into a mains outlet.**
- 5. Disconnect the power adapter from the camcorder after use. Unplug the power cable from the mains outlet, then disconnect it from the adapter.**

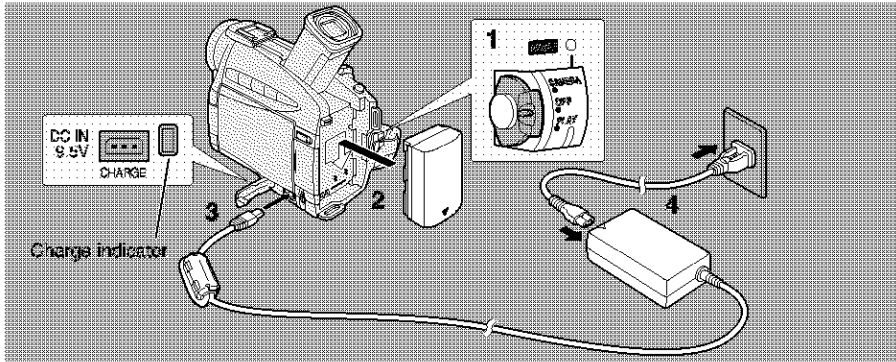

Your battery pack was partially charged before it left the factory. It should have enough power for you to check that your camcorder is working properly. However, you must charge the battery pack fully if you want it to power the camcorder for more than a few minutes. Always turn the camcorder off and raise the viewfinder before connecting/removing the battery.


1. **Set the POWER switch to OFF.**
2. **Attach the battery to the camcorder.**
 - Remove the battery pack's terminal cover.
 - Rotate the viewfinder upwards.
 - With the triangle on the battery pack pointing downwards, align the edge of the battery pack with the line on the camcorder, press lightly and slide the battery down until it clicks into place.
3. **Connect the power adapter to the camcorder.**
4. **Connect the power cable to the adapter and plug it into a mains outlet.**
 - The charge indicator flashes red to show that charging is in progress. Single flashes mean that the battery pack is less than 75% charged. Double flashes mean that it is more than 75% charged. The indicator glows steadily when the battery pack is fully charged. If the indicator blinks rapidly and continuously (twice a second), the battery pack may be defective.
 - The battery pack will also charge when the POWER switch is turned to positions other than OFF. The CHARGE indicator may both flash or stay lit.

5. When charging is complete, disconnect the power adapter from the camcorder. Unplug the power cable from the mains outlet, then disconnect it from the adapter.
6. Remove the battery pack after use.
 - Rotate the viewfinder upwards.
 - Press and hold the BATT. RELEASE button while you slide the battery up.

 **Notes:**

- Never connect an unspecified product to the camcorder's DC terminal. Likewise, do not connect the power adapter to an unspecified product.
- You can find detailed notes for using the batteries in the "Notes on Using the Batteries" (📖 126). These notes include charging and recording times and how to install the backup battery.

CA-360 Compact Power Adapter

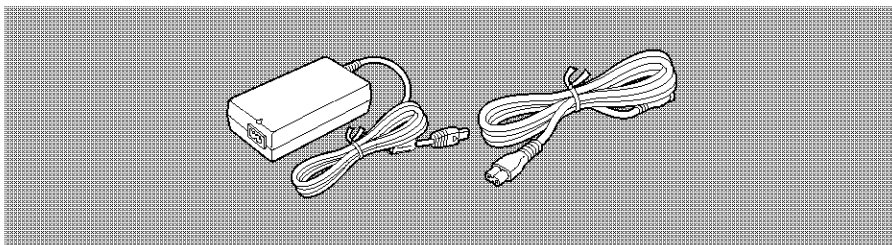

Specifications

Power supply	100–240 V AC, 50/60 Hz
Power consumption	34 W
Rated output	9.5 V, 2.7 A DC
Operating temperature range	0°C–40°C (32°F–104°F)
Dimensions	57 × 28 × 104 mm (2 1/4 × 1 1/8 × 4 1/8 in)
Weight	180 g (6 3/8 oz) (without power cable)


Weight and dimensions are approximate.
Errors and omissions excepted.
Subject to change without notice.

Using the Charge Adapter CR-560 Kit (optional)

The Compact Power Adapter CA-560 included with the camcorder can be used along with the CR-560 Kit for 3 different ways to power the camcorder or charge battery packs:


1. Charge the BP-500 Series battery packs with power from your car battery.
2. Operate the camcorder with power from your car battery.
3. Charge the BP-500 Series battery packs from a household mains outlet.

The Charge Adapter/Car Battery Cable Kit CR-560 includes the following:

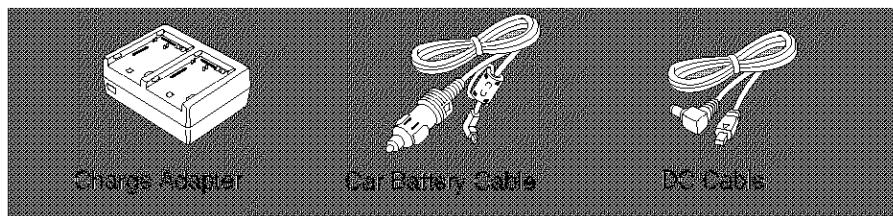

1. Charge the BP-500 Series battery packs with power from your car battery.


1 or 2 battery pack(s) + Charge Adapter + Car Battery Cable → car's cigarette lighter

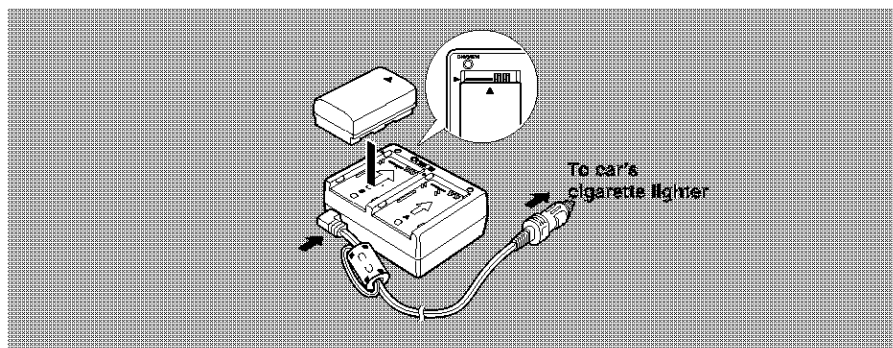


- Fast charging for the high-capacity BP-522 and BP-535 (both optional). Fifteen minutes of charging gives 60 minutes of recording (using the viewfinder).

	Time required for full charge from car battery or household outlet
BP-512	1 hr. 20 min.
BP-511 (optional)	1 hr. 20 min.
BP-522 (optional)	1 hr. 40 min.
BP-535 (optional)	2 hr. 30 min.

- 2. Operate the camcorder with power from your car battery.**
 Camcorder + DC Cable + Charge Adapter + Car Battery Cable → car's cigarette lighter

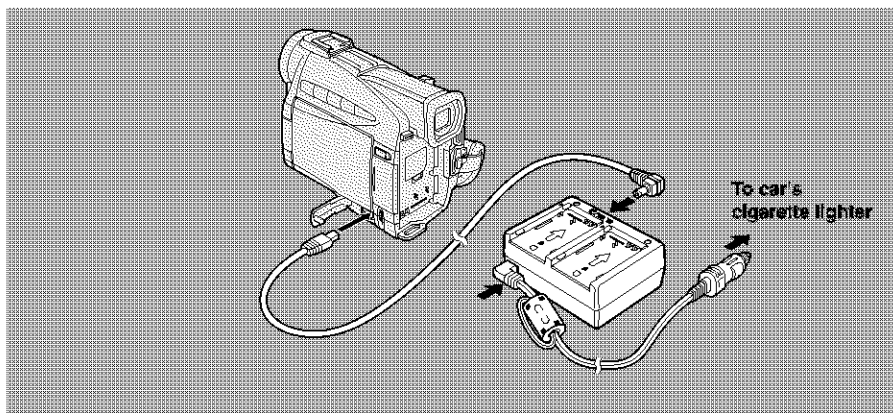

- 3. Charge the BP-500 Series battery packs from a household mains outlet.**
 1 or 2 battery pack(s) + Charge Adapter + Compact Power Adapter

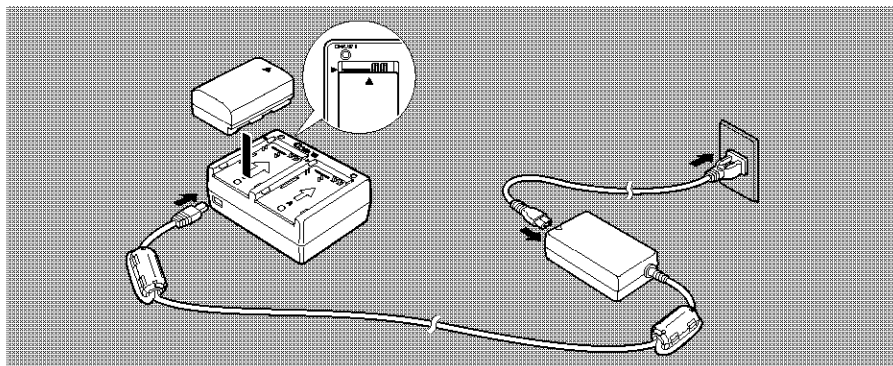


- Fast charging for the high-capacity BP-522 and BP-535 (both optional). Fifteen minutes of charging gives 60 minutes of recording (using the viewfinder).




Note:

- For full details of how to use the CR-560, refer to its instruction manual.

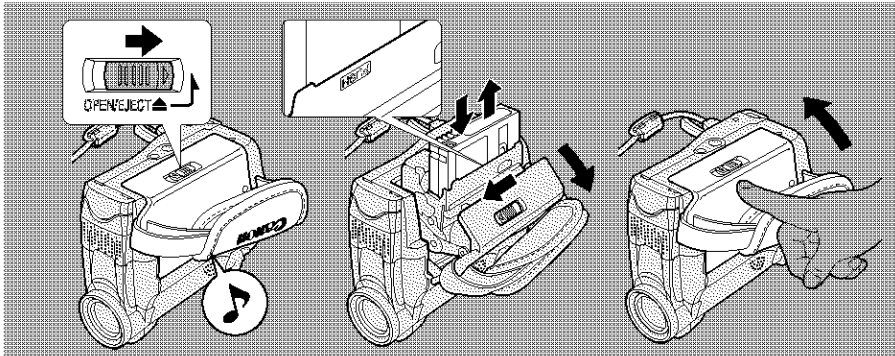




Only use videocassettes marked with the ^{mini} DV logo.*

Loading and unloading


1. Make sure that you have attached a power source.
2. Slide the OPEN / EJECT  switch (on the bottom of the camcorder) to release the cassette compartment cover.
 - Pull the cover fully open (while holding the button) and wait a couple of seconds for the cassette compartment to open automatically.
 - The confirmation beep sounds when the cassette cover fully opens.
3. Load or unload the cassette.
 - Insert the cassette gently with the window facing the grip belt, and the REC/SAVE tab up.
 - Remove the cassette by pulling it straight out.
4. Press the **(PUSH)** mark on the compartment until it clicks, and wait for it to close.
5. Click the cover back into place.

* ^{mini} DV is a trade mark.

Notes:

- Do not interfere with the cassette compartment while it is opening or closing automatically, and do not attempt to close the cover until the cassette compartment has fully retracted.
- After loading a cassette, use record search ( 54) to find the point where you want to start recording.
- Be careful not to get your fingers caught in the cassette compartment cover.
- Do not leave the cassette in the camcorder after use — return it to its case and store it in a cool, clean, dry place.
- When you turn the camcorder's power on,  flashes in the display until you load a cassette.
- With some types of tapes, the remaining tape display may not give an accurate reading ( 142).

Protecting tapes from accidental erasure

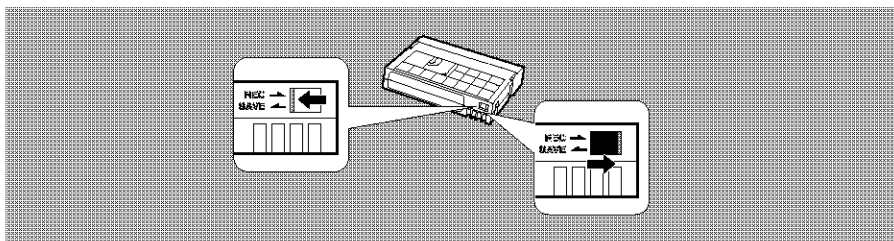

To protect your recording from accidental erasure, slide the tab on the cassette so that it exposes the hole. (This switch position is usually labelled SAVE or ERASE OFF.)

If you load this cassette and put the camcorder in record pause mode ([] 17), "THE TAPE IS SET FOR ERASURE PREVENTION" is displayed for approx. 4 seconds and then the [] mark flashes in the display.


If you want to record on the cassette again, slide the tab back so the hole is closed.

Handling cassettes

- To protect the tape heads, transfer cassettes directly from the tape case to the camcorder — do not open the tape protect cover or touch the tape itself.
- Do not use cassettes where the tape has been damaged or spliced — they may damage the camcorder.
- Do not insert anything into the small holes on the cassette or cover them with cellophane tape.
- Handle cassettes with care — dropping them or exposing them to external shocks may cause internal damage.
- Store cassettes in the provided case, first rewinding them to the start of the tape and then storing them upright.
- A cassette with metal plated terminals may become dirty with use, affecting information transfer. Therefore, after using a tape about 10 times, be sure to clean the terminals with a cotton bud.

Cassette memory

You are unable to use the cassette memory function with this camcorder.

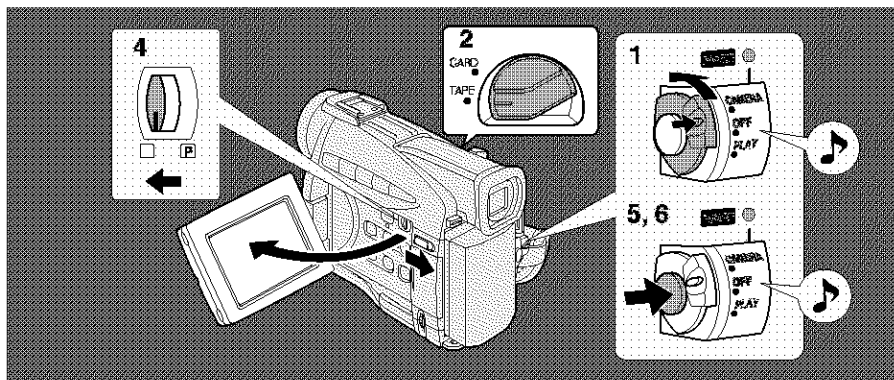

Before you start recording

Have you completed the following steps?

- Attached a power source ([10]).
- Removed the lens cap ([124]) and fastened the shoulder strap ([125]).
- Chosen the display: viewfinder ([124]) or LCD screen ([23]).





Notes:

- When you're using the viewfinder, fully close the LCD or rotate the LCD so that it faces the same direction as the lens ([23]).
- When using the viewfinder with the BP-522 or BP-535 Battery Pack (both optional) attached, extend the viewfinder and rotate it to a comfortable angle.

You may also want to install the backup battery ([128]) in order to set the date and time display ([49]).

To record


1. **Press the small green button on the POWER switch and hold, turn the POWER switch to CAMERA.**
 - The camcorder automatically sets to record pause mode. PAUSE appears in the display.
 - If you haven't set the date and time display, SET THE TIME ZONE, DATE AND TIME appears in the display. For setting the time zone, see p. 49. For setting the date and time, see p. 51.
 - The camcorder power indicator lights up red.
 - The confirmation beep sounds.
 - The camcorder will turn itself off if you leave it in record pause mode for more than about 5 minutes. To return to record pause mode, turn the POWER dial to OFF and then back to CAMERA.
2. **Make sure the TAPE/CARD switch is set to TAPE.**
 - For still image recording to a memory card, see p. 105.

3. **Load a cassette** ( 15).
 4. **Slide the program selector to .**
 - This selects the camcorder's Easy Recording program. It allows you to simply point and shoot without making any manual adjustments ( 57).
 5. **Press and release the start/stop button once to begin recording.**
 - For still image recording to a cassette, see p. 52.
 6. **Press and release the start/stop button again to pause recording.**
 - The camcorder returns to record pause mode and PAUSE reappears in the display.
 - You can stop and restart recording as often as you like by pressing the start/stop button.
-  **Note:**
- After loading a cassette, start recording when the tape counter has stopped.

When you have finished recording

- Replace the lens cap.
- Return the viewfinder to its retracted position.
- Return the LCD screen flush to the camcorder body.
- Unload the cassette.
- Turn the POWER switch to OFF.
- Disconnect the power source.

Notes:

- To check that the camcorder is recording correctly, make a test recording first.
- Before making important recordings, clean the video heads using a Canon DVM-CL Digital Video Head Cleaning Cassette or a commercially available digital video head cleaning cassette.
- To close the LCD panel, rotate it vertically until the screen faces you, then press the upper right corner until it clicks securely closed.
- You cannot monitor the sound from the speaker when recording.
- For tips on how to make better videos, see p. 34.
- For extra recording time, set REC MODE to any mode other than SP ( 19).



Choose from 4 recording modes: SP (standard play), 1.5× SP, 2× SP or 3× SP.


- Only SP and LP modes are available when the camcorder is set to CARD PLAY (MV450i: PLAY(VCR)) mode.

Recording times (this example uses an 80-minute tape)

Standard recording	Extended recording		
SP	LP	⊞SP	⊞LP
80 min.	1.5× SP (120 min.)	2× SP (160 min.)	3× SP (240 min.)

In ⊞SP and ⊞LP modes, images data is compressed twice as much as in SP and LP modes when being recorded to a tape.

You can't add sound (audio dubbing) or images (AV insert: MV450i only) to a tape that has been recorded in a mode other than SP mode. If you plan to use either of these functions later, record in SP mode.

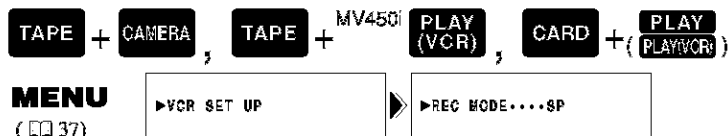

To change the recording mode, open the menu and select VCR SET UP. Then select REC MODE, set it to LP, ⊞SP or ⊞LP and close the menu.

Notes:

About all 3 extended recording modes

- When recording and playing back tapes in one of the extended recording modes, the nature of the tape and usage conditions may affect recording, mosaic-like noise may appear in the image and the sound may be distorted during playback. For important recordings, therefore, set the camcorder to SP mode.
- If you record in more than one mode on the same tape, the picture may become distorted during playback and the time code may not be written correctly.
- A tape recorded in LP mode on other digital equipment may produce the mosaic-like noise and the sound may become distorted when playing back on this camcorder.
- A tape recorded in LP or ⊞LP mode on this camcorder may produce the mosaic-like noise and the sound may become distorted when playing back on other digital equipment.


About ⊞SP and ⊞LP modes

- The image quality of recordings done in ⊞SP or ⊞LP modes will be lower than that of those done in SP or LP modes.
- A cassette recorded in ⊞SP or ⊞LP mode cannot be played back on a camcorder not equipped with that mode.

- You might not be able to do DV dubbing correctly with the camcorder set to **SP** or **LP** mode.
- The recording mode might not appear in the display correctly if you switch between **SP** and **LP** while the camcorder is connected to another digital video device.
- When the recording mode is changed to **SP** or **LP**, the camcorder modifies the image for appropriate recording in that mode.

16:9 (wide-screen TV recording)

Produces images in the 16:9 format for playback on widescreen TVs.

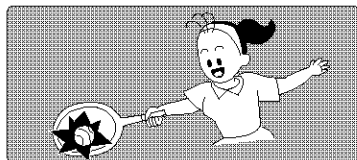

MENU
(37)

▶CAM.SET UP

▶16:9.....OFF

To switch 16:9 to ON, open the menu and select **CAM.SET UP**. Then select **16:9**, set it to **ON** and close the menu.

Notes:

- “16:9” is shown in the display when you switch the 16:9 mode on.
- You cannot use the 16:9 mode with the Easy Recording program.
- You cannot use the 16:9 mode when the multi-image screen is set. The 16:9 display becomes set to “---”.
- If you play back a recording made for 16:9 on a normal TV screen, the image will appear to be vertically “squashed” (compressed).

Confirmation warning beeps

The camcorder’s short operation confirmation beeps are indicated by in the illustrations. Beeps sound upon certain camcorder operations such as when you turn the camcorder on, during the self-timer countdown, right before the camcorder’s automatic shut-off, and also upon any unusual condition of the camcorder. Beeps are not recorded on the tape.




MENU
(37)

▶SYSTEM

▶BEEP.....ON

To turn the beep off, open the menu and select **SYSTEM**. Then select **BEEP**, set it to **OFF** and close the menu.

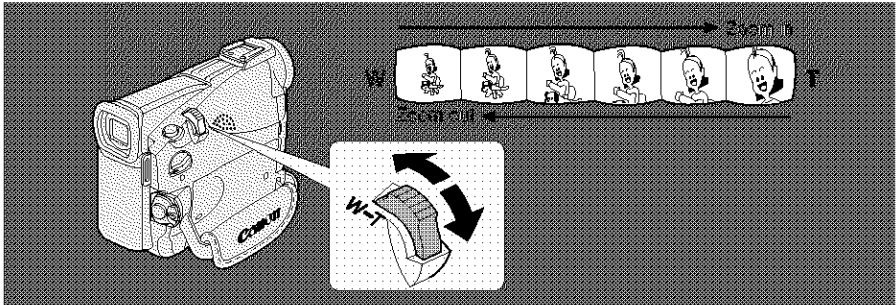

10x optical zoom

The camcorder's 10x zoom lens allows you to choose the best picture angle for each scene:

- Move the zoom control towards W to zoom out to wide-angle.
- Move it towards T to zoom in to telephoto.

You can also control the speed of zooming:

- Move the control slightly to zoom slowly.
- Move it farther to zoom more quickly. (The farther you move the zoom control, the faster the zoom speed.)

The T and W buttons on the wireless controller adjust the picture angle, but not the zoom speed.

200x digital zoom

Card 40x

Magnifies the camcorder's zoom range by up to 20x (up to 4x when using a memory card).

The zoom control continues to work as usual. You can freely zoom in and out between 1x and 200x magnification — the camcorder automatically switches between optical zooming (up to 10x) and digital zooming (10x to 200x).

TAPE + **CAMERA**

CARD + **CAMERA**

MENU

(37)

▶ **CAN.SET UP**

▶ **D.ZOOM.....40x**


To change the digital zoom, open the menu and select **CAM.SET UP**. Then select **D.ZOOM**, set it to **OFF** or **200x** and close the menu.

**Notes:**


- When zooming, as a rule, keep at least 1 m (3 ft 3³/₈ in) between you and your subject. However when the zoom is at the wide-angle position, you can focus on a subject as close as 1 cm (3³/₈ in).
- Image resolution is slightly lower when the magnification is greater than 10 \times .
- You cannot use digital zoom when the multi-image screen is set. The display becomes “— — —”.
- The zoom indicator appears for 4 seconds. When the digital zoom is set to 40 \times , the zoom indicator extends (light blue).
When the digital zoom is set to 200 \times zoom, the zoom indicator extends again (a darker blue).

Opening and closing the LCD screen


Slide the LCD panel OPEN button and open the panel by pulling it away from the camcorder. This automatically switches the LCD screen on and the viewfinder off. When you close the LCD panel, press the upper corner until it clicks closed. The LCD screen automatically switches off and the viewfinder switches back on.

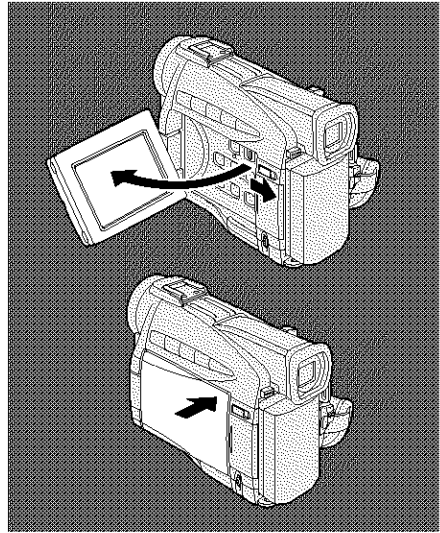

Changing the angle of the LCD screen

You can choose the angle of the screen that suits you best by opening and rotating the screen, also you can rotate the LCD screen so that faces in the direction of the lens ( 25).

You can also push the panel flat against the camcorder until it is flush with the side, with the screen facing outwards.

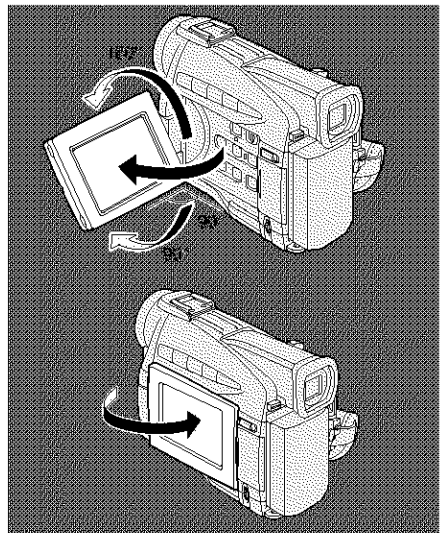

Notes:

 
- Avoid touching the LCD screen when moving the LCD panel.
- Do not hold the camcorder by the LCD panel or the viewfinder.
- Make sure you open the LCD panel at 90°, before attempting to rotate it.

- Always rotate the LCD panel vertically into place, before closing it or pushing it flat against the side of the camcorder.
- Always fully close the LCD panel until it clicks securely.
- Be careful not to leave the LCD, viewfinder or lens exposed to direct sunlight outdoors or in a window. Doing so could cause damage.
- Bright light falling on the LCD screen may cause glare that makes it difficult for you to view the image. In this case, switch to using the viewfinder. You are also able to adjust the brightness of the screen (see “Adjusting the LCD screen” below).

Adjusting the LCD screen



You can adjust the brightness of the LCD screen.



Open the menu and select DISP.SET UP from the menu. Then select BRIGHTNESS, adjust the level with the selector dial and close the menu.

A bar showing the level appears in the display.

- Turn the selector dial up to make the display brighter.
- Turn the selector dial down to make the display darker.

Notes:


- The camcorder will remember your brightness setting even after you turn it off.
- The brightness of the LCD does not affect that of the recorded images or the viewfinder.

About the LCD Screen

The LCD screen built into this camcorder is a high precision product. However, small black dots or bright points of light (red, blue or green) may appear constantly on the LCD screen. This is not a malfunction of the LCD screen and they are not recorded on the tape. (Effective dots: more than 99.99%)



When you turn the LCD panel so that it faces the same direction as the lens, you can watch yourself during recording or let your subject monitor recording. The viewfinder is also activated when the panel is in this position. (Adjust the viewfinder, [124](#))

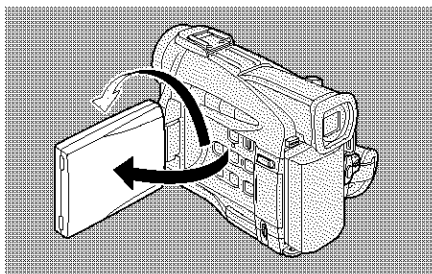

- You can choose the display style, reversed (mirror on) or not (mirror off). The recording itself is unaffected regardless of which one you choose.


TAPE + **CAMERA** , **CARD** + **CAMERA**

MENU
([37](#))




To turn the mirror mode off, open the menu and select **DISP.SET UP**. Then select **MIRROR**, set it to **OFF** and close the menu.


The indicators that appear in the LCD display when **MIRROR** is turned on:

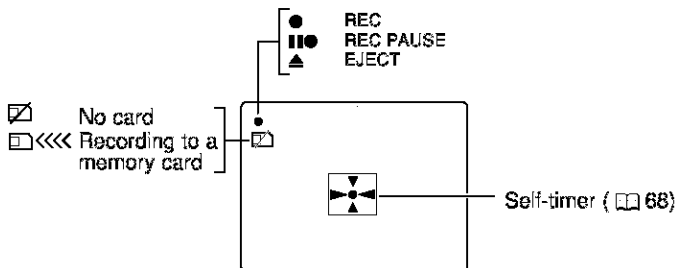

- These and all other indicators appear normally in the viewfinder.

Playing Back a Cassette

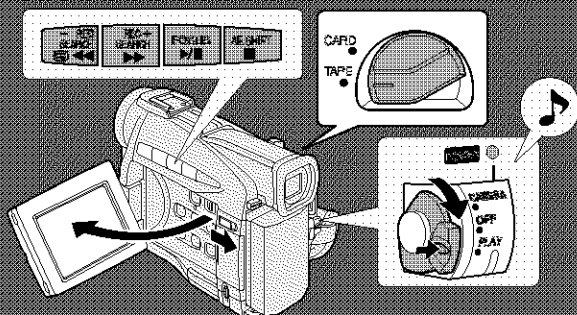

You can use the LCD screen for instant, on-the-spot playback. The camcorder also plays back the sound track via the built-in speaker ( 29).

- When you play back a tape, you can also close the LCD panel with its screen side facing up.
- When you're using the viewfinder to view playback, close the LCD panel.

To play back your recordings on a TV, see p. 30.

To use the wireless controller, see p. 45.

Note:

- To avoid accidental recording, make sure that you slide the tab on the cassette so that it exposes the hole (the switch position is usually labelled SAVE or ERASE OFF).




1. Attach a power source and turn the POWER switch to PLAY (MV450i: PLAY (VCR)).

- The power indicator lights up green.

2. Make sure the TAPE/CARD switch is set to TAPE.

3. Load the cassette.

 4. Press the (play) button to start playback.

- To end playback, press the  (stop) button.
- To wind the tape forwards, stop playback and press the  (fast forward) button.
- To wind the tape backwards, stop playback and press the  (rewind) button.
- If the playback picture is rough (mosaic-like noise), clean the video heads using a Canon DVM-CL Digital Video Head Cleaning Cassette or a commercially available digital video head cleaning cassette.



Playback pause

Press the **||** (pause) button. To resume normal playback, press it again, or press the **▶** (play) button. The camcorder automatically goes into stop mode after about 5 minutes' playback pause.

Fast forward playback

To play back the recording at about 11.5 times normal speed, press and hold the **▶▶** (fast forward) button during normal playback or press and hold the **▶▶** (fast forward) button during normal fast forward.

Rewind playback

For reverse playback at about 11.5 times normal speed, press and hold the **◀◀** (rewind) button during normal playback or press and hold the **◀◀** (rewind) button during normal rewind.



Frame Advance


To play back frame by frame, press the **+ / ||▶** button repeatedly during playback pause.

Press and hold to play back continuous frame advance.

Frame Reverse

To play back in reverse frame by frame, press the **- / ◀||** button repeatedly during playback pause.

Press and hold to play back continuous frame reverse.

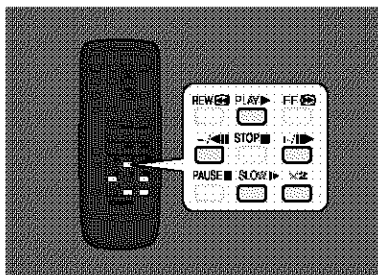

Slow Forward Playback

To play back at about 1/5 normal speed, press the **SLOW ▶** button during normal playback.

Press the **PLAY ▶** button to return to normal playback.

- The camcorder automatically returns to playback after about 30 seconds of slow playback.

Slow Reverse Playback

To play back in reverse at about 1/5 normal speed, press the **- / ◀||** button and then the **SLOW ▶** button during normal playback.

Press the **PLAY ▶** button to return to normal playback.

- The camcorder automatically returns to $\times 1$ reverse playback after about 30 seconds of slow playback.

Reverse Playback

To play back in reverse at normal speed, press the **←/⏮** button during normal forward playback.

Press the **PLAY ▶** button to return to normal forward playback.

- The camcorder automatically goes into stop mode after about 2 minutes of paused reverse playback.

Forward ×2 Playback

Press the **×2** button during normal playback.

Press the **PLAY ▶** button to return to normal playback.

Reverse ×2 Playback

Press the **←/⏮** button and then the **×2** button during normal playback.


Press the **PLAY ▶** button to return to normal playback.

Notes:

- Mosaic-like noise appears on the screen during some of the special playback modes.
- There's no audio during special playback.



The camcorder has a built-in speaker so you can review the sound track alongside the picture during tape playback. The built-in speaker is monaural.

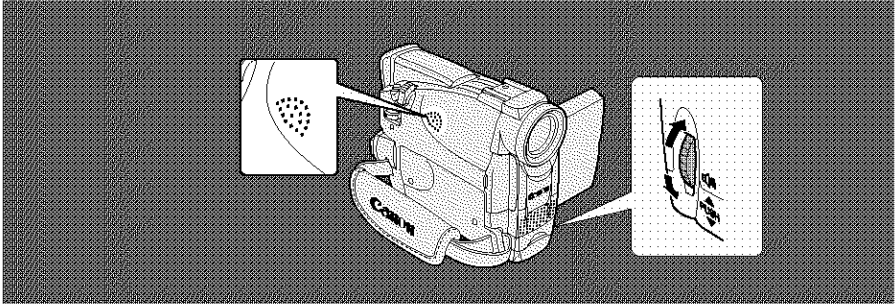

Adjust the speaker volume by turning the selector dial.

- Turn the selector dial up to increase the volume, and down to lower the volume.
- A bar appears in the display to indicate the current volume. It disappears in 4 seconds.
- You can turn off the volume completely by turning the selector dial down until OFF appears.

Notes:

- Sometimes audio may sound distorted when the volume is turned up high. If this happens, turn down the volume.
- The speaker turns off when the camcorder is set to any mode other than TAPE PLAY (MV450i: PLAY (VCR)) mode.

Using the headphones


- You can also use the headphones to monitor the sound track. Change the setting of the AV/headphones terminal through the menu (30).
- You can adjust the headphone volume separately from the built-in speaker, either during TAPE PLAY (MV450i: PLAY (VCR)) mode or TAPE CAMERA mode. The volume level is the same regardless of mode.
- The levels you adjust for the built-in speaker and headphones are memorized separately. The camcorder remembers your levels even if you turn the camcorder off and back on again.
- The speaker turns off when you use headphones.

Connections for Playback on a TV Screen

You can connect the camcorder to a TV or VCR in order to play back your recordings. You will need to attach a power source to the camcorder (10). Power off all devices before starting the connections.

See your TV or VCR instruction manual for further details.

Switching the AV/headphone terminal

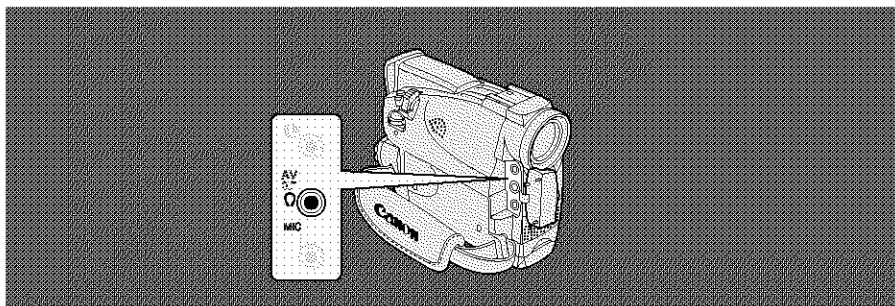

Through the menu, the camcorder's AV/headphone terminal can be switched to function as either the AV terminal or the headphone terminal.

TAPE + **CAMERA** , **TAPE** + (**PLAY** / **PLAY(VCR)**) , **CARD** + **CAMERA** , **CARD** + (**PLAY** / **PLAY(VCR)**)

MENU
(37)

▶ VCR SET UP

▶ AV / PHONES ... AV


Open the menu and select **VCR SET UP**. Then select **AV/PHONES** and set it to **AV** or **PHONES**.

- When the terminal is switched to **PHONES**, **PHONES** appears in the display.

Using the headphones

- Make sure you switch the AV/headphones terminal to **PHONES** before using headphones. If the AV/headphones terminal is not switched to **PHONES** before you use the headphones, noise will come out from the headphones.

If your TV (or VCR) has a SCART terminal (without S-Video)

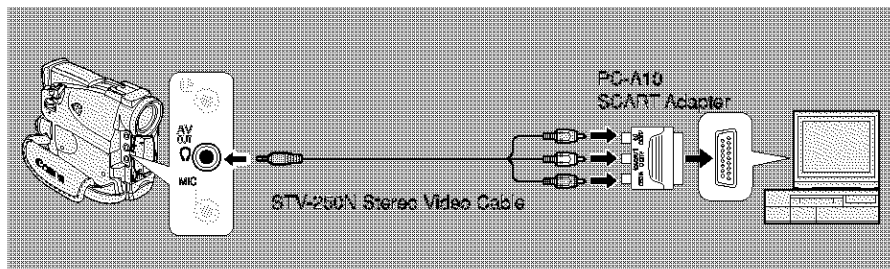


When connecting for playback on a TV screen, make sure the AV/headphone terminal is switched to AV. If PHONES appears in the display, switch the terminal.

- Connect the PC-A10 SCART adapter to the TV or VCR's SCART terminal.
- Connect the camcorder to the adapter. Connect the camcorder using the STV-250N Stereo Video Cable. Connect the white plug to the white audio terminal **L** (left). Connect the red plug to the red audio terminal **R** (right). Connect the yellow plug to the yellow video terminal **VIDEO**.
- If you are connecting the camcorder to a TV, set the TV/VIDEO selector on the television to **VIDEO**.
- If you are connecting the camcorder to a VCR, set the input selector on the VCR to **LINE**.

If your TV (or VCR) has an S (S1) video input terminal


For higher picture quality, we recommend playing back recordings on a TV with an S (S1) terminal.

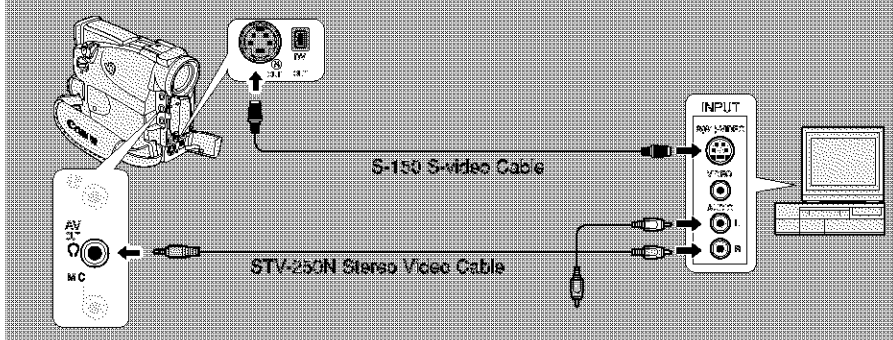

When connecting for playback on a TV screen, make sure the AV/headphone terminal is switched to AV. If PHONES appears in the display, switch the terminal.

- Use the S-150 S-video Cable to connect the S-video terminals. Use the STV-250N Stereo Video Cable to connect the AUDIO terminals. Connect the white plug to the white AUDIO terminal **L** (left). Connect the red plug to the red AUDIO terminal **R** (right). Do not connect the yellow plug.
- If you are connecting the camcorder to a TV, set the TV/VIDEO selector on the television to VIDEO.
- If you are connecting the camcorder to a VCR, set the input selector on the VCR to LINE.

If your TV (or VCR) has audio/video input terminals

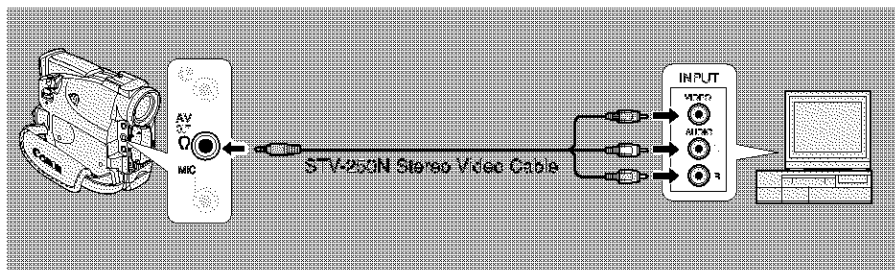

When connecting for playback on a TV screen, make sure the AV/headphone terminal is switched to AV. If PHONES appears in the display, switch the terminal.

- Connect the camcorder using the STV-250N Stereo Video Cable. Connect the white plug to the white audio terminal **L** (left). Connect the red plug to the red audio terminal **R** (right). Connect the yellow plug to the yellow video terminal **VIDEO**.
- If you are connecting the camcorder to a TV, set the TV/VIDEO selector on the television to **VIDEO**.
- If you are connecting the camcorder to a VCR, set the input selector on the VCR to **LINE**.


Note:

- If you are going to use the TV as a monitor while you are shooting, remember to keep the TV volume turned down as long as the camcorder's audio terminals are connected. If the sound from the TV speakers is picked up by the microphone, an unpleasant high-pitched squeal, called feedback, may be produced.

Tips for Making Better Videos

Holding the Camcorder


For maximum stability, grip the camcorder in your right hand and keep your right elbow pressed against your body. If necessary support the camcorder with your left hand. With practice, you will be able to operate the controls by touch, without taking your eye off the action.

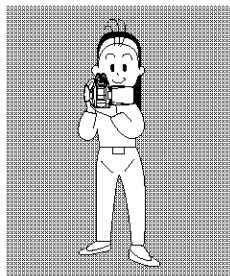

Using a Tripod

To prevent any unwanted movement, you can mount the camcorder on a tripod, (or any flat surface at a suitable height) and operate it with the wireless controller.

- When you are using a tripod, be careful not to leave the viewfinder exposed to bright sunlight or it may melt. (The light is concentrated by the viewfinder lens.)
- Make sure that the fastening screw of the tripod is no longer than 5.5 mm ($1/4$ inch), or it will damage the camcorder.


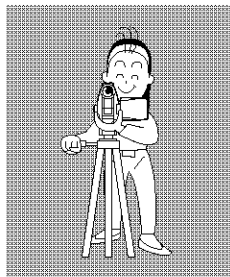


Composition

The most important element in the scene does not have to be in the centre. For a more interesting picture, try to position your subject so it is slightly to one side. Leave some space on the side of the frame that the subject is facing or moving towards.

Don't cut off the top of the subject's head, and don't cut people off at the neck, hips or knees (move a little bit above or below).

Watch out for distracting objects in the background.

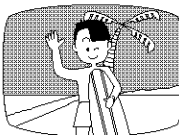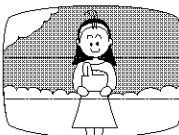

Picture angle

Instead of zooming while recording, try to choose your picture angle before you begin. A good way to tell a story with video is to begin with a long shot that establishes the situation, and then move in with medium shots and close-ups to show the details. Remember to change your viewpoint for each shot.



Long shot



Medium shot




Close-up

Remember that any camcorder movement or change in picture angle should have a definite purpose. Avoid unnecessary or half-hearted movements.


Camcorder moves

Use pans to record a landscape or follow a moving subject. Decide the area you want to cover and stand facing the end of your panning angle. Without moving your feet, turn your waist to the starting position. Start recording, and after a few seconds begin to turn slowly from the waist. Hold the final image for a few seconds before you stop recording.

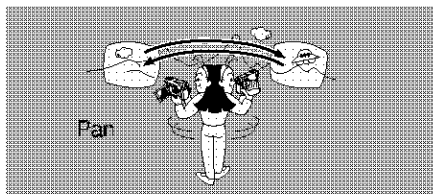


Pan

Tilt the camcorder up to exaggerate the height of the subject. Tilt down from the top of a building, for example, as an introduction to subjects at the bottom.

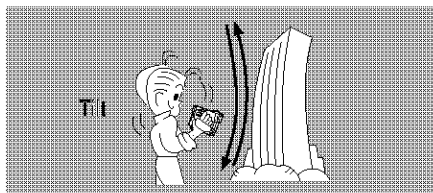

Tilt

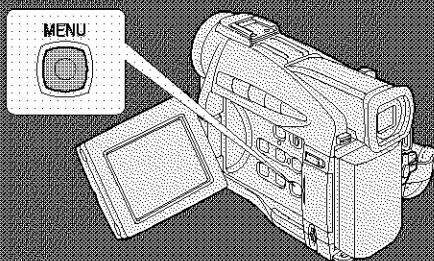

With most camcorders, even the slightest hand movements will be noticeable during telephoto recording. However, the MV450/MV450i's image stabilizer allows you to obtain steady recordings even at high magnification.



MENU
(37)

▶CAM.SET UP ▶

▶IMAGE S. ON

Using the Full Range of Features

To turn the image stabilizer off, open the menu and select CAM.SET UP. Then select IMAGE S. , set it to OFF and close the menu.

- The mark disappears from the display when the stabilizer is off.
- The image stabilizer cannot be turned off when the program selector is set to the (Easy Recording) position.

Notes:

- The image stabilizer is designed to deal with a normal degree of camcorder shake.
- Keep the image stabilizer turned off when the camcorder is mounted on a tripod.
- The image stabilizer is not as effective as usual during the Low Light mode.





Many of the camcorder's advanced functions are selected from menus which appear in the display.



There are 4 main menus:

- CAM. MENU Camera menu (39)
- PLAY MENU (M450i : VCR MENU) (40)
- C. CAM. MENU Card camera menu (42)
- C.PLAY MENU Card play menu (43)



● **CAM. MENU** TAPE + CAMERA

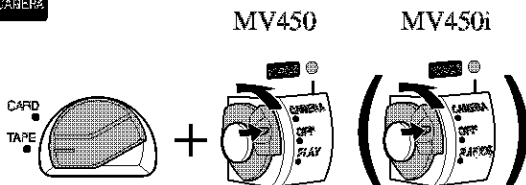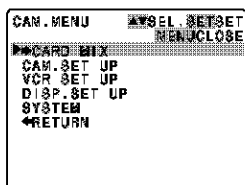



● **PLAY MENU (MV450i: VCR MENU)** TAPE + (PLAY) (P-STOP)

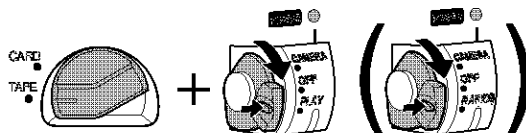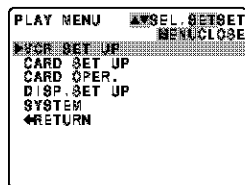


● **C. CAM. MENU** CARD + CAMERA

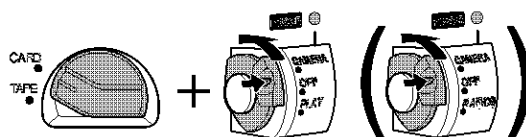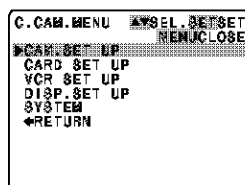

● **C.PLAY MENU** CARD + (PLAY) (P-STOP)

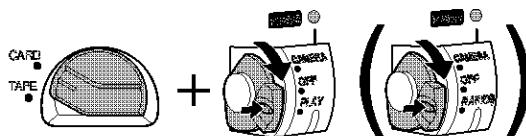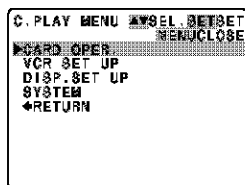

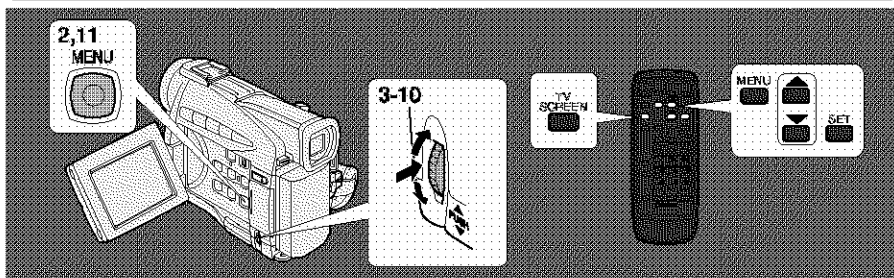

1. Turn the **POWER** switch and the **TAPE/CARD** switch to the desired settings.
2. Press the **MENU** button to open the menu.
 - One of the main menus appears, according to the settings of the **TAPE/CARD** switch and the **POWER** switch.
3. Turn the selector dial and move the arrow to the desired submenu.
4. Press the selector dial in to select.
 - The submenu appears.
5. Turn the selector dial and move the arrow to the desired function.
6. Press the selector dial in to select.
 - The function and its settings only appear.
7. Turn the selector dial and move the arrow to the desired setting.
 - If you are setting a function other than the white balance or shutter speed, the function will be set if you skip to step 11.
8. Press the selector dial in to select.
 - The function is set and you return to the submenu.
9. Turn the selector dial and move the arrow to **← RETURN**.
10. Press the selector dial in to select.
 - You return to the main menu.
11. Press the **MENU** button.
 - The main menu disappears.

Notes:

- Pressing the **MENU** button at any time closes the menu.
- Selecting **← RETURN** takes you back one menu, or closes the main menu.
- Items that are unavailable, due to the tape or card situation or the settings of other menu items, appear in purple.
- You may often find it convenient to use the wireless controller to move around the menus. Press its **MENU** button to open/close the menu and use the arrow keys in place of turning the selector dial. Push the **SET** button to select.

- Pressing the start/stop button or the PHOTO button will close the menu and start recording.
- You can display the menus on a connected TV screen by turning TV SCREEN (141) on through the menu or using the wireless controller's TV SCREEN button. See p. 30 for TV hookup instructions.


List of Menus  

Turn to appropriate page for a detailed explanation of each function.

● CAM. MENU


Set the POWER switch to **CAMERA** and the TAPE/CARD switch to **TAPE**. There are 5 submenus within the CAM. MENU.

- ➊ To card mix submenu
- ➋ To camera set up submenu
- ➌ To VCR set up submenu
- ➍ To display set up submenu
- ➎ To system menu
- ➏ Close main menu

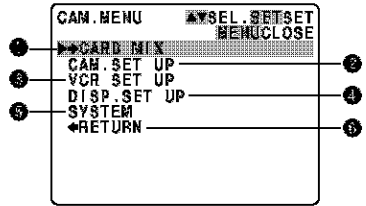


➊ Card mix submenu

- ➋ Mix type..... 115
- ➌ Mix level..... 116

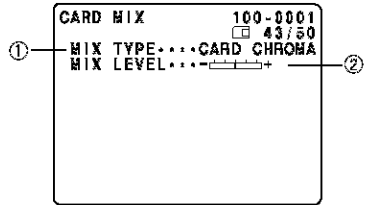

➋ Camera set up submenu


- ➌ Shutter speed..... 73
- ➍ Digital zoom..... 21
- ➎ Image stabilizer..... 36
- ➏ 16:9 effect..... 20
- ➐ White balance..... 76
- ➑ Return

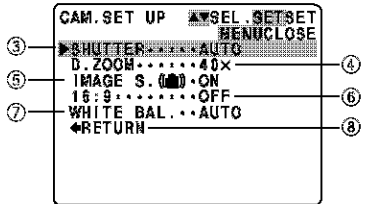

CAM. MENU, cont.


3 VCR set up submenu

- 9 Record mode..... 19
- 10 Wind screen 67
- 11 Audio mode 66
- 12 AV or headphones..... 30
- 13 Return

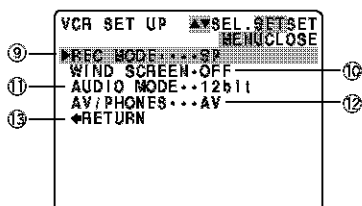


4 Display set up submenu

- 14 Brightness 24
- 15 Mirror mode..... 25
- 16 TV screen..... 141
- 17 Date/time display 51
- 18 Return

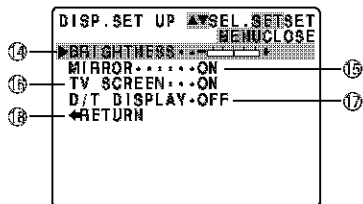

5 System submenu


- 19 Wireless controller..... 46
- 20 Light-up buttons 48
- 21 Button light colour..... 48
- 22 Beep 20
- 23 Time zone/
Daylight saving time..... 49
- 24 Date/time set..... 51
- 25 Return

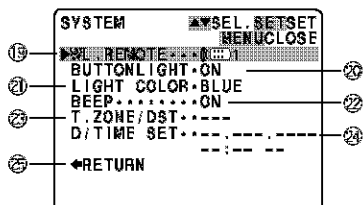

6 PLAY MENU (MV450i: VCR MENU)


Set the POWER switch to **PLAY (P.SPUR)** and the TAPE/CARD switch to **TAPE**. There are 5 submenus.

- 1 To VCR set up submenu
- 2 To card set up submenu
- 3 To card operations submenu
- 4 To display set up submenu
- 5 To system submenu
- 6 Close main menu

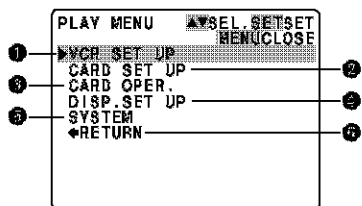


1 VCR set up submenu

- ① Record mode * 19
 - ② Output channel 99
 - ③ Audio dubbing* 96
 - ④ Wind screen 67
 - ⑤ Audio mode* 66
 - ⑥ AV or headphones 30
 - ⑦ Return
- * MV450i only

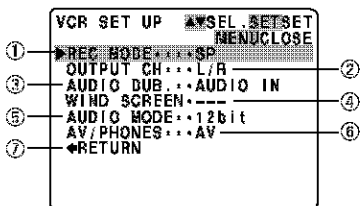


2 Card set up submenu

- ⑧ Image quality 102
- ⑨ File numbers 104
- ⑩ Return

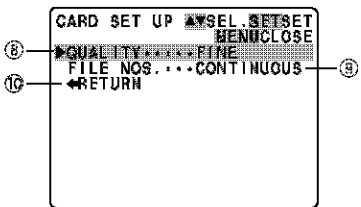


3 Card operations submenu

- ⑪ Copy from cassette to card 117
- ⑫ Return

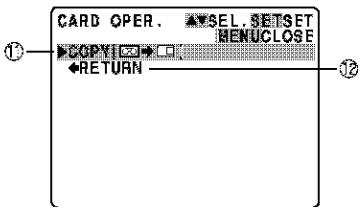

4 Display set up submenu


- ⑬ Brightness 24
- ⑭ Displays 141
- ⑮ 6-second auto date 80
- ⑯ Data code 79
- ⑰ Date/time select 78
- ⑱ Return

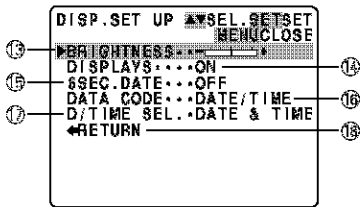

PLAY MENU (MV450i: VCR MENU), cont.

5 System submenu

- 19 Wireless controller 46
- 20 Light-up buttons 48
- 21 Button light colour 48
- 22 Beep 20
- 23 Return

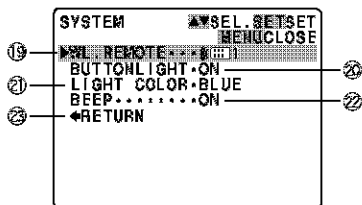


● C. CAM. MENU

Set the POWER switch to **CAMERA** and the TAPE/CARD switch to **CARD**.


There are 5 submenus within the C. CAM. MENU.

- 1 To camera set up submenu
- 2 To card set up submenu
- 3 To VCR set up submenu
- 4 To display set up submenu
- 5 To system submenu
- 6 Close main menu

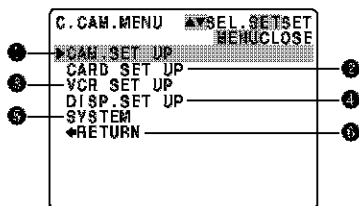


1 Camera set up submenu

- 1 Shutter speed 73
- 2 Digital zoom 21
- 3 Image stabilizer 36
- 4 White balance 76
- 5 Return

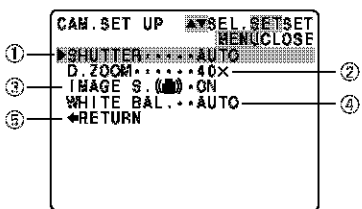


2 Card set up submenu

- 6 Image quality 102
- 7 File numbers 104
- 8 Return

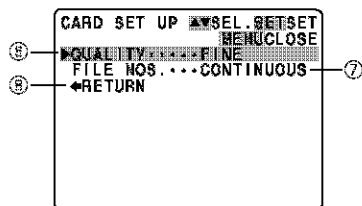


3 VCR set up submenu

- 9 AV or headphones..... 30

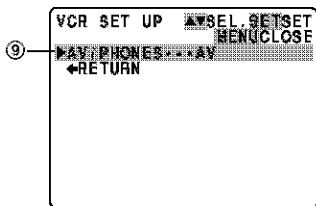


4 Display set up submenu

- 10 Brightness..... 24
- 11 Mirror mode..... 25
- 12 TV screen..... 141
- 13 Date/time display..... 51
- 14 Return

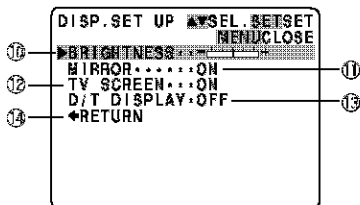

5 System submenu


- 15 Wireless controller..... 46
- 16 Light-up buttons..... 48
- 17 Button light colour..... 48
- 18 Beep..... 20
- 19 Time zone/
Daylight saving time..... 49
- 20 Date/time set..... 51
- 21 Return

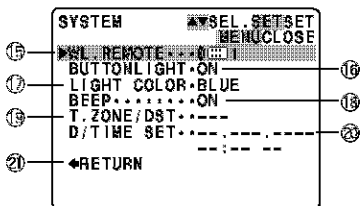

● C. PLAY MENU

Set the POWER switch to (**PLAY** / **RECORD**) and the TAPE/CARD switch to **CARD** .
There are 4 submenus within the C. PLAY MENU.


- 1 To card operations submenu
- 2 To VCR set up submenu
- 3 To display set up submenu
- 4 To system submenu
- 5 Close main menu

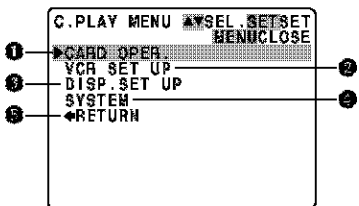

C. PLAY MENU, cont.


① Card operations submenu

- ① To image protect 111
- ② To print mark 119
- ③ Copy from card to cassette ... 118
- ④ Image erase 112
- ⑤ Format 120
- ⑥ Return

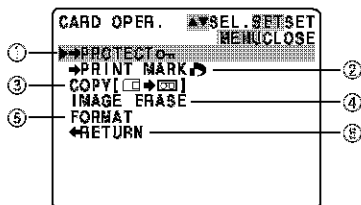


② VCR set up submenu

- ⑦ Record mode 19
- ⑧ AV or headphones 30
- ⑨ Return

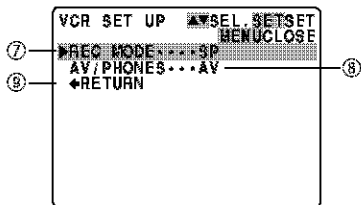


③ Display set up submenu

- ⑩ Brightness 24
- ⑪ Displays 141
- ⑫ Date/time select 78
- ⑬ Return

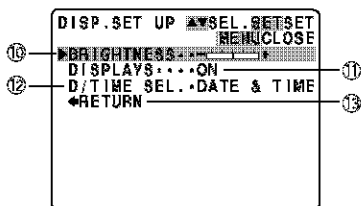

④ System submenu

- ⑭ Wireless controller 46
- ⑮ Light-up button 48
- ⑯ Button light colour 48
- ⑰ Beep 20
- ⑱ Return

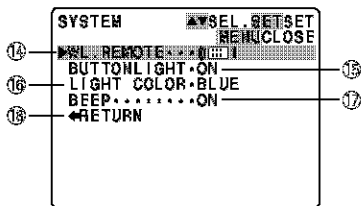


Using the Wireless Controller

The supplied wireless controller can operate the camcorder from a distance of up to 5 m (16 feet). Point it at the camcorder's remote sensor while you press the buttons.

There are some functions that cannot be operated without the wireless controller:


- Special playback ([p. 27](#))
- Photo/date search ([p. 81](#))
- Zero set memory ([p. 82](#))
- Audio mix ([p. 98](#))
- AV insert ([p. 90](#): MV450i only)
- Audio dubbing ([p. 93](#))
- Data code ([p. 78](#))

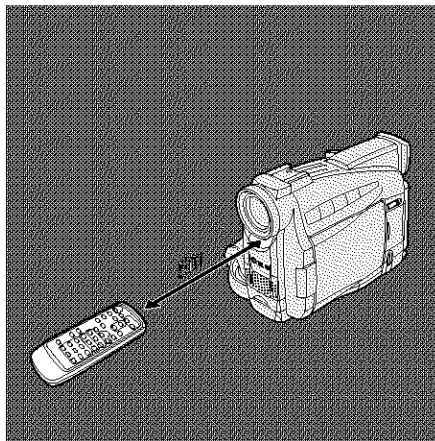

E

Inserting Batteries

Insert two AA batteries, following the \oplus and \ominus markings. Be careful not to reverse the polarity of the batteries.

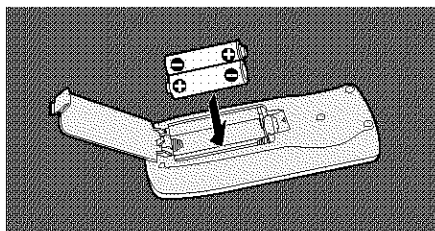


Notes:

- When using the wireless controller in brightly lit places or outdoors, the effective range will be less.
- The camcorder may have difficulty picking up the remote control signals at extremely close range.
- Do not leave the controller exposed to direct sunlight, or in hot or humid places.
- When the batteries run out, replace them both together.
- If the wireless controller doesn't work, see p. 47.

When Operating 2 Canon DV Camcorders (Remote Sensor Mode)

To prevent interference from other Canon wireless controllers being used nearby, there are 2 remote sensor modes and an off setting. The wireless controller and the camcorder have to be set to the same mode in order to be compatible.

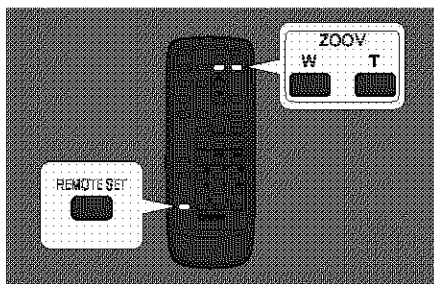

The wireless controller and the camcorder have been preset to mode 1. If you change the mode on the camcorder, be sure to change the mode on the wireless controller to the same mode.



To turn the remote sensor off:

Open the menu and select SYSTEM. Then select WL.REMOTE, set it to OFF (OFF) and close the menu.

- (OFF) appears in the display.

To change the mode...
...on the camcorder:

Open the menu and select SYSTEM. Then select WL.REMOTE, set it to (1) 1 or (2) 2 and close the menu.

- The selected mode will appear on the display for 4 seconds.

...on the wireless controller:

Press and hold the REMOTE SET button on the wireless controller. Simultaneously press the ZOOM W button for mode 1 or the ZOOM T button for mode 2. Continue to press simultaneously for over 2 seconds.

- Be sure to set the wireless controller to the same mode as the camcorder.


If your wireless controller isn't working:

Make sure the camcorder and the wireless controller are both set to the same mode. Check the mode the camcorder is set to by pushing any button other than the REMOTE SET button on the wireless controller. The camcorder's mode appears in purple for about 4 seconds. Set the wireless controller's mode accordingly by pressing the aforementioned button combinations. If the wireless controller still doesn't work, change the batteries.

 **Note:**

- The mode the camcorder is set to also appears for 4 seconds when you turn the power on.

Adjusting the Selectable Colour Light-up Buttons

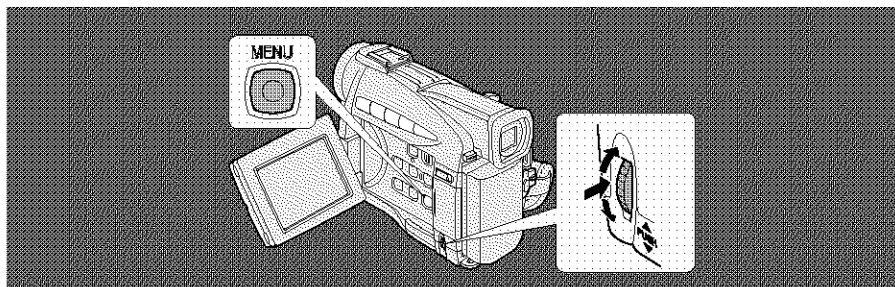

The clear buttons above the LCD panel light up when the camcorder's power is on, or only when one of the buttons is pressed, making it possible to play back cassettes when in dark surroundings. You can also change the colour in which they light up to blue, turquoise (greenish blue) or green.

Turning the buttons on



MENU
([] 37)



To change the setting, open the menu and select **SYSTEM**. Then select **BUTTONLIGHT** and set it to **PUSH ON** or **OFF** and close the menu.

- **ON:** The buttons remain lit in the indicated colour. While one of the buttons is pressed, all the buttons simultaneously change colours in the 3-colour sequence. When the button is released, they return to the original colour after a few seconds.
- **PUSH ON:** Buttons light up only while one of them is pressed. Then, all the buttons simultaneously change colours in the 3-colour sequence. When the button is released, they turn off again after a few seconds.
- **OFF:** Buttons do not light up.

Changing the colour of the buttons



MENU
([] 37)




To change the colour from blue, open the menu and select **SYSTEM**. Then select **LIGHT COLOR**, set it to **TURQUOISE** or **GREEN** and close the menu.

Note:

- You cannot change **LIGHT COLOR** when **BUTTONLIGHT** is set to **PUSH ON** or **OFF**.

Setting the Date and Time

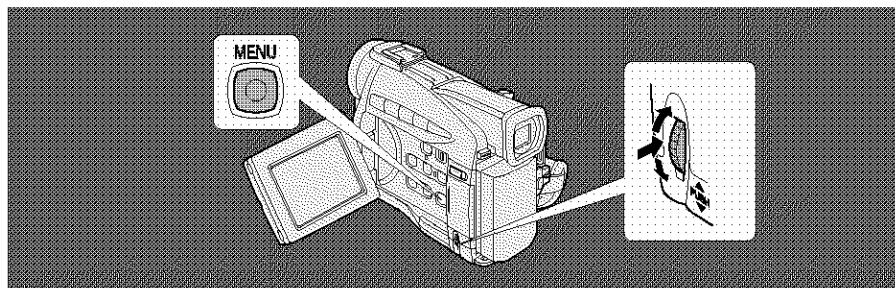

The date and/or time display forms part of the data code. You can choose to display or hide it during playback (78).

Set the date and time display when you first start using your camcorder. Install the backup battery before you begin (128).

- Before you start setting the date and time, select your home time zone from the menu.

Setting the time zone/daylight saving time



TAPE +

CAMERA,

CARD +

CAMERA


MENU

(37)

▶SYSTEM

▶T.ZONE:DST••PARIS

- 1. Open the menu and select SYSTEM.**
- 2. Select T.ZONE/DST.**
 - The time zone display appears on the screen.
 - Your camcorder's time zone is factory-preset to Paris. If you are at another time zone, select your time zone first and daylight saving time (DST) setting if necessary.
- 3. Move up or down the list of time zones with the selector dial. Select the option that represents your time zone.**
 - If you are now in daylight saving time, select the time zone with the daylight saving time mark next to the area.
- 4. Close the menu.**

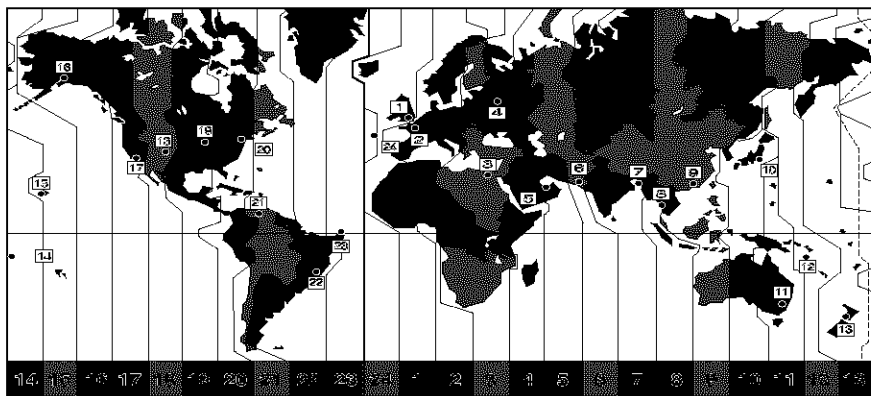

No.	Time zone	No.	Time zone
1	LONDON	13	WELLGTON (Wellington)
2	PARIS	14	SAMOA
3	CAIRO	15	HONOLU (Honolulu)
4	MOSCOW	16	ANCHOR (Anchorage)
5	DUBAI	17	L.A. (Los Angeles)
6	KARACHI	18	DENVER
7	DACCA	19	CHICAGO
8	BANGKOK	20	N.Y. (New York)
9	H. KONG (Hong Kong)	21	CARACAS
10	TOKYO	22	RIO (Rio de Janeiro)
11	SYDNEY	23	FERNAN. (Fernando de Noronha)
12	SOLOMON	24	AZORES

Notes:

- After you have selected your time zone and set the date and time, when you travel to another time zone, there is no need to reset the date and time. Just set the time zone to your destination and the camcorder's clock will automatically change to display the correct time for your destination.
- The camcorder automatically accounts for the number of days in a month and leap year.

Setting the clock



After you set the date and time, the date/time and home time zone will be displayed for about 4 seconds each time you turn the power on.



MENU
([] 37)



1. Open the menu and select **SYSTEM**.
2. Select **D/TIME SET**.
 - The year display starts to flash.
3. Turn the selector dial up and down to change the year. Press the dial in to move to another part of the display.
 - Once you move from the year, the next part of the display starts flashing.
4. Set the month, day, hours, and minutes in the same way.
5. Press the **MENU** button when finished, and to start the clock.

Notes:

- To make a change to part of the date and time, press the selector dial in at step 3 to move to the part to be changed. Turn the dial to make the change, then close the menu.
- The date can be set to any year between 2001 and 2030.
- If you press the **MENU** button in the middle of setting the date and time, you leave the menu, and the clock starts.
- If you press the selector dial in after setting the minutes you can set the date and time again from the start.

Date and time display



You can choose to display or hide the date and time display during recording. When the date and time display is set to **ON**, the date and time show in the lower left-hand corner of the display but the time zone disappears in about 4 seconds. The large, 4-second display will no longer appear when you turn on the power. It is not automatically superimposed on your recordings.




MENU
([] 37)



To turn it on, open the menu and select **DISP.SET UP**. Then select **D/T DISPLAY**, set it to **ON** and close the menu.



To take still images on a memory card, see p. 105.

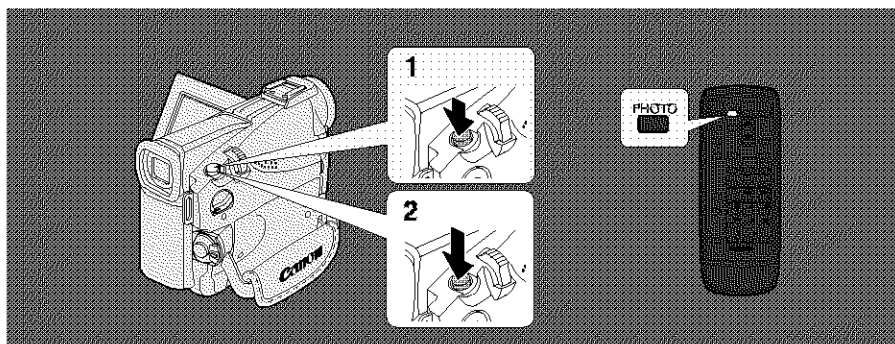

You can record still pictures like a photograph. The camcorder records the picture and sound to tape for several seconds. The exposure is automatically adjusted. Copy still photos automatically to a memory card (117) for transfer to a PC for image enhancement and printout. Also, starting your shooting with a still photo makes it easy to find the beginning again later with the Photo Search function (81).

Using the Full Range of Features

You can take a still picture at any time during regular video recording, or you can put the camcorder into record pause mode first, then take a still picture.

TAPE + **CAMERA**

During record mode

Press the PHOTO button fully down and the still picture will be taken immediately.

- The camcorder takes the image immediately, and then records the “photo” to the tape for approximately 6 seconds*. During this time the camcorder also records the sound, and the display shows the still picture.
- A counter display appears, and counts up as the camcorder records the picture.
- The camcorder returns to record pause mode.

During record pause mode**1. Press the PHOTO button halfway down and hold it:**

- “PHOTO” flashes at the bottom right of display.
- Exposure is locked.
- During autofocus ● flashes white in the display as the camcorder adjusts the focus and it is displayed continuously as a green mark when the camcorder is ready to take the still picture.
- If the subject is unsuitable for autofocus (□ 134), the camcorder may not be able to focus, and ● may continue to flash white in the display. Continue to hold the PHOTO button halfway down, then press the FOCUS button and adjust the focus manually with the selector dial.
- If you are using manual focus (□ 75), the ● mark starts as a continuous green mark. Focus with the selector dial.

2. Press the PHOTO button fully down to take the still picture.

- The camcorder takes the image immediately, and then records the “photo” to the tape for approximately 6 seconds*. During this time the camcorder also records the sound, and the display shows the still picture.
- A counter display appears, and counts up as the camcorder records the picture. ● disappears from the display.
- The camcorder returns to record pause mode.

**Notes:**


- The camcorder automatically returns to record pause mode after recording a still image for approximately 6 seconds*. If you turn the POWER switch to OFF during that time, the camcorder will respond only after recording is complete.
- The wireless controller’s PHOTO button has no half-way setting. Press the button fully and the camcorder immediately takes the “photo”.
- Only take “photos” where it is bright enough to see the image in the display.

* 8 seconds in **SP** or **LP** recording mode.

Searching and Reviewing While Recording

Record Search

When the camcorder is in record pause mode, you can use record search to play the tape forwards or backwards to find the point where you want to start or resume recording. This is useful when you want to add a new scene to a previously used cassette. By using record search, you can ensure a smooth, noise-free join between the new scene and the old one.

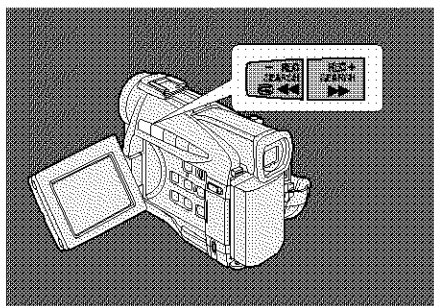


TAPE + **CAMERA**

1. **Press and hold the REC SEARCH + or – button on the camcorder while you check the picture in the display.**
 - The + button plays the recording forwards and the – button plays it backwards.
2. **Release the button when you find the point where you want to start recording.**
 - The camcorder returns to record pause mode.

Record Review


When the camcorder is in record pause mode, you can use record review to play back the last few seconds of your recording and then return automatically to record pause mode. You can quickly make sure that a scene has recorded properly and then go on to shoot the next scene, without producing any noise in the picture.

TAPE + **CAMERA**

1. **Press and release the  (record review) button while you check the picture in the display.**
 - The camcorder rewinds the tape, plays back the last few seconds, and returns to record pause mode.

Note:

- Noise may appear on the screen when you play the tape backwards.

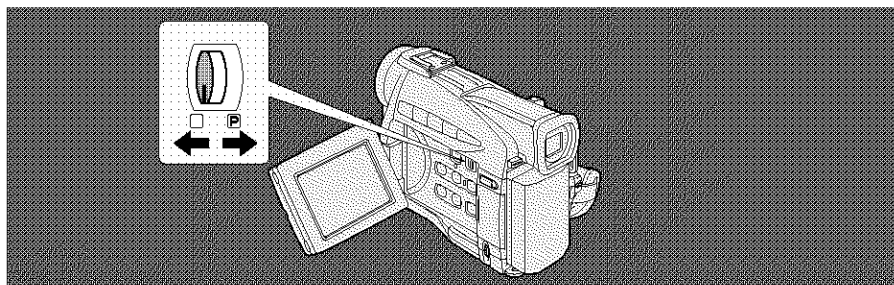

The camcorder provides you with a choice of 7 recording programs. They use different combinations of camcorder settings in order to adjust the exposure and other functions to match the recording situation.

- For simple point-and-shoot operation, select the Easy Recording program. Slide the program selector to the □ position.
- For normal shooting conditions, slide the program selector to P (program AE) mode. Open the program menu and select AUTO (□□56).
- For various other recording conditions, the camcorder has 5 more specialised AE (auto exposure) programs.

Availability of functions in each recording program

Position of program selector							
Recording Program	□ (Easy Recording)	Auto	Sports	Portrait	Spotlight	Sand & Snow	Low Light
Shutter Speed		○			A		
Focus	A				○		
White balance					○		
AE Shift	×		○			×	○
Image stabilizer (ON/OFF)	ON				○		
Digital effects	×				○		
16:9	×				○		


○ : Available

× : Not available



A : Automatic function only




TAPE + CAMERA , CARD + CAMERA

1. Slide the program selector to  (program AE) mode.
2. Press the selector dial in to display the program menu.
3. Turn the selector dial to move the arrow up or down the display.
4. Press the selector dial in to select the desired program.
 - The program will appear in the display.
5. Press the start/stop button to begin recording.

Notes:

- The name of your selected recording program appears constantly on the left of the display, with the exception of Auto, which is displayed and then disappears after 4 seconds.
- Avoid changing programs during recording as the brightness of the image may change suddenly.
- If you switch the camcorder from the  program to the  program, the camcorder returns to the Auto mode.
- When recording in dark places a bright light in the scene may cause a vertical light bar (“smear”) to appear. This is a normal feature of camcorders.

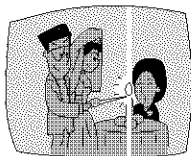

Easy Recording

The simplest way to use the camcorder is with the program selector set to the position. The camcorder will take care of focus, exposure and other adjustments, leaving you free to point and shoot.




Auto

This is the same as the Easy Recording program, except that you now have the option of using any of the camcorder's manual functions.



Sports

This program is useful for recording high-speed sports scenes in brightly lit conditions. Normal playback will be slightly jerky, but you will get clear images which can be analysed frame by frame during slow or paused playback.

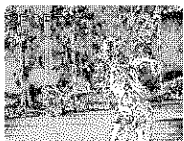


Portrait

Use this program outdoors to make subjects stand out from a softened foreground and background. It works well for still-lives and close-ups. The effect is most noticeable when the zoom position is between the middle range and the telephoto end. Focus manually for maximum accuracy, and be careful when recording action scenes, as this program may cause fast moving objects to shudder.



Spotlight

This program is designed for recording spotlight scenes, such as on a stage. The exposure is automatically adjusted for glare-free recordings of subjects lit by a concentrated light source.

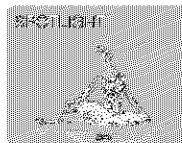


Sand & Snow

Use this program in places where the background is so bright that the subject appears underexposed in the display — a sunny beach or ski resort, for example. You may notice some shudder when recording moving subjects.






Low Light

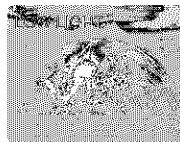This program allows you to record in dimly lit places. It is generally best used for close-ups of slow or stationary subjects, as moving subjects may leave a trailing after-image. However, you can take advantage of this to create special effects, by rapid zooming or by panning along with a moving subject. Picture quality will not be as good as in normal lighting conditions, and autofocus may not work as well as usual.



Using Digital Effects

Use the camcorder's digital effects for more interesting productions.

- **Faders:** Start or end scenes on a tape with a fade to or from black ( 60). Fade Trigger, Vertical Wipe, Horizontal Wipe, Mosaic Fade*
- **Effects:** Add flavour to your recordings ( 61). Art, Black and White, Sepia, Mosaic
- **Multi-image Screen:** Divides the display to show 4, 9 or 16 still photos. Has 4 transition speed options: fast, moderate, slow and manual ( 64).
* Available in TAPE PLAY (MV450i: PLAY (VCR)) mode only.


 

Availability of digital effects by mode

	TAPE CAMERA	PHOTO	TAPE PLAY (MV450i: PLAY (VCR))	CARD CAMERA	CARD PLAY (MV450i: PLAY (VCR))
Faders	○	×	○	×	×
Effects	○	○	○	○	×
Multi-image Screen	○	○	○	○	×

○ : Available × : Not available

- The types of digital effects you are able to use depends on the setting of the TAPE/CARD switch, the POWER switch and the recording program.


Notes:

- When you do not want to use digital effects, press the DIGITAL EFFECTS button and select D.EFFECT  from the digital effects menu. Press the DIGITAL EFFECTS button to close the menu.
- The camcorder remembers your chosen digital effect setting until you change it.
- Digital effects can be selected but not operated on a blank blue screen (appears in TAPE PLAY (MV450i: PLAY (VCR)) mode). The display continues to flash.
- Digital effects operated during TAPE PLAY (MV450i: PLAY (VCR)) mode are not recorded onto the original tape.
- Digital effects can be added to another tape when dubbing using the AV out terminal (TAPE PLAY (MV450i: PLAY (VCR)) mode), but not the DV out terminal.
- You cannot operate digital effects while photo/date searching.
- If you slide the program selector to  (Easy Recording) while the digital effect display is flashing, it will disappear from the display and reappear when you return to  (program AE) mode.
- The digital effect display will flash for 2 seconds after setting, even if DISPLAYS is set to OFF in the menu.

Faders

Fade Trigger (FADE-T)


When you start recording, the scene gradually fades in from a black screen.

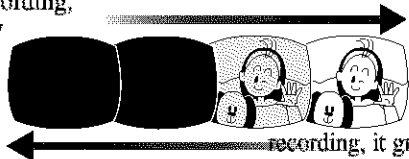

When you stop recording, it gradually fades out.

Wipe (WIPE II)


When you start recording, the picture begins as a thin vertical line in the center of the screen which gradually expands sideways until it fills the whole of the screen.

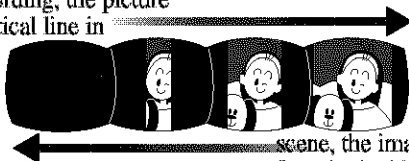

When you end a scene, the image is wiped from both sides of the screen.

Horizontal Wipe (WIPE =)


When you start recording, the picture begins as a thin horizontal line in the centre of the screen which gradually expands upwards and downwards until it fills the whole screen.

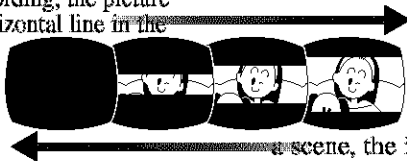

When you end a scene, the image is wiped from the top and bottom of screen.



Mosaic Fade (M. FADE)*

Blurs the image by enlarging the size of some pixels. The image appears as increasingly large squares of colour as it fades out, and smaller squares when it fades in.

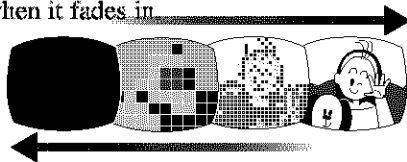


*Available during TAPE PLAY (MV450i: PLAY (VCR)) mode only.

Effects

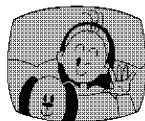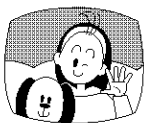

Sepia (SEPIA)

Makes a monochrome image with a brownish tint.

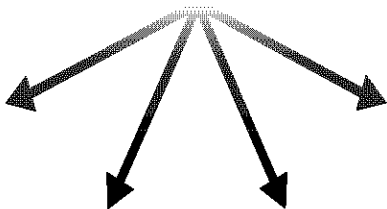


Art (ART)

Adds a paint-like effect, called solarization, to the image.



Black and White (BLK & WHT)


Makes the image black and white.

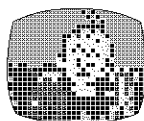

Mosaic (MOSAIC)

Blurs the image by enlarging the size of some pixels.

Digital effects can be set with the controls on the body of the camcorder or the wireless controller. Pressing the ▲/▼ buttons on the wireless controller correspond to turning the selector dial up and down, and pressing the SET button corresponds to pressing the selector dial in.

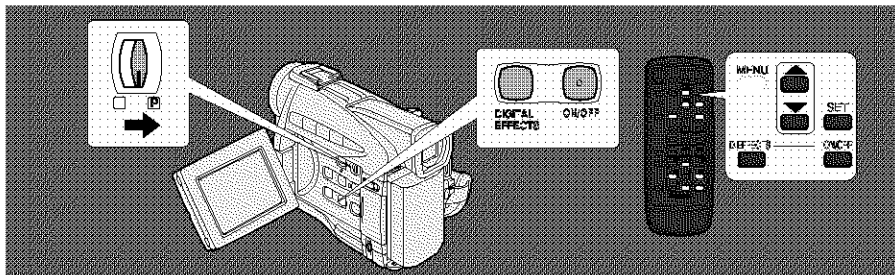

Operating faders

Sound and image fade together.

When operating faders in TAPE CAMERA mode, make sure the program selector is set to **[E]**.

TAPE + **CAMERA** , **TAPE** + (**PLAY** / **PLAY(VCR)**)

Select fader

1. Press the **DIGITAL EFFECTS** button to open the digital effects menu.
 - D.EFFECT **OFF**, FADER, EFFECT and MULTI-S appear.
2. Select **FADER**.
 - FADE-T, WIPE **||**, WIPE **=** settings appear. M.FADE also appears in TAPE PLAY(MV450i: PLAY(VCR)) mode.
3. Select the desired setting.
 - You return to the digital effects menu.
4. Press the **DIGITAL EFFECTS** button to close the menu.
 - The name of your selected fader flashes in the display.

Fader on/off

5. Press the **ON/OFF** button.
 - The name of your selection stops flashing.
 - Each time you press the **ON/OFF** button, the chosen fader is activated (display lights continuously) or deactivated (display flashes).

6. If you're in TAPE CAMERA mode:

Fade in- Press the start/stop button.

Fade out- Press the start/stop button.

If you're in TAPE PLAY (MV450i:PLAY (VCR)) mode:

Fade in- Press the ► (play) button.

Fade out- Press the || (pause) button.

Operating effects



Sound records/plays back normally.

When operating effects in TAPE CAMERA or CARD CAMERA mode, make sure the program selector is set to [P].



Select effect

1. Press the **DIGITAL EFFECTS** button to open the digital effects menu.

- D.EFFECT OFF, FADER, EFFECT and MULTI-S appear.

2. Select **EFFECT**.

- ART, BLK&WHT, SEPIA, MOSAIC settings appear.

3. Select the desired setting.

- You return to the digital effects menu.

4. Press the **DIGITAL EFFECTS** button to close the menu.

- The menu disappears and the name of your selected setting flashes in the display.

Effect on/off

5. If you're in TAPE PLAY (MV450i: PLAY (VCR)) mode, press the ► (play) button.

6. Press the **ON/OFF** button.

- The name of your selection stops flashing and takes effect on the display.
- Each time you press the ON/OFF button, the chosen effect is activated or deactivated.

Using the Multi-Image Screen

E

Divides your display image into 4, 9 or 16 smaller images with the Image Capture feature. With this feature, the camcorder captures the current scene being shot or replayed. Choose the transition speed — manual, fast (every 4 frames), moderate (every 6 frames) or slow (every 8 frames) — at which to capture a moving subject, such as a person playing tennis or golf. Sound is recorded normally.



4 images



9 images



16 images

Operating the Multi-Image Screen



When operating the multi-image screen in TAPE CAMERA or CARD CAMERA mode, make sure the program selector is set to **P**.

In TAPE PLAY (MV450i: PLAY (VCR)) mode, you can only operate the multi-image screen in the following playback modes:

When M.S.SPEED is set to MANUAL: Still picture playback, slow forward/reverse playback

When M.S.SPEED is set to FAST, MODERATE or SLOW: Still picture playback

TAPE + CAMERA, TAPE + (PLAY / PLAY-VCR), CARD + CAMERA

Select multi-image screen

1. Press the **DIGITAL EFFECTS** button to open the digital effects menu.
 - D.EFFECT **Off**, FADER, EFFECT and MULTI-S appear.
2. Select **MULTI-S**.
 - M.S. SPEED and M.S. SPLIT settings appear.
3. Select **M.S. SPEED**.
 - MANUAL, FAST, MODERATE and SLOW settings appear.
4. Select the desired setting.
 - You return to the digital effects menu.
5. Select **MULTI-S** again.
 - M.S. SPEED and M.S. SPLIT settings appear.
6. Select **M.S.SPLIT**.
 - 4, 9, 16 settings appear.
7. Select the desired setting.
 - You return to the digital effects menu.

8. Press the DIGITAL EFFECTS button to close the menu.

- The digital effects menu disappears.
- MULTI-S flashes in the display.

Multi-image screen on/off

9. Push the ON/OFF button.

- MULTI-S stops flashing.
- Manual: As you press the ON/OFF button, scenes will be captured one after another the indicated number of times. If you push and hold the ON/OFF button for more than a second, the last image captured will be erased.
- The currently recording image is framed in blue. The frame disappears after the last image is captured.
- Automatic: The camcorder will capture the indicated number of images at the indicated speed.

10. If you're in TAPE CAMERA mode, push the start/stop button to begin recording.

- The multi-image screen is recorded to the tape.

If you're in CARD CAMERA mode, press the PHOTO button to record the multi-image screen to the memory card.



Notes:

- You can operate the multi-image screen from record or record pause mode.
- After all the images have been captured, press the ON/OFF button quickly to cancel the multi-image screen.
- If you are operating the multi-image screen in TAPE PLAY (MV450i: PLAY (VCR)) mode and you stop or pause the tape, or press any other playback button or the date/photo search button, the multi-image screen will be cancelled. (This does not apply with the MANUAL multi-image speed.)
- You cannot use digital zoom or the 16:9 mode when the multi-image screen is set. The display becomes “— — —”.

Audio Recording

Selecting the audio mode



MV450/MV450i can record sound in two audio modes — 16-bit and 12-bit. The 16-bit mode produces the higher sound quality (slightly superior to CD) while the 12-bit mode records on 2 channels (stereo 1), leaving 2 channels free (stereo 2) for you to add new sound at a later date.




To switch to the 16-bit mode, open the menu and select **VCR SET UP**. Then select **AUDIO MODE**, set it to “16 bit” and close the menu.

- “16 bit” is shown in the display for approximately 4 seconds.

Notes:



- For details on adding new sound, see p. 93.
 - For details of playing back a tape that has new sound on stereo 2, see p. 98.
- MV450i only**
- When you record to the MV450i from a camcorder with DV terminal outputs, the audio mode becomes automatically set to 12 bit.
 - When the recording mode is set to **ESP** or **ELP** mode, the audio mode becomes automatically set to 12 bit.

External microphone

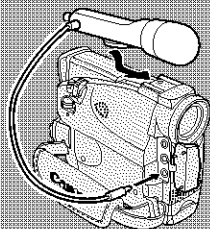

For greater creative control over audio recording, you can connect an external microphone to the camcorder via the MIC terminal. When using the MIC terminal, use a microphone with a built-in power supply (condenser microphone). It is possible to connect almost any stereo microphone with a plug diameter of 3.5 mm (1/8 in), however, their audio levels will be different from that of the built-in microphone.

 Notes:

- When using an external microphone, use a microphone cable not longer than 3 meters to avoid electromagnetic interference.
- For details on using the optional DM-50 microphone, see p. 71.
- Be careful when using long microphones as they may extend into the frame.
- You can monitor the sound while recording by setting the AV/headphone terminal to headphones ( 30) and attaching stereo headphones to the  terminal.

Wind screen



The camcorder has an automatic wind screen to prevent wind noise from interfering with the sound track. Make sure it's off when you want the microphone to be as sensitive as possible. Use the wind screen when recording in windy places such as the beach or near buildings.



MENU
( 37)




To turn it on, open the menu and select VCR SET UP. Then select WIND SCREEN, set it to ON and close the menu.

- WS  is shown in the display when you turn the wind screen on.


Notes:

- The wind screen can be used for audio dubbing with the built-in microphone as well as recording.
- The wind screen does not operate when an external microphone is connected to the MIC terminal or the advanced accessory shoe.

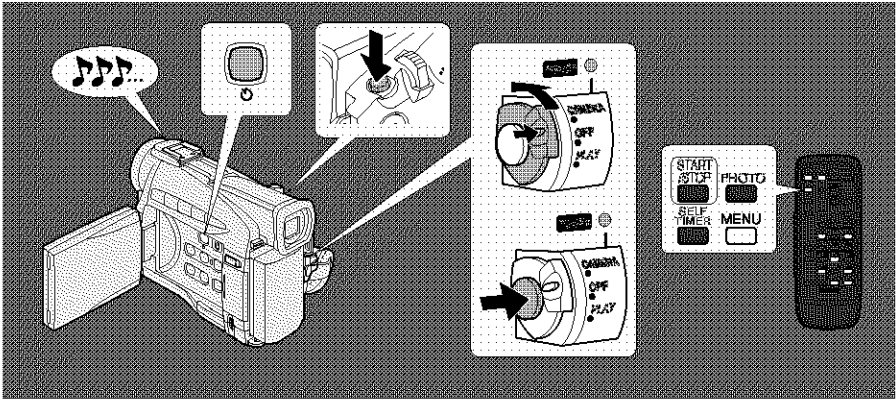

This is useful when you want to include yourself in the picture when recording movies or still photographs.

TAPE + CAMERA , **CARD + CAMERA**

1. Press the  self-timer button on the body of the camcorder
or
the **SELF TIMER** button on the wireless controller.


 


- SELF-T appears in the display.
- To have the subject monitor recording, rotate the LCD panel 180° ( 25).

For movies

2. Press the start/stop button.
 - The camcorder starts to record after a 10-second countdown period (or after 2 seconds when you use the wireless controller). The time remaining counts down in the display (e.g. "5 SEC").
 - SELF-T disappears from the display when recording begins.
3. Press the start/stop button to end recording.



For stills

2. Press a PHOTO button on the camcorder body or the wireless controller.


- The camcorder automatically adjusts the focus 2 seconds before the countdown is complete. The  mark flashes white then turns green after the focus and exposure are set. If you are using the wireless controller, the  mark starts flashing immediately after you press the PHOTO button.
- The camcorder takes the picture for approximately 6 seconds (8 seconds in  SP or  LP recording mode).




Notes:

- To cancel the self-timer before the countdown has begun, press the  SELF TIMER button.
- To cancel the self-timer once the countdown has begun, press the  SELF TIMER button, start/stop if you're shooting movies, or PHOTO if you're taking a still image.

Using the VL-3 Video Light (optional)

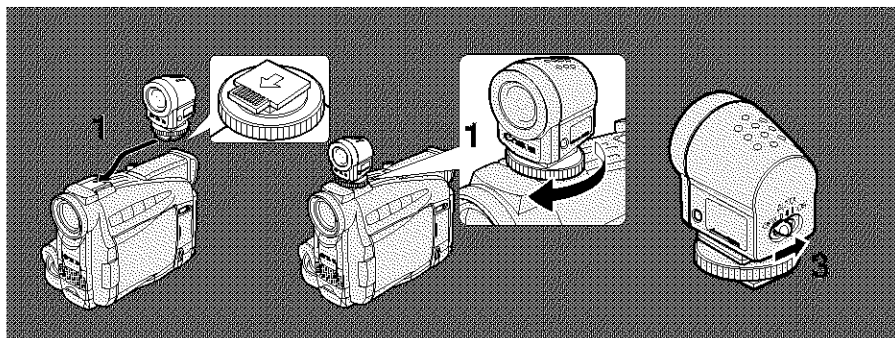

When recording in dark rooms, attach the Video Light to the camcorder's  advanced accessory shoe. The Video Light is powered by the same power source as the camcorder.

Also refer to the VL-3 Video Light instructions.

Turn the camcorder's power off before attaching/removing the Video Light.

1. Slide the Video Light onto the accessory shoe and tighten with the shoe lock.

- Slide in the direction of the arrow on the bottom of the Video Light until it clicks securely into place.
- Make sure that the light does not come disconnected when turning the shoe lock.


2. Set the camcorder to TAPE CAMERA mode or CARD CAMERA mode.



3. Turn the Video Light's power switch to AUTO or ON.

- **C** (Connection) appears in the display.
- **ON**: The Video Light stays on.
- **AUTO**: The Video Light turns on/off automatically according to the level of brightness of the shooting conditions.
- When the Video Light is set to AUTO, it will not turn itself on/off while the camcorder is recording a still picture, even if the brightness of the surroundings changes.

Caution:

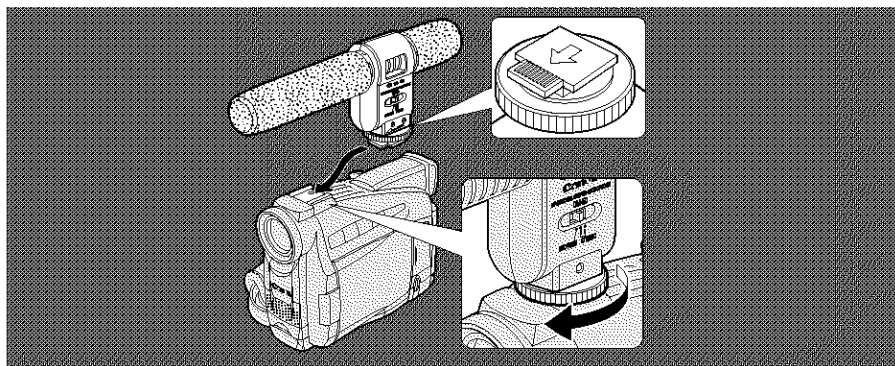- Be careful not to touch the bulb or the surrounding area during or immediately after use; it becomes very hot. Keep the Video Light away from flammable or plastic materials.
- Do not look directly at the bulb while the Video Light is on.
- Never carry the camcorder holding the Video Light.



The highly sensitive Directional Stereo Microphone DM-50 has been designed exclusively for camcorders equipped with an advanced accessory shoe . It is powered by the camcorder's power supply. Use during cassette recording or audio dubbing ( 93).


Refer to the DM-50's instructions for further details.

Turn the camcorder's power off before attaching/removing the microphone.

1. Slide the microphone onto the accessory shoe and tighten with the shoe lock.

- Slide in the direction of the arrow on the bottom of the microphone until it clicks securely into place.
- Make sure that the microphone does not come disconnected when turning the shoe lock.

2. Set the camcorder to TAPE CAMERA mode.

-  (Connection) appears in the display.

3. Set the microphone's directivity switch.

SHOTGUN: Clearly picks up sound arriving from the front of the microphone (monaural).

STEREO1: Picks up sound arriving from the front of, as well as sound surrounding the microphone.

STEREO2: Picks up sound surrounding the microphone in a wider range than STEREO 1.


 **Notes:**

- Never carry the camcorder holding the microphone.
- Do not use any other external microphones while the DM-50 is connected to the advanced accessory shoe.

Using AE Shift

E


By controlling the level of the automatic exposure (AE) function, you can lighten or darken the image slightly. This allows you to compensate for backlit, overexposed scenes.

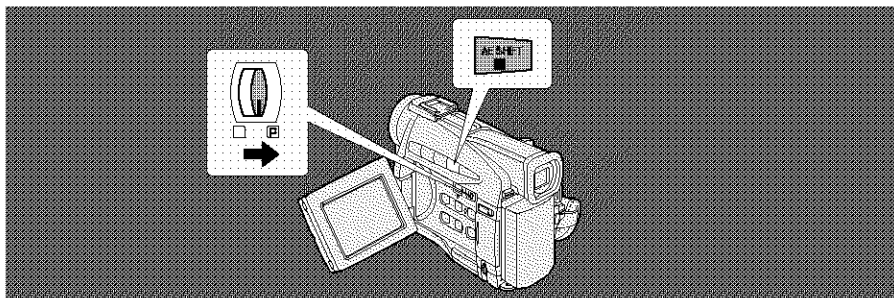

TAPE + CAMERA


, CARD + CAMERA

Using the Full
Range of Features

Make sure the program selector is set to .

1. Press the selector dial in and select any recording program other than Spotlight or Sand & Snow from the program menu.
2. Press the AE SHIFT button.
 - ►AE appears light blue.
3. Turn the selector dial to choose your desired level.
 - Levels are from -2 to +2, in 0.25 intervals (excluding -1.75 and +1.75).
 - The higher the setting, the brighter the image.

Notes:

- You cannot adjust the exposure without the ► mark before AE in the display. Push the AE SHIFT button so that ► appears before AE. Then you can adjust the exposure manually.
- You cannot adjust the AE Shift when the camcorder is set to  (Easy Recording), the Spotlight recording program or the Sand & Snow recording program.

Setting the Shutter Speed



Set the shutter speed manually to take stable shots of quickly moving subjects.

TAPE + **CAMERA** , **CARD** + **CAMERA**

MENU
(37)

▶CAM.SET UP

▶SHUTTER.....AUTO

1. Make sure the camcorder is set to the (program AE) mode.
2. Press the selector dial in and choose AUTO from the program menu.
3. Open the menu and select CAM.SET UP.
4. Select SHUTTER.
5. Press the selector dial in to select the desired shutter speed.

<u>TAPE</u>		<u>CARD</u>
AUTO		AUTO
1/50	↑ slower ↑	1/50
1/120		1/120
1/250		1/250
1/500		
1/1000		
1/2000		
1/4000		
1/8000	↓ faster ↓	

- Only shutter speeds up to 1/250 are available when using a memory card.

6. Close the menu.

Guidelines for shooting using high shutter speeds

- When shooting with a shutter speed of 1/1000 or higher, do not shoot the sun directly.

Recommended shutter speeds when shooting:

- People doing outdoor sports such as golf or tennis



 
1/2000 or 1/4000
(or 1/8000 to freeze
the action even more
clearly)

- Moving cars or trains or other rapidly moving vehicles such as roller coasters



1/1000, 1/500 or
1/250

- People doing indoor sports such as basketball



1/120

Notes:

- You are unable to set the shutter speed in any recording program other than AUTO. The SHUTTER display becomes set to “— — —.”
- The image may not appear smooth when a high shutter speed is set.
- The camcorder returns to the auto shutter setting when you slide the program selector to (Easy Recording), or change the recording program.
- If you set the shutter speed to 1/500 or above in TAPE CAMERA mode and then switch the camcorder to CARD CAMERA mode, the shutter speed will automatically change to 1/250.

Adjusting Focus Manually

The camcorder can focus automatically. All you have to do is point it, and whatever is in the centre of the display will usually be in sharp focus. If it does not seem to be focusing well, it may be because the subject is not suitable for autofocus.

You can use the manual focusing function for more control over focusing.

Focus lock


TAPE + **CAMERA**, **CARD** + **CAMERA**

Press the FOCUS button to turn off autofocus. The focus remains locked at the point set by autofocus.

(▶M.FOCUS appears in the display.)

You can now adjust the focus manually with the selector dial. Press the FOCUS button again when you want to return to autofocus.

- If you zoom in on your subject after turning off autofocus, it may not stay in focus. It is generally best to adjust the zoom first, and then the focus.

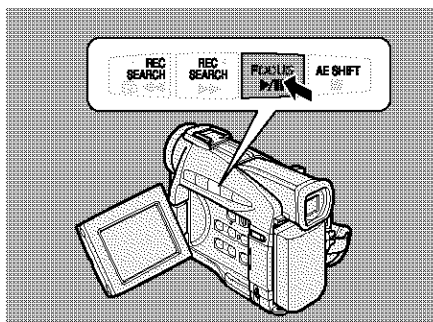


Manual focus

TAPE + **CAMERA**, **CARD** + **CAMERA**

Use the selector dial to set the focus.

- Turn the selector dial downward to move the focus farther away.
- Turn the selector dial upwards to bring the focus nearer.

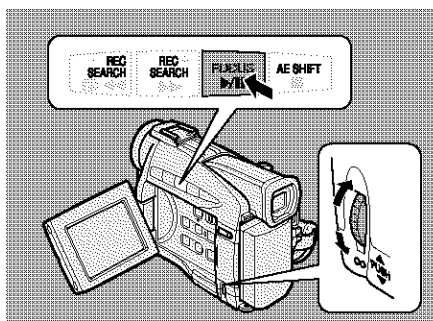

Notes:

- You cannot adjust the focus without the ▶ mark before M.FOCUS in the display. Push the FOCUS button so that ▶ appears before M.FOCUS. Then you can adjust the focus manually.
- The manual focus setting is cancelled if you select the (Easy Recording) program.
- When you are using the (Easy Recording) program, autofocus cannot be turned off.
- See "Troubleshooting" on p. 133 for a list of subjects which may not be suitable for autofocus.



The camcorder's auto white balance system compensates for a wide range of lighting conditions. Although slight variations are unavoidable, colours will appear natural in virtually every situation.


In some cases, you will get better results by setting the white balance yourself, or using one of the two preset modes:

✧ Indoor Mode

- Under halogen or studio/video lighting
- Subject is of one dominant colour
- Close ups

* Outdoor mode

- In daylight, especially for close-ups and where the subject is of one dominant colour

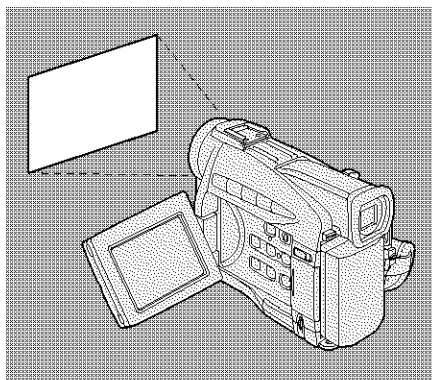

MENU
(37)



1. Make sure the camcorder is set to the **E** (program AE) mode.
2. Open the menu and select **CAM.SET UP**.
3. Select **WHITE BAL.**
4. a) For the indoor, outdoor or auto settings, press the selector dial in to choose the setting.
 - ✧/* appears in the display when you set the white balance to indoor/outdoor mode.
- b) To set the white balance yourself, point the camcorder at a white object (such as a sheet of paper) and zoom in until it fills the display. Then press the selector dial in to select **SET** .
 - Make sure to continue pointing the camcorder at the white object until you have finished setting the white balance.
 - The display flashes then remains lit.
 - Depending on the light source, the flashing may at times continue. The result will remain better than with the auto setting and you can continue recording.
5. Close the menu.

Setting the white balance manually will probably work better than auto white balance when shooting:

Subjects with one dominant colour, such as sky, sea or forest



Close-ups





In rapidly changing lighting conditions



In places lit by certain types of fluorescent or mercury vapour lights



Notes:


- Turn the digital zoom off (if necessary) to set a more accurate white balance.
- If you have set the white balance and lighting conditions change, reset the white balance.
- Try to record with light from a single source. Correct white balance cannot be obtained for two types of lighting at once.
- You cannot set the white balance or choose the indoor/outdoor mode when the program selector is set to the  (Easy Recording) program.
- The white balance returns to the AUTO setting when you slide the program selector to  (Easy Recording).
- When you turn the camcorder on, the white balance returns to AUTO. If you then switch the white balance to SET, the camcorder will remember your last setting.
- During normal outdoor shooting, setting to AUTO may provide better results.

Displaying Date, Time and Camcorder Data (Data Code)

E

A data code, containing the date and time the recording was made and other camcorder data (shutter speed and exposure settings) is automatically recorded on a special data section of the tape.

- Only the date and time appear in the data code when using a memory card.

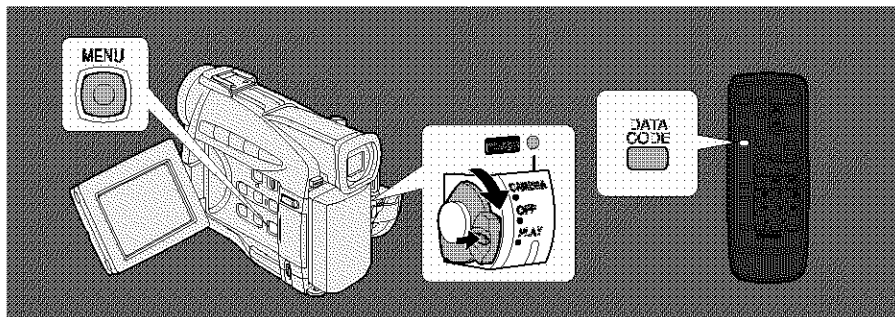

During TAPE PLAY (MV450i: PLAY (VCR)) mode, the data code can be displayed or hidden while the camcorder is in play, slow or still mode.

Camcorder data may be displayed as “— —” during fast forward, rewind, reverse playback, forward and reverse $\times 2$ playback.

Press the DATA CODE button on the wireless controller. When using a cassette, press it while the camcorder is in play, slow or still mode.

- Press it once to display, once more to hide it.

Using the Full
Range of Features

Selecting date/time



Select whether you want the date, the time, or both to show up on your data code display (79).

TAPE + (**PLAY** / PLAY/VCR), CARD + (**PLAY** / PLAY/VCR)

MENU
(37)

► DISP. SET UP

► D/TIME SEL. DATE & TIME

To change the date and time combination, open the menu and select DISP.SET UP. Then select D/TIME SEL., set it to DATE, TIME or DATE & TIME and close the menu.



You can also choose to display camcorder data (shutter speed and exposure settings) in cassette data codes.

TAPE + (**PLAY** / **PLAY/REC**)

MENU

(37)

▶ DISP. SET UP

▶ DATA CODE...DATE/TIME

To change, open the menu and select **DISP.SET UP**. Then select **DATA CODE**, set it to **DATE/TIME**, **CAMERA DATA** or **CAM. & D/T** and close the menu.

Possible data code combinations for cassettes:

DATA CODE (cassette only) D/TIME SEL.	Date/Time	Camera data	Date/Time & Camera data
Date	1 JAN 2001	F80 1:250	F80 REC 1 JAN 2001
Time	12:00:00 AM	F80 1:250	F80 REC 12:00:00 AM
Date & Time	12:00 AM 1 JAN 2001	F80 1:250	F80 REC 12:00 AM 1 JAN 2001

Notes:

- The data code will read “— —” in the following situations:
 - During playback of a blank section of tape.
 - If the tape was recorded before entering the date and time in the camcorder’s memory.
 - If the tape was recorded on a camcorder without a data code function.
 - If noise or tape damage prevents the data code from being read.
- If a recording made on MV450/MV450i is played back on a different DV camcorder, the data code may not be displayed correctly.
- The data code will appear in the display even if **DISPLAYS** (141) has been set to **OFF** through the menu.

The 6-second auto date appears for 6 seconds to mark the changeover of a day if the tape was being recorded at 12:00 midnight. It also appears for 6 seconds when you start playback and have the data code turned off. The 6-second auto date will adjust for any time zone changes you have indicated.

TAPE + (**PLAY**
PLAY/CR)


MENU
( 37)


▶DISP.SET UP

▶6SEC. DATE...OFF

To turn the 6-second auto date on, open the menu and select **DISP.SET UP**. Then select **6SEC. DATE**, set it to **ON** and close the menu.

 **Note:**

- When 6SEC.DATE is turned on but DISPLAYS ( 141) is turned off, the six-second auto date will still appear for 6 seconds.

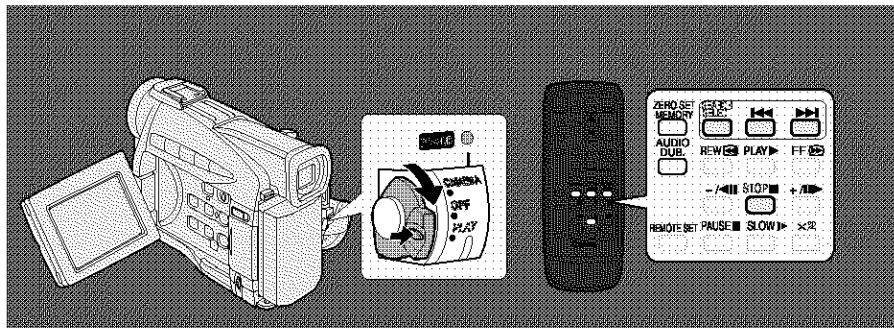

This allows you to move quickly through still pictures recorded anywhere on a tape (photo search) or between different days or areas of recording (date search) on a tape.

TAPE + (**PLAY** / **PLAY/CR**)

1. Press the SEARCH SELECT button to choose between photo/date search.


- PHOTO SEARCH or DATE SEARCH is shown in the display for 4 seconds.

2. Press the ◀◀ and ▶▶ buttons to move backwards or forwards through the still pictures or between different days of recording.

- Press once to move to the start of the previous/next still picture or day on the tape.
- You can press more than once to move to the corresponding still picture or day (up to a maximum of 10 times), e.g. press the ▶▶ button 5 times to move forward 5 still pictures or days.
- PHOTO SEARCH/DATE SEARCH appears in the middle of the display alongside the ◀◀ or ▶▶ mark and number to search through. You can change direction easily by pressing the button for the opposite direction.

Notes:

- Press ■ (stop) to stop mid-search.
- If you begin a search very close to the start of a recorded still picture during photo search, the camcorder may skip straight past it.
- When you have set the area for the World Clock, date search also looks for the change in date based on the adjusted time.
- A date/area cannot be identified if the total recording time on that day/area was less than 1 minute.
- Date search playback may start just before or after the beginning of the located section.
- If the data code is not displayed correctly you will not be able to operate the date search correctly.

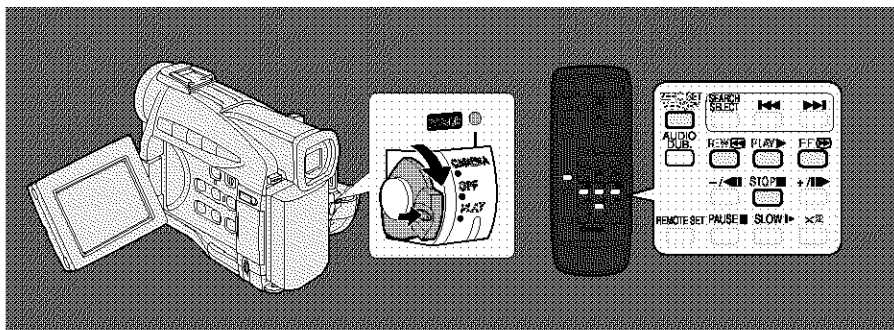

Use the wireless controller to mark a point on a tape that you want to return to following playback.

TAPE + **CAMERA** , **TAPE** + (**PLAY** / **PLAYWCR**)

Using the Full Range of Features

1. **Press the ZERO SET MEMORY button on the wireless controller during playback at a point you want to return to later.**
 - The time code is replaced by a tape counter that is set to zero with the **M** indication.
 - Press the ZERO SET MEMORY button once more to cancel the zero set memory.
2. **When you have finished playback, fast forward or rewind the tape. The tape stops automatically when it reaches the zero set position.**
 - **RTN▶▶** or **◀◀RTN** appears in the display.
 - The tape counter with **M** indication disappears from the display and the time code reappears.

Notes:

- The zero set memory may not function correctly where there is a break between recordings on the tape.
- You can also use zero set memory to mark a position on a tape in TAPE CAMERA mode. When you then play back the tape, pressing rewind will take you back to the pre-marked position.
- If you remove the tape while the zero set memory is set, the memory is cancelled and the tape counter reverts to time code.
- The camcorder remembers your setting even if you turn it off and back on again or move the program selector.

Editing to a VCR

By connecting the camcorder to a VCR, you can edit your recordings in order to remove unwanted scenes — or combine different shots to create your own video productions.

E

Preparations

1. **Connect the camcorder to the VCR.**
 - See “Connections for Playback on a TV Screen” on p. 30.
2. **Prepare the TV and VCR.**
 - Turn on the TV and set the TV/VIDEO selector to VIDEO.
 - Turn on the VCR, and set its input selector to LINE. Load a blank cassette, and put the VCR in record pause mode.
 - See your TV and VCR instruction manuals for details.
3. **Turn the camcorder’s POWER switch to PLAY (MV450i: PLAY (VCR)), and move the camcorder’s TAPE/CARD switch to TAPE.**
4. **Load your recorded cassette.**

Editing




1. **Find a point on your recorded cassette slightly before the section you want to copy.**
2. **Start to play it back while you monitor the picture on the TV.**
3. **Start recording on the VCR as soon as the section you want to copy appears on the screen.**
4. **Pause the VCR at the end of the section you want to copy, then stop playback on the camcorder.**
5. **Repeat steps 1 to 4 until your edited recording is complete.**


Editing

Note:



- The quality of the edited tape will be slightly lower than that of the original.

LANC terminal

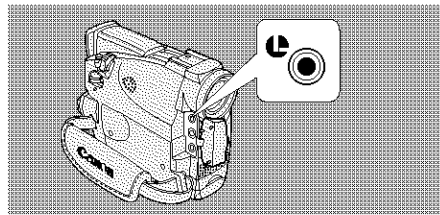The  terminal allows you to connect the camcorder to equipment. Some buttons on editing equipment may operate differently from those on the camcorder.




Notes:

-  (LANC) is a trademark. It stands for Local Application Control Bus System.
- We cannot guarantee the results when connecting to equipment not bearing the LANC  symbol.

MV450

Digital video equipment fitted with the DV terminal lets you edit, copy and transfer data digitally, with virtually no generation loss in image and sound quality.

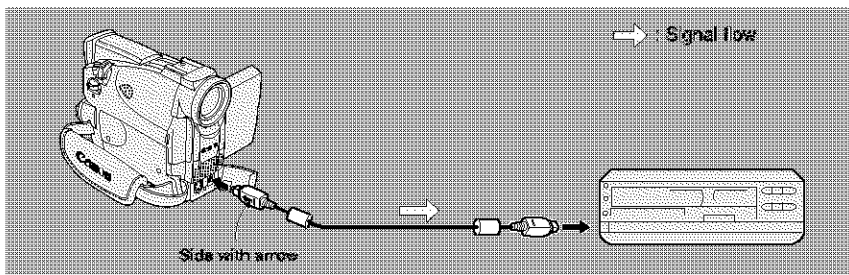

Preparations

1. **Connect the camcorder and the other digital device.**
 - Connect the Canon CV-150F DV cable (optional) with the side of the plug marked with the arrow facing as shown above.
2. **Prepare the other device.**
 - Load a blank cassette, and put the other device in record pause mode.
 - See its instruction manual for details.
3. **Turn the camcorder's POWER switch to PLAY and move the camcorder's TAPE/CARD switch to TAPE.**
4. **Load a recorded cassette.**

Dubbing

1. **Find a point on your recorded cassette slightly before the section you want to dub.**
2. **Press the camcorder's play button.**
 - Playback starts.
3. **Start recording on the other device as the section you want to copy appears on the screen.**
4. **When you get to the point where you want to stop dubbing, press the stop button or the pause button.**
 - Playback stops.

 **Notes:**


- Blanks between recordings on the playback tape are recorded as anomalous images on the tape that is being recorded to.
- During DV dubbing, you cannot add digital effects.

MV450i

The MV450i is equipped with the DV Recording function.

Digital video equipment fitted with the DV terminal lets you edit, copy and transfer data digitally, with virtually no generation loss in image and sound quality. The DV terminal is for both line-in and line-out, since a single DV cable can handle data in both directions.

- If a digital VCR is connected and an anomalous signal is sent from the VCR, the images recorded on the tape may also be anomalous (although it may not appear so on the TV image), or not recorded at all.
- You are unable to dub tapes recorded with the copyright protective signal.

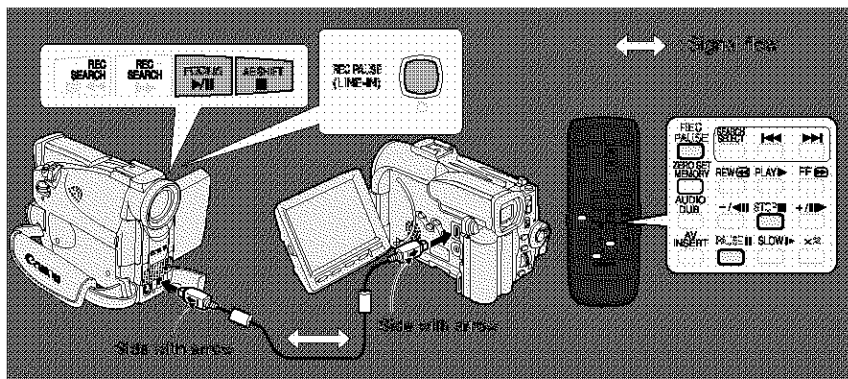

Preparations

Example dubbing to the camcorder

1. **Connect the camcorder and the other digital device.**
 - Connect the Canon CV-150F DV cable (optional) with the sides of the plugs marked with the arrows facing as shown above.
2. **Prepare the other device.**
 - Turn on the power and load a recorded cassette.
3. **Turn the camcorder's POWER switch to PLAY (VCR), and move the camcorder's TAPE/CARD switch to TAPE.**
 - DV IN appears in the display.
4. **Load a blank cassette.**



1. Find a point on your recorded cassette slightly before the section you want to copy and set it to playback pause mode.
2. Press the camcorder's REC PAUSE button.
 - The camcorder enters record pause mode.
3. Start playback on the other digital device while you monitor the picture.
4. Press the pause button.
 - Recording starts.
5. When you get to the point where you want to stop recording, press the stop button or the pause button.
 - Recording stops.
6. Stop playback on the other device.

**Notes:**

- If the cable is not connected properly, or if the cable is unconnected when you press REC PAUSE, the camcorder displays the caution "CHECK THE DV INPUT." An anomalous image may also flash onto the screen.
- Blanks between recordings on the playback tape are recorded as anomalous images on the tape that is being recorded to.
- During DV dubbing, you cannot add digital effects.

Copyright precaution

Certain pre-recorded video tapes, films and other materials, as well as some television programmes are copyrighted. Unauthorized recording of these materials may violate copyright protection laws.

Copyright signals

When playing back:

If you try to play back a tape that contains copyright control signals for the protection of software, "COPYRIGHT PROTECTED PLAYBACK IS RESTRICTED" appears in the display for a few seconds and then the camcorder displays a blank blue screen; you cannot view the contents of the tape.

When recording:

If you try to record from software that contains copyright control signals for the protection of software, "COPYRIGHT PROTECTED DUBBING RESTRICTED" appears in the display; you cannot record the contents of the software.


You cannot record copyright protection signals to a tape using this camcorder.

Recording from a VCR, TV or Analog Camcorder—Analog Line-in (MV450i only)

E

You can record a video played on your VCR or analog camcorder (for digital camcorders, see p. 84) or a TV program onto a tape in the MV450i, if the TV or other device has audio/video outputs.

- If an anomalous signal is sent from the TV or VCR, the images recorded on the tape may also be anomalous (although it may not appear so on the TV image), not recorded at all, or COPYRIGHT PROTECTED DUBBING RESTRICTED may appear in the display.
- You are unable to dub tapes recorded with the copyright protective signal.
- For higher picture quality, we recommend using the S-150 S-video cable when doing analog line-in recording.

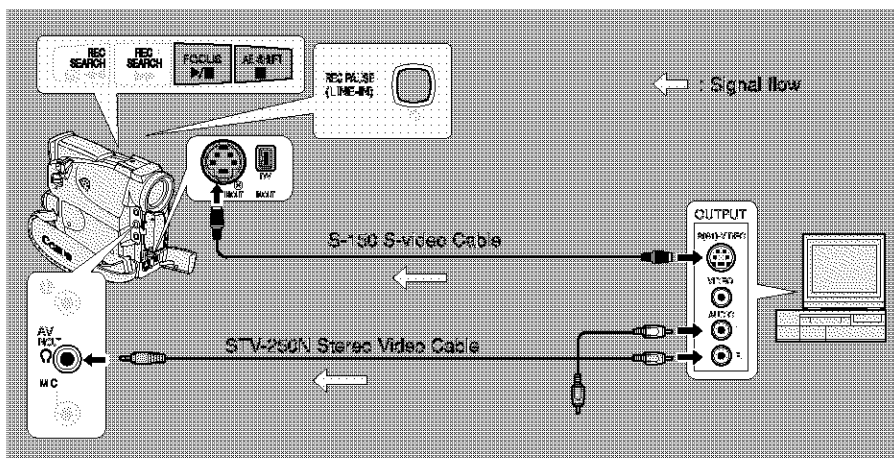

You cannot use headphones while doing analog line-in recording. If you have the AV/headphones terminal set to headphones, it will automatically switch to AV for analog line-in recording. PHONES disappears from the display.

Preparations

1. **Connect the camcorder to the VCR, TV or other camcorder.**
2. **Prepare the device. (Example connecting to the VCR)**
 - Set the TV/Video selector on the television to Video. For further details, see "Connections for Playback on a TV Screen" on p. 30.
 - Turn on the VCR. Load your recorded cassette, and put the VCR in playback pause mode.
 - See your TV and VCR instruction manuals for details.
3. **Turn the camcorder's POWER switch to to PLAY(VCR), and move the camcorder's TAPE/CARD switch to TAPE.**
4. **Load a blank cassette.**



1. Find a point on your recorded cassette slightly before the section you want to copy and set it to playback pause mode.
2. Press the **REC PAUSE** button.
 - S-video and AV IN/OUT terminals work as input terminals.
 - The camcorder enters record pause mode.
3. Start playback on the other device or turn on the TV to see the desired program while you monitor the picture.
4. Press the pause button.
 - Recording starts.
5. When you get to the point where you want to stop recording, press the stop button or the pause button.
 - Recording stops.
6. Stop playback on the other device.


**Note:**

- You can monitor the picture in the viewfinder or LCD.


Recording Over Existing Scenes — AV Insert Editing (MV450i only)

E


You can insert new scenes from your VCR or other camcorder onto your pre-recorded tape using the MV450i's analog line-in or DV in terminals. Original video and audio will be replaced with the new video and audio.

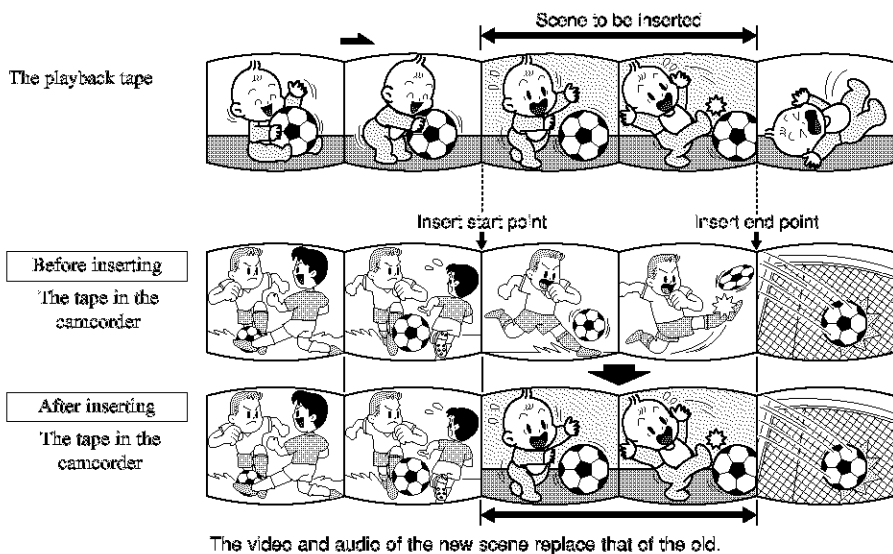

Editing

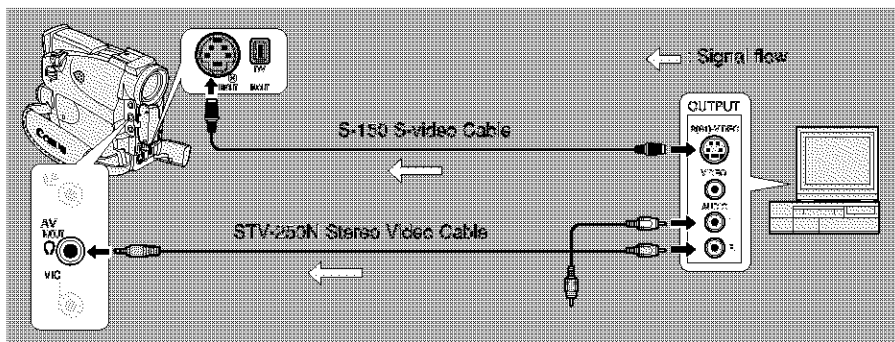

Make sure the AV/headphone terminal is set to AV through the menu (30). If PHONES appears in the display, switch the terminal.

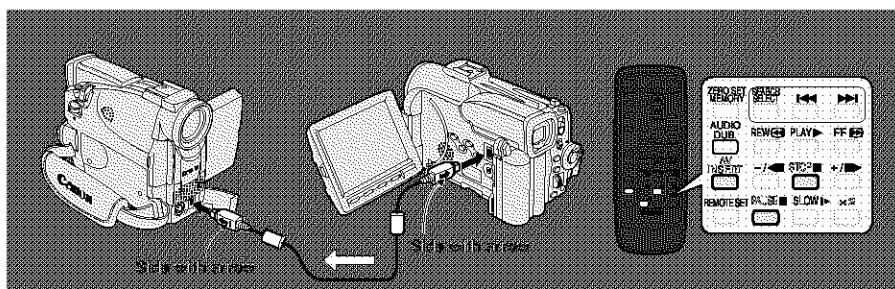

The tape in the MV450i:

When using the MV450i's AV insert function, only record to tapes recorded in SP mode with continuously recorded time codes.

If there are non-recorded portions or portions recorded in a mode other than SP mode on the tape, recording will stop.

The playback tape:

Use only tapes without non-recorded portions.

If there are non-recorded portions or changes in the recording mode, you may not be able to insert AV correctly.

You cannot insert AV in the following cases:

- The playback tape has been poorly recorded.
- During special playback: fast forward playback, rewind playback or slow playback etc. (analog only).

TV:

You cannot insert AV from a TV program with anomalous synchronized signals, such as when the program itself received poor signals.

Example recording from a VCR**1. Connect the camcorder to the VCR.****2. Prepare the VCR and TV.**

- Set the TV/Video selector on the television to Video. For further details, see "Connections for Playback on a TV Screen" on p. 30.
- Turn on the VCR and load a recorded cassette.
- See TV and VCR instruction manuals for details.

3. Turn the camcorder's POWER switch to PLAY (VCR) and load a recorded cassette.

- Make sure the REC/SAVE tab on the cassette has been slid to REC (closed position).

4. Move the camcorder's TAPE/CARD switch to TAPE.


1. **On the VCR, locate a point 3 seconds before the scene to be inserted. Set the VCR to playback pause mode.**
2. **On the camcorder, press PLAY and locate the recording start point. Set the camcorder to playback pause mode.**
 - You can use the playback buttons on the body of the camcorder or the special playback functions on the wireless controller in the same way as in playback mode.
3. **Press the AV INSERT button.**
 - AV INSERT and ●|| appear in the display.
4. **Play back the cassette in the VCR.**
5. **To start inserting, press the PAUSE button of the camcorder.**
 - ●|| changes to ●.
6. **To stop inserting, press the STOP button of the camcorder.**
 - Inserting stops and AV INSERT disappears from the display. The camcorder returns to stop mode.
 - If instead of pressing STOP you press PAUSE, the camcorder returns to the AV insert pause mode.
 - If you set the zero set memory at the position on the tape where you want to stop inserting, every time you return to that point, the camcorder will cancel its AV inserting and enter stop mode.
7. **Stop playback on the VCR.**

- For MV450 (For MV450i, 95).



You can add sound to the original sound on a pre-recorded tape recorded in the SP mode with 12-bit sound. Use the internal or an external microphone. The original sound will not be erased.

For best results, add sound to tapes that have been recorded with this camcorder in SP mode with 12-bit sound. If there are non-recorded portions on the tape, or portions recorded in a mode other than SP mode, or with 16-bit or 12-bit, 4-channel sound, dubbing will stop. You cannot dub audio onto a tape recorded with 12-bit and 16-bit sound intermingled.

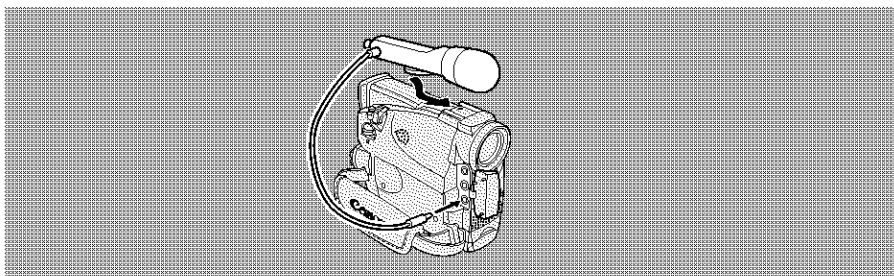To connect an external microphone:




Notes:

- **When using an external microphone** → Connect it to the microphone terminal.
- **When using the DM-50 microphone** → Make sure nothing is connected to the microphone terminal.
- **When using the built-in microphone** → Make sure nothing is connected to either the microphone terminal or the accessory shoe.
- To use your TV to monitor video, connect the S-video terminal ( 32) or the AV terminal (use only the video plug) to your TV. You can monitor the sound with headphones only when using the S-video terminal ( 30).

Preparations

Turn the camcorder's POWER switch to PLAY and move the camcorder's TAPE/CARD switch to TAPE. Load a recorded cassette.

- Make sure the REC/SAVE tab on the cassette has been slid to REC (closed position).

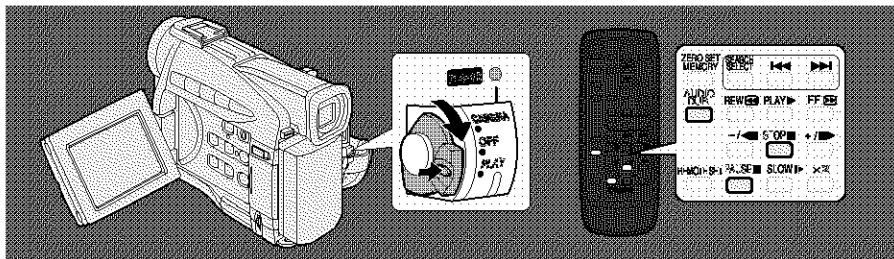

Do not connect/disconnect any cables to/from the camcorder when dubbing audio or preparing to dub audio.

TAPE + PLAY

1. **Locate the point where you want to start audio dubbing, then press the PAUSE button.**
 - You can use the playback buttons on the body of the camcorder or the special playback functions on the wireless controller in the same way as in playback mode.
 - The camcorder becomes set to playback pause mode.
2. **Press AUDIO DUB.**
 - AUDIO DUB. and **●||** appear on the display.
3. **Press the PAUSE button.**
 - Audio dubbing starts.
 - Direct your voice into the microphone.
 - **●||** changes to **●**.
4. **When you get to the point where you want to stop dubbing, press the STOP button.**
 - Audio dubbing stops and AUDIO DUB. disappears from the display.
 - The camcorder returns to stop mode.
 - You can also set zero set memory (82) at the place you want to stop audio dubbing, then every time you return to that position, audio dubbing will cancel.
 - If instead of pressing STOP you press PAUSE, the camcorder will return to the playback pause mode.


Notes:

- You can not use the DV terminal while adding sound.
- You might want to adjust the audio mix (98) when playing back a tape with added sound.
- There may be a loss of sound quality if you add sound to a tape recorded on a camcorder other than the MV450.
- After adding sound 3 or more times to the same place on a tape, there may be some loss in sound quality.

- For MV450i (For MV450, [book 93](#)).

You can add sound to the original sound on a pre-recorded tape from audio products (AUDIO IN) or with the internal or external microphone (MIC. IN). The original sound will not be erased. For best results, add sound to tapes that have been recorded with this camcorder in SP mode with 12-bit sound. If there are non-recorded portions on the tape, or portions recorded in a mode other than SP mode, or with 16-bit or 12-bit, 4-channel sound, dubbing will stop. If your tape hasn't been recorded in SP mode with 12-bit sound, we recommend dubbing your original tape onto a blank tape using the MV450i's analog line-in function, then dubbing audio onto the new tape. Make absolutely sure to set the audio mode of the new tape to 12-bit and the recording mode to SP.

To connect other audio equipment:

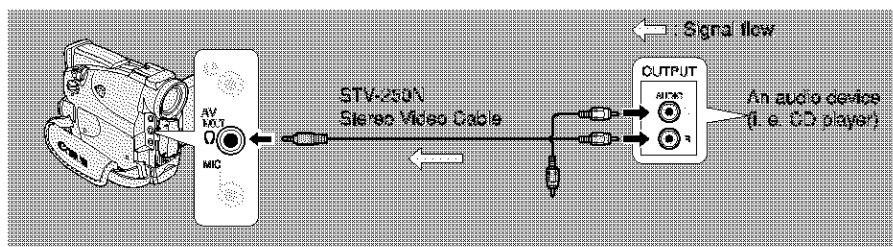


- Make sure the AV/headphones terminal is set to AV through the menu ([book 30](#)). If PHONES appears in the display, switch the terminal.

Notes:

- Do not use the yellow video terminal.
- The AV terminal doesn't put out any video, so connect the S-video terminals and check your TV, or check the LCD or the viewfinder as you add new sound. Always check the new sound with the speaker.

To connect an external microphone:

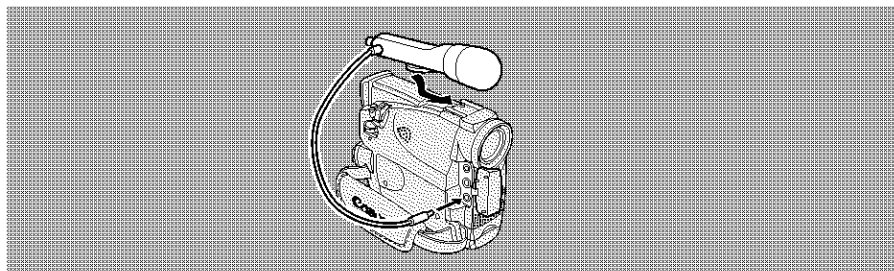

Notes:


- When using an external microphone → Connect it to the microphone terminal.
- When using the DM-50 microphone → Make sure nothing is connected to the microphone terminal.
- When using the built-in microphone → Make sure nothing is connected to either the microphone terminal or the accessory shoe.
- To use your TV to monitor video, connect the S-video terminal (32) or the AV terminal (use only the video plug) to your TV. You can monitor the sound with headphones only when using the S-video terminal (30).

Preparations

Turn the camcorder's **POWER** switch to **PLAY (VCR)** and move the camcorder's **TAPE/CARD** switch to **TAPE**. Load a recorded cassette.

- Make sure the **REC/SAVE** tab on the cassette has been slid to **REC** (closed position).

Dubbing

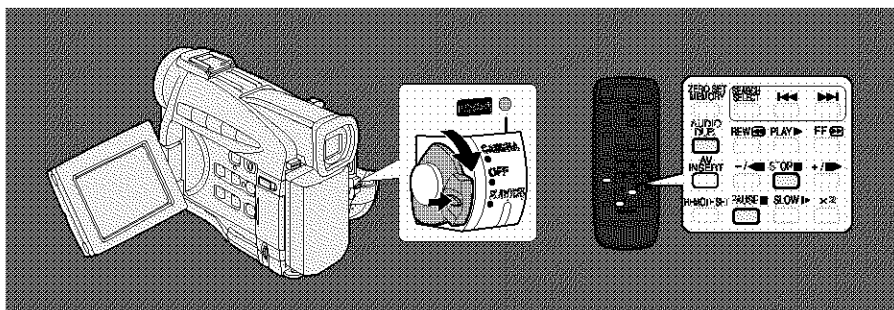

Do not connect/disconnect any cables to/from the camcorder when dubbing audio or preparing to dub audio.

TAPE + **PLAY (VCR)**






MENU

(37)


▶VCR SET UP


▶AUDIO DUB...AUDIO IN

1. Open the menu and select **VCR SET UP**.
2. Select **AUDIO DUB**.
3. Select **AUDIO IN** or **MIC. IN** and close the menu.

4. **Locate the point where you want to start audio dubbing, then press the PAUSE button.**
 - You can use the playback buttons on the body of the camcorder or the special playback functions on the wireless controller in the same way as in playback mode.
 - The camcorder becomes set to playback pause mode.
5. **Press AUDIO DUB.**
 - AUDIO DUB. and  appear on the display.
 - If you have the DM-50 microphone (optional) attached,  (Connection) appears in the display.
6. **Press the PAUSE button (and start play on the other audio device if AUDIO IN).**
 - Audio dubbing starts.
 - Direct your voice into the microphone.
 -  changes to .
7. **When you get to the point where you want to stop dubbing, press the STOP button (and then stop play on the other audio device if AUDIO IN).**
 - Audio dubbing stops and AUDIO DUB. disappears from the display.
 - The camcorder returns to stop mode.
 - You can also set zero set memory ( 82) at the place you want to stop audio dubbing, then every time you return to that position, audio dubbing will cancel.
 - If instead of pressing STOP you press PAUSE, the camcorder will return to the playback pause mode.

Notes:

- You cannot use the DV terminal while adding sound.
- You might want to adjust the audio mix ( 98) when playing back a tape with added sound.
- There may be a loss of sound quality if you add sound to a tape recorded on a camcorder other than the MV450i.
- After adding sound 3 or more times to the same place on a tape, there may be some loss in sound quality.

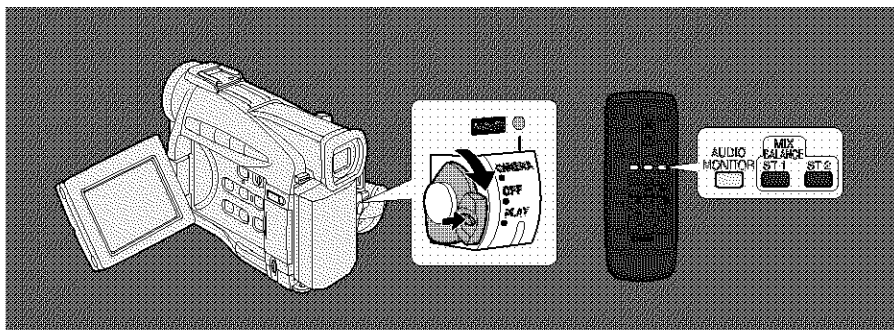

When you play back a tape that was recorded in 12-bit mode, you can set the audio output to play: stereo 1 (the original sound), stereo 2 (any new sound, dubbed to the tape after recording), or mix the balance between the two.

- Audio from the 16-bit mode only contains stereo 1 sound and so you cannot/ do not need to select the audio mix. The same is true for the 12-bit stereo 1 mode, unless new sound has been added post-recording.

TAPE + (**PLAY** / **PLAY/CR1**)

1. Choose the output.

- Press **AUDIO MONITOR** on the wireless controller.
- Starting with the last selected setting, 4 settings appear as you push the button:
 - **STEREO1** for just stereo 1.
 - **STEREO2** for just stereo 2.
 - **MIX/FIXED** for an equal mix of stereo 1 and 2.
 - **MIX/VARI.** (mix variable) for when you want to mix the balance between stereo 1 and 2.
- To simply choose **STEREO1**, **STEREO2** or **MIX/FIXED**, make sure your choice appears on the display.
- If you choose **MIX/VARI.**, you can go on to mix the balance.
- Use the **ST-1/ST-2** keys to mix the balance. A bar showing the mix appears on the screen for 4 seconds.

Note:

- When you have chosen the output, **STEREO1**, **STEREO2**, **MIX/FIXED** or **MIX/VARI.** is shown in the top left of the display for a few seconds. If you turn the power off the output is set to **STEREO1**.

Selecting audio output channels



When you play back a tape whose audio has been recorded on multiple channels, you can change the output channels of that sound.

TAPE + (**PLAY**
PLAY/VCR#)

MENU
(37)

▶VCR SET UP

▶▶OUTPUT CH...L:R

1. Load a tape recorded with multiple-channel audio.
2. Open the menu and select **VCR SET UP**. Then select **OUTPUT CH**, set it to the desired setting and close the menu.
 - Refer to the following list.


OUTPUT CH setting	Played back sound	
	Tape recorded with stereo sound	Tape recorded on multiple channels
L/R	L+R channels	main + sub
L/L	L channel only	main only
R/R	R channel only	sub only

Connecting to a PC

E

By using a DV cable and connecting the camcorder to a PC equipped with a DV terminal conforming to IEEE 1394/DV compatible capture board, you can transfer images taken with the camcorder to your PC.

- While connected, it is recommended that you power your camcorder from a household power socket using the power adapter.
- Turn off the power of both the camcorder and the PC before connecting.
- Optional software necessary.

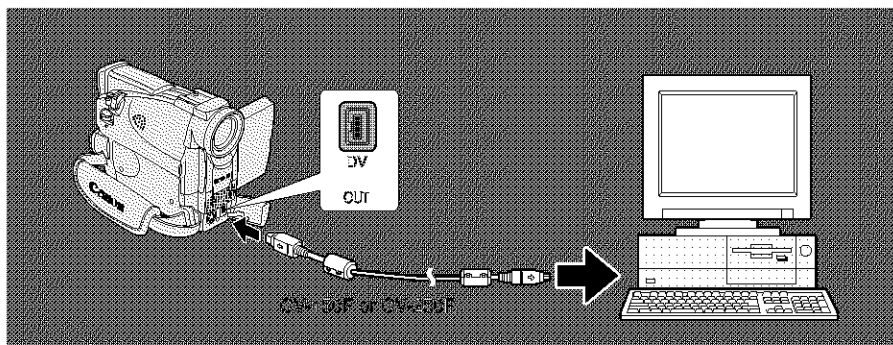

Note:


- Operation may not work correctly, depending on the software you are using, and the specifications of your PC and its settings.

Memory Card Introduction

The camcorder can take, store and manage still images on 2 types of memory cards: the MultiMediaCard (supplied with the camcorder) or an SD Memory Card (commercially available). The MultiMediaCard is an ultra-small, ultra-light media that can record still images. About the same size as a MultiMediaCard, the SD (Secure Digital) Memory Card has a large capacity for recording still images, and fits into the same slot as the MultiMediaCard.

You can do the following with a memory card:

- Record still images (105)
- View still images 3 ways: Single (109), Slide show (110), Index screen (110)
- Select the quality of images recorded on the card (102)
- Protect important images against accidental erasure (111)
- Erase (112) and print mark (119) still images
- Create interesting effects by combining images (114)
- Record a still image from a cassette (107)
- Copy multiple still images automatically to and from a cassette (117, 118)

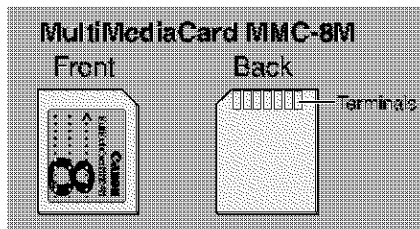

You can use most of the camcorder's functions when recording to a memory card, such as the various recording programs (55), self-timer (68), shutter speed (73), white balance (76) and other manual adjustments. Available functions are marked with a the **CARD** + **CAMERA** or **CARD** + **PLAY** (PLAY/STOP) icons.


- While the camcorder is recording the still image, >>>> appears red* in the display.
 - While >>>> appears red in the display, do not remove the memory card or disconnect the power source. Doing so could result in data damage.
 - While the camcorder is retrieving a still image, <<<< appears green* in the display.
 - While <<<< appears green in the display, do not remove the memory card. Doing so could result in data damage.
- * It appears white when in mirror mode and on the screen of a connected TV.

Important

- Inserting or removing the memory card without first setting the POWER switch to OFF can result in data damage.
- This camcorder uses only MultiMediaCards or SD Memory Cards (**SD** **). You cannot use any other types of memory cards.

** **SD** logo is a trademark.

Inserting and removing the memory card

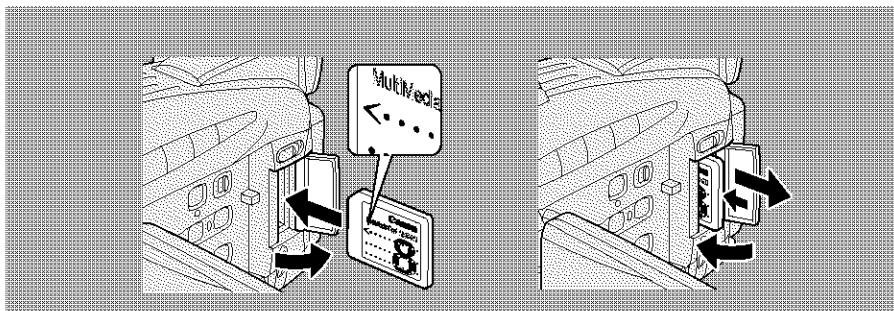

1. Turn the **POWER** switch to **OFF**.
2. Open the memory card compartment cover in the direction of the arrow.
3. **Insert or remove the memory card.**
 - Push the memory card all the way in.
 - Remove the memory card by pushing the card in and letting it spring out.

Do not attempt to pull the memory card out without first pushing it in.

4. **Close the cover.**

Notes:

- When you set the camcorder to **CARD PLAY** (MV450i: **PLAY (VCR)**) mode, the last image recorded appears. If there are no images recorded on the memory card, **NO IMAGES** appears in the display.
- Do not touch the memory card terminals.

Selecting the recording image quality

Select the quality of a still image to be recorded.

TAPE + (**PLAY** / **PLAY(VCR)**), **CARD** + **CAMERA**

MENU

( 37)

▶ **CARD SET UP**

▶ **QUALITY.....FINE**

To change the image quality to standard, open the menu and select **CARD SET UP**. Then select **QUALITY**, set it to **STANDARD** and close the menu.

 **Notes:**

- Depending on the image you are recording, sometimes there will be no difference in image quality between settings.
- Images are compressed and recorded in the JPEG (Joint Photographic Experts Group) format.
- The number of pixels is 640×480 (VGA) in both FINE and STANDARD modes.

Image quality	Necessary memory per image	Number of images per 8MB MMC*	Use when you want to...
FINE	Approx. 180KB	Approx. 43 images	...save high quality images, print out, etc.
STANDARD	Approx. 98KB	Approx. 78 images	...attach images to Emails, include them in your own home page, etc.

- * These figures are approximate. The actual number you will be able to record varies depending on the images. Remember that the sample images already recorded on the supplied MultiMediaCard are included in the total number.
- The number of images that can still be recorded on a memory card may sometimes decrease by 2 images at once.
- Refer to p. 144 for the memory card displays.




The images you take are automatically assigned file numbers from 0001-9900 and stored in folders of 100 images each. Each folder is numbered from 100 to 998 and recorded on the memory card. Sample images have been pre-recorded on the supplied MultiMediaCard, entering folder number 100.

Set the image file numbers so that they reset each time a new memory card is inserted, or so that they count up continuously.

1 CONTINUOUS

Numbering is continuous between cards, so that the first file number assigned on a new memory card is 1 more than the last file number assigned on the previous memory card. When the file numbers are set to CONTINUOUS, each image taken is assigned a different number, avoiding duplication of numbers. This is convenient when you want to manage your images on a PC. We recommend keeping the file numbers set to CONTINUOUS.

Three images are recorded on the card.

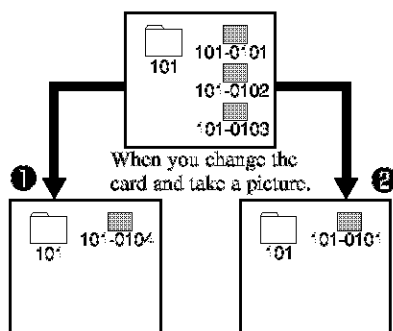

2 RESET

Each time you insert a new memory card, the file number resets to its default value (101-0101). If the card already contains files, the next available number is assigned.




MENU

([] 37)



To change the file numbering, open the menu and select **CARD SET UP**. Then select **FILE NOS.**, set it to **RESET** and close the menu.

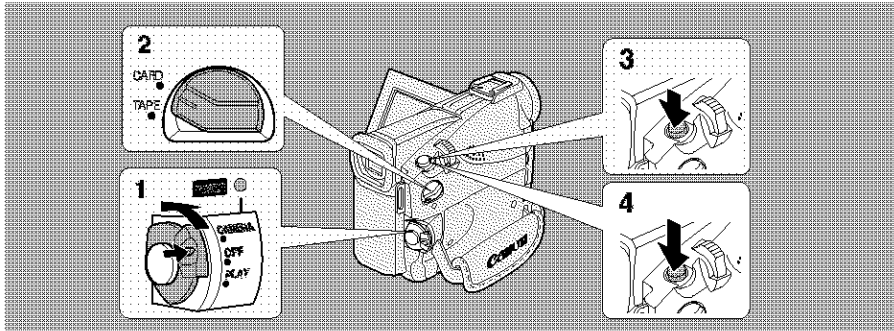

The camcorder's Progressive Photo function lets you take vivid, virtually blur-free still images of moving subjects onto a memory card. You can also record onto a memory card images from a tape in the camcorder, or images input through the DV in terminal (MV450i only).



- Moving pictures cannot be recorded onto a memory card.
- MV450i only: Images input through the AV in terminal cannot be recorded onto a memory card.
- Memory cards cannot record audio.
- If you are using an SD Memory Card, make sure the protect switch is set to allow recording.

Make sure a memory card that has enough memory available is inserted into the camcorder.


- 1. Press the small green button on the POWER switch and hold, turn the POWER switch to CAMERA.**
- 2. Move the TAPE/CARD switch to CARD.**
 - The number of images that can still be recorded on the memory card, and other information appear in the display.
 - The camcorder will turn itself off if you are using a battery and do not operate the camcorder for more than about 5 minutes. Set the POWER switch to OFF and then back to CAMERA.
- 3. Press the PHOTO button halfway and hold it.**
 - Exposure is locked.
 - During autofocus ● flashes white in the display as the camcorder adjust the focus and it is displayed continuously as a green mark when the camcorder is ready to take the still image.
- 4. Press the PHOTO button fully down to record the still picture.**
 - ● disappears from the display.
 - The image is recorded to the memory card.
 - While the camcorder is recording the still image, >>>> appears red in the display. (It appears white when in mirror mode and on the screen of a connected TV.)




Notes:

- To use the self-timer ( 68), press the  button before step 3, and then press the PHOTO button fully down.
- The wireless controller's PHOTO button has no half-way setting. Press the button fully and the camcorder immediately takes the image.
- When the POWER switch is set to CAMERA and the TAPE/CARD switch is moved from TAPE to CARD, the camcorder modifies the image for appropriate recording onto a memory card.


The indicators that appear in the display when recording to a memory card:

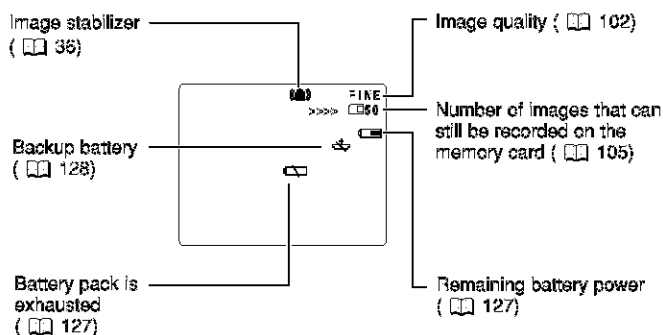

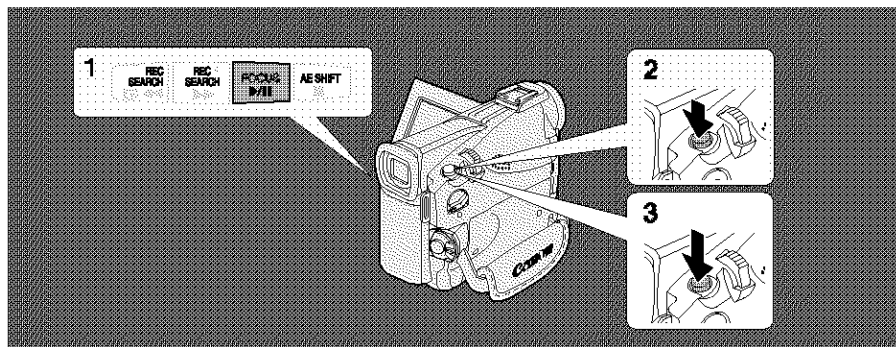

Record an image from a cassette onto a memory card. To automatically record multiple still images from a cassette to a memory card, refer to “Copying Still Images from a Cassette” on p. 117.

- The still image’s data code will reflect the date and time it is recorded to the memory card.

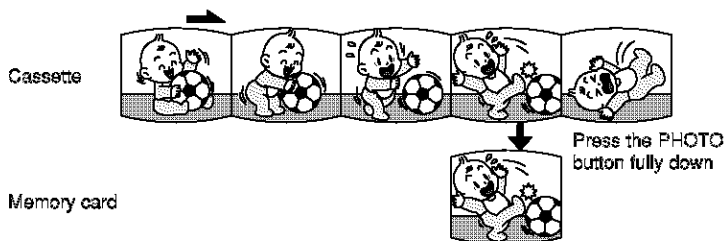

TAPE + (**PLAY** / **PLAY/PAUSE**)

1. Play back the cassette.
2. When the image you want to record appears in the display, press the **PHOTO** button halfway down and hold it.
 - The tape is set to playback pause mode and the number of images that can still be recorded on the memory card appears in the display.
 - The display appears to close for an instant as if it were a shutter releasing (except when you are operating the multi-image screen).
3. Press the **PHOTO** button fully down to record the image to the memory card.

Notes:


- You can also set the cassette to playback pause mode in step 1 and record the image with only 1 full press of **PHOTO** button.
- If you record an image onto a memory card that was originally recorded in the 16:9 mode for widescreen TV’s, the image will appear to be vertically “squashed” (compressed).

Recording from Another DV Device as a Still Image

-MV450i only-

Record images input through the DV in terminal onto the memory card as still images.

- The still image's data code will reflect the date and time it is recorded to the memory card.

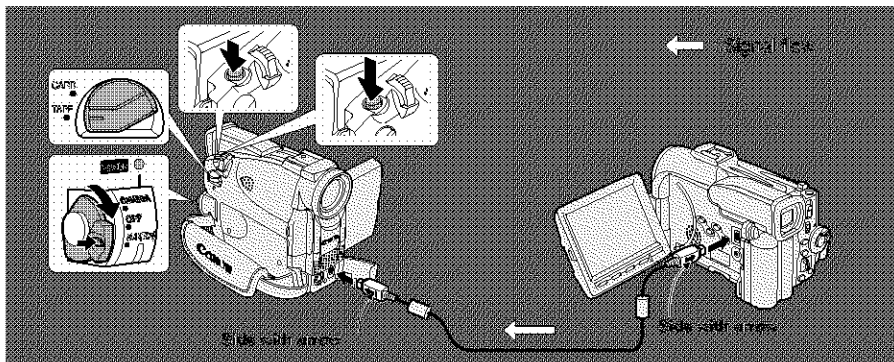

Preparations


1. **Connect the camcorder to the other digital device.**
 - Connect the Canon CV-150F DV cable (optional) with the sides of the plugs marked with the arrows facing as shown above.
2. **Prepare the other device.**
 - Turn on the power and load a recorded cassette.
3. **Load a memory card. Turn the camcorder's POWER switch to PLAY(VCR).**
4. **Move the TAPE/CARD switch to TAPE.**
 - DV IN appears in the display.
 - If you have a cassette inserted, make sure it is in stop mode.

Recording

1. **Start playback on the other device.**
2. **When the image you want to record appears in the display, press the PHOTO button halfway down and hold it.**
 - The image appears as a still image in the display.
 - The number of images that can still be recorded on the memory card appears in the display.
3. **Press the PHOTO button fully down to record the image to the memory card.**

Note:

- If you record an image onto a memory card that was originally recorded in the 16:9 mode for widescreen TV's, the image will appear to be vertically "squashed" (compressed).

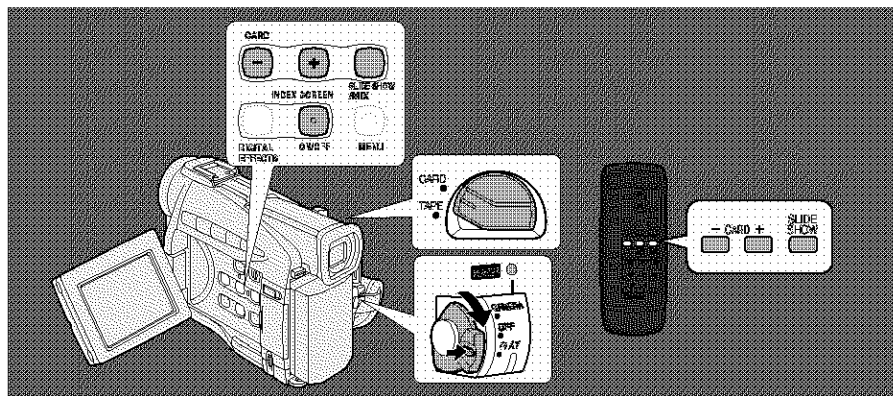

Play back and view still images recorded on a memory card. (For details on connecting to a TV, see “Connections for Playback on a TV Screen” on p. 30)

- The camcorder may not be able to copy or play, etc., images recorded on a non-Canon camcorder.

Do not change the data recorded on a memory card.

- You may not be able to play back the following still images correctly on this camcorder:
 - Still images that have not been recorded with this camcorder but downloaded from a PC (excluding the sample images on p. 122-123)
 - Still images that have been recorded with this camcorder but have subsequently been enhanced on a PC
 - Still images whose image file names have been changed on a PC

There are 3 ways to view still images:

- Single image
- Slide show: One after the other automatically in order of recording
- Index screen: Six images at once

Make sure a memory card that has images recorded on it is inserted into the camcorder.

● Single Image

1. Turn the **POWER** switch to **PLAY** (MV450i: **PLAY(VCR)**).
2. Move the **TAPE/CARD** switch to **CARD**.
 - The last image recorded appears in the display.
3. Search for the desired still image by pressing the **CARD +/-** buttons.
 - Press + to view the next image and – to view the previous image.
 - Pressing + at the last image will take you to the first image. Pressing – at the first image will take you to the last image.

● Slide Show

With an image in the display, press the **SLIDE SHOW** button.


- The images play back one after the other for 5 seconds each.


To stop the slide show, press the **SLIDE SHOW** button.


- The slide show starts or stops each time you press the **SLIDE SHOW** button.
- The slide show stops with the last image appearing in the display.

● Index Screen

Up to 6 images appear at once so you can search quickly for an image.

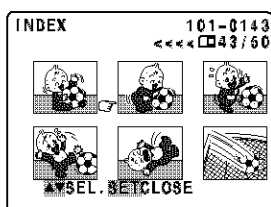

1. With an image in the display, press the **INDEX SCREEN** button.
 - Up to 6 images appear in the display.
2. Move the  mark to the image you want to view.
 - Turn the selector dial downwards to go to the previous image and upwards to go to the next image.
 - Turning the dial upwards at the last image will take you to the next index screen. Turning the dial downwards at the first image will take you to the previous index screen.
 - Jump to the next/previous index screen with the **CARD +/-** buttons.
3. Press the selector dial in.
 - The image you have marked fills the whole display.

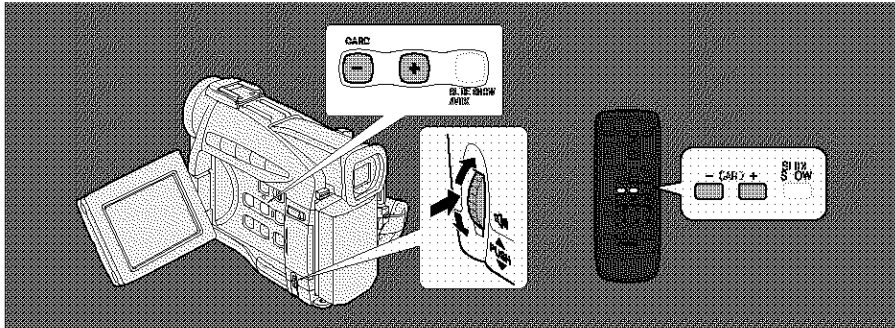

Select important images and protect them from accidental erasure. If a memory card is formatted, however, all images, including protected images, will be permanently erased (120).

- The pre-recorded sample images provided on the supplied MultiMediaCard are already protected.





MENU
(37)


 
▶CARD OPER.


▶▶PROTECT ON

Make sure a memory card that has images recorded on it is inserted into the camcorder.

1. **Open the menu and select CARD OPER.**
2. **Select PROTECT ON.**
 - Up to 6 images appear in the display.
3. **Move the  mark to the image you want to protect.**
 - Turning the selector dial downwards takes you to the previous image and upwards takes you to the next image.
 - Turning the dial upwards at the last image will take you to the next index screen. Turning the dial downwards at the first image will take you to the previous index screen.
 - Jump to the next/previous index screen with the CARD +/- buttons.
4. **Press the selector dial in.**
 - The  protect mark appears on the image.
 - Now you are unable to erase this image.
5. **Close the menu.**

 **Note:**

- To cancel image protection, move the  mark to the protected image and press the selector dial in. The  protect mark disappears.

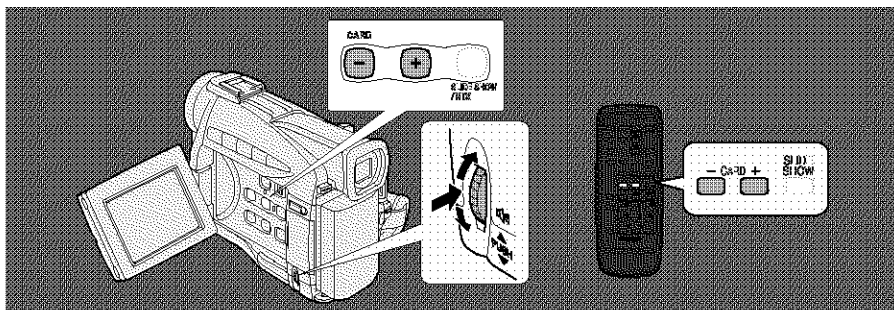

Erase images singly or all at once.

- You cannot erase protected images. Cancel image protection (111) first in order to erase an image.
- Erase images with caution. Once an image has been erased it cannot be restored.

CARD + (**PLAY**)
()

MENU

(37)

▶ CARD OPER.

▶ IMAGE ERASE


Make sure a memory card that has images recorded on it is inserted into the camcorder.

1. **Move to the image you want to erase with the CARD +/- buttons.**
 - Use the index screen (110) if necessary and make sure the image you want to erase fills the display.
2. **Open the menu and select CARD OPER.**
3. **Select IMAGE ERASE.**
 - CANCEL, SINGLE and ALL settings appear.
 - To cancel erasing, select CANCEL and close the menu.

To erase images one at a time

4. **Select SINGLE.**
 - ERASE THIS IMAGE? NO YES appears in the display.
5. **Select YES.**
 - The image erases and the previous image appears for erasing.
 - To erase another single image, move to that image with the CARD +/- buttons, and select YES.
 - If the image you are trying to erase is a protected image, YES appears in purple and is unselectable.
 - If you select NO, you return to step 4.
6. **Close the menu.**

To erase all images on the memory card at once

4. **Select ALL.**
 - ERASE ALL IMAGES? [EXCEPT FOR  IMAGES] NO YES appears in the display.
5. **Select YES.**
 - All images except the protected ones are erased.
 - If you select NO, you return to step 4.
6. **Close the menu.**



Liven up your productions by superimposing one image on top of the other. Combine 2 still images or a still image and a moving image. Choose a still image from the memory card, either one of the pre-recorded sample images (122) or one you have recorded yourself, then combine it with the currently recording image, moving or still.

Select from 3 types of Card Mix effects:


CARD CHROMA (Card chroma key)

The currently recording image appears in place of the blue area of a pre-recorded still image such as a picture frame. When recording your own still image for overlapping, make sure to record the area in which you want the new image to appear blue, with a blue curtain as a background, for example. Adjust the mix level in the blue area of the pre-recorded image.

Image being recorded
by the camcorder




Still image

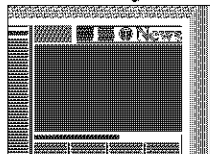



CARD LUMI. (Card luminance key)

The currently recording image appears in place of the light area of a still picture such as a hand-written illustration or title. Make your own by drawing or writing on a white piece of paper. Adjust the mix level in the light area of the still image.

Image being recorded
by the camcorder

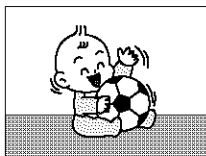

Still image

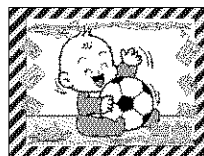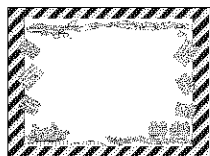

CAM. CHROMA (Camera chroma key)

Superimpose the currently recording image on top of a still image, which becomes its background. Shoot the subject of the currently recording image against a blue background, such as a blue curtain. The original still image will appear in place of the blue area. Adjust the mix level in the blue area.

Image being recorded
by the camcorder



+

Still image




→




Mix level

The mix level bar appears. Adjust the mix level using the – and + at the ends of the bar as guides.

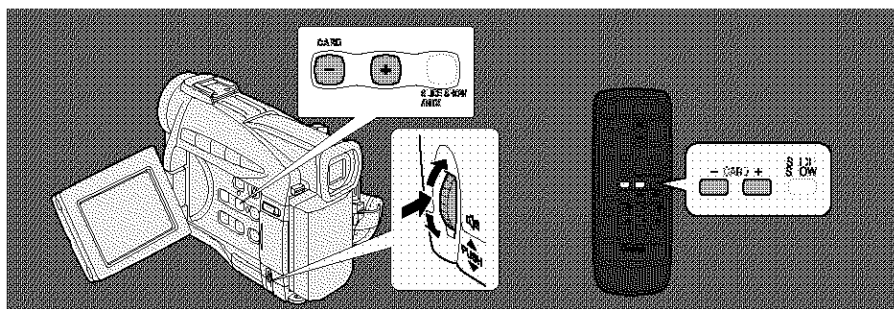

TAPE + CAMERA

 MENU
(37)



Make sure a memory card that has images recorded on it and a cassette have been inserted into the camcorder.

Make sure the program selector is set to **P**.

Select

1. Open the menu and select **→CARD MIX**.
2. Press the **CARD +/-** buttons to select the still image to be combined.
3. Select **MIX TYPE**.
 - **CARD CHROMA**, **CARD LUMI.**, **CAM. CHROMA** settings appear.

4. Select the desired setting.

- Your currently recording image is combined with the pre-recorded still image.

5. Select MIX LEVEL.**6. Adjust the mix level.**

- Turning the selector dial upwards adjusts to the right and turning downwards adjusts to the left.

7. Close the menu.

- CARD MIX flashes in the display.

On/Off

8. Press the card MIX button.

- CARD MIX stops flashing.
- Your currently recording image is combined with the pre-recorded still image.
- Each time you press the card MIX button, your selection is activated (display lights continuously) or deactivated (display flashes).


For a moving image

1. Press the start/stop button to start and stop recording.




- The combined images are recorded onto the cassette.

For a still image



1. Press the PHOTO button halfway down and hold it.


-  flashes white in the display as the camcorder adjusts the focus and it is displayed continuously as a green mark when the camcorder is ready to take the image.

2. Press the PHOTO button fully down to record the image to the cassette.

-  disappears from the display.
- The combined images are recorded onto the cassette for approximately 6 seconds (8 seconds in the  SP or  LP recording mode).

**Notes:**

- If you change the position of the POWER switch or move the program selector from  to  Easy Recording mode, select your still image for Card Mix again.
- When setting Card Mix, you must carry out steps 1 to 4.

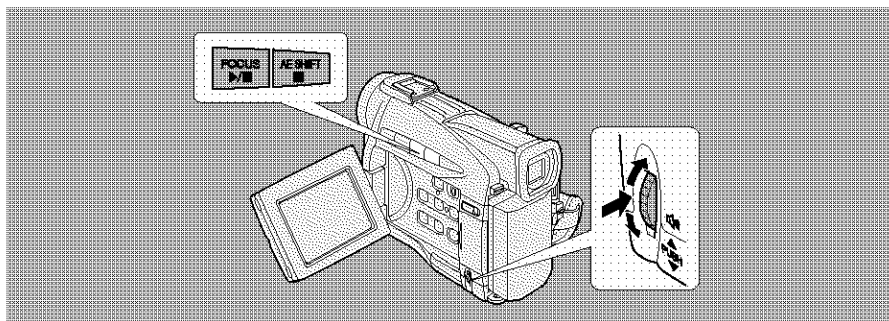

Copies multiple still images from a tape to the memory card, using the Photo Search function.

- The still images' data codes will reflect the date and time the copies are made.



MENU
([] 37)



Make sure a memory card that has enough memory available and a recorded cassette have been inserted into the camcorder.

1. Locate the first still image on the cassette that you want to copy and stop the cassette at a point before that image.

- All the still images on the cassette after that point will be copied onto the memory card.
- If you want to copy all the images on a cassette, rewind the cassette to the beginning.

2. Open the menu and select CARD OPER.


3. Select COPY []->[] .

- CANCEL and EXECUTE settings appear.

4. Select EXECUTE.

- Select CANCEL to stop copying.
- Cassette and card information appear in the display and copying starts.
- NOW COPYING []->[] appears in the display.
- The camcorder automatically performs the Photo Search function to locate still images and copying starts. The currently copying image appears in the display.
- Copying stops when the cassette is finished or the memory card is full. When the memory card is full, CARD FULL will appear in the display.

5. Press the stop button when your desired images have finished copying.

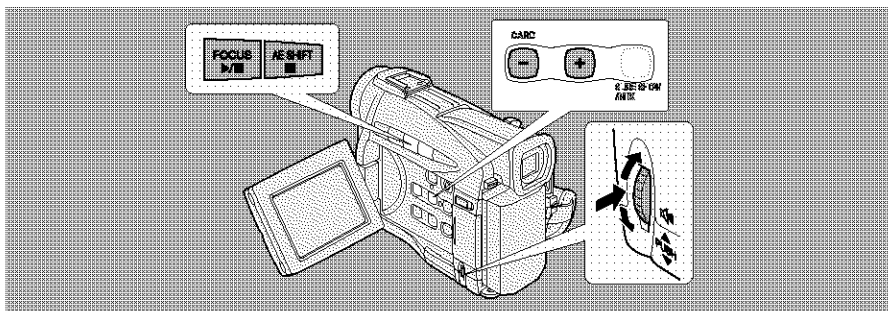

Copies multiple still images from the memory card to a cassette.

- The still images' data codes will reflect the date and time the copies are made.
- The **SP** and **LP** recording modes are not available when copying memory card images to a cassette.

MENU

(37)



Make sure a memory card that has images recorded on it and a cassette that has enough recordable space have been inserted into the camcorder.

TAPE + (**PLAY** / **PLAY/CR**)

1. Locate the point on the cassette where you want to start copying and set it to stop.

CARD + (**PLAY** / **PLAY/CR**)

2. Select the first image you want to copy by using the **CARD +/-** buttons.

- Still images on the memory card including and after that image will be copied onto the cassette.
- If you want to copy all the still images on the memory card, select the first image.

3. Open the menu and select **CARD OPER.**


4. Select **COPY [CARD ->]**.

- **CANCEL** and **EXECUTE** settings appear.

5. Select **EXECUTE**.

- Select **CANCEL** to stop copying.
- Cassette and card information appear in the display and copying starts.
- **NOW COPYING [CARD ->]** appears in the display.
- Each image is copied for about 6 seconds on the cassette.
- Copying stops when all the images have been copied or the tape is full.

6. Press the stop button when your desired images have finished copying.

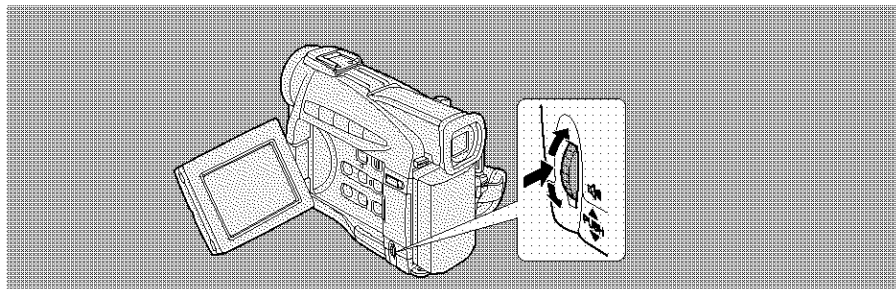

An image on a memory card must be marked before it can be printed. The camcorder supports the **DPOF** (Digital Print Order Format) print format. Images can be automatically printed on a DPOF-supporting Canon printer. Up to 50 images per memory card can be print marked.




MENU
(37)


▶CARD OPER.


▶▶PRINT MARK▶

Make sure a memory card that has images recorded on it has been inserted into the camcorder.

1. **Open the menu and select CARD OPER.**
2. **Select PRINT MARK ▶.**
 - Up to 6 images appear in the display.
3. **Move  to the image you want to mark.**
 - Turning the selector dial downwards takes you to the previous image and upwards takes you to the next image.
 - Turning the dial upwards at the last image will take you to the next index screen. Turning the dial downwards at the first image will take you to the previous index screen.
 - Jump to the next/previous index screen with the CARD +/- buttons.
4. **Press the selector dial in.**
 - The **▶** print mark appears next to the image.
5. **Close the menu.**

 **Notes:**

- To cancel a print mark, move  to the print-marked image and press the selector dial in. The **▶** print mark disappears.
- If there are a large number of images recorded on the memory card, it may take time for a print mark to appear on an image.

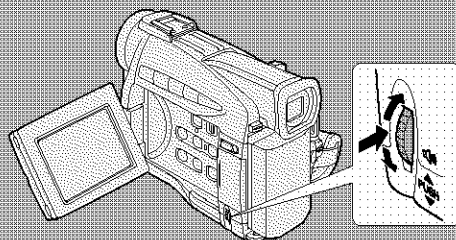

Format new memory cards, if you get the message **CARD ERROR**, or to permanently and quickly erase all the images on a memory card, including protected images (this includes the pre-recorded card mix sample images). The MultiMediaCard supplied with this camcorder has already been formatted for you.

- Be cautious when formatting recorded memory cards. All images will be permanently erased.
- If you purchase additional memory cards, format them with the camcorder, not a PC or other device.

CARD + (**PLAY** / **FLAVOR**)

MENU

(37)

▶CARD OPER.

▶▶FORMAT

Make sure a memory card is inserted into the camcorder.

1. **Open the menu and select CARD OPER.**
2. **Select FORMAT.**
 - CANCEL and EXECUTE settings appear.
3. **Select EXECUTE.**
 - Select CANCEL to cancel formatting.
 - **FORMAT THIS CARD? NO YES** appears to confirm.
4. **Select YES.**
 - Formatting starts and **NOW FORMATTING** appears in the display.
 - If you select NO, you return to step 3.
5. **Close the menu.**

Other Information and Precautions

The camcorder formats memory cards in DCF (Design rule for Camera File system).

Images recorded on a memory card with this camcorder can be transferred to a PC with the use of the following products made for MultiMediaCards or SD Memory Cards:

PC Card Adapter: Holds a memory card then inserts into the PC card slot found on most types of laptop PCs.

PC Card Reader: Connects to a PC, then accepts a memory card.

FD Adapter: Holds a MultiMediaCard then inserts into a PC's floppy disk drive.

If you need extra MultiMediaCard in addition to the supplied one, use cards made by SanDisk Corporation.

If you mistakenly erase the card mix sample images provided on the MultiMediaCard, they can be downloaded from the following home pages:*

<http://www.canon-europa.com/products/products.html>

<http://www.canon-asia.com/>

<http://www.canon.com.au>

*You will need a PC Card Adapter or PC Card Reader to be able to download to a memory card.

Memory card operating precautions


- If you purchase additional memory cards, format them with the camcorder, not a PC or other device. There have been cases where memory cards formatted with a PC or other device do not function properly.
- We recommend saving backups of memory card images on your PC's hard drive or other external memory device. Image data may be damaged or lost due to a defect in a memory card, or if a memory card is exposed to static electricity. Contents of a memory card cannot be compensated for should data become damaged or lost.
- Do not remove the power source or the memory card while the camcorder is accessing (recording to, reading, erasing files from or formatting) the memory card.
- Do not use memory cards in places subject to strong magnetic fields.
- Do not disassemble memory cards.
- Do not bend or drop memory cards, or expose them to strong vibrations or external shocks.
- Do not get memory cards wet.
- Do not remove the memory card's label or affix other labels. Affix labels to the memory card's case.

- Do not leave memory cards in places subject to high temperature or high humidity.
- Moving a memory card rapidly between hot and cold temperatures may cause condensation to form on it, leading to malfunctions. Avoid this problem by placing the memory card in a plastic bag and letting it slowly adjust to temperature changes before removing it from the bag. If condensation should occur, maintain the memory card at a constant temperature and let the moisture evaporate naturally.
- Do not touch the memory card's terminals or let dust or dirt come in contact with the terminals. Store and carry memory cards in their case to protect the terminal area.
- There is only one correct way to insert memory cards into the camcorder. Do not forcefully insert the memory cards backwards or upside down. This could damage the memory card or the camcorder.


Sample Images

- The following are the sample images that have been pre-recorded on the included MultiMediaCard. There are a total of 15 images: 8 Card chroma key images, 5 Card luminance key images and 2 Camera chroma key images.


Card chroma key

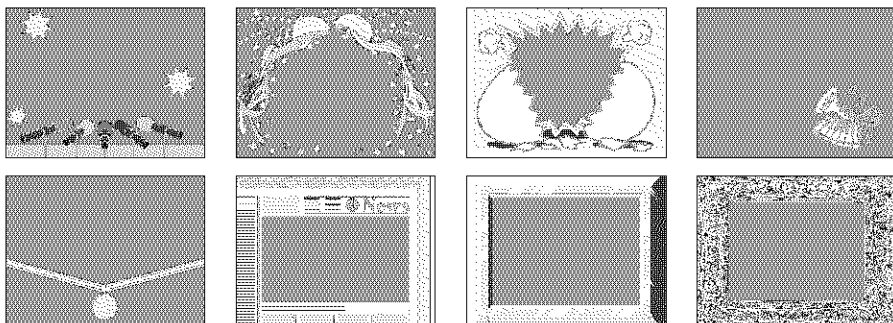

Card luminance key

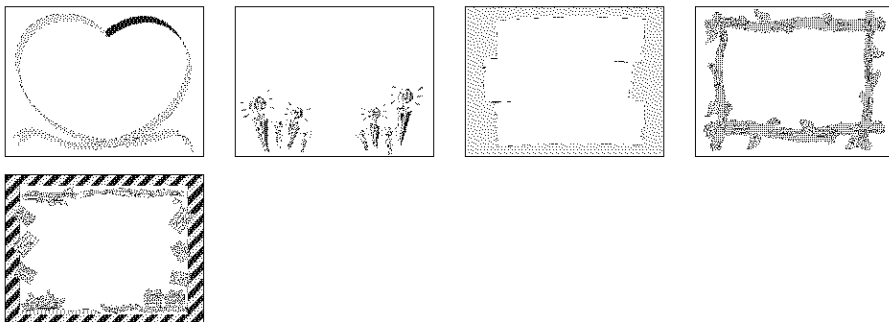

Camera chroma key

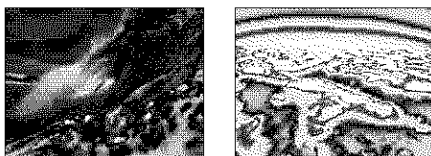

- The pre-recorded sample images on the MultiMediaCard included with this camcorder are intended solely for the personal enjoyment gained from combining them with personal videos taken with this camcorder. Do not use the pre-recorded sample images for any other purpose.

PhotoEssentials - Royalty Free Stock Photography

The PhotoEssentials suite of royalty-free images on CD-ROM features premium quality assignment photography and is ideally suited for use in advertising, brochures, reports, multimedia, websites, books, packaging and more.

For more information, please visit their website www.photoessentials.com

MultiMediaCard MMC-8M Specifications

Capacity	8 MB
Interface	MultiMediaCard standard
Operating temperature range	0°C–40°C (32°F–140°F)
Dimensions	32 × 24 × 1.4 mm
Weight	1.5 g

Weight and dimensions are approximate.

Errors and omissions excepted.


Subject to change without notice.

Preparing the Camcorder

E


Adjust the viewfinder

- Set the camcorder to TAPE CAMERA mode. Extend the viewfinder straight out, then adjust the viewfinder focusing lever to suit your eyesight.
- Rotate the viewfinder to an angle that allows you to view comfortably. Store the camcorder with the viewfinder flush with the body of the camcorder.
- To view with the viewfinder, make sure the LCD panel is either turned so that the subject can monitor viewing, or totally closed with the screen facing inwards.

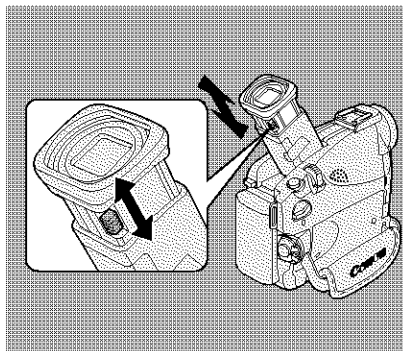


Prepare the lens cap

- Attach the cord to the lens cap, and pass the grip belt through the loop on the cord.
- Hook the lens cap on to the grip belt while you are recording, and place it over the lens when you have finished.

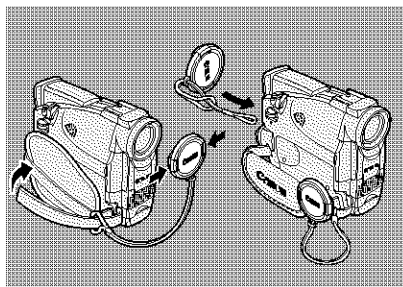


Fasten the grip belt

- Release the Velcro fastening and hold the camcorder with your right hand while you adjust the belt with your left. Your index finger should reach the zoom control and photo button, and your thumb should reach the start/stop button comfortably.

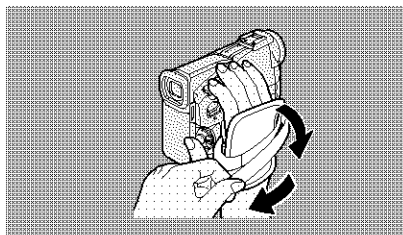

Attach the shoulder strap

- For extra security and portability, attach the shoulder strap before using the camcorder.
- Pass the ends through the attachment bars and adjust the length as shown.

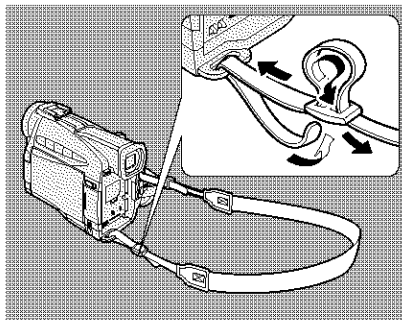

- Be careful not to leave the viewfinder exposed to bright sunlight, or it will melt. (The light is concentrated by the viewfinder lens.) Adjust the angle of the viewfinder to prevent sunlight from entering.

Notes on Using the Batteries

Charging and recording times

- These times vary — the safest policy is always to have 2 or 3 times as many battery packs as you think you will need.
- You will get more recording time if you turn the camcorder off between shots, instead of leaving it in record pause mode.

	Time needed for full recharge	Maximum recording time	
		Using viewfinder	Using LCD screen
BP-512	1 hr. 10 min.	2 hr. 30 min.	2 hr.
BP-511 (optional)	1 hr. 10 min.	2 hr. 30 min.	2 hr.
BP-522 (optional)	2 hr.	5 hr. 10 min.	4 hr. 15 min.
BP-535 (optional)	2 hr. 50 min.	8 hr. 15 min.	6 hr. 45 min.

- Recording time will be shorter than usual at low temperatures. You can use the battery pack between 0° to 40°C (32° and 104°F), but it works best between 10° to 30°C (50° and 86°F).
- If the battery pack starts to give you much less recording time than usual, it has reached the end of its life and must be replaced.



Note:

- These figures show how long you can view playback with the LCD, after attaching a fully-charged battery pack. Playback time will be shortened at low temperatures.


Battery pack	Playback time (using the LCD screen)
BP-512	2 hr. 15 min.
BP-511 (optional)	2 hr. 15 min.
BP-522 (optional)	4 hr. 45 min.
BP-535 (optional)	7 hr. 40 min.

How much power is left?

The indicator in the display shows you approximately how much charge the battery pack has left:

Notes:

- “CHANGE THE BATTERY PACK” appears in the display for 4 seconds when the power is completely exhausted. The empty battery mark then appears and starts to flash. The power indicator light also flashes.
- The indicator is not constant — different levels will be shown when you subject the battery pack and camcorder to different conditions.

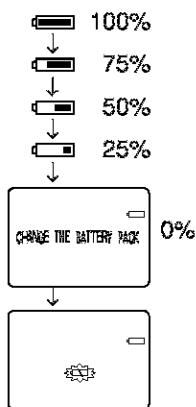


When to recharge

You can recharge a lithium ion battery pack whenever it is convenient. Unlike a conventional battery pack, it does not have to be fully discharged first. However, as the battery pack will naturally discharge itself over time, it is best to charge it the same day you plan to use it, or the day before.

Taking care of the battery pack

Always attach the terminal cover.

- Do not allow any metal objects to touch the terminals, as this can cause a short circuit and damage the battery pack. Attach the terminal cover whenever the battery pack is not being used.

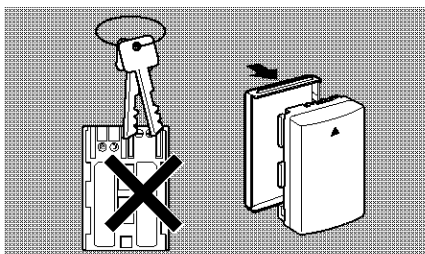

Keep the terminals clean.

- The camcorder, adapter or battery pack will not work properly if the terminals are dirty. Attach the terminal cover whenever the battery pack is not being used.

Storing the battery pack.


- If you do not use a battery pack for a period of more than a few months any remaining charge may cause damage to the battery pack, and reduce usage time. To prevent damage therefore, aim to use a battery pack's complete charge before storage. See the optional battery pack's instructions for further details.

Installing the backup battery

Open the backup battery cover on the battery attachment unit, and insert the CR2025 lithium battery with the + side facing outwards. Click the cover back into place.

This backup battery allows the camcorder to remember the date and time and other settings when main power source is removed. It has a life span of about a year.

When it needs replacing (or if it has not been installed), the ⚡ mark flashes in the display. Remove the old battery by pushing up then releasing and lifting out. Make sure to attach a power source to the camcorder first, so it will remember your chosen settings when you change the battery.

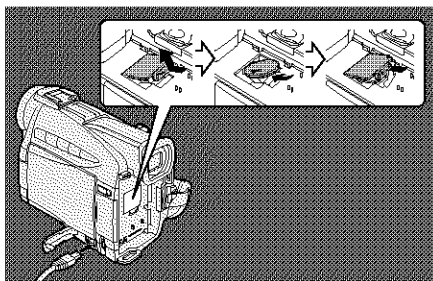

DANGER!

Treat the battery pack with care.

- Keep it away from fire (or it might explode).
- Do not expose the battery pack to temperatures greater than 60°C (140°F). Do not leave it near a heater, or inside a car in hot weather, for example.
- Do not try to disassemble or modify it.
- Do not drop or knock it.
- Do not get it wet.

WARNING!

- The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not recharge, disassemble, heat above 100°C (212°F) or incinerate.
- Replace the battery with a Sony, Hitachi Maxell, Sanyo or Panasonic CR2025, or Duracell DL2025. Use of another battery may present a risk of fire or explosion.
- The used battery should be returned to the supplier for safe disposal.

Cautions:


- Do not pick up the battery using tweezers or other metal tools — this will cause a short circuit.
- Wipe the battery with a clean, dry cloth to ensure proper contact.
- Keep the battery pack out of reach of children — if it is swallowed, contact a physician immediately, as the battery case may break down and the battery fluids damage the stomach and intestines.
- Do not disassemble, heat or immerse the battery in water, to avoid the risk of explosion.

Caution

Avoid high temperatures and high humidity.

- Do not leave the camcorder inside a car in hot weather, for example.
- Be careful of heat radiating from video lighting equipment.
- Do not take the camcorder into a humid room.

Avoid sudden changes in temperature.

- If you take the camcorder from a cold place to a warm place, condensation may form on the lens and internal parts ( 132).

Do not point the lens or viewfinder at strong light sources.

- Never point it at the sun, and do not leave it aimed at a bright subject.
- Be especially careful when leaving the camcorder on a tripod.

Avoid magnetic or electric fields.

- Do not use the camcorder close to TV transmitters, portable communication devices or other sources of electric or magnetic radiation. They may cause picture interference, or permanently damage the camcorder.

Do not expose the camcorder to water.

- Cover the camcorder when you are recording in rain or mist.
- There is a risk of electric shock if water gets inside the camcorder — contact qualified service personnel as soon as possible.

Protect the lens.

- Sand and dust can damage the lens — be especially careful on windy days.

Handle the camcorder gently.

- Vibration or shock can cause damage.
- Do not use the viewfinder or LCD panel as a carrying handle.

Do not disassemble the camcorder.

- This is very dangerous as there is a risk of electric shock — if the camcorder does not function properly, take it to qualified service personnel.

Storage

If you do not intend to use the camcorder for some time, store it in an area which is free of dust and moisture, and where the temperature is no higher than 30°C (86°F). After storage, check each part and function of your camcorder to make sure everything is still working properly.




Note:

- These cautions also apply to accessories such as battery packs and cassettes.

Maintenance

Viewfinder

- Clean the viewfinder screen. Rotate the viewfinder upwards. Remove the viewfinder protect cover and clean by inserting a cotton bud. When finished, return it flush with the camcorder.
- The viewfinder screen scratches easily. Take care when cleaning.

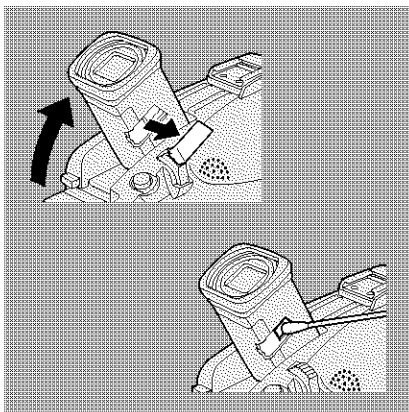

LCD

- Clean the LCD screen using a commercially available cleaning cloth for glasses.
- Where there is a big change in temperature, moisture may form on the surface of the screen. Wipe clean with a soft, dry cloth.
- At low temperatures the display may appear to be much darker than usual. This is not a fault, and as the screen warms up the display will return to normal.

Camcorder body and lens

- Use a soft, dry cloth to clean the camcorder body or lens. Never use chemically treated cloth or volatile solvents such as paint thinner.

Video heads

- When mosaic-like noise appears on the playback picture, the video heads may be dirty. When the video heads are badly contaminated, the camcorder may show a blank blue screen or a warning.
- For the best picture possible, after using the camcorder for approximately 20 hours, clean the video heads using Canon's DVM-CL Digital Video Head Cleaning Cassette. If the "noise" remains, repeat the cleaning (up to maximum of 5 times).
- Do not use a wet-type cleaning cassette, as this can cause damage.



Using the camcorder abroad

Power sources

- You can use the compact power adapter to operate your camcorder and charge battery packs in any country where the electricity supply is between 100 and 240 V AC, 50/60 Hz. Contact your Canon dealer for information about plug adapters for overseas use.


TV playback

- Although you can always play back your recordings on the LCD screen, your camcorder can only be connected to TVs which use its PAL system. This TV system is used in the following countries:
Algeria, Australia, Austria, Bangladesh, Belgium, Brunei, China, Denmark, Finland, Germany, HongKong, Iceland, India, Indonesia, Ireland, Italy, Jordan, Kenya, Kuwait, Liberia, Malaysia, Malta, Mozambique, the Netherlands, New Zealand, North Korea, Norway, Oman, Pakistan, Portugal, Qatar, Sierra Leone, Singapore, South Africa, Spain, Sri Lanka, Swaziland, Sweden, Switzerland, Tanzania, Thailand, Turkey, Uganda, United Arab Emirates, United Kingdom, Yemen, former Yugoslavia, Zambia.


Condensation

Condensation may form on the camcorder when it is moved from a cold place to a warm place. Using the camcorder while condensation is present can damage both the tape and the camcorder.


Condensation may become a problem:

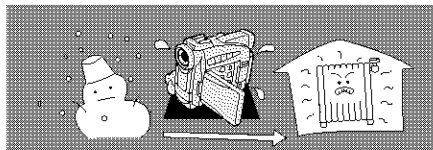


When you take the camcorder from a cold place to a warm room

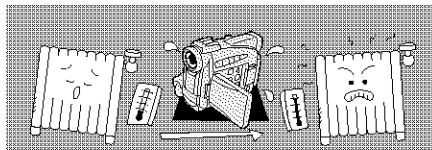

When a cold room is heated rapidly

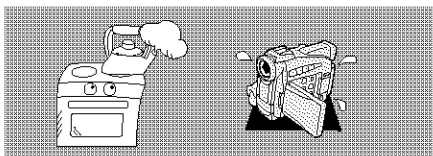

When the camcorder is left in a humid room

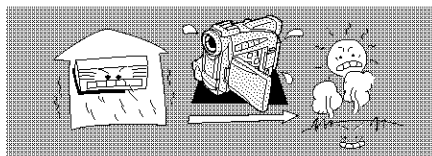



When the camcorder is taken from an air-conditioned room to a warm, humid place

Protecting the camcorder from condensation

- Before you take the camcorder to a warm or humid place where condensation is likely to be a problem, unload the cassette and put the camcorder in a plastic bag. Wait until the camcorder reaches room temperature before you take it out of the bag.

What happens when condensation is detected

- “CONDENSATION HAS BEEN DETECTED” is displayed for approximately four seconds. Then, the power indicator flashes and the  mark flashes in the display. If there is a cassette in the camcorder, it stops automatically and “REMOVE THE CASSETTE” is displayed for approximately 4 seconds and then  flashes in the display. If you have the beep turned on, it will sound.
- The camcorder may not detect the condensation immediately — the condensation warning may not start flashing for 10 to 15 minutes.
- You cannot load a cassette when condensation is detected.

What you should do

- Remove the cassette, leave the cassette compartment open, and turn the camcorder off.
- Leave it in a dry place until the condensation evaporates. After the condensation warning stops flashing, wait at least another hour before trying to use the camcorder.

Refer to this checklist first if you have any problems with your camcorder. Possible explanations are given for each problem on the list — turn to the page numbers in parentheses for more information.

Make sure that the camcorder is properly connected if you are using it with a TV or VCR. Consult your dealer or service outlet if problems persist.

Recording/Playback

Problem	Cause and/or what to do about it
❑ Nothing happens when I press the buttons.	<ul style="list-style-type: none">• The camcorder is not set to the appropriate mode (□ 17, 26).• The cassette is not loaded or is set for erasure prevention (□ 15-16).• The cassette has reached the end.• The power source is not properly connected, or the battery pack is exhausted or not properly attached (□ 10-14, 127).• The function cannot be used in that recording program (□ 55).
❑ The camcorder turned itself off.	<ul style="list-style-type: none">• The camcorder was in record pause mode for more than about 5 minutes (□ 17, 105).• The battery pack is exhausted (□ 11-14, 127).
❑ The cassette compartment stopped mid-operation while loading/unloading a cassette.	<ul style="list-style-type: none">• The battery pack's power is exhausted. Recharge or change to a new battery pack (□ 11-14).
❑ The start/stop button doesn't work.	<ul style="list-style-type: none">• The cassette is not loaded or is set for erasure prevention (□ 15-16).• The cassette has reached the end.
❑ There's no picture in the display.	<ul style="list-style-type: none">• The camcorder is not set to the appropriate mode (□ 17, 26).
❑ There's a blank blue screen in the display.	<ul style="list-style-type: none">• You are attempting to play back or record copyright protected material (□ 87).• The video heads are badly contaminated (□ 131).
❑ The camcorder won't focus.	<ul style="list-style-type: none">• The camcorder is on manual focus (□ 75).• The viewfinder lens needs adjusting (□ 124).• The lens is dirty (□ 130).

Note:

- Some subjects are not suitable for autofocus. In these situations, you will often get better results using manual focus (□ 75). Focus on something which is about the same distance away, lock the focus, and then point the camcorder at your original, hard-to-focus subject.



 
Horizontal stripes



Many subjects at different distances



Behind glass



Without much contrast (e.g. a white wall)



Reflective surfaces
(e.g. shiny car surfaces)



Fast moving objects



Dark subjects



Night scenes


Recording/Playback (Cont.)

Problem

- ❑ Some/all of the digital effects don't work.

- ❑ The ► (play) button doesn't work.

- ❑ There's a bright stripe on the screen.

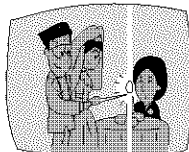

- ❑ The playback picture is rough (with mosaic-like noise).

- ❑ There's no picture on the TV screen, even though the tape is moving.

Cause and/or what to do about it

- There are a number of restrictions on using the digital effects (□ 59-65).
- The camcorder is not set to TAPE PLAY (MV450i: PLAY (VCR)) mode (□ 26).
- The cassette is not loaded (□ 15).
- The cassette has reached the end.
- When recording in dark places a bright light in the scene may cause a vertical light bar ("smear") to appear. This is a normal feature of camcorders.
- The video heads need cleaning (□ 131).
- The video heads need cleaning (□ 131).
- The TV/VIDEO selector on the TV isn't set to VIDEO (□ 31-33).

- ❗ **There's no sound coming from the speaker during playback.**
 - The speaker has been turned off with the selector dial (☐ 29).
 - Headphones are being used.

Memory card operations

Problem

- ❗ **The memory card will not insert.**

- ❗ **The ☐ mark flashes red in the display even though a memory card has been inserted.**

- ❗ **Nothing happens when I press the buttons.**

- ❗ **The PHOTO button doesn't work.**

Cause and/or what to do about it

- It is not turned the right way (☐ 102). Turn it the right way and try inserting again.
- Turn the camcorder's power off and back on again and remove and reinsert the card if necessary.
- The camcorder is not set to CARD CAMERA or CARD PLAY (MV450i: PLAY (VCR)) (☐ 105, 109) mode.
- The memory card is not inserted (☐ 102).
- You are using an SD Memory Card and it is set for erasure prevention. Change the position of the protect switch.
- The memory card is full. Erase images (☐ 112) or insert a new memory card.
- The power source is not properly connected (☐ 10), or the battery pack is exhausted or not properly attached (☐ 11, 127).
- The function cannot be used in that recording program (☐ 55).
- The memory card is not loaded (☐ 102).
- You are using an SD Memory Card and it is set for erasure prevention. Change the position of the protect switch.
- The memory card is full. Erase images (☐ 112) or insert a new memory card.
- You have reached the maximum file number. Set the file numbering to RESET through the menu (☐ 104) and insert a new memory card.

❓ The image cannot be erased.

- You are using an unformatted memory card. Format the card (120).
- The image is protected (111).
- You are using an SD Memory Card and it is set for erasure prevention. Change the position of the protect switch.

Miscellaneous

Problem

❓ The wireless controller doesn't work.

❓ The power indicator is flashing.


❓ The camcorder malfunctions.

❓ The DV cable is connected correctly, but there's nothing in the display.

❓ The camcorder becomes warm during use.

Cause and/or what to do about it

- The remote sensor mode is set to OFF (46) in the menu (46).
- The remote sensor modes of the wireless controller and the camcorder itself are different (46).
- The batteries are dead or not inserted.
- Check the screen displays (141).
- External interference may cause the camcorder's microprocessor to malfunction temporarily. If random letters appear in the display or if normal operation is interrupted, remove and then replace the power source.
- Remove the cable and then reconnect it or turn the power off and back on again.
- This is not a malfunction.

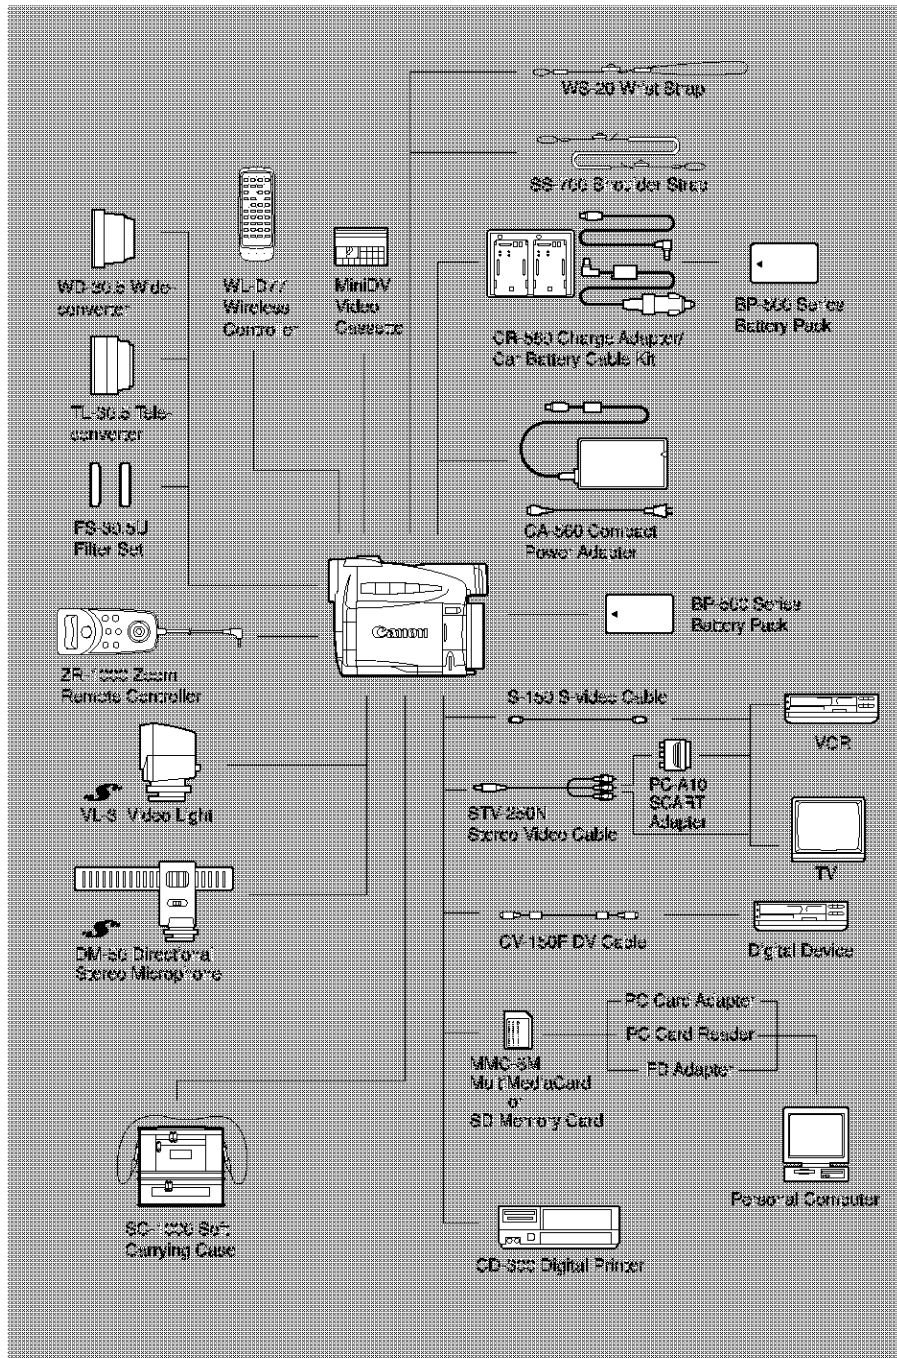


Additional Information

Optional Accessories

E


BP-500 Series Battery Packs
Extra batteries for use with the MV450/MV450i.

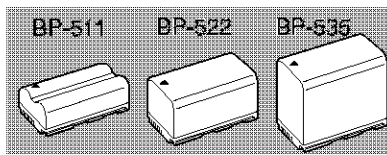

CR-560 Charge Adapter/Car Battery Cable Kit

Connect the car battery cable to power your camcorder or recharge battery packs on the move. The car battery cable plugs into your car's cigarette lighter socket and runs off a 12-24 V DC negative ground battery.


Also, when used with the CA-560 Compact Power Adapter, this charge adapter can charge the BP-500 series lithium ion battery packs from a mains outlet.

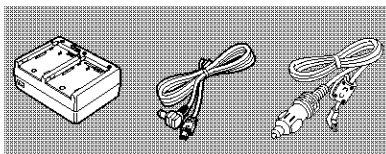

TL-30.5 Tele-converter


This tele-converter lens increases the focal length of the camcorder lens by a factor of 1.9.

- The image stabilizer is not as effective as usual when the tele-converter is attached.

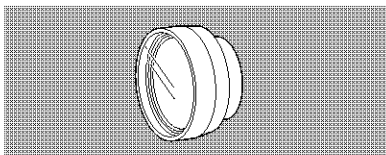


WD-30.5 Wide-converter

This lens decreases focal length by a factor of 0.7, giving you a wide perspective for indoor shots or panoramic views.

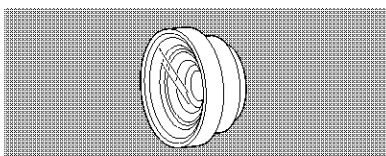


FS-30.5U Filter Set

Neutral density and MC protector filters to help you take control of difficult lighting conditions.

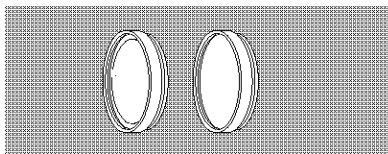


VL-3 Video Light

Attach the Video Light to a camcorder when recording in dark rooms. When on its automatic setting, the Video Light turns on/off automatically according to the brightness level of shooting conditions.

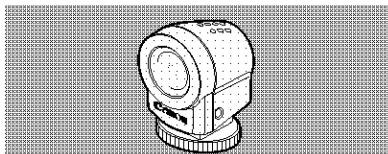


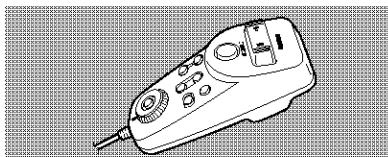
DM-50 Directional Stereo Microphone

This highly sensitive, super-directional microphone attaches to a camcorder's advanced accessory shoe. It is a highly sensitive microphone that can be switched between functioning as a directional microphone (monaural) or a stereo microphone that also clearly picks up sounds arriving from the front of the microphone, for full recorded sound.

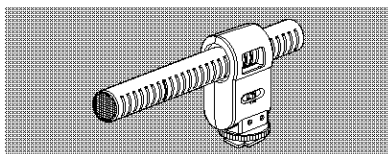


Zoom Remote Controller ZR-1000

When this product is plugged into the LANC  terminal of a Canon camcorder, it is possible to control functions such as the start and stop of recording and the zoom and focusing functions while the camcorder is mounted on a tripod, without touching the camcorder body itself.




WS-20 Wrist Strap

Provides an extra measure of protection for active shooting.

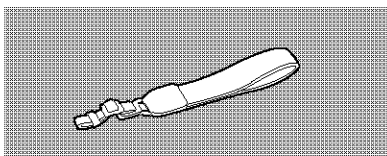


SC-1000 Soft Carrying Case

A handy camcorder bag with padded compartments and plenty of space for accessories.

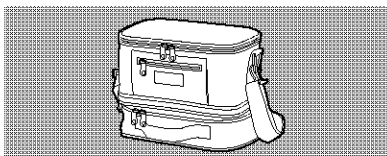

CD-300 Digital Printer

This 300 dpi resolution printer is perfect for printing out the high quality images taken with digital camcorders. Print out panorama prints, pictures without a white border, multiple-picture index cards, and add titles to pictures. A clear overcoat adds luster to your prints and reduces colour fading.

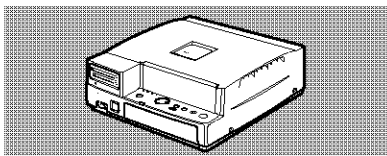


This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canon-brand accessories or products bearing the same mark.

Screen Displays

To display the date and time, press the **DATA CODE** button. See also p. 78.

Press the wireless controller's **TV SCREEN** button or turn **TV SCREEN** on through the menu to see the other displays on the TV screen. (The displays appear white on-screen.) They will not be added to any recordings you make with the camcorder.

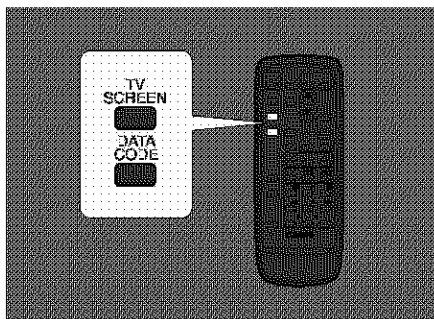

E

TAPE + **CAMERA**, **CARD** + **CAMERA**

MENU
(37)

▶DISP. SET UP

▶▶TV SCREEN...ON

To turn **TV SCREEN** off, open the menu and select **DISP. SET UP**. Then select **TV SCREEN**, set it to **OFF** and close the menu.

For instructions on how to hook the camcorder up to your TV, see p. 30.

Turning off the LCD screen displays

You can turn off the displays to give you a clear screen for playback.

TAPE + (**PLAY** / **PLAY/CR**), **CARD** + (**PLAY** / **PLAY/CR**)

MENU
(37)

▶DISP. SET UP

 
▶▶DISPLAYS...ON

To turn the display off, open the menu and select **DISP. SET UP**. Then select **DISPLAYS**, set it to **OFF** <**PLAYBK**> and close the menu.

- If you turn the displays off, the LCD screen will be completely blank, but the camcorder will continue to show warning/caution displays when necessary.

 indicates a flashing display.


Record pause mode
(17)



Recording (18)




 The backup battery is not properly installed, or needs replacing
(128).




Additional
Information

 
Shows how much battery power remains (127).




The battery pack is exhausted (127).

 

 No cassette is loaded, or it is set for erasure prevention (15, 16).



 
Remaining tape (Green: more than five minutes.



Yellow: less than five minutes.

Red: final few seconds.)

 
...finally, it tells you when you have completely run out of tape.




The camcorder is ejecting the tape (15).




The safety mechanism is activated. Unload the cassette and turn the camcorder off. Turn it on again and reload the cassette.

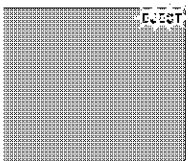

Recording mode (19)

 


Playback is stopped (26).

 


Normal playback (26)



 Fast forward (26)




Rewind (26)

 


Fast forward playback (27)



 
Rewind playback (27)




Frame advance playback (27)

 

Frame reverse playback (27)

 

 Playback pause (forward and reverse) (27)



Slow playback (forward and reverse) (27)



×2 playback (forward and reverse) (28)



×1 playback (forward and reverse) (28)


 



Photo Search (81)

 

Date Search (81)



 
Zero set memory (forward and reverse) (82)




AV Insert Editing (90) (MV450i only)



 Audio Dubbing (93)




Zoom display (21):
Optical zoom

 


Optical plus 40x
digital zoom



 
Optical plus 200x
digital zoom




Zoom in

 


Zoom out

 

The image stabilizer
is turned on (36).

 

CAM. MENU
(39)

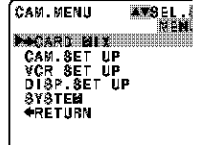

PLAY MENU
(MV450i: VCR
MENU)
(40)



 
C.CAM. MENU
(42)




C.PLAY MENU
(43)



The remote sensor
is turned off (46).




Self-timer countdown
(68)

 

Zero set memory
(82)



 Audio mode (66)



Data code (78)



 



Photo mode (52)

 


• Setting the AF/AE. mark flashes white

 


• AF/AE locked. mark lights up green

 


• Timer

 


Recording programs
(55).

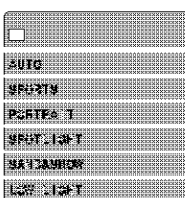

 Accessory is attached
to advanced accessory
shoe (70, 71).




AE Shift (72)

 

Manual focus is
selected (75).




 Shutter speed (73)




White balance is
(76)

Set
Indoor
Outdoor

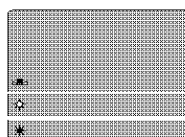


Additional
Information

 
The 16:9 mode: the display flashes when the effect is being selected, and appears steadily when it is activated ([120](#)).




Digital effects. The display flashes when the function is being selected and appears steadily when it is activated ([59](#)).

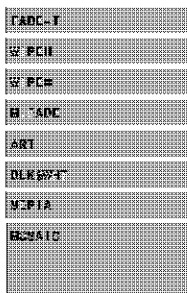


The wind screen is turned on ([67](#)).

 


Volume level ([29](#)):
Speaker

 


Headphones

 

 
The AV/headphones terminal is switched to headphones ([30](#)).



Audio output ([98](#))

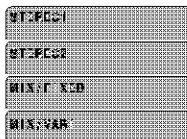


Mix balance ([98](#))

 


Audio input and
Microphone input
(MV450i only,
[96](#))

 Audio input




Microphone input

 

DV input ([85](#), [108](#))
(MV450i only)



Condensation warning
([132](#))

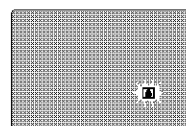

Memory Card Displays

No memory card is
inserted ([102](#))


 


Image quality
([102](#))
Standard

 


Fine




Folder number-File
number ([104](#))



 
Slide show in
progress ([110](#))



 
Recording to a
memory card
([101](#), [105](#))



 
The number of still
images that can still
be recorded on the
memory card ([105](#))
(Green: 6 or more
images.
Yellow: Between 1
and 5 images
Red: No more images)




Accessing a memory card (101)

 


Current still image/Total number of still images on the memory card (109)

 


Protect mark (111)

 

Card mix (114)

 


Print mark (119)

 

Data code (78)




 Time Code



This records counter information, including hour, minute, second, and frame number on a special data code area on the tape itself. It is reset automatically when a new tape is loaded. In TAPE CAMERA mode, the frame number doesn't appear in the display.

Recording reminder

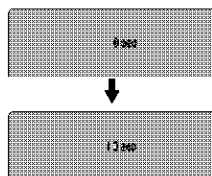

When you start recording, the camcorder counts from 0SEC to 10SEC. Shots which are shorter than ten seconds may be difficult to edit later. On the other hand, if you are not planning to edit the recording, remember that a shot which does not contain action should generally last no longer than 10 seconds.

Caution phrases

The camcorder displays various caution phrases — they appear for 4 seconds before disappearing.

Appears each time you turn the power on, until you set the time zone, date and time ([49]).

SET THE TIME ZONE,
DATE AND TIME

Appears when the battery pack is exhausted ([127]).

CHARGE THE BATTERY PACK

Appears when the tape has reached the end.

TAPE END

Refer to p.16

THE TAPE IS SET FOR
ERASURE PREVENTION

Appears when you press the REC PAUSE button if the DV cable is not connected properly ([86]) (MV450i only).

CHECK THE DV INPUT

Refer to p.132

CONDENSATION
HAS BEEN DETECTED

Appears as a warning to protect the tape and also when condensation is detected. Remove the tape as soon as possible after the camcorder has displayed the caution.

REMOVE THE CASSETTE

Refer to p.87

COPYRIGHT PROTECTED
PLAYBACK IS RESTRICTED

Refer to p.87 or p.88

COPYRIGHT PROTECTED
DUBBING RESTRICTED

Appears when you try to do audio dubbing or AV insert (MV450i only) on a tape recorded in any mode other than SP mode ([90, 93]).

CHECK THE CASSETTE
(REC MODE)

Appears when you try to do audio dubbing on a tape recorded in 16-bit audio or 12-bit, 4-channel mode ([93, 95]).

CHECK THE CASSETTE
(AUDIO MODE)

Appears when the camcorder detects a blank section of a tape during audio dubbing or AV insert (MV450i only) ([90, 93]).



CHECK THE CASSETTE
(BLANK)

Appears immediately after you start recording, and the video heads are badly contaminated. Make sure to clean the video heads when this caution appears.



HEADS DIRTY
USE CLEANING CASSETTE

Memory card caution phrases

An error has occurred with the memory card. The camcorder can not record or play back. A temporary card error is also possible. If **CARD ERROR** disappears after 4 seconds and  flashes red, format the memory card. If  flashes green, playback is possible.




CARD ERROR

There is no more remaining memory on the memory card. Change the card or erase images.



CARD FULL

You have reached the maximum file or folder number. ( 104)




WARNING ERROR

The image has been recorded in an incompatible JPEG format or other format that the camcorder can not play back, or the image data has been damaged.




UN-IDENTIFIABLE
IMAGE

Appears if you have tried to mark 51 or more images for printing, or if a mark file cannot be edited. ( 119)



PRINT MARK ERROR

A memory card has not been inserted into the camcorder. ( 102)



NO CARD

There are no images recorded on the memory card.



NO IMAGES

You are using an SD Memory Card and it is set for erasure prevention. Change the position of the protect switch.



THE CARD IS SET FOR
ERASURE PREVENTION

Specifications

MV450/MV450i

Power Supply (rated): 7.4 V DC

Power Consumption (while recording with the AF turned on):

3.7 W (Using viewfinder),

4.5 W (Using LCD screen)

Television system: CCIR standard

(625 lines, 50 fields) PAL colour signal

Video recording system: 3 rotary heads, helical scanning DV system (Consumer digital VCR SD/SDL system)

Digital component recording

Audio recording system: PCM digital

sound: 16 bit (48 kHz/ 2 ch), 12 bit

(32 kHz/ 4 ch), **SP** and **LP**: 12 bit

only (32 kHz/ 2 ch)

Image sensor: 1/4" CCD (charge coupled device), approx. 540,000 pixels (approx. 340,000 effective pixels)

Tape format: Videocassettes bearing the **DV** mark.

Tape speed:

SP: 3/4 ips (18.83 mm/s),

LP: 1/2 ips (12.57 mm/s),

SP: 3/8 ips (9.42 mm/s),

LP: 1/4 ips (6.29 mm/s)

Maximum recording time

(with an 80 min. cassette):

SP: 80 min., LP: 120 min.,

SP: 160 min., **LP**: 240 min.

Fast forward/rewind time:

Approx. 2 min. 20 sec. (with a 60 min. cassette)

Lens: F/1.8–2.9, 10× power zoom, 4.2–42.0 mm

Focusing system: TTL autofocus, manual focusing possible

Minimum focusing distance: 3ft 3³/₈ in

(1 m) (3/8 in (1 cm) on maximum wide angle)

Maximum shutter speed: 1/8,000 sec.

(1/250 sec. when using a memory card)

Minimum illumination: 2 lx (using the

Low Light program in TAPE

CAMERA mode)

Recommended illumination:

More than 100 lx

Filter diameter: 30.5 mm

Viewfinder: 0.44 in, TFT colour LCD, approx. 113,000 pixels

LCD screen: 2.5 in measured diagonally, TFT colour, approx. 112,000 pixels

Microphone: Stereo electret condenser microphone

DV Terminal*: Special 4-pin connector (conforms to IEEE1394)

AV/headphone terminal*: ϕ 3.5 mm

Audio input**:
-10dBV/at least 40 kohms, (L, R), unbalanced

output:
-10dBV (47 kohm load)/ less than 3 kohms, unbalanced

Video: 1 V_{p-p}/75 ohms unbalanced

S-video terminal*:

1 V_{p-p} (Y signal), 0.3 V_{p-p} (C signal)

MIC terminal input: ϕ 3.5 mm stereo minijack, -57 dBV (with 600 ohm mic)/ at least 5 kohms

LANC terminal: ϕ 2.5 mm mini minijack

Operating temperature range:

0°–40°C (32°–104°F)

Dimensions: 57 × 102 × 134 mm

(2 1/4 × 4 × 5 1/4 in)

Weight: 540 g (1lb 3 oz)

BPA12 Battery Pack

Battery type: Rechargeable lithium ion battery

Rated voltage: 7.4 V DC

Operating temperature: 0°–40°C (32°–104°F)

Battery capacity: 1100 mAh

Dimensions: 38 × 21 × 55 mm

(1 1/2 × 7/8 × 2 1/8 in)

Weight: 70 g (2 1/2 oz)

* MV450: Output only,

MV450i: Input/output.

** MV450i only.

Weight and dimensions are approximate. Errors and omissions excepted. Subject to change without notice.

16:9, 20

A

Abroad, Using the Camcorder, 131
 Accessories, 5, 138
 Adapter, AC, 10-12, 14
 AE Programs, 55
 AE Shift, 72
 Analog line-in, 88
 Art, 61
 Audio Dubbing, 93
 Audio Mix, 98
 Audio Mode, 66
 Audio Output, 99
 Audio Recording
 and Playback, 29, 66, 98
 Audio/Video Terminal, 30
 Auto, 57
 Autofocus, 75, 134
 AV Insert, 90

B

Backup Battery, 128
 Basic Recording, 17
 Battery Charger, 13-14
 Battery Pack, 11, 13-14, 126
 Beep, 20
 Black and White, 61
 Buttons, light-up, 48

C

Cables, 5, 31
 Cassettes, 15
 Charging the Battery Pack,
 11, 13-14, 126
 Choosing a Recording Program, 55
 Cleaning the Camcorder, 130
 Clock, 51
 Combining Images, 114
 Condensation, 132
 Connecting to a PC, 100
 Connection to TV or VCR, 30
 Copying from Cassette to
 Memory Card, 117
 Copying from Memory Card to
 Cassette, 118

D

Data Code, 78
 Date and Time, 49
 Date Search, 81
 Digital Effects, 59
 Digital Zoom, 21
 DV Dubbing, 84

E

Easy Recording, 57
 Editing to a VCR, 83
 Effects, 61
 Erasing Still Images from a
 Memory Card, 112
 Extended Recording Time
 Function, 19
 External Microphone, 66, 93, 95

F

Fade Trigger, 60
 Faders, 60
 Fast Forward, 26
 Feedback, 33
 File Numbers, 104
 Finding Your Way Around
 the MV450/MV450i, 7
 Focusing, 75
 Formatting a Memory Card, 120

H

Head Cleaning, 131
 Headphones, 29, 30
 Horizontal Wipe, 60

I

Image Stabilizer, 36
 Image Quality, 102
 Index Screen, 110
 Introducing the MV450/MV450i, 6

E

L

LANC, 83
LCD Screen, 23
Lens Cap, 124
Light-up buttons, 48
Loading Cassettes, 15
Low Light, 58
LP Mode, 19

M

Maintenance, 129
Making Better Videos, 34
Manual Focus, 75
Memory Card Introduction, 101
Menus, 37
Microphone, 66, 71, 93, 95
Monitor Recording, 25
Mosaic, 61
Mosaic Fade, 60
Multi-Image Screen, 64

O

Optional Accessories, 138

P

Pause, Record, 17
PC Connection, 100
Photo Search, 81
Playback, 26
Playback Connection, 30
Playback Pause, 27
Portrait, 57
Power Adapter, 10-12, 14
Powering Your Camcorder, 10
Pre-Marked Position, 82
Preparing the Camcorder, 124
Preventing Accidental Erasure, 111
Print Mark, 119
Problems, 133
Progressive Photo, 105
Protect, 111

R

Recharging the Battery Pack, 126
Recording, 17, 105
Recording from Cassette to
Memory Card, 107
Recording from DV Device to
Memory Card, 108
Recording Programs, 55
Record Pause Mode, 17
Record Review, 54
Record Search, 54
Remote Control, 45
Remote Sensor, 45-46
Rewind, 26

S

S1 video input terminal, 32
Sample images, 122
Sand & Snow, 58
Screen Displays, 141
SD Memory Card, 101, 121
Self-Timer, 68
Sepia, 61
Shutter Speed, 73
Slide Show, 110
Speaker, 29
Specifications, 12, 123, 148
SP Mode, 19
Sports, 57
Spotlight, 58
Still Picture, 52, 105
Storage, 130
S-video, 32
System Diagram, 137

T

- Tape Protection, 16
- Telephoto, 21
- Temperature, 12, 126, 130, 148
- Time Code, 145
- Time Zone, 49
- Tips for Making Better Videos, 34
- Tripod, 34
- Troubleshooting, 133
- TV, 30, 141

U

- Using the Camcorder Abroad, 131
- Using the Menus, 37

V

- VCR, 30
- Vertical Wipe, 60
- Videocassettes, 15
- Video Heads, 131
- Video Light, 70
- Viewfinder, 124, 130
- Viewing Still Images, 109

W

- White Balance, 76
- Wide-angle, 21
- Widescreen TV, 20
- Wind Screen, 67
- Wipe, 60
- Wireless Controller, 45

Z

- Zero Set Memory, 82
- Zooming, 21

Menu at a Glance

E

Use the list below to quickly navigate the camcorder's menu. Functions are listed alphabetically.

Function	First make sure the camera is set to...				Then select it from this submenu and set.
	TAPE + CAMERA	TAPE + PLAY	CARD + CAMERA	CARD + PLAY	
16:9 effect	<input type="radio"/>				CAM.SET UP
6-sec. Date		<input type="radio"/>			DISP.SET UP
Audio dub (MV450i only)		<input type="radio"/>			VCR SET UP
Audio mode	<input type="radio"/>	<input type="radio"/> **			VCR SET UP
AV/headphones	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	VCR SET UP
Beep	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	SYSTEM
Brightness	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	DISP.SET UP
Button light	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	SYSTEM
Button light colour	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	SYSTEM
Card mix	<input type="radio"/>				➔ CARD MIX
Copy - card to cassette				<input type="radio"/>	CARD OPER.
Copy - cassette to card		<input type="radio"/>			CARD OPER.
Data code		<input type="radio"/>			DISP.SET UP
Date/time display	<input type="radio"/>		<input type="radio"/>		DISP.SET UP
Date/time select		<input type="radio"/>		<input type="radio"/>	DISP.SET UP
Date/time set	<input type="radio"/>		<input type="radio"/>		SYSTEM
Displays		<input type="radio"/>		<input type="radio"/>	DISP.SET UP
Erase				<input type="radio"/>	CARD OPER.
File numbers		<input type="radio"/>	<input type="radio"/>		CARD SET UP
Format				<input type="radio"/>	CARD OPER.

Function	First make sure the camera is set to...				Then select it from this submenu and set.
	TAPE + CAMERA	TAPE + PLAY**	CARD + CAMERA	CARD + PLAY*	
Image stabilizer	<input type="radio"/>		<input type="radio"/>		CAM.SET UP
Mirror mode	<input type="radio"/>		<input type="radio"/>		DISP.SET UP
Mix level	<input type="radio"/>				➔ CARD MIX
Mix type	<input type="radio"/>				➔ CARD MIX
Output channel		<input type="radio"/>			VCR SET UP
Print mark				<input type="radio"/>	CARD OPHR.
Protect				<input type="radio"/>	CARD OPHR.
Quality		<input type="radio"/>	<input type="radio"/>		CARD SET UP
Record mode	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	VCR SET UP
Remote sensor mode	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	SYSTEM
Shutter speed	<input type="radio"/>		<input type="radio"/>		CAM.SET UP
Time zone/DST	<input type="radio"/>		<input type="radio"/>		SYSTEM
TV screen	<input type="radio"/>		<input type="radio"/>		DISP.SET UP
White balance	<input type="radio"/>		<input type="radio"/>		CAM.SET UP
Wind screen	<input type="radio"/>	<input type="radio"/>			VCR SET UP
Zoom	<input type="radio"/>		<input type="radio"/>		CAM.SET UP

*  for MV450i

** MV450i only