



110.00 mm

## IT-0822 User Manual

IT-0822: 1pc

Manual: 1pc

Auxiliary cable: 1pc

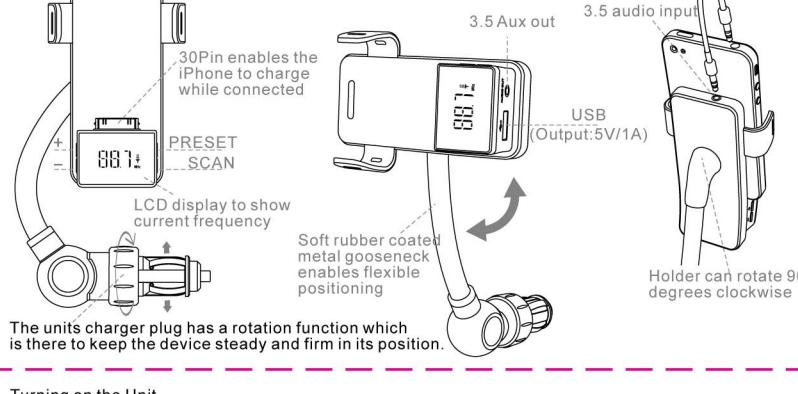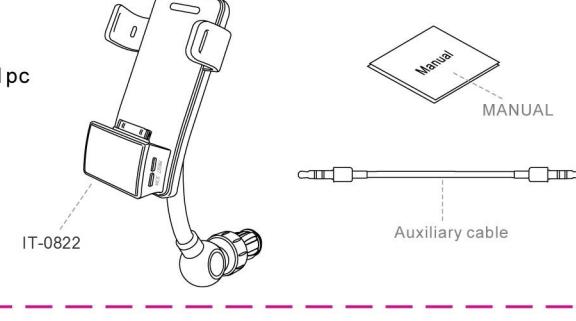

### Turning on the Unit

Insert the Cigarette plug on IT-0822 into the Car Cigarette Lighter socket, spin the lock on the plug to make sure that position is locked. Flex the gooseneck into a position that is suitable for you to use. Place the unit onto the clamp of IT-0822 and connect the 3.5mm Aux cable. Once you start up the car, IT-0822 will be automatically turned on.

### Using the Music player

When iPhone is connected to the 30pin, IT-0822 can be used to charge iPhone, and the 3.5mm Audio cable can be used to connect iPhone with IT-0822 to enable your listening to music in iPhone through car speaker via FM transmitting, and handsfree calling and talking. iPod can also be connected with IT-0822 to enable charging while listening to music in iPod through car stereo system.

### Adjusting frequency channel

Push '+' and '-' key to change frequency channel (it is recommended to use a blank frequency that is unused), or push 'Scan' for autoscans (for more information please see below), adjust the frequency on car radio system to match with the one shown on IT-0822 LCD display. Hold '+' and '-' to change frequency faster for easy setting.



 
### Autoscans

When there is interference, push 'Scan' key, IT-0822 will automatically search for channel with the least interference for the best performance.



### Storing frequency in memory



In order to store the frequency channel in memory, firstly select the desired frequency channel, then hold 'Preset' button for 3 seconds, you will see a sign 'M1' flashing on the LCD screen. Push 'Preset' key again to store the frequency channel. IT-0822 have total 4 slots for saving preset channels with different slot names M1, M2, M3 and M4.



You can change slots by pushing '+' and '-' key. To use the saved frequency, just push 'Preset' to automatically tune to it.

### Adjusting signal power

IT-0822 comes with 2 signal standard, the first one is based on Country Standard, the second is Industrial Standard. When the unit is connected, hold 'Preset' and '+' keys, then turn on the car, after the unit is on for 3 seconds, you may let go, and the unit will switch between the 2 modes (If you are experiencing any noise problems, it is recommended to switch to industrial mode)

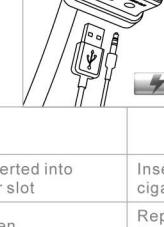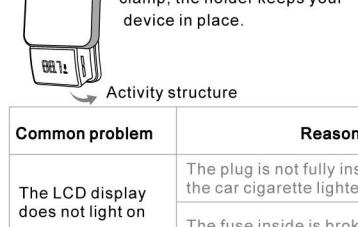

Standard USB (5V,1A) output socket provides the charging for Mobile Phones, Bluetooth headsets and other devices.

Common problem	Reason	Solve
The LCD display does not light on	The plug is not fully inserted into the car cigarette lighter slot	Insert the plug fully into the car cigarette lighter slot
	The fuse inside is broken	Replace new fuse Fuse Spec:Φ5*20mm,250V/2A
	Volume on iPhone/other MP3 units is set too low	Increase the volume on the unit
The volume is too low in the car	Volume on car speaker is set too low	Increase the volume on car system
	3.5mm is not connected properly	Replug 3.5mm plug onto the unit
	Audio cable is broken	Change a new cable
Hearing noise break or music skipping	Volume is too high	Decrease the volume
	Song file quality is not good	Change to other music
Hear distortion from the music	Interruption from other frequency	Switch to a new channel
Echo when using iPhone to make calls	Volume is set too high	Lower the volume either on iPhone or car speaker
Volume too low when using iPhone to make calls	User is too far from iPhone	Speak closer to iPhone (Recommended distance is less than 1M)
Unable to use USB to recharge Units	Use non standard USB cable	Change to standard USB cable
	Unit does not support standard USB	Stop using IT-0822 to charge units

### Specification

Frequency range : 88.1-107.9MHz (0.1MHz/step) Input : DC 12-24V (Vehicle Power)

USB output : 5V /1A max Temperature : -10~+55 °C Effective distance : ≤5 m

### Caretaking

- a. Please keep the product in a dry place, use a soft clean cloth to clean the unit if needed
- b. Please do not store the product in an area with a lot of dust, or high/low temperature
- c. Please do not disassemble the unit, it may lead to breaking the unit
- d. Please do not use brutal force on the unit as it may damage it
- e. Please do not short circuit the unit, as it will damage the battery

Please use official accessories, if the unit is damaged from using non official accessories, it is not covered in the warranty

55.00 mm

385.00 mm

## Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body. Use only the supplied antenna.