 


Ages 8+

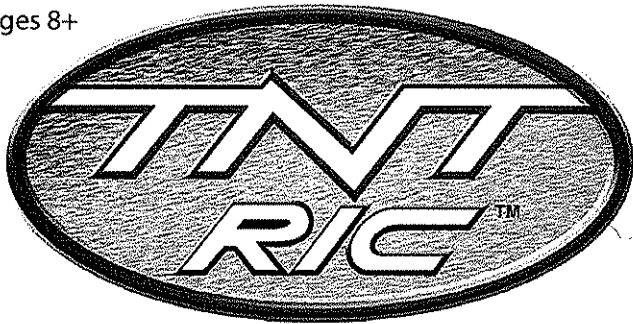

PLEASE READ ALL INSTRUCTIONS BEFORE HANDLING OR OPERATING YOUR RADIO CONTROL VEHICLE.

KEEP PACKAGING AND INSTRUCTIONS FOR FUTURE REFERENCE AS THEY CONTAIN IMPORTANT INFORMATION.

DO NOT RETURN THE PRODUCT TO THE STORE

Please contact us for help with your product.

1-888-TNT-IS-RC

(1-888-868-4772)

www.tntoy.com

service@tntoy.com

(U.S. Residents Only)

CAUTION: DO NOT CHARGE BATTERY PACK IF IT IS HOT, WET, OR SHOWS LEAKAGE OR CORROSION. MAY EXPLODE IF DISPOSED OF IN FIRE. DO NOT ATTEMPT TO OPEN BATTERY PACK.

PARENTS: BATTERY PACK AND CHARGER SHOULD BE EXAMINED PERIODICALLY FOR DAMAGE AND POTENTIAL HAZARDS, AND ANY POTENTIALLY HAZARDOUS PARTS MUST BE REPAIRED. AN ADULT SHOULD SUPERVISE CHARGING.

IMPORTANT

Young children should be supervised to ensure that they do not play with the charger.

The charger is not intended for use by young children or infirm persons without supervision.

Ni-Cd Battery Pack output rating 600mAh.

BATTERY PACK MAY BE HOT AFTER USE. ALLOW TO COOL BEFORE HANDLING AND CHARGING. NEVER CHARGE A HOT BATTERY PACK.

NOTE: BATTERY IS SHIPPED UNCHARGED. MUST BE CHARGED BEFORE FIRST USE.

RECHARGEABLE BATTERY TIPS

1. The first few charges of a rechargeable battery pack are the weakest. Charge and use battery pack as instructed 6 times to bring up to full power.
2. Charge the battery pack for the full time recommended – no more, no less.
3. Use the battery pack soon after charging for best results.
4. Run battery pack ALL THE WAY DOWN in vehicle every time to "train" it to take the fullest charge.

CAUTION-ELECTRICALLY OPERATED PRODUCT: NOT RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK. INPUT: 120 VAC, 60 Hz, 8W. OUTPUT: 12 VDC, 200mA



**RADIO CONTROL VEHICLE
Instruction Manual**

CONGRATULATIONS!

You have purchased a quality engineered and precision built R/C vehicle from TNT R/C. Follow these important instructions and take care of your vehicle and it will last a lot longer.

Requires 9.6V rechargeable battery pack and charger (included) and 9V alkaline battery (not included).

IMPORTANT: DO NOT OPERATE VEHICLE IN RAIN, WATER, PUDDLES OR SNOW. WATER MAY DAMAGE YOUR VEHICLE AND VOID WARRANTY.

IMPORTANT SAFETY INFORMATION

- NEVER drive your R/C vehicle on the street or near water!
- Keep fingers, hair and loose clothing away from wheels while vehicle is turned on. Do not hold vehicle by wheels.
- Adult supervision is recommended at all times when vehicle is operated.
- Remove all batteries from vehicle and remote when not in use.

CAUTION: TO AVOID BATTERY LEAKAGE

- USE ONLY BATTERIES RECOMMENDED BY THE MANUFACTURER AND FOLLOW ALL INSTRUCTIONS.
- OBSERVE BATTERY POLARITY (DIRECTION).
- REMOVE WEAK OR EXHAUSTED BATTERIES FROM PRODUCT.
- DO NOT TRY TO RECHARGE NON-RECHARGEABLE BATTERIES.
- BATTERY INSTALLATION AND CHARGING SHOULD BE SUPERVISED BY AN ADULT.
- RECHARGEABLE BATTERIES MUST BE REMOVED FROM THE TOY BEFORE RECHARGING.
- DISPOSE OF BATTERIES SAFELY AND PROPERLY. DO NOT DISPOSE OF BATTERIES IN FIRE. LEAKAGE, EXPLOSION OR PERSONAL INJURY MAY RESULT.

NICKEL-CADMIUM (NI-CD) BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY

 


CHARGING BATTERY PACK

BATTERY PACK MUST BE CHARGED FOR 4 HOURS BEFORE FIRST USE.





CHARGING INSTRUCTIONS – ADULT SUPERVISION REQUIRED

1. Connect WHITE PLUGS on BATTERY PACK and CHARGER together.
2. Plug CHARGER into wall outlet.
3. Charge for 4 hours, then unplug CHARGER from wall, and disconnect BATTERY PACK and CHARGER by pressing the LEVER and pulling PLUGS apart.
4. Battery pack should be slightly warm after 4 hours of charging. This is normal and indicates it has taken a charge.
5. Do not overcharge. Charging for more than 4 hours will not improve performance and may damage battery pack.
6. In use, battery pack will lose its power all at once. EQUALIZER will stop operating. It is not defective, it's time to recharge.
7. WAIT 20 MIN. BEFORE RECHARGING. NEVER RECHARGE A HOT BATTERY PACK, OR YOU WILL SEVERELY REDUCE ITS LIFE.

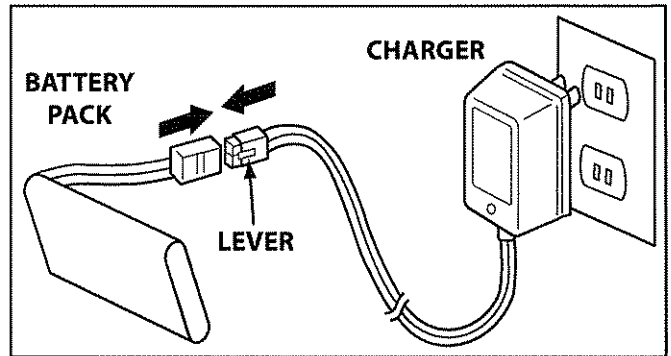


INSTALLING BATTERY PACK IN VEHICLE

    1. Turn VEHICLE over and swing open LATCH of BATTERY COMPARTMENT at rear of VEHICLE.
2. Swing open BATTERY LID.
3. Snap together PLUGS of BATTERY PACK and VEHICLE.
4. Place BATTERY PACK in BATTERY COMPARTMENT as shown. Place WIRES and PLUGS neatly under LID so that LID can close without touching or pinching WIRES or PLUGS.
5. Close LID and swing LATCH fully closed.
6. USE CAUTION WHEN REMOVING BATTERY PACK AFTER OPERATION. BATTERY PACK MAY BE HOT.

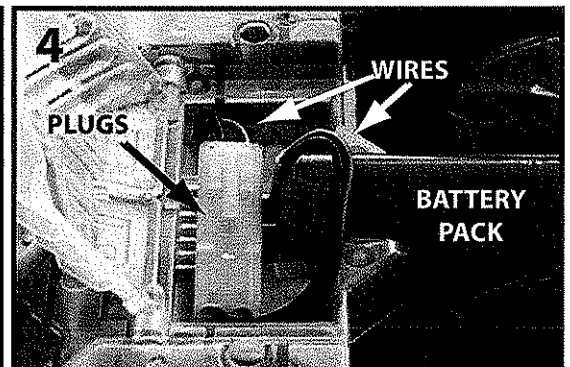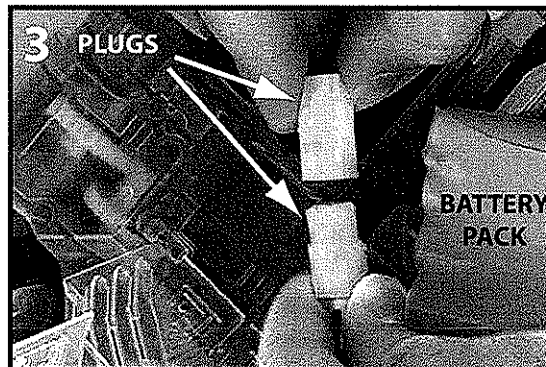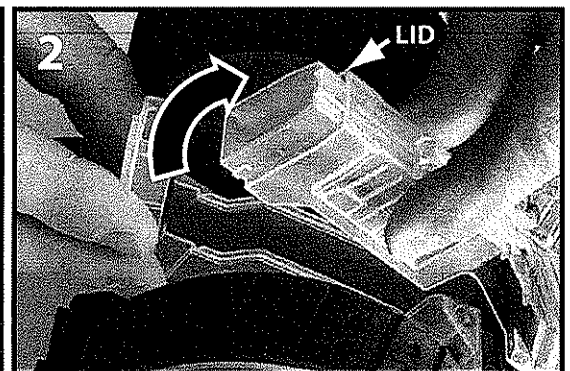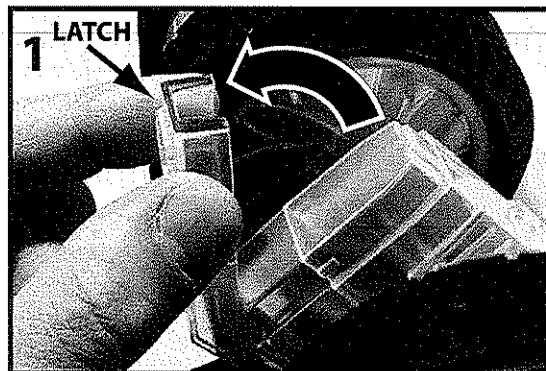

INSTALLING BATTERY IN REMOTE

 1. Press on ARROW on BATTERY LID and slide LID in direction of ARROW to remove.
2. Snap a fresh, new 9V ALKALINE BATTERY into BATTERY COMPARTMENT. Make sure the BATTERY (+) and (-) posts line up as shown in Fig. 5.
3. Replace BATTERY LID by inserting right end first, then lower in the left end and slide firmly to left to secure.

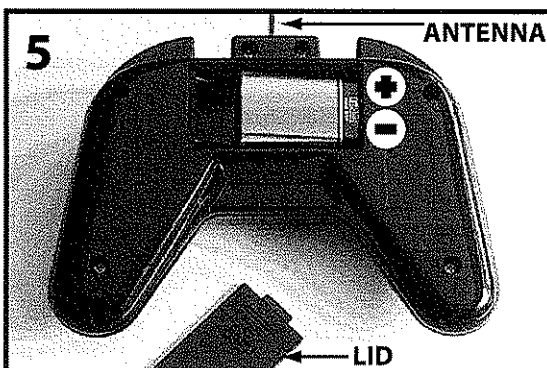

MORE SAFETY STUFF!

Do not hold the vehicle by the wheels. Keep fingers, hair, clothing and everything else away from the wheels. Be careful not to touch the remote controls until the vehicle is placed on the running surface. Do not touch the moving vehicle.

Pick an open, dry place to drive where you cannot hit people, pets, cars, or anything else that might be damaged or might cause damage to your vehicle. Do not operate in the street.

Choose a hard, dry, flat surface to operate on. Avoid grass, sand, gravel, loose dirt and broken surfaces, wet ground and puddles.

REMOTE FUNCTIONS

POWER SWITCH:

Slide to turn remote ON and OFF. POWER LIGHT will glow when power is on and blink if the battery is low and needs to be replaced. Always turn switch off when vehicle is not in use.

LEFT THROTTLE: Slide up for FORWARD, down for REVERSE, middle position (release) to COAST.

STEERING: Slide left to STEER LEFT, right to STEER RIGHT, middle position (release) for STRAIGHT.

LEFT TRANSFORM: Press left button on top to transform the wheels to the left.

RIGHT TRANSFORM: Press right button on top to transform the wheels to the right.

OPERATION

You are now ready to check the operation of your EQUALIZER™ Radio Control vehicle.

 
 
 
1. Turn VEHICLE POWER SWITCH to ON position and place vehicle on ground.
2. Make sure REMOTE POWER SWITCH is ON.
3. Make sure ANTENNA is screwed in and extended fully. Point ANTENNA up, not at vehicle. Do not touch while operating.
4. Operate the controls on the REMOTE.

FREQUENCY AND INTERFERENCE

Refer to labels on remote and vehicle for frequency. Remote and vehicle must be the same frequency. Do not race vehicles with the same frequency. Buildings, electrical wires, metal fences, automobiles, and other structures can cause interference and make your vehicle run and respond poorly. Move away from such things to increase the remote's performance.

STUNTS

1. **WHEELIE:** While going in REVERSE, move the THROTTLE to FORWARD.
2. **SUPER TWISTER:** While doing a WHEELIE, quickly move STEERING to LEFT or RIGHT.
3. **VERTICAL SIDE SLIDE:** While doing a WHEELIE, press and hold one of the TRANSFORM BUTTONS and move the THROTTLE to FORWARD or REVERSE.
4. **SPINS:** Move STEERING all the way RIGHT or LEFT.
5. **POWERSLIDE DRIFTING:** While moving FORWARD, hit one of the TRANSFORM BUTTONS.
6. **TO INFINITY:** Make up your own stunts! The wilder, the better. Make up new combinations of THROTTLE, STEERING and TRANSFORM BUTTON input. The possibilities are endless!

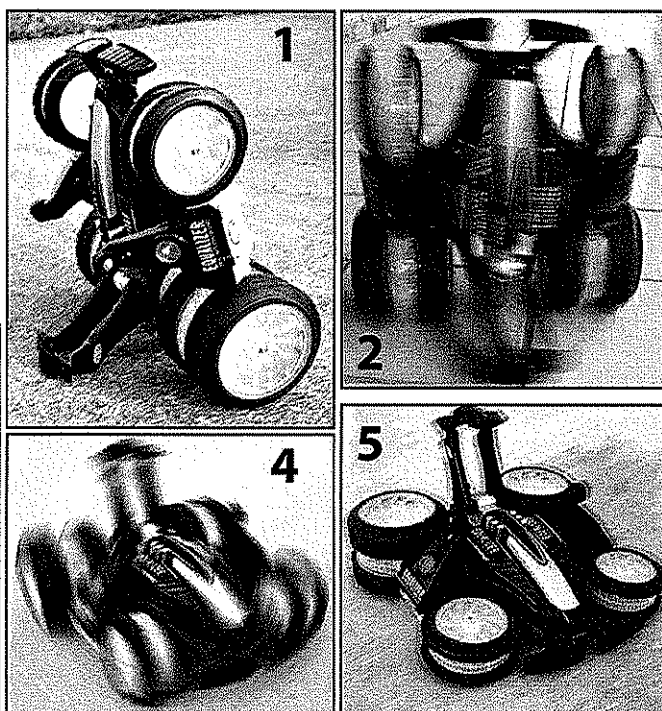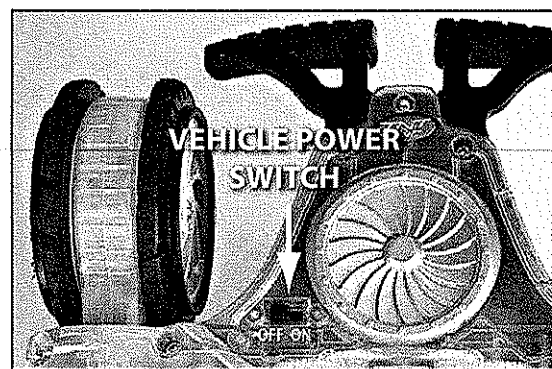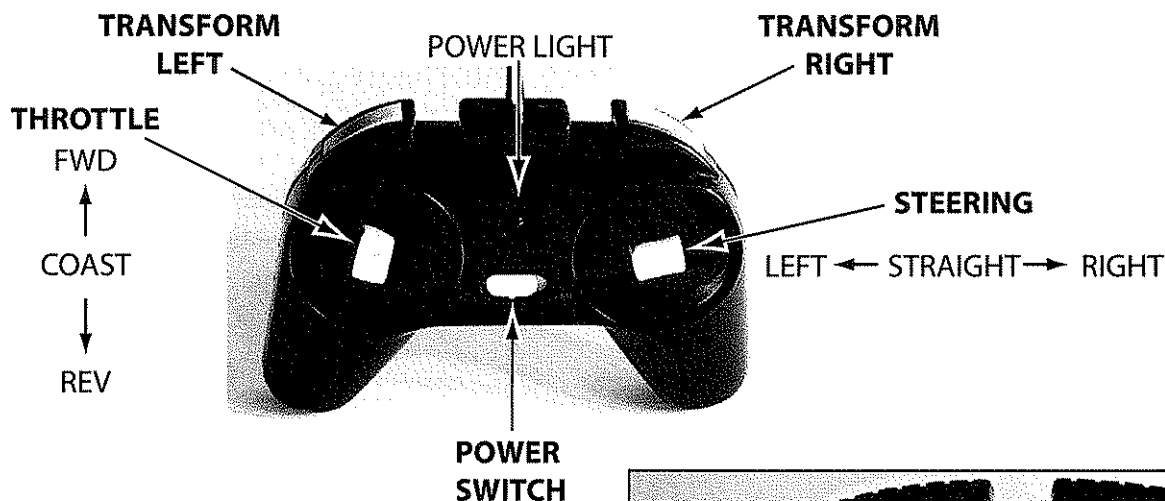

TROUBLESHOOTING GUIDE

Vehicle won't go or steer.

Battery pack not charged. Was battery pack warm when you removed it from the charger after 4 hours? If so, it probably did take a charge. If battery pack is cold after charging, it did not take a charge. Disconnect battery and charger, reconnect plugs firmly. An adult should test the wall outlet with a lamp or other appliance to make sure it is working.

Power switch on vehicle is off.

Battery in remote is weak or dead. When Power Light on remote blinks, replace the battery.

Remote is not working. If Power Light on remote goes on (steady, not blinking) when switched on with fresh battery installed, remote is probably OK.

Vehicle got wet. Immediately remove battery pack and allow vehicle to dry for 24 hours in a warm, dry place. Electronic circuits in vehicle may be damaged. **WARRANTY DOES NOT COVER WATER DAMAGE.**

Vehicle seems slow or weak.

Battery pack not "trained" to take a full charge. The first few charges of battery pack are the weakest. "Train" the battery pack by running it down all the way in the vehicle, allow to cool, then charge for 4 hours, no more, no less. Repeat "training" 5-6 times until battery strength is improved.

Vehicle hard to control.

Not enough traction: Vehicle handles best on high-traction surfaces like rough or textured asphalt and concrete. Avoid sandy, dirty, dusty, grassy, rough, broken or gravel surfaces.

VEHICLE ISSUES

The first few charges of a rechargeable battery pack are the weakest. Charge and use battery pack 6 times to bring up to full power.

Charge the battery pack for the full time recommended -- 4 hours -- no more, no less.

Use the battery pack soon after charging for best performance.

Run battery pack ALL THE WAY DOWN in vehicle to "train" it to take the fullest charge.

BATTERY PACK MAY BE HOT AFTER USE. ALLOW TO COOL BEFORE HANDLING AND CHARGING. NEVER CHARGE A HOT BATTERY.

Driving style, battery age and condition, weather and other local conditions will affect battery running time you will get on a charged battery pack.

Stay away from sand, mud, snow and water so that your vehicle will last for a long time. **KEEP VEHICLE DRY. DO NOT RUN NEAR WATER, IN PUDDLES OR WET GRASS, OR IN RAIN OR SNOW.**

Keep your vehicle clean. Lightly brush off any dirt. Never immerse in water or hose off. **REMOVE BATTERIES WHEN NOT IN USE.**

If vehicle gets wet, **IMMEDIATELY** remove the battery pack. Leave vehicle to air dry in a warm, dry location for 24 hours.

REMOTE ISSUES

Keep remote antenna pointed up during operation for best performance and range. Don't touch the antenna while operating.

When Power Light on remote blinks, replace the battery.

COMPLIANCE WITH FCC REGULATIONS

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

90-DAY LIMITED WARRANTY (Valid only in U.S.A.)

What the Warranty Covers and What the Period of Coverage Is: TNT Toys warrants to the original consumer purchaser of its product that the product is free of defects in materials and workmanship discovered within a period of 90 days from the date of purchase.

What We Will Do to Correct Problems: DO NOT RETURN THE PRODUCT TO THE STORE. We ask you to contact us so that we can help you with your problem. We will repair or replace the defective item at our option free of charge within the warranty period, subject to verification of the defect or malfunction and the date of purchase. This is our sole and exclusive obligation to you.

NO PRODUCT SHOULD BE RETURNED TO US WITHOUT PRIOR AUTHORIZATION. We cannot be responsible for product returned without authorization.

How You Can Get Service: Contact us first. Visit our Web site at www.tntoy.com and click on Service E-mail us at service@tntoy.com. Write to us at TNT Toys, P.O. Box 983, Belmont, CA 94002-0983. Call us toll-free at 1-888-TNT-iS-RC (1-888-868-4772) 9 am - 5 pm Pacific Time, Monday - Friday. If necessary you will be instructed to return the product, postage prepaid and insured. Please pack the item securely. Enclose your name, address, dated sales receipt with the purchase price circled, and a brief explanation of the defect. Repair or replacement, and return shipment, will be free of charge within the warranty period.

What is Not Covered: The warranty does not cover problems arising from abuse, unreasonable use, battery leakage, water damage, or unauthorized repairs or alterations. Any applicable implied warranty, including warranties of merchantability and fitness for a particular purpose, are hereby limited to 90 days from the date of purchase. Consequential damages resulting from a breach of any applicable express or implied warranties are hereby excluded.

How State Law Relates to the Warranty: Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so depending on where you live, the above limitations and exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights, which may vary from state to state.

© 2006 CCP Co., Ltd., 3-1-8 Sakae-cho, Kawaguchi, Saitama 332-8521, Japan. All Rights Reserved. EQUALIZER is a trademark of CCP Co., Ltd. TNT R/C is a trademark of Top Notch Toys Limited, Suite 509, 5/F, World Finance Centre, South Tower, Harbour City, TST, Kowloon, Hong Kong.

Specifications and features of our products may change. Product may differ from illustrations.

PRINTED IN CHINA

INS-5106-USA-1