 


Flipz-Racer/Truck

Age +8

User's Guide

 
60-501/60-502

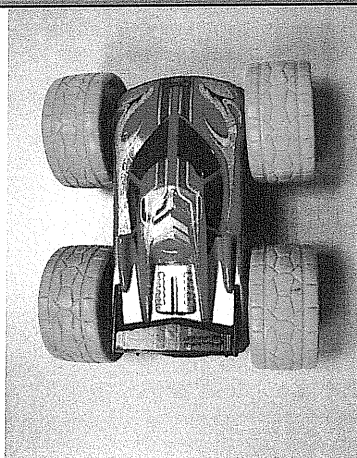

1 Charge your Li-Po battery


1. Slide the power switch to OFF. Unscrew the battery cover.
2. Insert six AA alkaline batteries (not included) matching the polarity symbols (+ and -) marked inside. Replace the battery cover and tighten the screws.
3. Slide the power switch to ON. Both the red and green lights turn on.
4. Insert the Li-Po battery matching the polarity marks as shown. The green light starts to blink.
5. The green light stops blinking once the battery is fully charged. Remove the battery and turn off the charger.

Note: You also can choose a DC 9V 300mA AC adapter (not included) to power the charger.

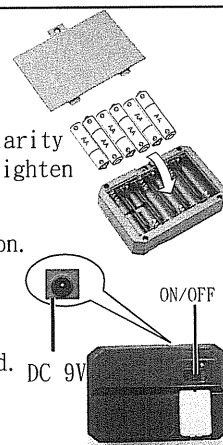

2 Install Batteries

 1. Turn off the car and controller.
2. Insert one 9V battery pack (not supplied) in the controller's battery compartment matching the polarity (+ and -) marked inside.
3. Lift the upper car body.
4. Unscrew the battery cover of the chassis and connect a fully charged Li-Po battery pack OR two AAA alkaline batteries (not supplied) matching the polarity marks inside. The battery only fits one way.
5. Replace the car body, battery door and tighten the screw.

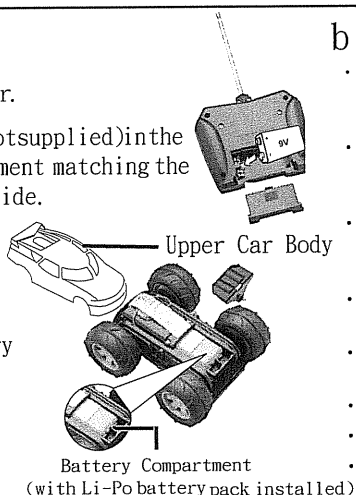

b Battery Notes:

- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Dispose of batteries promptly and properly. Do not burn or bury them. If you do not plan to use the vehicle for a long time, remove the batteries from both the vehicle and controller.
- Thoroughly check the charger and Li-Po battery before charging. Li-Po battery included in the package needs to be charged before using for the first time. Remove the battery after charging.
- Use battery and charger enclosed in the package only as it is specially designed to use for flipz racer & truck.
- Once the red light of the charger turns off, change to fresh AA batteries.
- Always charge the battery under adult supervision.
- Allow the battery to cool down before recharging.
- Do not charge your battery under direct sunlight, heated, humid places or inside the vehicle.
- Do not dismantle or solder the charger nor the battery.
- If your charger or Li-Po battery is extremely hot, smoking, expands, smells or the green light doesn't blink, turn off your charger and remove the battery.

3 Mount the Car Body and Install the Antenna

 
 
1. Screw the antenna firmly into the controller's antenna hole.
2. Align the front side of the bottom car body to match the rear side of the chassis (location of the power switch). Snap fasten the car body into the magnet holders of the chassis. The bottom car body should match with the upper car body reversely.

4 Drive the Car


1. Turn on the controller and the car.
2. Use the controller's levers to steer your car.
3. Turn off the controller and the car when you finish driving.

Notes :


- To play spin and flip function, you need to power your car with the supplied Li-Po battery pack.
- Power indicator will turn dim when battery power goes lower. Once it does, install fresh battery.

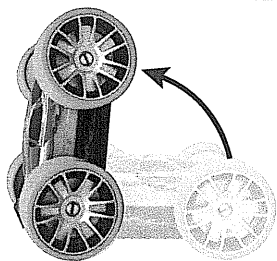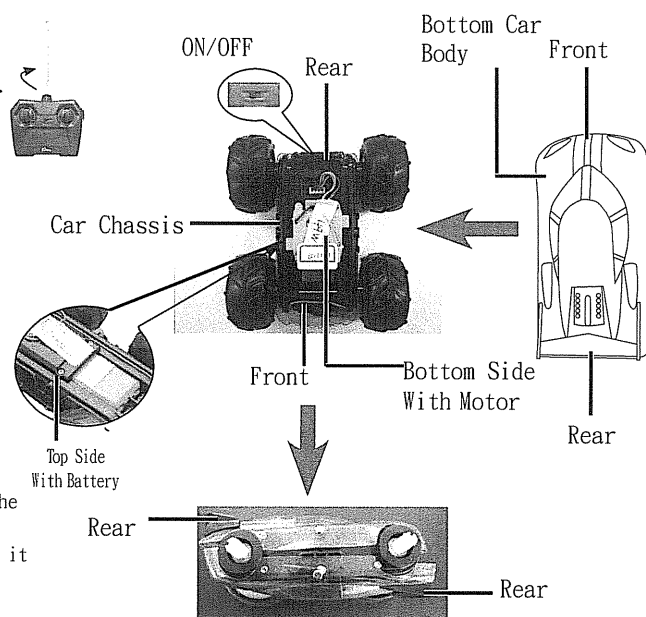

 
- ④ Wheelie Flip: While driving the car straight at full speed quickly reverse both levers.

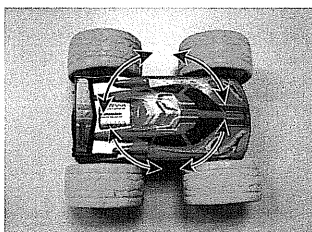

 - ⑤ Spin: Push left (right) lever forward and right (left) lever backward at the same time.

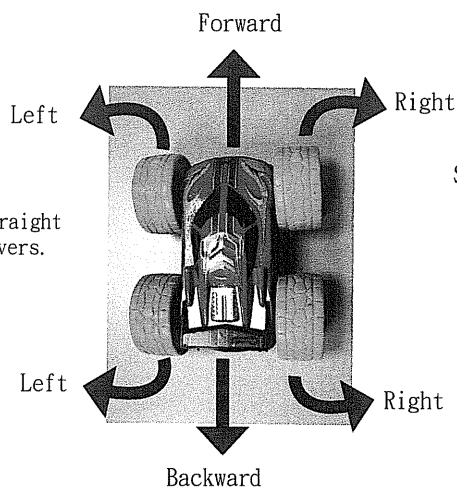

 - ③ Turn Right/Left: Push the left or right lever forward or backward.

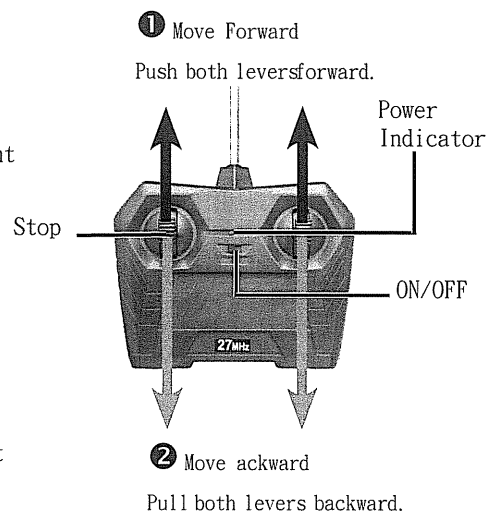

Thank you for purchasing your Flipz-Racer from RadioShack. Please read this user's guide before installing, setting up, and using your new car.

What's Included

Car Chassis	Controller & Antenna
Upper Car Body (Assembled on chassis)	
Bottom Car Body	User's Guide
Li-Po Battery Pack	Charger

Specifications

Li-Po Battery life for the car.....	Approx. 5 minutes with Li-Po
Charging time.....	Approx. 30 minutes
Max climbing angle.....	Approx. 30 degree
Control distance.....	Approx. 26 feet (8m)
Control.....	7 function
Frequency.....	27 MHz/49 MHz
Speed.....	up to 660 feet/min
Drive.....	4-wheel

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Safety Cautions:

- This product is designed to play INDOOR only. Avoid hitting pets, furniture or people.
- Keep your vehicle dry.
- Do not pick up vehicle while it is in motion. Keep fingers, hair and loose clothing away from the wheels.
- Do not bent antenna on purpose as it may cause injury.
- A nearby CB radio can interfere with your vehicle's control. If this happens, move away or wait for a while to play.
- Do not modify or tamper your vehicle as it may cause malfunction and may invalidate its warranty.

* * *



Protect the environment by recycling used electronics. Go to E-CyclingCentral.com to find a recycling center near you.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your product. Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for ninety (90) days after the date of purchase from a RadioShack-owned store or an authorized RadioShack franchisee or dealer. RADIOSHACK MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning) or excess voltage or current; (b) damage or failure caused by loss of control, loss of signal between the toy and its controller due to excessive range or low power, impact, violent contact, collision or rough use; (c) improper or incorrectly performed repairs by persons who are not a RadioShack Authorized Service Facility; (d) consumables such as fuses or batteries; (e) ordinary wear and tear or cosmetic damage; (f) transportation, shipping or insurance costs; (g) costs of product removal, installation, set-up service, adjustment or reinstallation and (h) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by (a) law: repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and product on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

ALL IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, RADIOSHACK SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RADIOSHACK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact RadioShack at:

RadioShack Customer Relations
300 RadioShack Circle Fort Worth, TX 76102

04/08

www.RadioShack.com



Recycle Rechargeable Batteries

Placing rechargeable batteries in the trash can be harmful to the environment. Instead, recycle old rechargeable batteries at your local RadioShack store free of charge. RadioShack participates in the RBRC® battery recycling program, and is committed to preserving the environment and conserving natural resources. Call 1-800-THE-SHACK (1-800-843-7422) for more information.