HOW TO CONTROL YOUR VEHICLE

WITH CLAWS CLOSED AND LOCKED

By closing all 4 claws, you can enjoy fast and exciting action.

 Make sure power switches of both the vehicle and controller are turned to "off."









3) Turn the power switch on both controller and the vehicle to "on."

 See "How to Control Your Vehicle – Basic Functions" for action.

2) Push in the wheel lock of each wheel until it makes

... AND MORE CREATIVE WAYS TO RUN YOUR CYCLAWS

Front Wheels Crawl Locked Version



Rear Wheels Crawl Locked Version



TROUBLE SHOOTING		
CONDITION	CAUSE	SOLUTION
VEHICLE DOES NOT MOVE	No Battery in vehicle or controller.	For vehicle, re-charge your battery pack For controller, install new battery
	Batteries not installed correctly in vehicle or controller.	Re-insta∎ the batteries.
	Batteries in the vehicle or controller are weak.	For vehicle, remove your battery pack and re-charge it. For controller install new battery.
	Power Switch on the vehicle or controller is "OFF."	Turn the power switch "ON."
VEHICLE IS OUT OF CONTROL	Batteries in the vehicle or controller are weak.	Change all batteries to new ones.
	Influenced by other controller or device with same frequency.	Find another place to play or keep a distance from the other device that is interfering with your vehicle.
CLAW DOES NOT OPEN	Sand or dust or dirt might be inside the joint of the tire mechanism.	Manually open the mutating tire several times until sand or dust gets out of the joint part of the tire mechanism.
9.6 Ni-MH BATTERY PACK WEARS OUT EASILY	Battery Pack may not be fully charged.	Recharge your Battery Pack.
	Battery Pack may be at end of its life cycle.	If the Battery Pack cannot reach its full potential even after fully recharging, it may be at the end of its life cycle. Please buy new 9.6V Ni-MH Battery Pack.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, in for itsalled and used in a coordance within instruction, and sea bear multi-interference to radio and can radiate radio frequency, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to add or or to exceed the interference will not occur in particular installation. If this equipment does cause harmful interference by one or more the existence of the contract of the c

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undecided exercise.

MADE IN CHINA

Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. BANDAI logo: ® and © 2010 Bandai. Package © 2010 Bandai. All rights reserved.



bandai.com




INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE HANDLING OR OPERATING YOUR RADIO CONTROL VEHICLE.

KEEP PACKAGING AND INSTRUCTIONS FOR FUTURE REFERENCE AS THEY CONTAIN IMPORTANT INFORMATION.

- The manufacturer and distributor will accept no responsibility, expressed or implied for injuries caused as a result of dismantling or modification.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

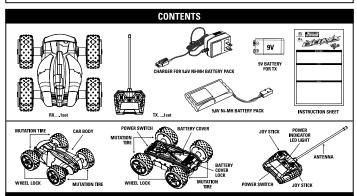

SAFETY GUIDELINES

It is important that you read and understand the instructions completely before use. This product is not recommended for use by children under 8 years of age without adult supervision. Please read all of the instructions before operating this vehicle. Always follow general safety rules while operating vehicle: avoid hitting pets, furniture or people. Misuse of this product could cause fire or injury. Please keep this manual for future reference in order to prevent accidents.

IN THE EVENT OF:

Smoke • Burning smell • Strange sounds • Water or any liquid coming into contact with the product
 Or if it is dropped or damaged.

Remove the battery and contact your supplier.

RECOMMENDED PLACE TO PLAY:

• On pavement/sidewalk • Playground • Places (back or front yard or playground) with turf (short grass).

PLACES NOT RECOMMENDED TO PLAY:

• On sandy beach, sand box, places with sand • On or inside water • Wet street, ground back/front yard after rain • Places with small rocks or gravel pit/street/playground etc. • Crowded places or place near by pets (including dog run) • On street (do not play with your toy on street with vehicles running) • Places with other r/c toys running (it may cause radio interference).

Note: you can play with this product indoors. However, we do not recommend playing indoors as it may damage furniture, flooring, and other interior decorations inside the room.