

FS29639

EQUIPMENT APPROVAL INFORMATION

Your telephone equipment is approved for connection to the Public Switched Telephone Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

1. Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company. The REN is useful in determining the number of devices you may connect to your telephone line and all have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.
- Rights of the Telephone Company
- Should your equipment cause trouble on your line which may cause the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations. The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

INTERFERENCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference;

and (2) This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Increase the distance between the telecommunications equipment and the receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20540. Please specify stock number 004-000-02045 when ordering copies.

HEARING AID COMPATIBILITY

This telephone system meets FCC standards for Hearing Aid Compatibility.

INTRODUCTION

Your Caller ID phone stores and displays specific information, provided by your local telephone company, to subscribers of Caller ID or similar caller identification services. You must subscribe to one of these services in order to use this unit.

Your Caller ID phone enables you to:

- Identify callers before you answer the phone.
- Record up to 48 Caller ID messages sequentially.
- Know who called while you were away.

To get the most from your new phone, we suggest that you take a few minutes right now to read through this user's guide.

IMPORTANT: In order to use this unit, you must subscribe to either the standard Name/Number Caller ID Service. To know who is calling while you are on the phone, you must subscribe to Caller ID Service.

IMPORTANT: Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.



CAUTION: When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the IMPORTANT SAFETY INSTRUCTIONS provided with this product and save them for future reference.

<p>THE LIGHTNING FLASH AND ARROW HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.</p>	<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	<p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

BEFORE YOU BEGIN

PARTS CHECKLIST

Make sure your package includes the items:-

1. Base Unit
2. Handset Coiled Cord
3. Corded Handset
4. Cordless Handset
5. Handset Battery
6. Telephone Line Cord
7. AC Power Supply
8. Cordless Handset Charger

MODULAR JACK REQUIREMENTS

You need an HK type modular phone jack, which is the most common type of phone jack. If you don't have a modular jack, call your local phone company to find out how to get one installed.


INSTALLATION NOTE: Some cordless telephones operate at frequencies that may cause interference to nearby TVs microwave ovens, and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV, microwave ovens, or VCR. If such interference continues, move the cordless telephone farther away from these appliances.

DIGITAL SECURITY SYSTEM

Your cordless phone uses a security system to provide protection against false ringing, unauthorized access, and charges to your phone line. When you place the handset in the base, the unit verifies its security code. After a power outage or battery replacement, you should place the handset in the base for about 20 seconds to reset the code.

INSTALLATION

DESKTOP INSTALLATION

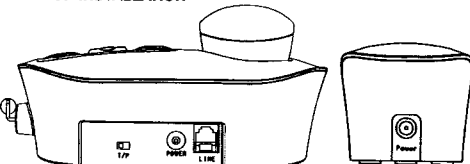

NOTE: For desktop charging only, the handset is only able to charge

1. Plug the coiled cord into the corded handset and the base.
 2. Plug the power supply cord into an AC outlet and the other end into the power jack on the back of the base.
 3. Plug the telephone line cord into the modular jack and into the LINE jack on the back of the base.
 4. Set the RINGER program to ON. (Please see the details on chapter of Ringer Setting)
- Note:** The phone automatically defaults to touch-tone dialing. To change to pulse (rotary) dialing, see "Tone/Pulse Dialing". If you don't know which type of service you have, check with the phone company.
5. Remove the battery compartment door of cordless handset.
 6. Insert battery pack and connect the cord into the jack inside the handset.
 7. Put the compartment door back on.
 8. Place the cordless handset in the cradle of charger.
 9. Plug the power supply cord into an AC outlet and the other end into the power jack on the back of the charger.

10. Allow the phone to charge for 12 hours prior to first use. If you don't properly charge the phone, battery performance will be compromised.

11. Set the RINGER program on the cordless handset to ON, if this icon displays on screen. (Please see the details on chapter of Ringer Setting)

Note: The phone automatically defaults to touch-tone dialing. To change to pulse (rotary) dialing, see "Tone/Pulse Dialing". If you don't know which type of service you have, check with the phone company.



CAUTION: Use only the ATLINKS USA, Inc. power supply that came with this unit. Using other power supplies may damage the unit.

NOTE: The phone is shipped in Tone Dialing Mode from the manufacturer.

SET UP

TO NE/PULSE DIALING

A Tone/Pulse (T/P) switch is located at the bottom of base. T and P are denoted as Tone and Pulse respectively.

DATE AND TIME SETTING ON BASE

1. Press and hold the VOL+/SET TIME button for 3 seconds.
2. Press "▲" or "▼" button to adjust the month setting.
3. Press VOL+/SET TIME button to go to date setting
4. Press "▲" or "▼" button to adjust the date.
5. Press VOL+/SET TIME button to go to hour setting
6. Press "▲" or "▼" button to adjust the hour.
7. Press VOL+/SET TIME button to go to minute setting
8. Press "▲" or "▼" button to adjust the minute. (or Press EXIT button to exit the program)
9. Press VOL+/SET TIME button again to confirm setting and go back to standby mode.

CONTRAST SETTING SELECTION

1. Press and hold the MEM/Prog button for 3 seconds.
2. Press CHANNEL/SELECT button on cordless handset or SELECT on base until "Lcd" shows on display.
3. Use the "▲" or "▼" button to adjust the level
4. Press MEM/Prog to store selection. You will hear a confirmation tone.
5. Press EXIT to quit the program.

RINGER MELODY SELECTION

1. Press and hold the MEM/Prog button for 3 seconds.
2. Press CHANNEL/SELECT button on cordless handset or SELECT on base until "ring" shows on display.
3. Use the "▲" or "▼" button to select the ringer. (8 ringer melodies can be selected)
4. Press MEM/Prog to store selection. You will hear a confirmation tone.
5. Press EXIT to quit the program.

VIP RINGER MELODY SELECTION

1. Press and hold the MEM/Prog button for 3 seconds.
2. Press CHANNEL/SELECT button on cordless handset or SELECT on base until "VIP ring" shows on display.
3. Use the "▲" or "▼" button to select the ringer. (8 ringer melodies can be selected)
4. Press MEM/Prog to store selection. You will hear a confirmation tone.
5. Press EXIT to quit the program.

PAGE RINGER MELODY SELECTION

1. Press and hold the MEM/Prog button for 3 seconds.
2. Press CHANNEL/SELECT button on cordless handset or SELECT on base until "PAGE ring" shows on display.
3. Use the "▲" or "▼" button to select the ringer. (8 ringer melodies can be selected)
4. Press MEM/Prog to store selection. You will hear a confirmation tone.
5. Press EXIT to quit the program.

HANDSET REGISTRATION

The ex-factory cordless handset had already registered by default. If you can't linkup the handset and base or if you brought expandable handset, please follow below instruction to register the handsets (include ex-factory handset).

NOTE: Maximum 3 handsets can be registered in one base unit. During in

register procedures, handsets should be placed near the base unit.

1. Press and hold CLEAR/REGISTER button on base to enter the registration mode. Display shows text "Code ---". (Don't release the button until all handsets had been registered.)
2. Then, press and hold PAUSE/REGISTER button on cordless handset. Handset display shows text "HS -1" and base display shows "Code 1_". Keep holding the REGISTER buttons on handset until a confirmation beep is heard from base. Then, release the PAUSE/REGISTER button on handset. If you had expansion handsets, you do need to redo this procedure for expansion handsets.

3. Release the REGISTER buttons on base to exit the register mode.

NOTE: To identify the handset's number, press RECALL/C button at standby mode on handsets, it displays the registered number HS 1, HS 2 or HS 3.

RINGER ON/OFF

The RINGER setting must be ON for the handset and base to ring during incoming calls.

Ringer ON

1. Press MEM/PROG button
2. Press # button. You will hear a confirmation tone.

Ringer OFF


1. Press MEM/PROG button
2. Press PAUSE/REGISTER on cordless handset or PAUSE button on

corded base, a icon displays on screen. You will hear a confirmation tone.

VOLUME

While you are on phone, you can press the VOLUME "+" or "-" button to adjust the volume of the handset's earpiece or press VOL+/SET TIME button to adjust the volume on base.

CORDLESS PHONE BASICS

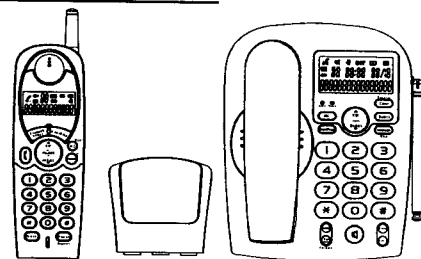

Cordless Handset

Charger

Corded Base

RECEIVING A CALL

1. Check the display to see who is calling.

2. Press the LINE on cordless handset or SPEAKERPHONE button on base. Or pick up the corded handset or cordless on base and charger respectively.

3. Press the LINE button on cordless handset or SPEAKERPHONE button on base again to hang up. OR put the corded handset on the cradle of base.

MAKING A CALL

1. To make a call, press the LINE button on cordless handset or press the SPEAKERPHONE button on base or pick up the corded handset before you dial
 2. Enter the telephone number
 3. Press LINE button or SPEAKERPHONE button again to hang up or put the corded handset or cordless handset on cradle to hang up.
- OR
1. Input the telephone number
 2. Press the LINE button on cordless handset or press the SPEAKERPHONE button on base or pick up the corded handset to dial the phone.

FCC Part 68 supplementary information

An applicable certification jacks Universal Service Order Codes (USOC) for the equipment is provided ***RJ11C*** in the packaging with each piece of approved terminal equipment.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

Service Center phone no.

1-800-448-0329

FCC part 15 supplementary information

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.