 









**MOTOROLA**

**MA360 Series  
Cordless Phone**

*Start Here>*

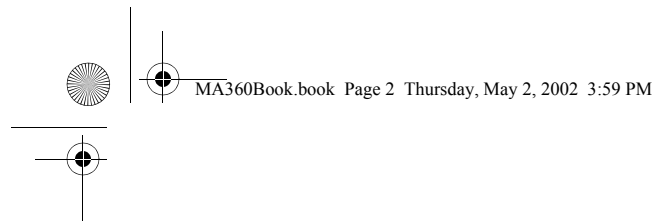

     MA360Book.book Page 2 Thursday, May 2, 2002 3:59 PM

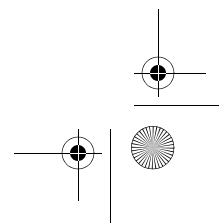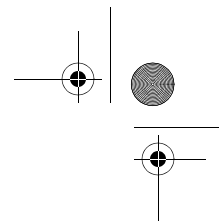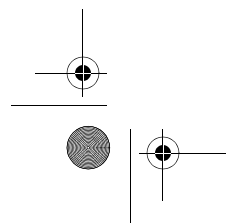

## MA360 Series Cordless Phone Quick Reference

### To check your messages from the handset:

1. Make sure the handset is off.
2. Press **chan**. The phone plays a voice menu.
3. Press the button for the action you want to perform:
  - 0 OFF Erase message.
  - 1 Review message.
  - 2 2 Play or stop playing message.
  - 3 3 Skip message.
  - 4 4 Turn the answering machine on or off.
  - 7 7 Repeat the voice menu.

## Important Numbers

PRELIMINARY

## Welcome

Congratulations! Experience the freedom of your Motorola MA360 Series cordless phone.

Adjust handset volume

Format number to include/omit area code or 1+ area code

Turn ringer on (up)

Mute or unmute microphone, delete phone numbers

Redial last called number

Chan: Use if you hear interference or static

View caller ID

Talk: Make or answer a call, hang up

 
Scroll

Earphone jack

Mem: Store phone number in memory

Flash: Use for call waiting and 3-way calling

Place call on hold



Welcome

**Welcome**

For a copy of a large-print version of this guide, or for product-related questions, please contact:

**1-800-353-2729 U.S.A.**

**1-800-461-4575 Canada**

**1-888-390-6456 TTY (Text Telephone)**

On the web, please refer to: [www.motorola.com/cordless](http://www.motorola.com/cordless)

**Congratulations on your purchase of a Motorola product!**

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your Motorola product require an update or other service. Registration is not required for warranty coverage. To register your product on-line, visit: [www.motorola.com/warranty/cordless](http://www.motorola.com/warranty/cordless).

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product, you will need to provide a copy of your dated sales receipt to confirm warranty status.

MOTOROLA, the Stylized M Logo, and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners.

© 2002 Motorola, Inc. All rights reserved.  
Personal Communications Sector  
1500 Gateway Blvd., Boynton Beach, FL 33426-8292  
6881040B55-O

## Contents

FCC and Interference Information .....	6	Basic Functions: Phone .....	35
Safety Instructions.....	15	How to Locate a Lost Handset.....	36
Getting Started .....	20	Storing a Number into Memory .....	37
Installing the Belt Clip.....	21	Storing a Caller ID Number into Memory .....	38
Battery Safety Instructions ...	22	Dialing a Number from Memory .....	39
Charging the Battery .....	23	Storing and Calling Emergency Numbers .....	40
Installing the MA360 Series Cordless Phone on a Desk ..	26		
Installing the MA360 Series Cordless Phone On a Wall ...	27		
Setting Up the Phone .....	31		



## Contents

Reviewing and Deleting Numbers from Memory .....	40	Changing Your Security Code .....	46
Reviewing Caller ID Records .....	41	Recording a Voice Memo .....	46
Dialing a Number from Caller ID .....	41	Checking Messages from the Handset .....	47
Deleting Caller ID Records...	42	Checking Messages from Another Phone .....	48
Basic Functions: Answering Machine .....	43	Screening Messages .....	49
Recording an Outgoing Announcement .....	44	Erasing Messages .....	49
Setting the Day and Time.....	45	Troubleshooting.....	50
		Warranty.....	54

## FCC and Interference

### FCC and Interference Information

This equipment complies with Parts 15 and 68 of the FCC rules and the requirements adopted by the Administrative Council for Terminal Attachments (ACTA). On the bottom of this equipment is a label that contains, among other information, a product identifier in the form US:AAAEQ##TXXX. You must, upon request, provide this number to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

● **Notification of the Local Telephone Company**

On the bottom of this equipment is a label indicating, among other information, the Ringer Equivalency Number for the equipment. You must, upon request, provide this information to your telephone company. The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices, you may connect to your line as determined by the REN, you should contact your local telephone company.

The REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits

**FCC and Interference**

## FCC and Interference

8

represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3).

**Note:** This equipment may not be used on coin service provided by the telephone company.

**Note:** Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

**Note:** If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this cordless phone does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

**Note:** Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.

**Note:** The FCC requires that you connect your cordless telephone to the nationwide telephone network through a modular telephone jack (USOC RJ11C/RJ11W or RJ14C/RJ14W).

② **Rights of the Telephone Company**

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practical and the circumstances warrant such action, the telephone company may temporarily disconnect service immediately. In case of such temporary

## FCC and Interference

10

discontinuance, the telephone company must:

- (1) promptly notify you of such temporary discontinuance;
- (2) afford you the opportunity to correct the situation;
- (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

### Interference Information

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference; and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

## FCC and Interference

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference with one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is “receiving” the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and the receiving antenna.



- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How to Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

## FCC and Interference

The FCC requires this product to be serviced only by Motorola or its authorized service agents. Changes or modifications not expressly approved by Motorola could void not only the user's authority to operate the equipment, but also the limited warranty.

### **Hearing Aid Compatibility**

This telephone system meets the FCC standards for hearing aid compatibility.

### **Important Safety Instructions**

Follow these safety precautions when using your cordless phone to reduce the risk of fire, electric shock and injury to persons or property:

#### ***Reduce risk of fire and shock by***

- ❶ Keep all slits and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
- ❷ Do not use while wet or while standing in water.
- ❸ Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
- ❹ Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.

## Safety Instructions

16

- ⑤ Never insert objects of any kind into the product slits as that may result in fire or shock.
- ⑥ Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- ⑦ Do not disassemble this product. If service or repair work is required, contact the Motorola address found in the back of this user's guide.
- ⑧ Do not overload wall outlets and extension cords.
- ⑨ Avoid using during an electrical storm. Use a surge protector to protect the equipment.
- ⑩ Do not use this cordless phone to report a gas leak, especially if you are in the vicinity of the gas line.

***Unplug this cordless phone immediately from an outlet if:***

- The power cord or plug is damaged or frayed.
- Liquid has been spilled into the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by unplugged cords.
- The product has been dropped or the cabinet has been damaged.
- The product exhibits a distinct change in performance.

## Safety Instructions

### **Installation Guidelines**

- ❶ Read and understand all instructions and save them for future reference.
- ❷ Follow all warnings and instructions marked on the product.
- ❸ Do not install this product near a bath tub, sink or shower.
- ❹ Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company.
- ❺ Do not place this product on an unstable cart, stand or table. This product may fall, causing serious damage to the product.

- ⑥ Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.
- ⑦ Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.
- ⑧ Use only the power supply that came with this unit. Using other power supplies may damage the unit.
- ⑨ Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.
- ⑩ To avoid interference to nearby appliances, do not place the base of the cordless phone on or near a TV, microwave oven, or VCR.

## Safety Instructions

## Getting Started

 
### Getting Started

Before you can make or answer calls, you need to install and set up your cordless phone. The next few pages walk you through the installation and set-up process.




### Installing the Belt Clip

Insert the tabs of the belt clip into the slots on the handset.

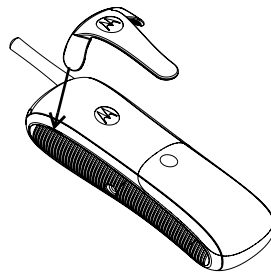


### Battery Safety Instructions

- Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in injury.
- **Caution:** There is a risk of explosion if you replace the battery with an incorrect battery type. Use only the battery that came with your phone or an authorized replacement recommended by the manufacturer.
- Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days.
- Do not dispose of batteries in fire, which could result in explosion.
  -  The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.

### Charging the Battery

- ❶ Remove the battery door.
- ❷ Plug the battery connector into the receptacle in the battery compartment.
- ❸ Insert the battery into the battery compartment and replace the battery door.

 
Slide  
battery  
door  
down to  
remove

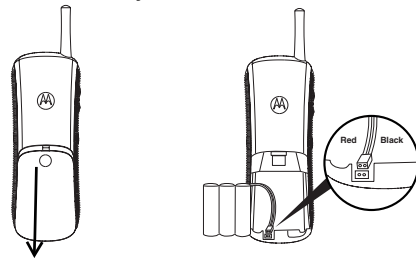

## Getting Started

24

 - 4 Plug the power cord into the back of the phone and into an outlet.

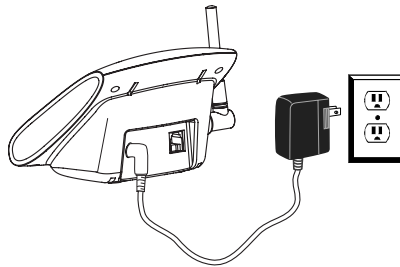

- ⑤ Rest the handset in the base so the **charge/in use** LED lights.
- ⑥ Charge the battery for at least 12 hours. Do not plug the phone into the phone jack until the battery is fully charged.



## Getting Started

### Installing the MA360 Series Cordless Phone on a Desk

