

For a large-print version of this guide, or for product-related questions, visit us online at:

www.motorola.com/cordless

Or phone us at:

•1-800-353-2729 U.S.A.

•1-800-461-4575 Canada

•1-888-390-6456 TTY (Text Telephone)

Copyright © 2005 Motorola, Inc.

All rights reserved. No part of this publication may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation or adaptation) without written permission from Motorola, Inc.

Motorola reserves the right to revise this publication and to make changes in content from time to time without obligation on the part of Motorola to provide notification of such revision or change. Motorola provides this guide without warranty of any kind, either implied or expressed, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Motorola may make improvements or changes in the product(s) described in this manual at any time.

MOTOROLA, and the Stylized M Logo, are registered in the U.S. Patent and Trademark Office. All other product or service names are the property of their respective owners.

Welcome

Congratulations on your purchase of a Motorola SD7580 series telephone. Take a moment to ensure that your purchase includes each of the items pictured.

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your Motorola product require an update or other service. Registration is not required for warranty coverage. To register your product online, visit:

 
www.motorola.com/warranty/cordless

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Product, you will need to provide a copy of your dated sales receipt to confirm warranty status.



Handset Overview

- 1 Volume Controls
- 2 LCD Display
- 3 Left and Right Soft Keys
- 4 Up and Down Scroll
- 5 Phone On/Switch Lines
- 6 Redial list of the last 5 numbers dialed
- 7 Switch from upper to lower case letters
- 8 Use handset as intercom
- 9 Microphone
- 10 Connect to other registered devices
- 11 Removes Last Number Entered/Entries in Phonebook/Caller ID List
- 12 End Call/Cancel Function
- 13 Headset/Earphone Jack
- 14 Handset Antenna, Ringer and Voicemail Message Indicator

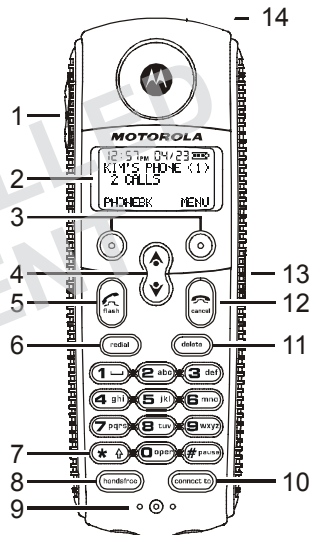

Base Unit

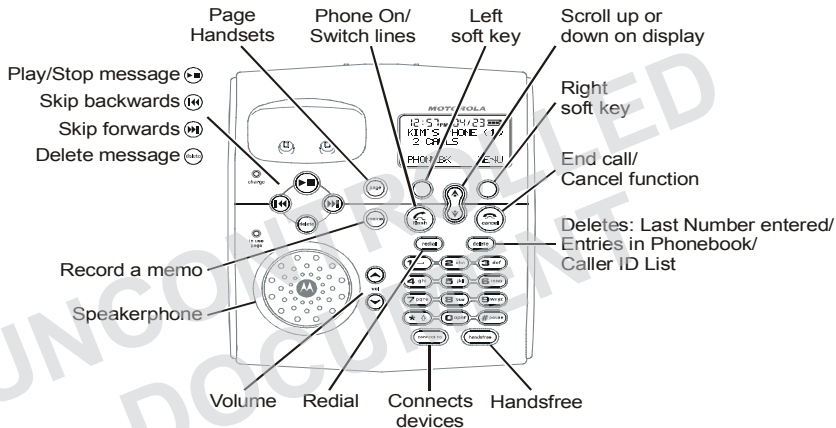 


Table of Contents

Welcome	i
Handset Overview	ii
Base Unit	iii
Important Safety Instructions	x
Getting Started	1
Battery Safety Instructions	1
Installing the Batteries	2
Installing the Base Unit	4
Removing the Wall Mount Bracket	4
Setting Up Your Phone	5
Removing the Wall Mount and Base Unit	6
Removing the Base Unit from the Wall Bracket	6
Handset Overview	7
Standby Screen Information	7
Using the Soft Keys	8

Using the Navigation Keys	8
Setting Up	9
Registering Your Handset	9
Deregistering a Handset	10
Personalizing Your Handset	11
Ringer Options	11
Setting the Ring Tone and Ring Volume	12
Setting Key Beeps On or Off	13
Naming a Handset or Base Station	14
Setting Date and Time	16
Setting the Language Option	17
Setting Touch Tone or Pulse Dialing	18
Using Your SD7580	19
Making a Call from the Handset or Base Unit ..	19
Answering/Ending a Call	20
Adjusting the Volume During a Call	20

Making a Call Using the Speakerphone	21
Switching Between the Handset and Speakerphone	21
Muting a Call	21
Placing a Call on Hold	22
Redialing a Number	22
Finding a Lost or Misplaced Handset	23

UNCONTROLLED
DOCUMENT

Saving a Number in the Phonebook	24
Private Phonebooks	24
Shared Phonebooks	25
Adding a New Entry	25
Adding Numbers to the Phonebook from Redial	26
Sorting the Phonebook	27
Calling a Number from the Phonebook	28
Editing a Phonebook Entry	28
Deleting a Phonebook Entry	29
Inserting Pauses in a Number	29
Using Caller ID	29
Reviewing Caller ID Call List	30
Using Automated Dialing	31
Answering Machine	32
Turning the Answering Machine On or Off ...	32
Recording an Outgoing Message (OGM)	33
Changing the Outgoing Message	34
Erasing the Outgoing Message	35

Setting the Number of Rings Before the Answering Machine Picks Up	35
Using Call Screening	36
Setting the Security ID Number	37
Using the Answer Machine	38
Checking Messages from the Base Station ...	38
Checking Messages from the Handset	39
Recording a Memo	40
Advanced Features	41
Conference Calling	42
Using the Intercom	43
Intercom Setup	43
Handset to Handset Intercom	44
Transferring a Call from One Handset to Another	45
Unannounced Transfer	45
Announced Transfer	45
Message Forwarding	46
Using the Handset as a Walkie Talkie	47

Monitoring a Room	48
openLCR™ Option	49
Warranty.....	54

UNCONTROLLED
DOCUMENT

Important Safety Instructions

Follow these safety precautions when using your cordless phone to reduce the risk of fire, electric shock and injury to persons or property:

To reduce the risk of fire and shock:

1. Keep all slits and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
2. Do not use while wet or while standing in water.
3. Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
4. Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.
5. Never insert objects of any kind into the product slits, as that may result in fire or shock.
6. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
7. Do not disassemble this product. If service or repair work is required, contact the Motorola address found in the back of this user guide.
8. Do not overload wall outlets and extension cords.
9. Avoid using during an electrical storm. Use a surge protector to protect the equipment.

10. Do not use this cordless phone to report a gas leak, especially if you are in the vicinity of the gas line.

Unplug this cordless phone immediately from an outlet if:

- The power cord or plug is damaged or frayed.
- Liquid has been spilled into the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by the unplugged cords.
- The product has been dropped or the cabinet has been damaged.
- The product exhibits a distinct change in performance.

Installation Guidelines

1. Read and understand all instructions and save them for future reference.
2. Follow all warnings and instructions marked on the product.
3. Do not install this product near a bath tub, sink, or shower.
4. Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult your dealer or local power company.
5. Do not place this product on an unstable cart, stand, or table. This product may fall, causing serious damage to the product.

6. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.
7. Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents.
8. Use only the power supply that came with this unit. Using other power supplies may damage the unit.
9. Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.
10. To avoid interference to nearby appliances, do not place the base of the cordless phone on or near a TV, microwave oven, refrigerator, or VCR.

UNCONTROLLED
DOCUMENT

Getting Started

Battery Safety Instructions

- Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in injury.
- **Caution:** There is a risk of explosion if you replace the battery with an incorrect battery type. Use only the battery that came with your phone or an authorized replacement recommended by the manufacturer.
- Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days.
- Do not dispose of batteries in fire, which could result in explosion.
- The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.



 
Installing the Batteries

Handset

- 1 Press the indentation on the battery door, and slide downwards to remove.
- 2 Plug connector into receptacle, and insert the battery into the battery compartment.

Note: The battery cable is correctly installed when the red wire is on the left hand side.

- 3 Replace the battery door.
- 4 Attach the optional Belt Clip.

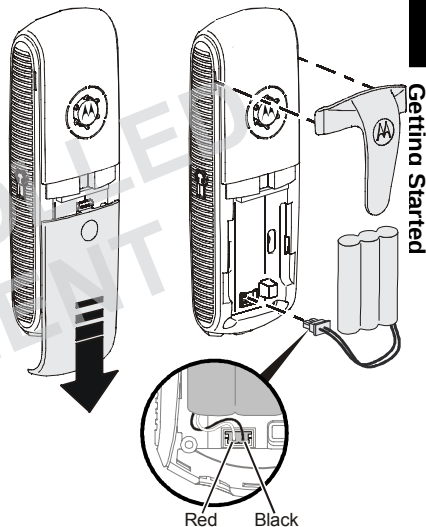


Base Unit

The base station uses 4 AAA alkaline batteries (included) for optional backup power.

- 1 Press the cover latch with a screwdriver to lift and remove the battery cover.

- 2 Insert 4 AAA alkaline batteries into the battery compartment.

 
- 3 Insert the tabs of the cover into the slots on the base station and press down until the cover clicks into place.

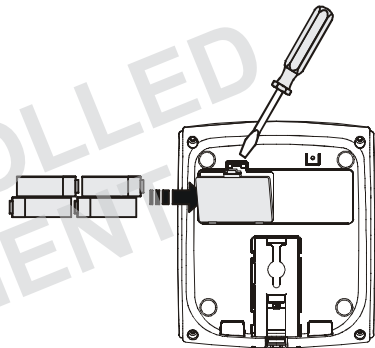



Installing the Base Unit

Removing the Wall Mount Bracket

 - 1 Push on the release button on the bottom of the base unit to release the wall mount.

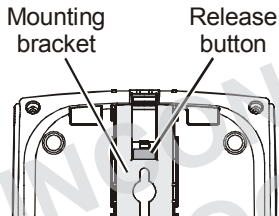


  - 2 Slide the bracket from the base unit.
- 3 Slide the short end of the bracket back into the base unit until it clicks into place. (See second image)

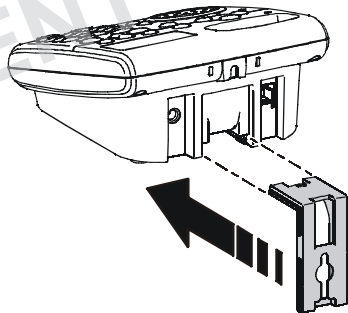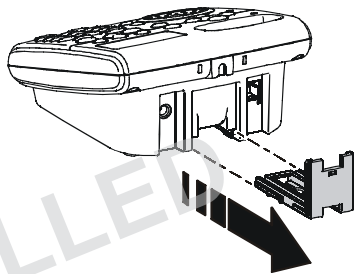

Setting Up Your Phone

 - 1 Select location convenient to both an electrical outlet, and phone jack.

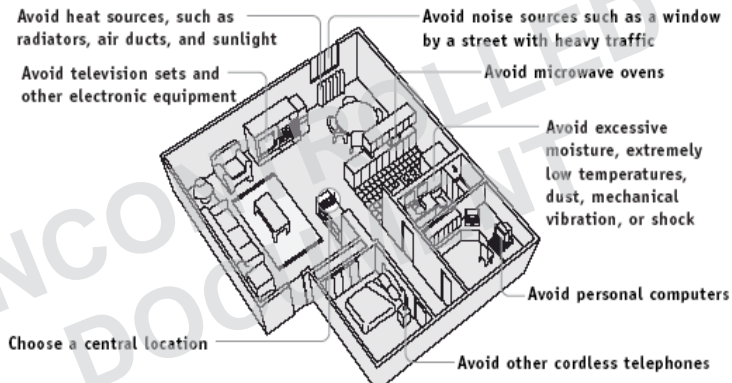


- 2 Insert the phone cord into back of base unit and into the wall phone jack.
- 3 Plug other end of phone cord into back of base unit.
- 4 Hang wall mount bracket on phone wall plate.
- 5 Plug power cord into power outlet.

Removing the Wall Mount and Base Unit

Push up on the wall mount to remove it from the phone wall plate.

Removing the Base Unit from the Wall Bracket

 Press the release tab on the bottom of the base unit to release it from the mount.

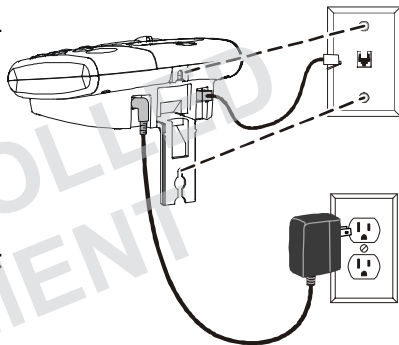


Handset Overview

Your SD7580 has a display on the Handset and the Base Unit. When they are not in use, the display shows the Standby Screen.

Standby Screen Information

 - 1 Date and time
- 2 Device Name
- 3 Talk Line Information
- 4 Answering device information
- 5 Left soft key options
- 6 Right soft key options
- 7 Mute call symbol
- 8 Battery strength meter

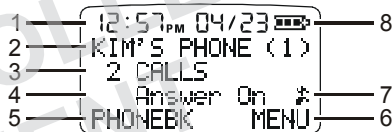

Note: Caller ID information is supplied only if you subscribe to the service with your telephone company. When the handset or base station speakerphone is on,  displays.

 
Using the Soft Keys

Use the left and right soft keys to select the functions listed directly above the keys on the display. The functions available change as you move from one screen to the next.

Using the Navigation Keys

Use the up and down scroll keys to navigate through menu items, settings, phonebook entries, Caller ID and redial lists.

The handset display uses an arrowhead to indicate the current selection. The up and down  arrowhead indicates additional options above and below the selected item. Press the up and down scroll keys navigate through lists.

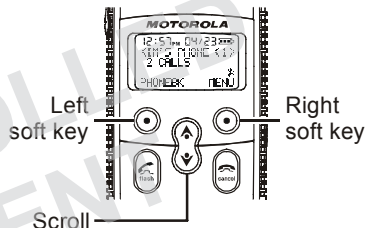

Setting Up

 
Registering Your Handset

You can register up to 8 devices (handsets, cameras, or Cell Dock) to a base unit.

To register your new handset:

- 1 Press the right soft key to select **menu**.
- 2 Scroll to **Register**.
- 3 Press **SELECT**.
- 4 Press and hold **PAGE** button on base unit until the base beeps.

Note: If you exceed the registration limit of 8 devices, the handset display reads **Unable to Register**.

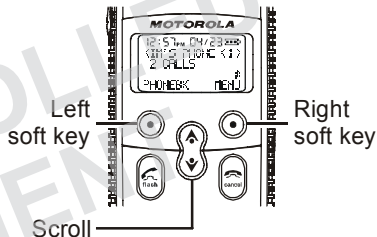

Deregistering a Handset

Caution: You will deregister all handsets from the base unit and render your cordless telephone system inoperable until at least one handset is reregistered to the base unit.

- 1 Delete or listen to all voice mail messages, if necessary, to clear the IN USE/Voice Mail indicator.
- 2 Press OFF on the base unit and all handsets.
- 3 Press and hold down PAGE on the base unit until the IN USE indicator begins to flash slowly, then release.
- 4 Press and hold down PAGE again until the IN USE indicator begins to flash quickly, then release PAGE.
- 5 Quickly and fully press and release PAGE again. "Please register handset" displays.
- 6 Press OK to begin the registration process or press EXIT.

**** NOTE ****

All accessories use the same process to register and deregister to the base unit.

Personalizing Your Handset

Personalize your new handset by selecting unique ring tones, adjusting the ring volume for day and night time, and assigning a name to distinguish one handset from another.

Ringer Options

Follow the steps listed to set one ring tones for incoming calls, and another ring tone for numbers stored in your phonebook. (You must have Caller ID service to use this feature)

The Ringer option has five submenus:

- **Day Volume:** ringer volume - factory default 6:00 AM to 9:00 PM (off, low, medium, high)
- **Night Volume:** Ringer volume - factory default 9:00 PM to 6:00 AM (off, low, medium, high)
- **Ringer Tone:** 15 musical ring tones
- **Phonebook Tone:** 15 musical ring tones
- **Key Beeps:** On, Off, Link to Ringer

Setting the Ring Tone and Ring Volume

- 1 Press **Menu**.
- 2 Scroll to **Ringer**.
- 3 Press **Select**.
- 4 Scroll through list of options. (Day Volume, Night Volume, Ringer Tone, etc.)
- 5 Select desired option.
- 6 Press **Change**. Each tone/volume plays as you press **Change**.
- 7 Stop at desired tone/volume to set.
- 8 Press **Done**.
- 9 Press **Exit** to return to Standby Screen or press scroll keys to view different menu options.

RINGER SUBMENU OPTIONS

Day Volume: Ringer volume from 6:00 AM to 9:00 PM (off, low, medium, high)

Night Volume: Ringer volume from 9:00 PM to 6:00 AM (off, low, medium, high)

Ringer Tone: 24 ring tones

Phonebook Tone: 24 ring tones

Key Beeps: On, Off, Link to Ringer

Setting Key Beeps On or Off

- 1 Press **Menu**.
- 2 Scroll to **Ringer**.
- 3 Press **Select**.
- 4 Scroll to **Key beeps**.
- 5 Press **Change** to view options. (Off, On, Link to Ringer)
Stop at the desired option.
- 6 Press **Done** to save changes.
- 7 Press **Exit** to return to Standby Screen.

Naming a Handset or Base Station

When you register a handset, it is assigned a default name of **Handsets(X)**. The X represent the list of devices registered to the base unit. (e.g., **Handset(1)**, **Camera(2)**, etc.) The number assigned at registration remains part of the name (e.g., **Handset(1)**).

- 1 Press **Menu**.
- 2 Scroll to **Namehandset**.
- 3 Press **SELECT**.
- 4 Enter new name using keypad (up to 12 characters).
The flashing underline shows cursor position.

Use **DELETE** to backspace and erase characters to left of cursor.

The chart below shows how many times to press each button on the handset to enter letters and special characters (e.g., Press 7 three times to enter R). Use the up and down scroll keys to backspace to make corrections.

Note: To shift from upper to lower case letters, press *.

Button	Number of Presses				
	1	2	3	4	5
1	space	-	*	,	1
2	A	B	C	(	2
3	D	E	F	)	3
4	G	H	I	#	4
5	J	K	L	/	5
6	M	N	O	'	6
7	P	Q	R	S	7
8	T	U	V	?	8
9	W	X	Y	Z	9

Setting Date and Time

If you subscribe to Caller ID service, the date and time set automatically with the next incoming call. Use the following steps to manually set the date and time.

- 1 Press **Menu**.
- 2 Scroll to **Date/Time**.
- 3 Press **Select**.
- 4 Enter the time. (2 digits required for both hour and minutes, use leading 0 for 1-digit values)
- 5 Press **AM/PM** to set AM or PM mode. (Only for 12-hour clock user)
- 6 Scroll to the next field.
- 7 Press **Change** to switch time format (12 or 24 hour clock).

- 8 Scroll to next field.
- 9 Press **Change** to select date format (**MM/DD**, **DD/MM**)
- 10 Scroll to next field.
- 11 Enter the current date.
- 12 Press **Done**.
- 13 Press **Exit** to return to Standby Screen.

Setting the Language Option

- 1 Press **Menu**.
- 2 Scroll to **Language**.
- 3 Press **Select**.
- 4 Press **Change** until desired language is listed.
- 5 Press **Done**.
- 6 Press **Exit** to return to the Standby Screen.

Setting Touch Tone or Pulse Dialing

Your phone is set for touch tone dialing. Do not change the setting unless touch tone service is not available in your area.

- 1 Press **Menu**.
- 2 Scroll to **Tone/Pulse**.
- 3 Press **Select**.
- 4 Press **Change** to switch between Tone and Pulse.
- 5 Press **Done**.
- 6 Press **Exit** to return to the Standby Screen.

Using Your SD7580

Making a Call from the Handset or Base Unit

Press . When you hear the dial tone, dial the number.

OR

Enter the phone number, then press . The phone number appears on the display before it is dialed. Use the **DELETE** to make corrections.

During a call, a timer on the display shows the amount of time on the call.

Answering/Ending a Call

Press  to answer an incoming call. Press ON or Handsfree to answer using the speakerphone. If you have call waiting service, press  to answer the second call.

Press  to end the call.

OR

Place the handset on the base unit end the call.

 
Adjusting the Volume During a Call

Press the top button to make caller's voice louder, and the bottom button to make voice softer.

When you are not on a call, use the volume keys to change the day (6 am–9 pm) or night (9 pm–6 am) ringer volume.

Audio volume up

Audio volume down

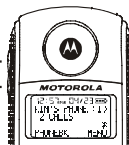

Making a Call Using the Speakerphone

- 1 Press **HANDSFREE**.
- 2 Dial the number.

Note: For optimal speakerphone quality, when using the handset, make sure the belt clip is on. This raises the handset up so it is not lying flat (the speakerphone is on the back of the handset). Pressing Handsfree while in the Phonebook, Caller ID Redial lists, automatically turns on the speakerphone and dials the number.

Switching Between the Handset and Speakerphone

Press **HANDSFREE** to toggle between handset and speakerphone.

Muting a Call

Press **MUTE**. To unmute the call, press **UNMUTE**.

Placing a Call on Hold

- 1 Press **HOLD**.
- 2 To return to the call, press **UNHOLD** or . When a call is on hold, the intercom features are available.

Redialing a Number

To redial the most recently dialed number:

- 1 Press .
- 2 Press **REDIAL**.

To redial one of the last 5 numbers you dialed:

- 1 Press **Redial**.
- 2 Scroll to desired number.
- 3 Press  or **Handsfree**.