

DECT 6.0 CORDED/CORDLESS TELEPHONE

Model number:
30544



Thank you for choosing GE!

Register your product

Please take a moment to register your product online. Just go to **www.gephones.com** and click “register here” from the home page. Provide your email address and receive product updates, special offers, or discounts on future purchases.

* It will not diminish your warranty rights if you choose not to register.

Assistance and more information

Retain your sales receipt as proof of purchase in the event warranty service is necessary.

For product assistance or for more information about accessories, visit our website at **www.gephones.com** or call our customer service center at **1-877-394-9775**.

Attach your sales receipt here.

Table of contents

Getting started

Parts checklist.....	1
Telephone base installation.....	2
Telephone jack requirements	2
Charger installation.....	3
Corded handset installation	3
Battery installation.....	4

Overview

Telephone base layout.....	5
Telephone base layout.....	6
Handset layout	7
Battery charging.....	8
Telephone base screen display icon.....	9
Handset screen display icon	9

Initial settings

Dialing mode.....	10
Programming your area code (optional)	10

Telephone operation

Make a call.....	11
Redial a call.....	11
Answer a call	11
Mute.....	11
End a call	12
Speakerphone.....	12
Volume control	12
Audio boost.....	12
Equalizer	12
Make a call using the redial memory.....	13
Save a number from the redial list to the phonebook.....	13
Delete number from the redial list.....	14
Call waiting or call waiting with caller ID service.....	14
Using multiple handsets.....	14
Reset VMWI	15
Intercom/Find.....	15
Intercom	16
To answer an incoming call during intercom.....	16
To transfer a call	17

Handset settings

Ringer volume	18
Ringer Tones	18
Low Batt Tone	18
Key beeps.....	18

Equalizer	19
Handset name	19
Display language.....	19
Auto Talk.....	20

Telephone base settings

Ringer volume	21
Ringer tone	21
Key beeps.....	21
Display language.....	21
Base name.....	22
Equalizer	22

Clock and alarm

Date and time	23
---------------------	----

Phonebook

Add a phonebook record	24
Memory location.....	25
Character table	26
To search a phonebook entry alphabetically	27
Edit a phonebook entry	27
Delete a phonebook entry.....	28
Delete all phonebook entries	28
Phonebook capacity	28

Caller ID

Using Caller ID service	29
Phonebook Caller-ID matching.....	29
Review/call from the call log.....	29
Save a number to the phonebook.....	30
Delete caller ID record.....	30
Call log display screen messages.....	30

Answering system

Turning the answering system on or off.....	31
Answering system and voice mail.....	31
Message capacity	31
New message indicator.....	31
Memo recording.....	31
Outgoing Announcement (OGA)	32
Record outgoing announcement.....	33
Delete your recorded OGA	33
Number of rings before the system answers.....	34
Message Alert.....	34
Call intercept.....	35
Message playback using the handset.....	36

Message playback using the telephone base.....	36
Options during playback.....	36
Delete all messages	36
Security code for remote access.....	37
Access the answering system remotely	37
Remote access commands	38

Advanced settings

Registering a handset	39
Deregistering a handset.....	39

Appendix

Troubleshooting guide	40
General Product Care	41
Important Safety Instructions	42
FCC Parts 15, 68 and ACTA.....	45
One Year Limited Warranty	48
Index.....	50
Technical specification	52
Remote access operation card.....	53


Getting started

Parts checklist


Your telephone contains the following items. Save your sales receipt and original packaging in the event warranty service is necessary.




Cordless handset
(1 for 30544XE1
2 for 30544XE2
3 for 30544XE3
4 for 30544XE4)

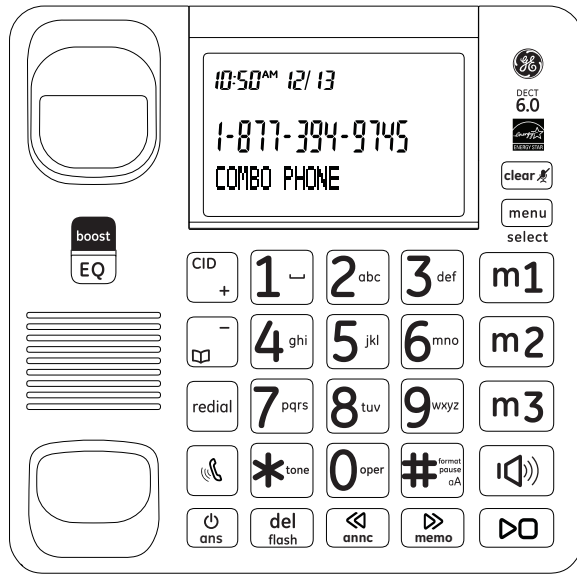

Telephone base

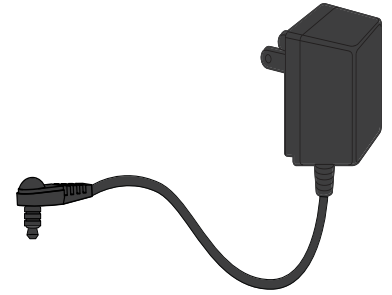


Power adapter for telephone base

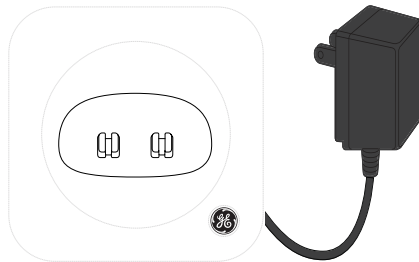


Charger with adapter attached


(1 for 30544XE1
2 for 30544XE2
3 for 30544XE3
4 for 30544XE4)

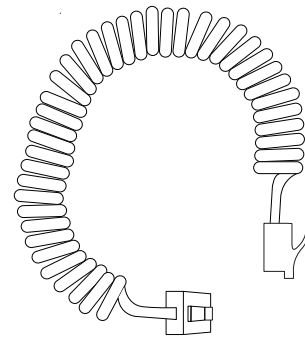

Handset coiled cord

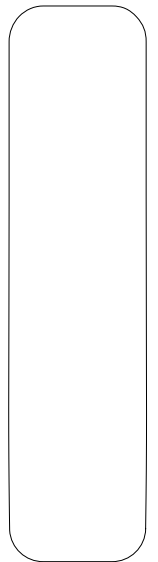


Corded handset

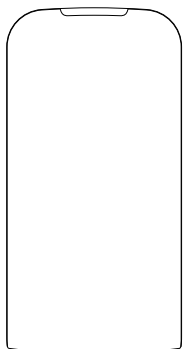

Battery

compartment cover

(1 for 30544XE1
2 for 30544XE2
3 for 30544XE3
4 for 30544XE4)

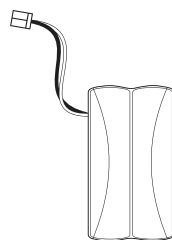


Battery

(1 for 30544XE1
2 for 30544XE2
3 for 30544XE3
4 for 30544XE4)



Telephone line cord

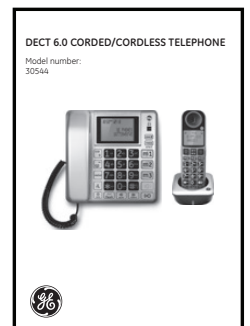


User's guide

Getting started

Telephone base installation

1. Plug the smaller end of the power adapter into the power jack at the bottom of the telephone base, route the cord through the tabbed slot on the left.
2. Plug one end of the telephone line into the jack at the bottom of the telephone base, route the cord through the tabbed slot on the right.
3. Plug the other end of the telephone line into a telephone wall jack.
4. Plug the larger end of the power adapter into an electrical outlet not controlled by a wall switch.

If you have DSL high speed Internet service, a DSL filter is required (not included). Contact your DSL service provider for more information about DSL filter.

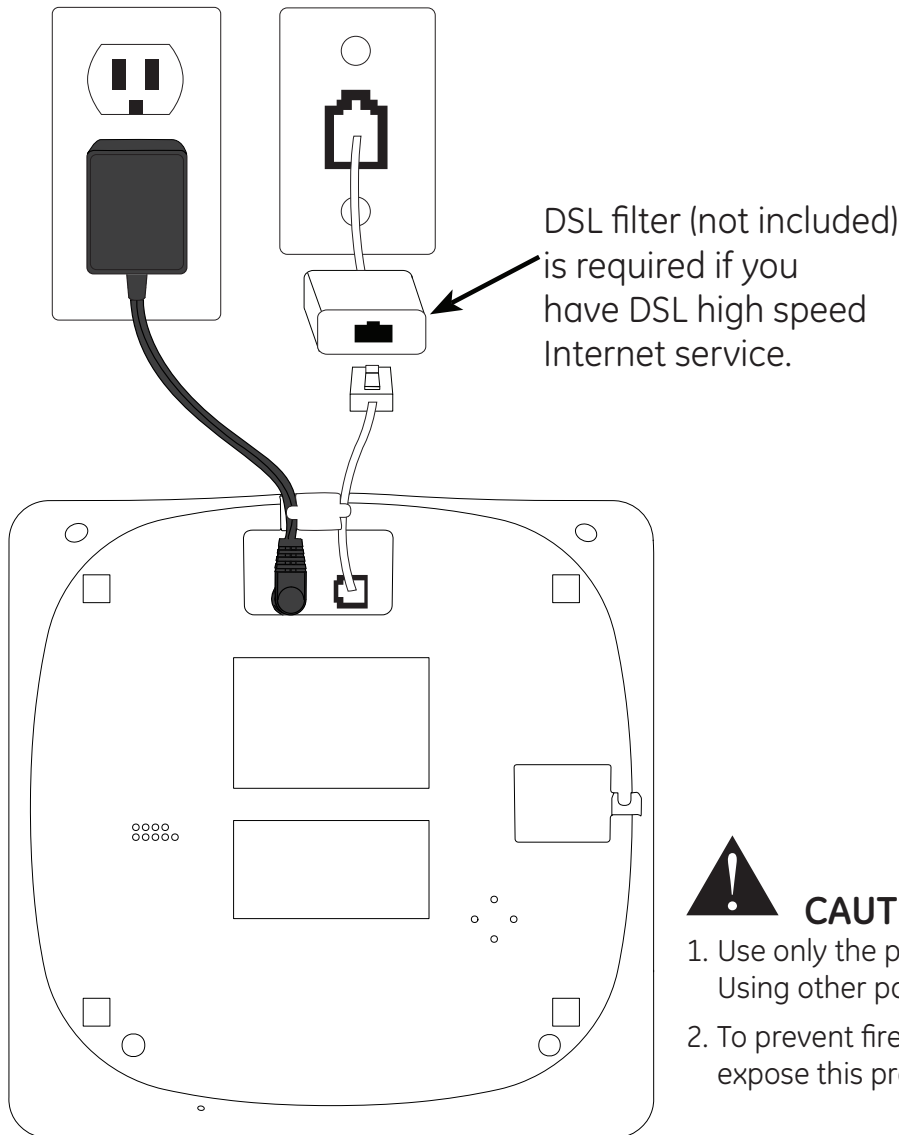


CAUTION:

1. Use only the power adaptor that came with this unit. Using other power adaptors may damage the unit.
2. To prevent fire or electrical shock hazard, do not expose this product to rain or moisture.


Telephone jack requirements

To use this phone, you need a RJ11C type modular telephone jack, which might look like the one pictured here, installed in your home. If you do not have a modular jack, call your telephone service provider to find out how to have one installed.

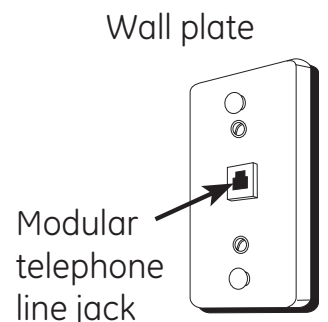


Getting started

Charger installation

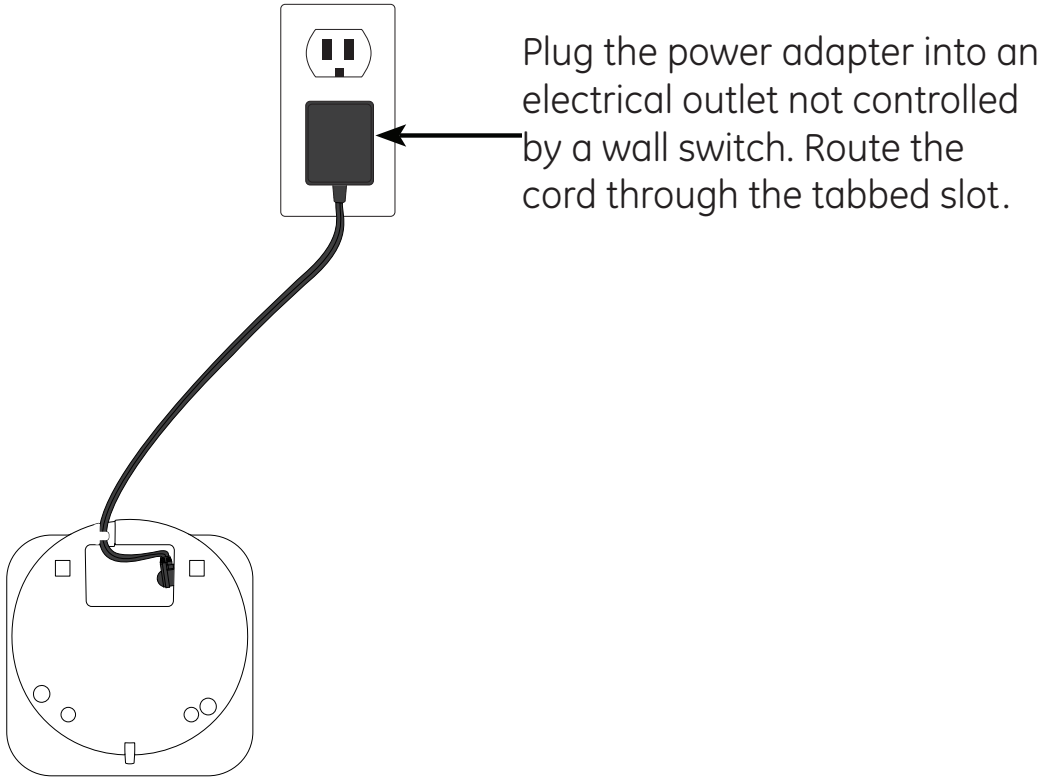

Corded handset installation

Plug one end of the handset coiled cord into the jack on the bottom of the telephone base.

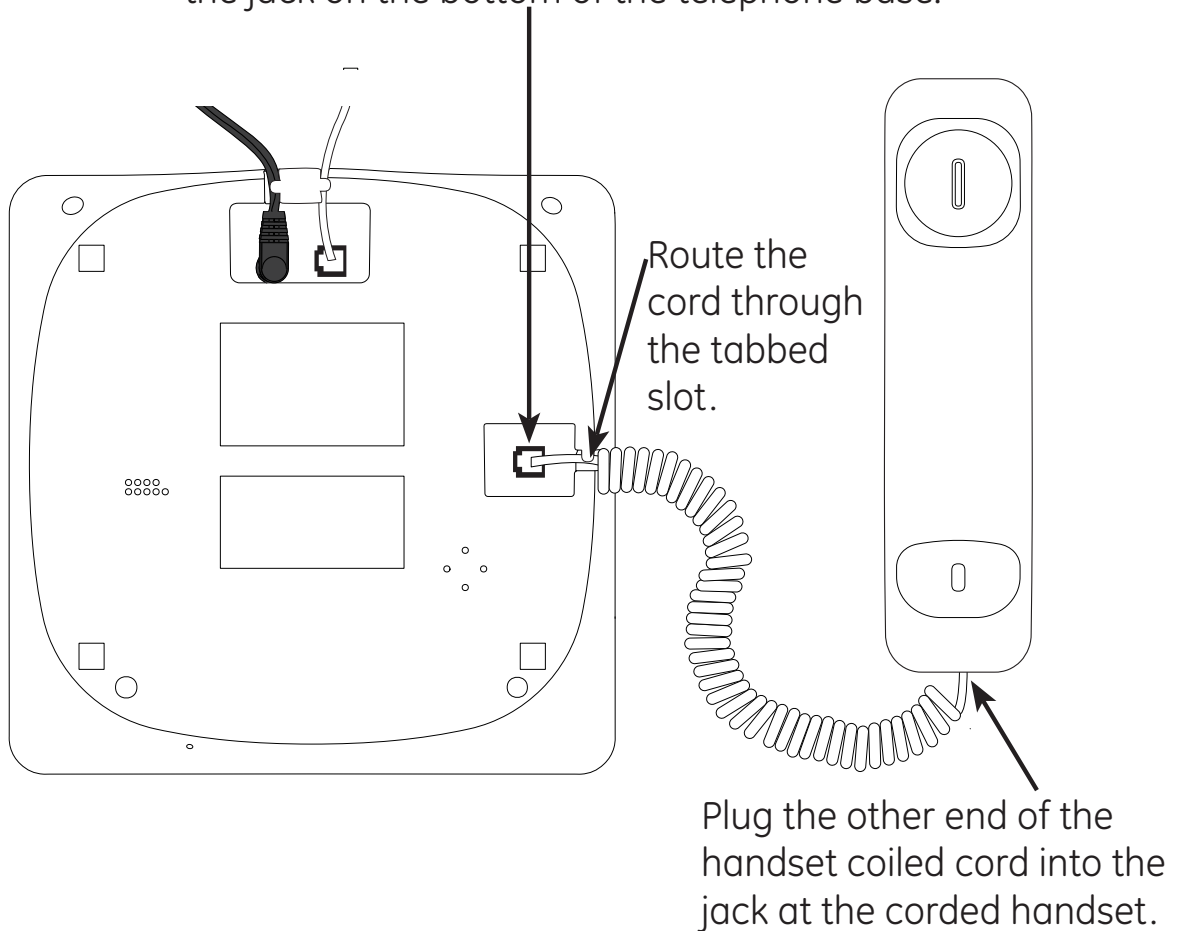

Getting started

Battery installation




CAUTION:

1. To reduce the risk of fire or personal injury, use only the battery supplied (model 2SN-AAA55H-S-J1 or NI-MH AAA550*2) with this product.
2. If the handset will not be used for an extended period of time, unplug the battery and remove it from the handset to prevent possible leakage.

Please fully charge your handset before use!


For optimum battery performance, charge the battery for 16 hours before first use.

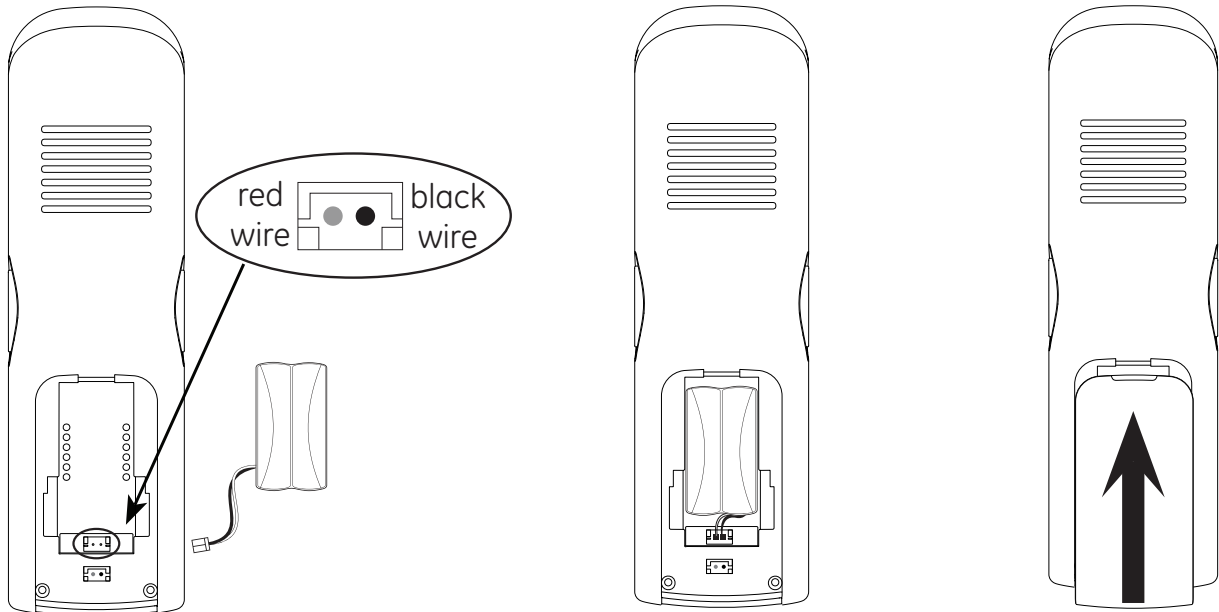

1. Plug the battery connector securely into the socket inside the handset battery compartment. Make sure that red and black wires on the plug are properly inserted into the socket as shown.

2. Place the battery and the wire inside the battery compartment.

3. Align the cover against the battery compartment and slide it upwards until it clicks into place.

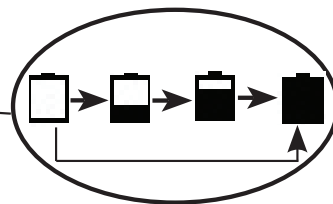

Animated charging indicator

4. Place the handset onto the charger as shown. An animated battery icon will display after a few minutes to show that the handset battery is successfully being charged. For optimum performance, please allow the battery to charge for 16 hours before first use.

NOTE: Use only the supplied rechargeable battery or replacement battery. Visit our website at www.gephones.com to order a replacement battery if necessary.

Overview

Telephone base layout

CID/up

- Press to review the call log when the telephone is not in use.
- While in menu, press to scroll up.
- Press to increase the volume during a call, message playback or call screening.

Phonebook/down

- Press to review the phonebook when the telephone is not in use.
- While in menu, press to scroll down.
- Press to decrease the volume during a call, message playback or call screening.

redial

Press to review redial list.

Find/intercom


Press to initiate an intercom call or transfer a call.

answer on/off

Press to turn the answering system on or off.

del flash

- During a call, press to answer an incoming call if you receive a call waiting alert.
- Press to delete the message during playback.
- Press and hold to delete all old messages when the phone is not in use.

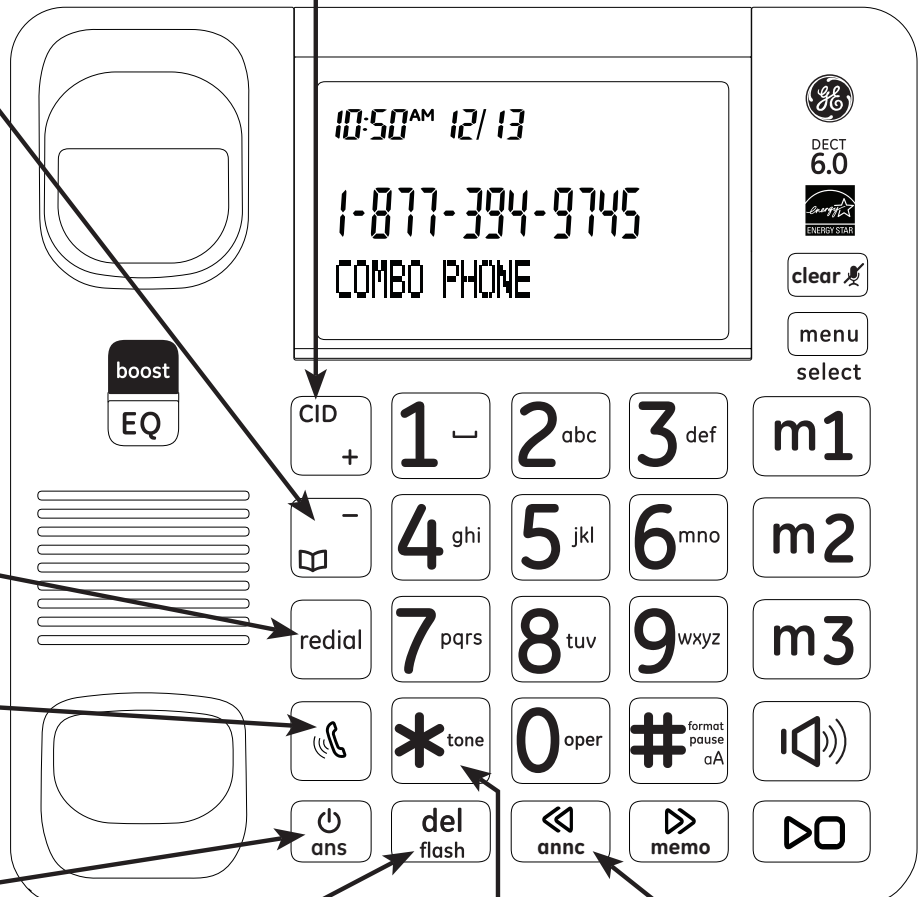

tone


During a call, press to send touch-tone signals temporarily.

annc

- Press to repeat a message or press twice to play the previous message during message playback.
- Press and hold to record an outgoing announcement message.

Overview

Telephone base layout

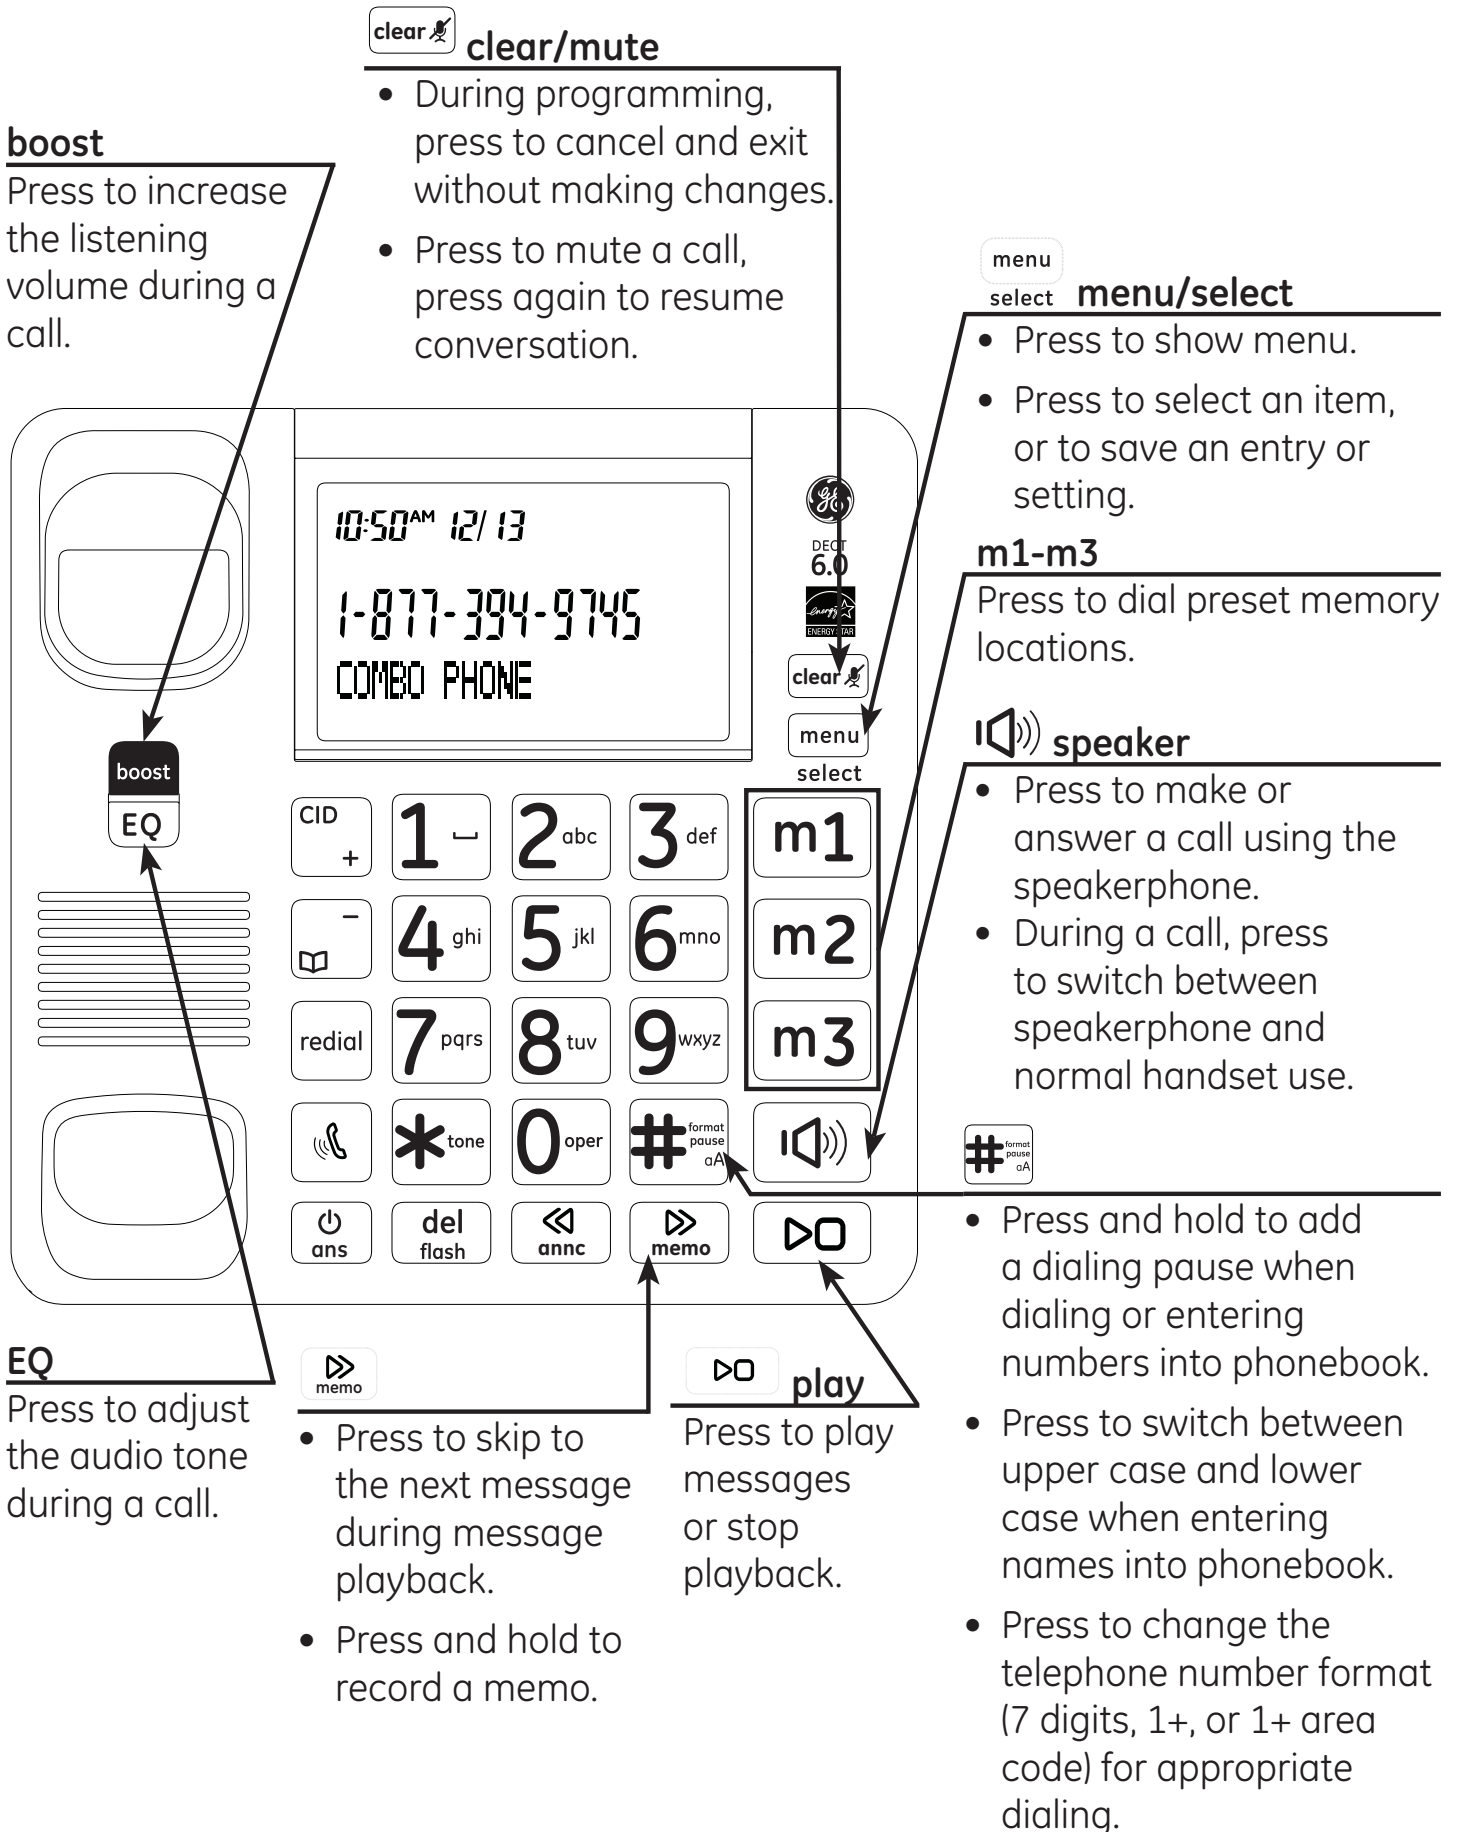

Overview

Handset layout


The diagram shows a mobile phone handset with various buttons and features. Callouts provide detailed instructions for each:

- CID**
 - Press to review the phonebook when the telephone is not in use.
 - During a call, press to increase the incoming volume.
 - While in menu, press to scroll up.
- Call Log**
 - Press to review the call log when the telephone is not in use.
 - While in menu, press to scroll down.
 - During a call, press to decrease the incoming volume.
- Call Function**
 - Press to make or answer a call.
 - Press to switch between speakerphone and normal handset use during a call or message playback.
- m1-m3**
 - Press to dial programmed memory numbers.
- *tone**
 - During a call, press to send touch-tone signals temporarily.
- #**
 - Press and hold to add a dialing pause when dialing or entering numbers into phonebook.
 - Press to switch between upper case and lower case when entering names into phonebook.
- redial del**
 - Press to review redial list.
 - Press to mute a call, press again to resume conversation.
 - Press to delete digit or character.
- flash answerer**
 - During a call, press to answer an incoming call if you receive a call waiting alert (if you have subscribed to the call waiting feature from your service provider).
 - Press to play answering system message when in idle mode.
- menu select**
 - Press to show menu.
 - Press to select an item, or to save an entry or setting.

Overview




Battery charging

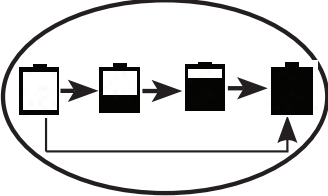The following table summarizes the battery charge indicators and what actions need to be taken.


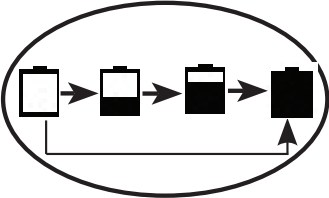






Battery indicators	Battery status	Action
<p>Battery icon is scrolling.</p> 	<p>Battery is charging.</p>	<p>Keep the handset in the or charger when not in use.</p>
<p>Battery icon is on steadily.</p>	<p>Battery is completely charged.</p>	<p>The handset is ready for use. It will take approximately 2 hours for the battery icon to indicate a full charge even if the handset is only removed from the charger for a short time and replaced. This is a normal operation and does not indicate a battery issue.</p>
<p>Battery icon is empty and the screen shows LOW BATTERY CHARGE HANDSET</p>	<p>Battery is low.</p>	<p>Place the handset in the charger to charge without interruption (at least 30 minutes) before use.</p>
<p>The screen is blank.</p>	<p>Battery has no power while the handset is out of the charger.</p>	<p>Place the handset in the charger for at least 16 hours without interruption. See troubleshooting on page 40 for help if the screen remains blank after charging.</p>

Overview

Telephone base screen display icon

Item	Meaning
	<ul style="list-style-type: none">• Displays when there is a new voice mail message. (Available only if you have subscribed to voice mail service from your telephone service provider.)
	<ul style="list-style-type: none">• Displays when the ringer is turned off.
	<ul style="list-style-type: none">• Displays when answering system is on.• Flashes when there are new messages.

Handset screen display icon









Item	Meaning
	<ul style="list-style-type: none">• Displays when the telephone base is within reception range.
	<ul style="list-style-type: none">• Scrolls to indicate battery charging when handset is in the telephone base or charger.• Flashes and empty when battery level is low.
	<ul style="list-style-type: none">• Speakerphone is in use.
	<ul style="list-style-type: none">• Displays when there are new calls.
	<ul style="list-style-type: none">• Displays when there is a new voice mail message. (Available only if you have subscribed to voice mail service from your telephone service provider.)
	<ul style="list-style-type: none">• Displays when the alarm is set.• Flashes during alarm.
	<ul style="list-style-type: none">• Displays when the ringer is turned off.
	<ul style="list-style-type: none">• Displays when answering system is on.• Flashes when there are new messages.



Initial settings

Dialing mode


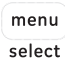

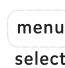

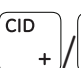

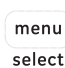
The default dialing mode is **TONE** for touch tone dialing. If you have pulse or rotary service, you can change this setting to accommodate your telephone line service.

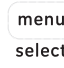
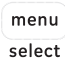
Using a cordless handset

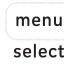1. Press .
2. Press  or  to select **Base Setup** and then press .
3. Press  again to select **Dialing Mode**.
4. Press  or  to select the desired setting and then press  to confirm.

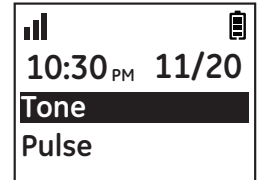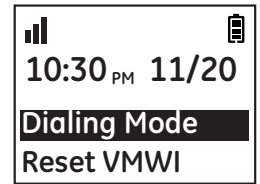

Using the telephone base

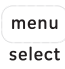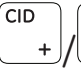


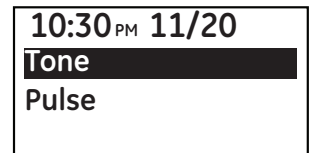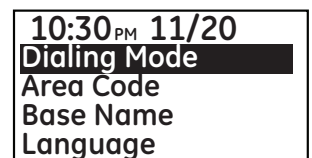




1. Press  when in idle mode.
2. Press  or  to select **Base Setup** and then press .
3. Press  again to select **Dialing Mode**.
4. Press  or  to select the desired setting and then press .





Programming your area code (optional)


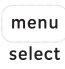


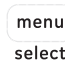

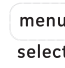
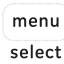
If you program your area code, the caller ID history displays only seven digits of the telephone numbers from your area code.

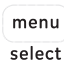
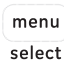
Using a cordless handset

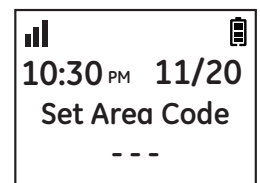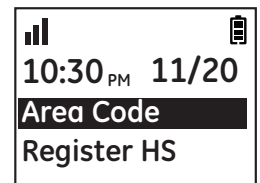1. Press .
2. Press  or  to select **Handset Setup** and then press .
3. Press  or  to select **Area Code** and then press .
4. Enter your area code and then press  to confirm.

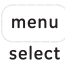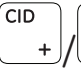

Using the telephone base

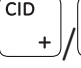
1. Press  when in idle mode.
2. Press  or  to select **Base Setup** and then press .
3. Press  or  to select **Area Code** and then press .
4. Enter your area code and then press  to confirm.

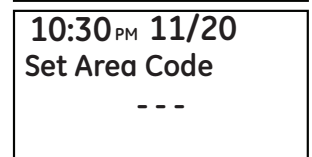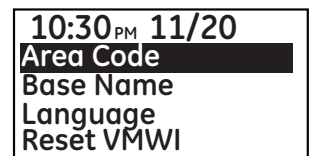


Telephone operation

Make a call

Using a cordless handset



1. Press .
2. Dial the phone number.

Using the telephone base



1. Lift the corded handset or press .
2. Dial the phone number.

Predial a call

Using a cordless handset

1. Dial the phone number using the dial pad keys. If you make an error while dialing, you can press  to erase the last digit entered.
2. Press  to call.

Using the telephone base

1. Dial the phone number using the dial pad keys. If you make an error while dialing, you can press  to erase the last digit entered.
2. Lift the corded handset or press  to call.

Answer a call

Using a cordless handset

Press  to answer an incoming call.

When there is an incoming call, the screen and dial pad backlight will be on.

Using the telephone base



Lift the corded handset or press .

NOTE: The screen shows the elapsed time as you talk (in hours, minutes and seconds).



Mute

The mute function allows you to turn off the microphone while on a call. You can hear the other party but the other party cannot hear you.

Using a cordless handset

1. Press  during a call.
2. Press  again to resume conversation.

Using the telephone base

1. Press  during a call.
2. Press  again to resume conversation.

NOTE: The screen shows **Muted** when mute feature is activated.

Telephone operation

End a call



Using a cordless handset

Press  or place the handset in the charger to end a call.

Using the telephone base

Return the corded handset to the telephone base or press  to end a call.

Speakerphone

Anytime during a call, press  on the telephone base or  on the cordless handset to switch between speakerphone and normal handset use.

NOTE: Using the speakerphone will drain the battery of the cordless handset faster than normal handset use.

Volume control

You can adjust the volume of the handset or speakerphone anytime during a call.

On a cordless handset

Press  to increase or  to decrease the volume.

On the telephone base


Press  to increase or  to decrease the volume.

NOTE: Only the listening volume can be adjusted.

Audio boost

Press the **boost** button on the telephone base or the left side of the cordless handset to amplify the listening volume during a call. This feature is designed to assist users who may have difficulty hearing the call at normal sound levels.


To return the handset to the normal volume level, press the **boost** button again. The volume will also automatically return to the normal level after you end the call.

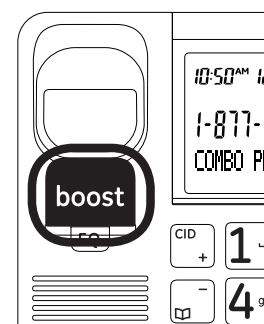

Equalizer

This feature allows you to change the tone of the audio of the handset to best suit your hearing.

Press the **EQ** button on the telephone base or the right side of the cordless handset to switch between **Natural**, **Bass** or **Treble** during a call.

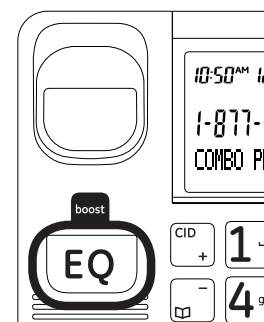





Telephone operation



Make a call using the redial memory

The last five telephone numbers previously dialed are stored in the redial list (up to 24 digits each).

Using a cordless handset













1. Press  .
2. Press  or  to select the desired phone number and then press  to dial.

Using the telephone base


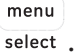

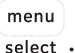
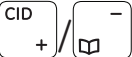
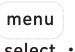
1. Press **redial**.
2. Press  to select the desired phone number and then lift the corded handset or press  to dial.

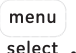Save a number from the redial list to the phonebook

Using a cordless handset

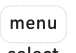1. Press  .
2. Press  or  to select the desired phone number and then press  .
3. Press  or  to select **Save to Pb** and then press  .
4. Enter the name by using the dial pad, refer to the character table on page 26 for more information, and then press  .
5. Edit the number by using the dial pad if necessary, and then press  .
6. Press  or  to select the desired ringer tone and then press  to confirm.




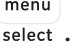






Using the telephone base

1. Press **redial**.
2. Press  to select the desired phone number and then press  .
3. Edit the number by using the dial pad if necessary, and then press  .
4. Enter the name by using the dial pad, refer to the character table on page 26 for more information, and then press  .
5. Press  to select the desired ringer tone and then press  .

Telephone operation

Delete number from the redial list

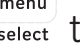Using a cordless handset

1. Press .
2. Press  or  to select the desired phone number and then press .
3. Press  or  to select **Delete** and then press  to delete the selected number. Or press  or  to select **Delete All** and then press  twice to delete all redial records.



Using the telephone base

1. Press **redial**.
2. Press /  to select the desired phone number and then press  to delete the selected number. Or press and hold  and then press  to delete all redial records.



Call waiting or call waiting with caller ID service

To use call waiting, you must subscribe to call waiting service from your telephone service provider. This feature allows you to receive calls while you are already talking on the phone. You will hear a call waiting alert tone when there is a second incoming call. If you subscribe to both caller ID and call waiting with caller ID services, the second caller's information is displayed after you hear the call waiting alert tone.

On a cordless handset

1. Press  to answer the second incoming call.
2. Press  to switch between calls.


On the telephone base

1. Press  to answer the second incoming call.
2. Press  to switch between calls.

Using multiple handsets

The system allows a maximum of two system devices (either the telephone base or cordless handset) to have a conversation with an outside call at a time.

Voice message waiting indicator

The  icon displays on the screen of the telephone base and handset(s) when you have received a new voice mail message from your service provider.

IMPORTANT: Voice mail service is different from the answering system. In order to use the voice mail service, you must subscribe to it from your telephone service provider.









Telephone operation



Reset VMWI

You can reset the VMWI (voice message waiting indicator) when the phone indicates new messages waiting but there are none (for example, if you have previously accessed voice mail from a different telephone line while away from home). When new voice mails do exist, your telephone service provider will continue to send the signal to activate the feature.


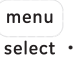

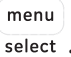
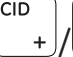

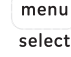
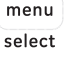
To turn the voicemail indication off


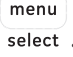
Using a cordless handset

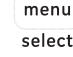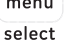1. Press  .
2. Press  or  to select **Base Setup** and then press  .
3. Press  or  to select **Reset VMWI** and then press  .
4. Press  again to select **Yes** to confirm.

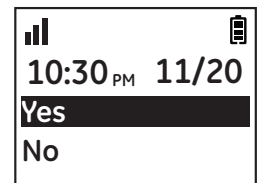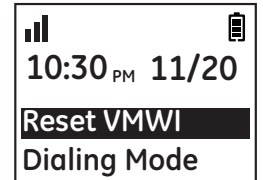


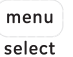


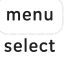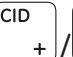Using the telephone base

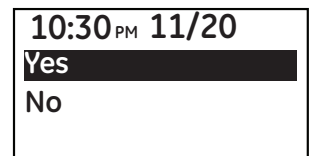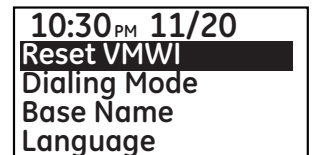1. Press  when in idle mode.
2. Press  /  to select **Base Setup** and then press  .
3. Press  /  to select **Reset VMWI** and then press  .
4. Press  again to select **Yes** to confirm.



Intercom/Find




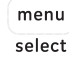







You can locate a misplaced handset by paging it from the telephone base.

1. Press  on the telephone base.
2. Press  again to select **All Handsets** to page all system handsets.
3. Press  on the telephone base or press  on any handset to stop paging.

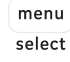


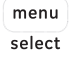



Telephone operation

Intercom



Using a cordless handset

1. Press .
2. Press  or  to select **Intercom** and then press .
3. Press  or  to select the desired handset or **Base**, and then press .
4. Press  to answer the intercom call on the other cordless handset.
Or lift the corded handset or press  to answer the intercom call on the telephone base.
5. To end the intercom call, press  or place the cordless handset in the charger.
Or return the corded handset to the telephone base or press  on the telephone base.

Using the telephone base

1. Press .
2. Press  /  to select the desired handset and then press .
3. Press  to answer the intercom call on the other cordless handset.
4. To end the intercom call, press  or place the cordless handset in the charger.
Or return the corded handset to the telephone base or press  on the telephone base.

NOTES:

1. The intercom call can be canceled before it is answered by pressing  on the originating handset or  on the telephone base.
2. If the called handset or telephone base does not answer within one minute, or is busy, or is out of range, the intercom will be canceled.

To answer an incoming call during intercom

You will hear an alert tone when you receive an incoming call during intercom.

Using a cordless handset

- Press  to answer the incoming call and end the intercom.

Using the telephone base









- Press  to answer the incoming call and end the intercom.

Telephone operation

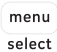


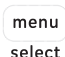

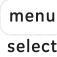


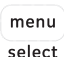To transfer a call

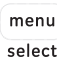You can transfer a call to another system device (either the telephone base or cordless handset).

Using a cordless handset

1. Press  during a call.
2. Press  or  to select the desired handset or **Base**, and then press .
The call is placed on hold while the intercom is established with the other system device.
3. Press  to answer the intercom on the other handset.
Or lift the telephone base or press  to answer the intercom on the telephone base.
You can choose either option from the followings for this intercom call.
 - Press  to end the intercom and switch back to the outside call.
 - Press  or place the cordless handset in the charger to transfer the outside call to the other device.

Using the telephone base




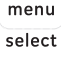



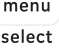
1. Press  during a call.
2. Press  /  to select the desired handset and then press .
The call is placed on hold while the intercom is established with the other handset.
3. Press  to answer the intercom on the other handset.
You can choose from one of the following options for this intercom call.
 - Press  to connect both devices to the outside call.
 - Press  to end the intercom and switch back to the outside call.
 - Return the corded handset to the telephone base or press  on the telephone base to transfer the call to the other cordless handset.


NOTE: If the called system device does not answer within one minute, or is busy, or is out of range, the outside call will return to the calling device and **CALL BACK** displays on the screen.

Handset settings

Ringer volume






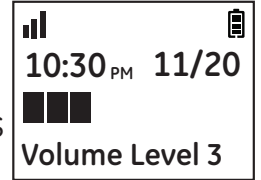




You can set the handset ringer volume from level 1 to level 5 or turn the ringer off.

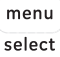
1. Press  .
2. Press  or  to select **Handset Tones** and then press  .
3. Press  again to select **Ringer Volume**.
4. Press  or  to select the desired volume level and then press  to confirm.



Ringer Tones

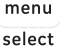


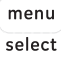


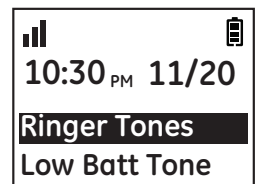



You can select from 10 ringer tones.



1. Press  .
2. Press  or  to select **Handset Tones** and then press  .
3. Press  or  to select **Ringer Tones** and then press  .
4. Press  or  to select the desired melody (Ringer 1 to 10) and then press  to confirm.



Low Batt Tone

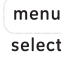


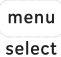


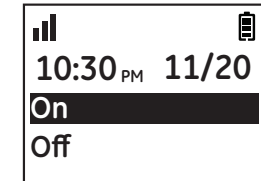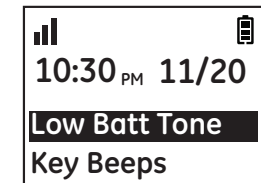



When this feature is activated, the handset beeps when the battery is low.


1. Press  .
2. Press  or  to select **Handset Tones** and then press  .
3. Press  or  to select **Low Batt Tone** and then press  .
4. Press  or  to select **On** or **Off** and then press  to confirm.



Key beeps

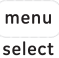The handset can be programmed to emit a tone with each key press. You can choose to turn this feature on or off. The default setting is **ON**. To change the key tone setting:

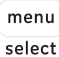

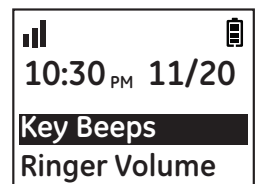
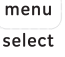






1. Press  .
2. Press  or  to select **Handset Tones** and then press  .
3. Press  or  to select **Key Beeps** and then press  .
4. Press  or  to select **On** or **Off** and then press  to confirm.




Handset settings

Equalizer

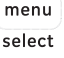





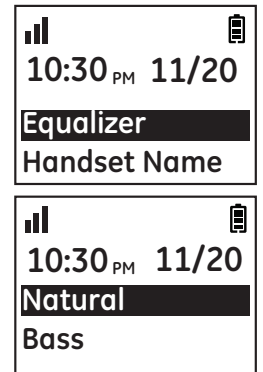


This feature allows you to change the balance of the audio of the handset to best suit your hearing.


1. Press  .
2. Press  or  to select **Handset Setup** and then press  .
3. Press  or  to select **Equalizer** and then press  .
4. Press  or  to select the **Natural**, **Bass** or **Treble**, and then press  to confirm.

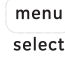

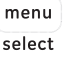Handset name

Your handsets will be automatically numbered starting from 1 up to the total number of handsets registered to your base unit. You can rename your handsets for easier identification (e.g. "Kitchen", "Bedroom", "Pams room", etc). To personalize each handset with a name:

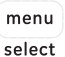

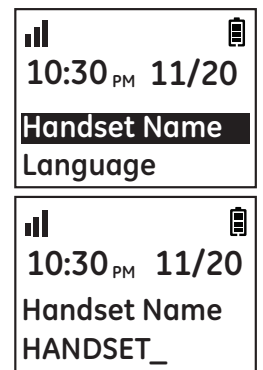







1. Press  .
2. Press  or  to select **Handset Setup** and then press  .
3. Press  or  to select **Handset Name** and then press  .
4. Press  to erase each letter of the current name.
5. Enter your desired handset name (up to 14 characters). Press the key to the corresponding character to display the correct letter. See the character table on 26 for more information.
6. Press  to confirm.



Display language

You can select **ENGLISH**, **FRANCIS** or **ESPAÑOL** as the display language. The default setting is **ENGLISH**.

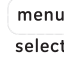To change the display language:

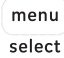1. Press  .
2. Press  or  to select **Handset Setup** and then press  .
3. Press  or  to select **Language** and then press  .
4. Press  or  to select the desired setting and then press  to confirm.




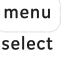








Handset settings

Auto Talk

When this feature is activated, you can answer a call by lifting the cordless handset from the charger without pressing any keys. The default is set to off.

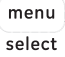To turn this feature on or off:

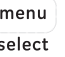





1. Press  .
2. Press  or  to select **Handset Setup** and then press  .
3. Press  or  to select **Auto Talk** and then press  .
4. Press  or  to select **On** or **Off** and then press  to confirm.




Telephone base settings

Ringer volume

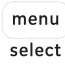
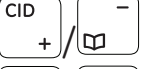
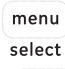

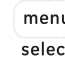

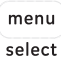
You can set the telephone base ringer volume from level 1 to level 5 or turn the ringer off.


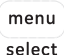
1. Press  when in idle mode.
2. Press  to select **Base Tones** and then press .
4. Press  to select **Ringer Volume**.
3. Press  to select the desired volume level and then press  to confirm.

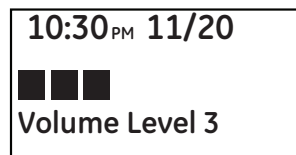

Ringer tone

You can select from 10 ringer melodies for the telephone base.




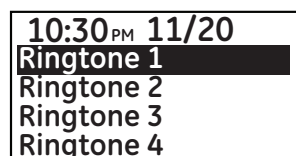
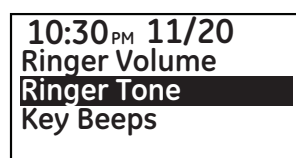


1. Press  when in idle mode.
2. Press  to select **Base Tones** and then press .
4. Press  to select **Ringer Tone** and then press .
4. Press  to select the desired melody and then press  to confirm.





Key beeps

The telephone base can be programmed to emit a tone with each key press. You can choose to turn this feature on or off. The default setting is **ON**.

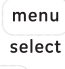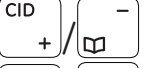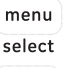
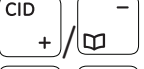


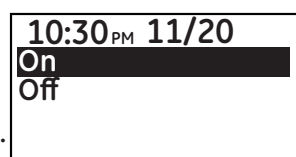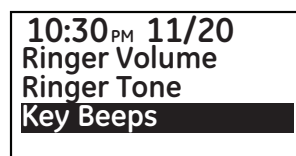


To change the key tone setting:



1. Press  when in idle mode.
2. Press  to select **Base Tones** and then press .
3. Press  to select **Key Tone** and then press .
4. Press  to select **On** or **Off** and then press  to confirm.



Display language

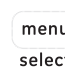You can select **ENGLISH**, **ESPAÑOL** or **FRANCIS** as the display language. The default setting is **ENGLISH**.



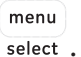
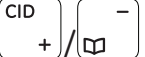
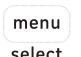


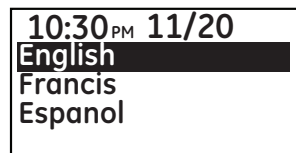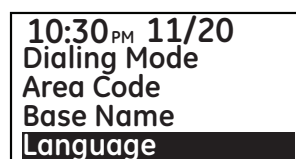1. Press  when in idle mode.
2. Press  to select **Base Setup** and then press .
3. Press  to select **Language** and then press .
4. Press  to select the desired language and then press  to confirm.





Telephone base settings

Base name

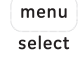
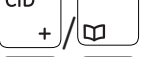
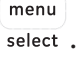
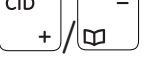
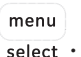
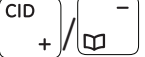

To personalize your telephone base with a name:



1. Press .
2. Press  to select **Base Setup** and then press .
3. Press  to select **Base Name** and then press .
4. Press  to erase each letter of the current name.
5. Enter your desired handset name (up to 12 characters). Press the key to the corresponding character to display the correct letter. See the character table on 26 for more information.
6. Press  to confirm.

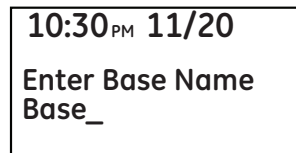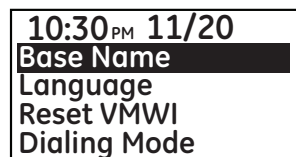

Equalizer

This feature allows you to change the balance of the audio of the handset to best suit your hearing.

1. Press  when in idle mode.
2. Press  to select **Base Setup** and then press .
3. Press  to select **Equalizer** and then press .
4. Press  to select **Natural**, **Bass** or **Treble**, and then press  to confirm.

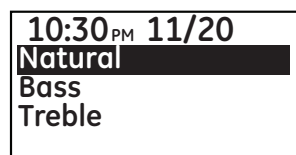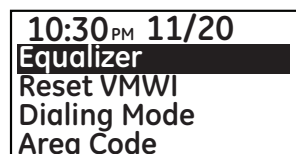









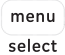


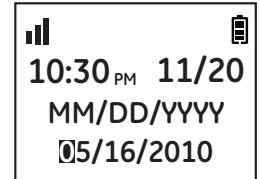
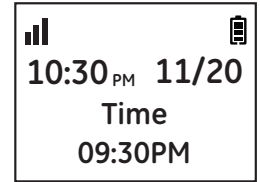
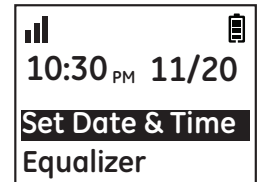
Clock and alarm

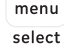Date and time






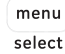

You can set the date and time of the telephone system as follows.




Using a cordless handset

1. Press .
2. Press  or  to select **Handset Setup** and then press .
3. Press  or  to select **Set Date & Time** and then press .
4. Enter the current hour and minute. For example, 9:30 should be entered as [0], [9], [3], [0]. Press  or  to select **AM** or **PM**.
5. Press  to confirm.
6. Enter the current month, day and year. For example, May 16, 2010 should be entered as [0], [5], [1], [6], [1], [0], and then press  to confirm.

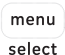

Using the telephone base

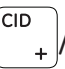

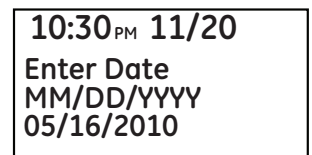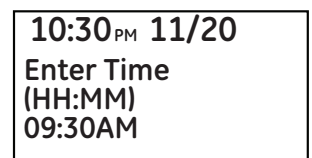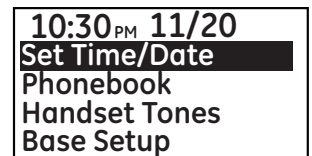
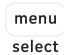
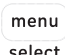










1. Press  when in idle mode.
2. Press  /  to select **Set Time/Date**.
3. Enter the current hour and minute. For example, 9:30 should be entered as [0], [9], [3], [0]. Press  /  to select **AM** or **PM** and then press  to confirm.
4. Enter the current month, day and year. For example, May 16, 2010 should be entered as [0], [5], [1], [6], [1], [0].
5. Press  to confirm.




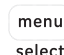


Alarm

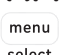The alarm can be programmed to sound once or daily for one minute. The alarm setting is independent to each handset.

Using a cordless handset

1. Press .
2. Press  or  to select **Handset Setup** and then press .
3. Press  again to select **Alarm Clock**.
4. Press  or  to select **On** and then press .
5. Enter the desired hour and minute and then press  or  to select **AM** or **PM**.
6. Press  to confirm.
7. Press  or  to select the desired alarm melody and then press .
8. Select **Once** or **Daily** and then press  to confirm.
(**Once**: The alarm sounds once at the set time.
Daily: The alarm sounds daily at the set time.)

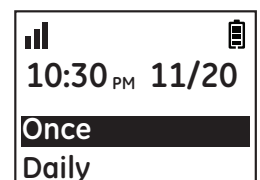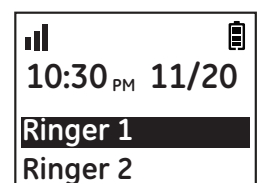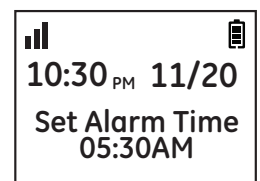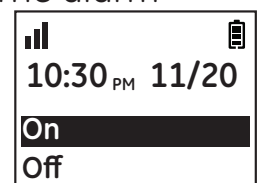





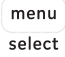



Phonebook

Add a phonebook record

Using a cordless handset

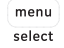1. Press  on the cordless handset.

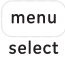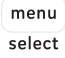NOTE: You can also access the phonebook by pressing  and selecting **Phonebook**.

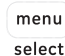
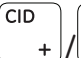

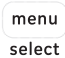





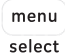
2. Press  once if your phonebook is empty, or press twice if your phonebook has stored entries to select **New Entry**.
3. Enter the name (max. 16 characters). Press the key to the corresponding character to display the correct letter. See the character table on page 26 for more information.
5. Press  .
6. Enter the number (max. 24 digits). If you need a pause between digits, press and hold the  until a **P** appears in the display. This will insert a 3-second pause in the dialing sequence.
7. Press  .
8. Press  or  to select the desired ringer tone, and then press  .

NOTE: The directory can store up to 50 entries with up to 24 digits for each telephone number and 14 characters for each name.

Using the telephone base

1. Press  on the telephone base.

NOTE: You can also access the phonebook by pressing  and selecting **Phonebook**.

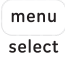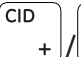2. Press  .
3. Press  /  to select **New Entry** and then press  .
3. Enter the name (max. 16 characters). Press the key to the corresponding character to display the correct letter. See the character table on page 26 for more information.
5. Press  .
6. Enter the number (max. 24 digits). If you need a pause between digits, press and hold the  until a **P** appears in the display. This will insert a 3-second pause in the dialing sequence.
7. Press  .
8. Press  /  on the telephone base to select the desired ringer tone, and then press  to save.


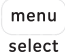
Phonebook

Memory location

You can program phone numbers into memory location buttons **m1**, **m2** and **m3** for quick dialing.

To program a memory location:

Using a cordless handset or the telephone base

1. Press and hold the desired memory location (**m1**, **m2** or **m3**) button.
2. Enter the number (max. 24 digits). If you need a pause between digits, press and hold the  until a **P** appears in the display. This will insert a 3-second pause in the dialing sequence.
3. Press  to confirm.

NOTE: Numbers must be stored separately in each handset and base memory location.

To dial from a memory location:

Using a cordless handset

Press the desired memory location button (**m1**, **m2** or **m3**) when the cordless handset is not in use, the number will be dialed automatically.

-OR-

Press  and then press the desired memory location button to dial.

Using the telephone base

Press the desired memory location button (**m1**, **m2** or **m3**) when the telephone base is not in use, the number will be dialed using speakerphone.

-OR-

Lift the corded handset or press , then press the desired memory location key to dial.

Phonebook

Character table

Use the dial pad and the chart below to enter a name (up to 16 characters). Each press of a particular key displays the character in the following order:

Dial pad key	Character by number of key presses							
	1	2	3	4	5	6		
[1]	space	1	#	'	,	-	.	&
[2]	A	B	C	2				
[3]	D	E	F	3				
[4]	G	H	I	4				
[5]	J	K	L	5				
[6]	M	N	O	6				
[7]	P	Q	R	S	7			
[8]	T	U	V	8				
[9]	W	X	Y	Z	9			
[0]	0							




To view/call a phonebook entry

Records are stored alphabetically in the phone book. To search the phonebook:

Using a cordless handset


1. Press  when handset is not in use.

NOTE: You can also access the phonebook by pressing  and selecting **Phonebook**.

2. Press  or  to find an entry.
3. Press  to call the displayed entry.

Using the telephone base

1. Press  when the telephone base is not in use.

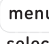



NOTE: You can also access the phonebook by pressing  and selecting **Phonebook**.

2. Press  or  to find an entry.
3. Lift the corded handset or press  to call the displayed entry.





Phonebook

To search a phonebook entry alphabetically

Using a cordless handset









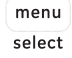





1. Press  when the handset is not use.
2. Press the dial pad key (0-9) that corresponds to the first letter of the entry you are looking for. The closest match in alphabetical order will appear. You can then press  or  to view the next entry.
3. Press  to call the displayed entry.


Using the telephone base

1. Press  when the telephone base is not in use.
2. Press the dial pad key (0-9) that corresponds to the first letter of the entry you are looking for. The closest match in alphabetical order will appear. You can then press / to view the next entry.
3. Lift the corded handset or press  to call the displayed entry.

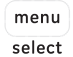


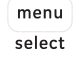
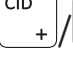


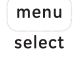

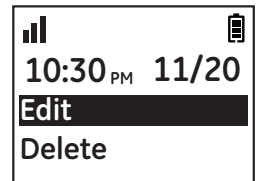




Edit a phonebook entry


Using a cordless handset

1. Press  when the handset is not in use.
2. Press  or  to locate the desired entry and then press .
3. Press  or  to select **Edit** and then press .
4. Edit the name by using the  key to erase and backspace, then enter new characters using the dial pad keys and press .
5. Edit the number by using the  key to erase and backspace, then enter new numbers using the dial pad keys and press .
6. Press  or  to select the desired ringer tone and then press  to confirm.

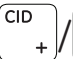

Using the telephone base

1. Press  when the handset is not in use.
2. Press / to locate the desired entry and then press .
3. Press / to select **Edit** and then press .
4. Edit the name by using the  key to erase and backspace, then enter new characters using the dial pad keys and press .
5. Edit the number by using the  key to erase and backspace, then enter new numbers using the dial pad keys and press .
6. Press / to select the desired ringer tone and then press  to confirm.

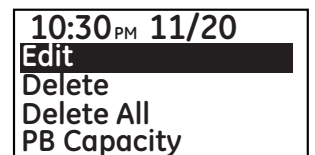


Phonebook

Delete a phonebook entry


Using a cordless handset

1. Press when the handset is not in use.
2. Press or to locate the desired entry and then press .
3. Press or to select **Delete** and then press .

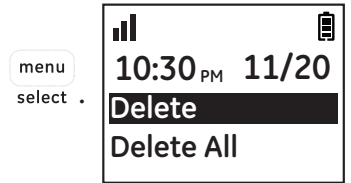

Using the telephone base


1. Press when the handset is not in use.
2. Press to locate the desired entry and then press .
3. Press to select **Delete** and then press .

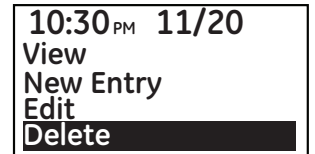

Delete all phonebook entries


Using a cordless handset

1. Press when the handset is not in use.
2. Press and then press or to select **Delete All**.
3. Press twice to confirm.

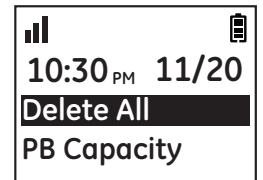

Using the telephone base

1. Press when the handset is not in use.
2. Press and then press to select **Delete All**.
3. Press twice to confirm.

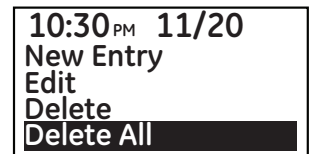

Phonebook capacity

This feature allows you to check the remaining capacity of the phonebook.


Using a cordless handset

1. Press when the handset is not in use.
2. Press and then press or to select **Pb Capacity**. The screen shows **X/50** where **X** indicates the number of entries stored in the phonebook.



Using the telephone base

1. Press when the handset is not in use.
2. Press and then press to select **PB Capacity**. The screen shows **X/50** where **X** indicates the number of entries stored in the phonebook.

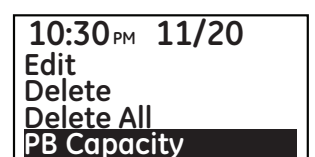

Caller ID

Using Caller ID service

IMPORTANT: You must subscribe to Caller-ID services from your service provider to use the Caller ID capabilities of this telephone system. Check with your telephone service provider for details.

Caller ID records are stored in the order that they are received. Your telephone stores caller ID memory for the 40 most recent calls. When the 41st call is received, the oldest Caller ID record (first call) is automatically deleted.

Phonebook Caller-ID matching

If the last seven digits of an incoming telephone number match a telephone number in your phonebook, the name from this entry will display on the screen.





For example, if Michael Jones calls, and his number is saved in the phonebook under the name **MIKE**, the screen displays the name **MIKE**.

NOTE: The number you see on your caller ID is in the format sent by the telephone service provider. It usually delivers 10-digit telephone numbers (area code plus telephone number). If the last seven digits of the incoming telephone number do not match with a number in your phonebook, the name appears as it is delivered by the telephone service provider.




Review/call from the call log

As calls are received and stored, the display is updated to let you know new calls have been received. To scroll through the caller ID records:





Using a cordless handset

1. Press  to display the caller ID list.
2. Press  or  to browse through the list.
3. When the desired record is displayed, press  to call.




-OR-

Press  repeatedly until the phone number is shown in the desired format (for example, when 555-5555 is displayed, press  to change the format of the phone number to 555-555-5555, 1-555-555-5555, and back to 555-5555), then press  to call.

Using the telephone base

1. Press  to display the caller ID list.
2. Press  or  to browse through the list.
3. When the desired record is displayed, lift the corded handset or press  to call.




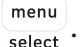

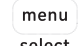



-OR-

Press  repeatedly until the phone number is shown in the desired format (for example, when 555-5555 is displayed, press  to change the format of the phone number to 555-555-5555, 1-555-555-5555, and back to 555-5555), then lift the corded handset or press  to call.



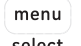

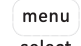
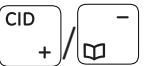

Caller ID

Save a number to the phonebook

Using a cordless handset



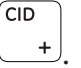

1. Press .
2. Press  or  to locate the desired record and then press .
3. Enter the name by using the dial pad keys if necessary, and then press .
4. Edit the number by using the dial pad keys if necessary, and then press .
5. Press  or  to select the desired ringer tone, and then press  to save.

Using the telephone base

1. Press .
2. Press  to locate the desired record and then press .
3. Enter the name by using the dial pad keys if necessary, and then press .
4. Edit the number by using the dial pad keys if necessary, and then press .
5. Press  to select the desired ringer tone, and then press  to save.

Delete caller ID record




Using a cordless handset

1. Press .
2. Press  or  to locate the desired record.
3. Press  to delete the selected record.

-OR-

Press and hold  and then press  to delete all records.

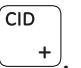Using the telephone base

1. Press .
2. Press  to locate the desired record.
3. Press  to delete the selected record.

-OR-

Press and hold  and then press  to delete all records.





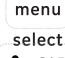



Call log display screen messages


Display	When
Unavailable	The caller's name and number are not available.
Private	The caller is blocking the name and/or number.

Answering system

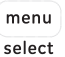

Turning the answering system on or off

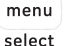Using a cordless handset

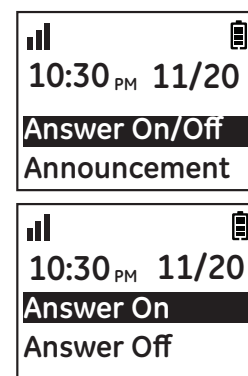1. Press .
2. Press  or  to select **Answer System** and then press .
3. Press  again to select **Answer On/Off**.
4. Press  or  to select **Answer On** or **Answer Off**, and then press .



Using the telephone base

Press  on the telephone base to turn the answering system on or off. The  button will light when the answering system is on.

Answering system and voice mail



Your telephone has a built-in answering system and voicemail indicator for service offered by your telephone service provider (fee may apply). They are independent features and each alerts you to new messages differently.

To listen to your voicemail, follow the instructions provided by your voicemail service provider. To listen to messages recorded on your answering system, refer to page 36.

Message capacity

The answering system can record up to 59 messages. Each message can be up to 3 minutes in length, and the total recording time is up to 20 minutes.








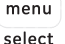
New message indicator


When there are new messages on the answering system, the  icon flashes and **XX New Message** displays on the screen of the base and the handset. The  also flashes on the base.

Memo recording

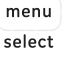Recorded memos appear like messages from callers at the handset and base.

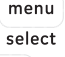
Using a cordless handset

1. Press .
2. Press  or  to select **Answer System** and then press .
3. Press  or  to select **Record Memo** and then press .
4. Speak towards the cordless handset to record your memo (up to 2 minutes).
5. Press  to stop recording.

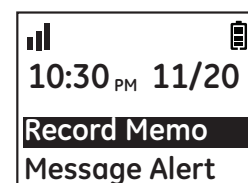

Answering system


Using the telephone base


1. Position yourself about 1 foot away from the microphone on the telephone base, then press and hold .

-OR-

Press  . Press  to select **Answer System** and then press .

Press  to select **Record Memo** and then press .

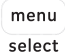2. Release the button after the beep. Speak clearly towards the telephone base while recording your memo (up to 2 minutes).
3. Press  to stop recording.

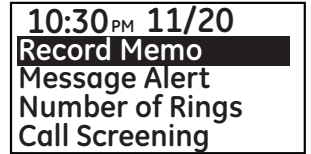




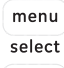






Memos are stored as answering system message. For details about playing back the message and other options, refer to page 36.



Outgoing Announcement (OGA)

When the answering system answers a call, the pre-recorded outgoing announcement is played to the caller unless you have recorded your own outgoing announcement.



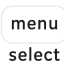


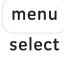
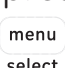
To listen to the current outgoing announcement


Using a cordless handset

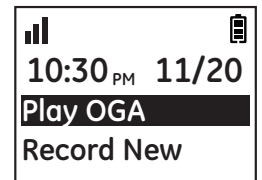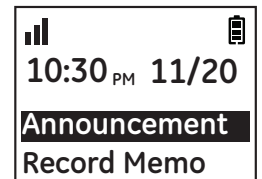1. Press .
2. Press  or  to select **Answer System** and then press .
3. Press  or  to select **Announcement** and then press .
4. Press  or  to select **Play OGA** and then press . The system announces the current outgoing announcement you are using.

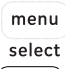

Using the telephone base




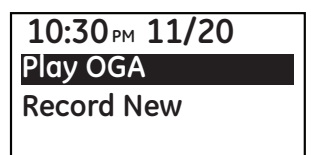







1. Press .
2. Press  to select **Answer System** and then press .
3. Press  to select **Announcement** and then press .
4. Press  to select **Play OGA** and then press . The system announces the current outgoing announcement you are using. Record an outgoing announcement (OGA).


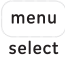


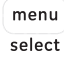Answering system

 
 


 


 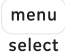


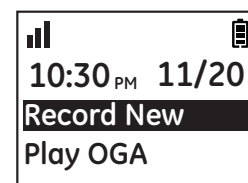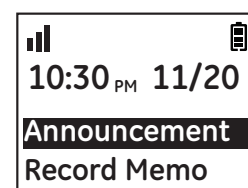
Record outgoing announcement


Using a cordless handset

1. Press .
2. Press  or  to select **Answer System** and then press .
3. Press  or  to select **Announcement** and then press .
4. Press  or  to select **Record New** and then press .
5. After the voice prompt and beep sound, speak into the handset as you would normally during a call while recording your OGA (2 minutes maximum).
6. Press  when finished. The system will then play back the recorded message.



Using the telephone base



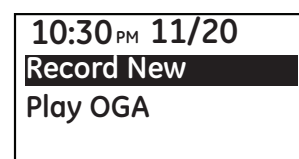



 




1. Press .
2. Press  or  to select **Answer System** and then press .
3. Press  or  to select **Announcement** and then press .
4. Press  or  to select **Record New** and then press .
5. After the voice prompt and beep sound, speak into the handset as you would normally during a call while recording your OGA (2 minutes maximum).
6. Press  when finished. The system will then play back the recorded message.



 
Delete your recorded OGA

If you want to use the pre-recorded outgoing announcement, simply delete your recorded OGA.

Using a cordless handset

1. Press .
2. Press  or  to select **Answer System** and then press .
3. Press  or  to select **Announcement** and then press .
4. Press  or  to select **Play OGA** and then press .
5. Press  when the system is playing your recorded OGA. The system will then play back the pre-recorded OGA.

Using the telephone base

1. Press .
2. Press  or  to select **Answer System** and then press .

Answering system


3. Press / to select **Announcement** and then press .
4. Press / to select **Play OGA** and then press .
5. Press when the system is playing your recorded OGA. The system will then play back the pre-recorded OGA.

Number of rings before the system answers

You can select the number of rings before the answering system answers a call.


Using a cordless handset

1. Press .
2. Press or to select **Answer System** and then press .
3. Press or to select **Number of Rings** and then press .
4. Press or to select the desired setting and then press to confirm.

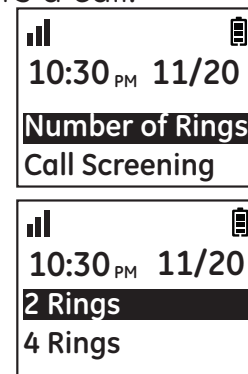

Using the telephone base

1. Press .
2. Press / to select **Answer System** and then press .
3. Press / to select **Number of Rings** and then press .
4. Press / to select the desired setting and then press to confirm.

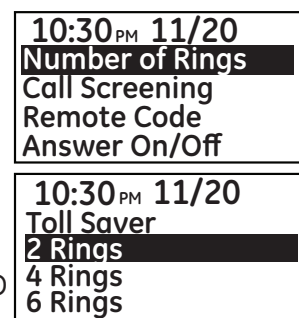

NOTE: If you select **TOLL SAVER**, the system answers after the second ring if there are new messages, or after the fourth ring if there is no new message. This allows you to check your system to see if there are new messages before incurring toll charges.


Message Alert

When this feature is activated and there are new messages, the telephone base beeps every 15 seconds. The default setting is Off.

To turn this feature on or off:







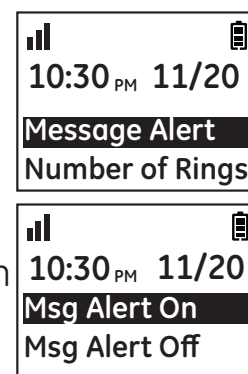



Using a cordless handset


1. Press .
2. Press or to select **Answer System** and then press .
3. Press or to select **Message Alert** and then press .
4. Press or to select **Msg Alert On** or **Msg Alert Off** and then press to confirm.

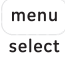

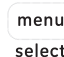Answering system

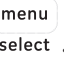

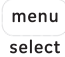
Using a the telephone base

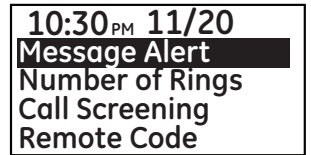1. Press .
2. Press  /  to select **Answer System** and then press .
3. Press  /  to select **Message Alert** and then press .
4. Press  /  to select **Msg Alert On** or **Msg Alert Off** and then press  to confirm.









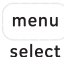



Call screening



When the answering system answers a call, you can listen at the telephone base while the caller leaves a message.

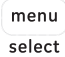The message automatically plays on the telephone base. Use the  /  buttons to adjust speaker volume. If the speaker is at the lowest level (off), you will need to increase the volume when listening to message playback at the telephone base. You can also press  on a cordless handset to listen to the recording.

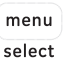


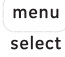


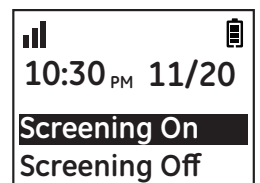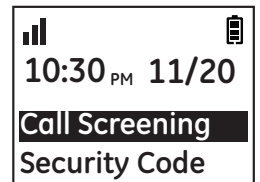



To turn this feature **On** or **Off**:


Using a cordless handset

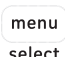1. Press .
2. Press  or  to select **Answer System** and then press .
3. Press  or  to select **Call Screening** and then press .
4. Press  or  to select **Screening On** or **Screening Off** and then press  to confirm.

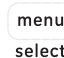

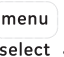

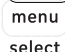Using the telephone base

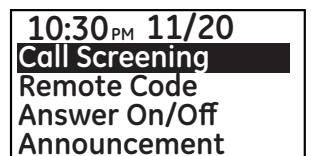1. Press .
2. Press  /  to select **Answer System** and then press .
3. Press  /  to select **Call Screening** and then press .
4. Press  /  to select **Screening On** or **Screening Off** and then press  to confirm.








Call intercept

If you want to speak to the caller when the answering system is recording a message, press  on a cordless handset, or lift the corded handset or press  on the telephone base. The answering system will automatically stop recording when you do so.

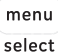

Answering system

Message playback using the handset






To listen to messages on a handset:

1. Press  twice or  when the handset is in idle mode. Your messages will automatically be played back through the handset speakerphone. Press  to listen to your messages privately through the handset.
2. The following message options are available during playback:
 - **REPEAT:** Press 1 to repeat the currently playing message.
 - **STOP:** Press 2 to pause the message currently playing, press 2 again to resume playing.
 - **SKIP:** Press 3 to listen to the next message.
 - **DEL:** Press 0 to delete the currently playing message.
 -  or : Press to increase or decrease the playback volume.

Message playback using the telephone base

1. Press  on the telephone base to listen to the messages.
2. The system announces the number of messages and date and time when the message was recorded.
3. Press  again to stop the playback.

Options during playback

Key	Operation
	Press to adjust the listening volume.
	Press to playback or stop messages.
	Press to repeat a message. Press twice to play the previous message.
	Press to skip to the next message.
	Press during playback to delete the current message. Press and hold in idle mode to delete all old messages.

Delete all messages

Using the telephone base

Press and hold  on the telephone base when in idle mode.








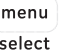
Answering system


Security code for remote access

Your answering system allows you to program a 3-digit security code to get access to the system through any touch-tone telephone. The default security code is 123.

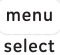
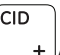


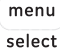

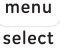
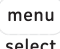
To change the security code:


Using a cordless handset

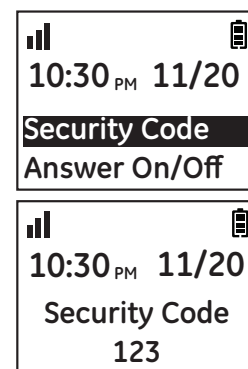1. Press .
2. Press  or  to select **Answer System** and then press .
3. Press  or  to select **Security Code** and then press .
4. The handset screen displays the current security code. Use the dial key pad to enter a new 3-digit security code and then press  to confirm.



Using the telephone base

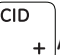1. Press .
2. Press  or  to select **Answer System** and then press .
3. Press  or  to select **Security Code** and then press .
4. The screen of the telephone base displays the current security code. Use the dial key pad to enter a new 3-digit security code and then press .

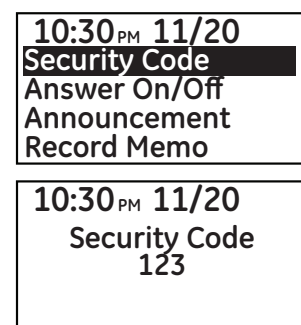

Access the answering system remotely

1. Dial your phone number from any touch-tone telephone.
2. Enter your security code using the numeric keypad on the touch-tone telephone when your answering system takes your call and you hear your outgoing announcement.
3. The system will start playing the remote access menu if the security code is correctly entered.

NOTES:

1. If your answering system is off, you will not hear your outgoing announcement. The system will answer your call after 10 rings and then ask you to enter your security code.
2. Enter the code again if you have entered an incorrect security code.

Answering system

Remote access commands

Touch-tone keys	Remote command
1	Replay the current or previous message.
2	Play/stop messages.
3	Skip to the next message.
4	Turn the answering system on or off.
7	Listen to the main menu.
0	Delete the current message.



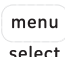
A convenient wallet card, with instructions needed to operate your answering system remotely, can be found on page 53.


Advanced settings

Registering a handset

The telephone system can support up to a total of 5 cordless handsets. Handsets that were included with your main base are pre-registered.

To add or re-register a handset using a cordless handset:

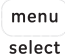1. Press  when the handset screen shows **To Register Press Menu**.
2. The handset shows **Press Find For 4 Sec On Base**.
3. Press and hold the  button on the telephone base until a beep sounds.
4. Press  on the cordless handset and the screen shows **Please Wait...**

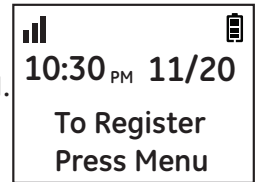


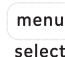











A beep sounds on the handset when the registration is successful.

NOTE: This product is compatible with model 30540 accessory handsets only. For information on how to purchase accessory handsets, please visit our website at www.gephones.com

Deregistering a handset

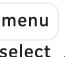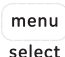This feature is intended for base replacement procedures. Handset deregistration is not recommended for normally functioning systems. For more information concerning deregistration, visit us online at www.gephones.com

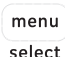1. Press .
2. Press  or  to select **Handset Setup** and then press .
3. Press  or  to select **Deregister HS** and then press .
4. Press  again when the screen shows **Confirm Dereg?**
5. Press  or  to select **Yes** and then press  to confirm.

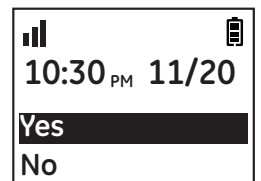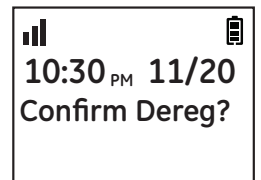

NOTE: HS Deregistered shows on the handset's screen if the deregistration is successful.

Appendix

Troubleshooting guide

If your telephone system is not operating properly, first try these general reset procedures:

1. Unplug all power adapters from the power outlets.
2. Disconnect the telephone line cord from the base or modular jack.
3. Remove the battery compartment covers and unplug all handset battery packs.
4. After a few minutes, re-install all handset battery packs, making sure that the connectors are snug and the wires are not pinched before replacing all battery compartment covers.
5. Plug the power adapters for the base and any chargers back into their power outlets. Be sure not to use outlets that are controlled by wall switches or timers.
6. Place all handsets in the chargers to charge without interruption for at least 30 minutes before use.
7. Plug the line cord into the telephone base or modular jack and verify operation.

For product assistance or for more information about accessories, visit our website at www.gephones.com or call our customer service center at **1-877-394-9775**.

General Performance

Problem	Cause/solution
Cannot hear a dial tone.	<ul style="list-style-type: none">• Increase the volume on the handset.• Disconnect the telephone line cord from the base unit and connect it to a known working telephone. If the known working telephone operates properly, contact our customer support center for warranty information.
Handset does not ring.	<ul style="list-style-type: none">• The ringer may be off. Increase the ringer volume.• Make sure your handset is charged.
You experience audible static, noise, or fading in and out.	<ul style="list-style-type: none">• The handset may be near the end of range limit. Move the handset closer to the base unit.• If you are using a line with DSL service, make sure you have properly installed the DSL filters supplied by your service provider.• Try to relocate the base unit and use the handset away from sources of electrical interference.

Appendix

Caller ID

Problem	Cause/solution
Caller-ID information is not displayed.	<ul style="list-style-type: none">• You must subscribe to Caller ID service from your service provider/telephone company.• Make sure the base unit is plugged directly into a telephone modular jack. If you are using a line with DSL service, make sure you have properly installed the DSL filters supplied by your service provider.
While on a call, new caller-ID information is not displayed.	<ul style="list-style-type: none">• You must subscribe to Caller ID with Call Waiting service from your service provider/telephone company.

Answering system

Problem	Cause/solution
The unit does not record new messages.	<ul style="list-style-type: none">• Make sure the answering system is on.• The message memory may be full. Some messages will need to be deleted.
Cannot access the answering system locally through a system handset.	<ul style="list-style-type: none">• The system may be in use by another party.• The system is busy recording a message.
Cannot operate the answering system remotely.	<ul style="list-style-type: none">• You must use a touch-tone telephone for remote access.• Make sure you follow the remote access procedures in this user's guide.

General Product Care

- Avoid dropping the handset, as well as other rough treatment to the phone.
- Clean the phone only with a dry soft cloth.
- Never use cleaning agents, paint thinner, abrasive powder, alcohol, or other chemical products to clean the unit. Doing so will damage the unit.
- Retain the original packaging in case you need to ship the phone at a later date.

Appendix

Important Safety Instructions

Some of the following information may not apply to your particular product; however, when using telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Telephones should not be used while you are in a bathtub, shower or pool. Immersion of the telephone or handset in water could cause an electrical shock.
5. Slots and openings in the cabinet back or bottom are provided for ventilation, to protect it from overheating. Do not block or cover these openings. Do not block the openings by placing the product on a bed, sofa, rug, or other similar surface. Do not place this product in a built-in installation unless proper ventilation is provided.
6. Only operate this product from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
7. Plug the adaptor into an easily accessible electrical outlet near the equipment.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock.
11. Never spill liquid of any kind on the product.
12. To reduce the risk of electric shock, do not disassemble this product. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
13. Do not expose the product to extreme temperatures such as areas near a hot radiator, stove or in a hot car. Do not place product upon other consumer electronic products such as; computer monitors, power amplifiers, etc.
14. Do not place lighted candles, cigarettes, cigars, etc., on or near the telephone.
15. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
16. Never install or modify telephone wiring during a lightning storm.
17. Never install jacks or telephones in wet locations.
18. Use caution when installing or modifying telephone lines to prevent electrical shock and/or fire.
19. Under the following conditions, unplug this product from the wall outlet and refer servicing to qualified service personnel:
 - A. The power supply cord or plug is damaged or frayed.

Appendix

- B. The product has been exposed to rain or water.
 - C. The product does not operate normally by following the operating instructions.
 - D. The product's cabinet has been damaged.
 - E. The product exhibits a distinct change in performance.
- 20. Avoid using a telephone during an electrical-storm. There may be a remote risk of electric shock from lightning.
 - 21. Do not use the telephone to report a gas leak in the vicinity of the leak.
 - 22. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
 - 23. Only use attachments/accessories specified by the manufacturer.
 - 24. Unplug this apparatus during lightning storms or when unused for long periods of time.

IF YOUR PRODUCT UTILIZES BATTERIES, THE FOLLOWING ADDITIONAL PRECAUTIONS SHOULD BE OBSERVED:

- 1. Use only the type and size battery(ies) specified in the user's guide.
- 2. Do not use this product if the battery door is removed or missing.
- 3. Replace batteries that appear to be swollen or have damaged wiring.
- 4. Do not dispose of the battery(ies) in fire. They may explode. Check with local codes for possible special disposal instructions.
- 5. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- 6. Exercise care in handling battery(ies) in order not to short out the battery(ies) with conducting materials such as rings, bracelets, and keys. The battery(ies) or conductor may overheat and cause burns.
- 7. Do not attempt to recharge the battery(ies) provided with or identified for use with this product that are not rechargeable. The battery(ies) may leak corrosive electrolyte or explode.
- 8. Do not attempt to rejuvenate the battery(ies) provided with or identified for use with this product by heating them. Sudden release of the battery(ies) electrolyte may occur causing burns or irritation to eyes or skin.
- 9. When replacing battery(ies), all batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the discharged battery(ies). (Applies to products employing more than one separately replaceable primary battery.)
- 10. When inserting battery(ies) into this product, the proper polarity or direction must be observed. Reverse insertion of battery(ies) may result in leakage or explosion.
- 11. When inserting battery(ies) into this product, do not twist or pinch the wires or allow wires to become pinched in battery door.
- 12. If storing over 30 days, remove battery(ies) from this product because the battery(ies) could leak and damage the product.
- 13. Discard "dead" battery(ies) as soon as possible since "dead" batteries are more likely to leak in a product.

Appendix

14. Do not store this product, or the battery(ies) provided with or identified for use with this product, in high-temperature areas. Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting. Batteries should be stabilized at room temperature prior to use after cold storage.
15. If your product uses rechargeable battery(ies), charge the battery(ies) only in accordance with the instructions and limitation specified in the user's guide.
16. Battery safety precautions
 - Do not burn, disassemble, mutilate, or puncture. Like other batteries of this type, toxic materials could be released which might cause injury to persons or property damage.
 - To reduce the risk of fire or personal injury, use only the supplied battery or replacement battery.
 - Keep batteries out of the reach of children.
 - Remove batteries if storing over 30 days.

Use only the supplied rechargeable battery or replacement battery. Visit our website at www.gephones.com to order a replacement battery if necessary.

SAVE THESE INSTRUCTIONS

Appendix

FCC Parts 15, 68 and ACTA

This equipment is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

This equipment is not intended to be used with Party Lines. If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

If this equipment is malfunctioning, it should be unplugged from the modular jack until the problem is corrected. Repairs to this equipment can only be made by the manufacturer or its authorized agents. For information on repair procedures, follow the instructions provided with the limited warranty. Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practical and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

Privacy of Communications may not be ensured when using this product.

Appendix

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is “receiving” the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult an experienced radio/television technician for additional suggestions. **The changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.**

Hearing Aid Compatibility (HAC)

This equipment meets FCC standards for Hearing Aid Compatibility

If this product has a memory dialing feature, you may choose to store emergency phone numbers such as police, fire or medical within the memory locations. If you do store or emergency numbers, we suggest you also write these numbers down so that you can still dial the number manually if the memory dialing fails.



This feature is included as a convenience only. The manufacturer assumes no responsibility for customer reliance on the memory feature of this product.

Testing emergency telephone numbers is not recommended. However, if you choose to make a test call to an emergency number, you should:

- Remain on the line and provide an explanation for the call before you hang up.
- Only make a non emergency test call during off-peak hours during early mornings or late evenings.

To ensure user safety, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the equipment. This equipment has been tested and found to comply with the FCC criteria. The handset may be safely held against the ear of the user. The telephone base should be installed and used such that parts of the users body other than the handset are maintained at a distance of approximately 8 inches (20 cm) or more.

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

 <p>THE LIGHTNING FLASH AND ARROW HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF “DANGEROUS VOLTAGE” INSIDE THE PRODUCT.</p>	<p>CAUTION</p> <p>RISK OF ELECTRICAL SHOCK, DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>
---	---	---

Appendix



This product meets ENERGY STAR program requirements for energy conservation. Selecting ENERGY STAR products is a responsible way to save energy and money while protecting our environment. ENERGY STAR is a U.S. registered mark.



The RBRC seal on the battery used in your product indicates that CCT is participating in the Rechargeable Battery Recycling Corporation (RBRC) program to collect and recycle rechargeable batteries. We encourage you to explore the easy recycling options available to you in your area. For more information visit www.rbrc.org or call 1-800-8-BATTERY or contact your local recycling center.

In accordance with California Proposition 65, CCT advises that nickel is a chemical known to the State of California to cause cancer.



This product has reduced magnetic noise interference with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the Telecommunications Industry Association. Used under license.

Appendix

One Year Limited Warranty

CCT Tech USA Inc. (CCT), the licensed manufacturer of this GE® branded product, warrants this product to the original retail purchaser to be free of material and/or workmanship defects for a period of one year after the date of original retail purchase. Proof of the original purchase is required to obtain a remedy under this limited warranty and the product must be returned to CCT at your expense.

During the limited warranty period, CCT or its authorized service representative will repair or replace at CCT's option, without charge, a materially defective product. We may use new or refurbished replacement parts. If we replace the product, it may be with a new or refurbished product of same or similar design. CCT may keep any removed or defective parts, and/or replaced product. The repaired or replaced product is warranted for the remainder of the original warranty or 90 days, whichever is greater. Repair or replacement of this product at CCT's option is your exclusive remedy.

This limited warranty only applies to products purchased, used and serviced in the United States and its territories, or Puerto Rico. If you purchased this product outside of the United States, its territories or Puerto Rico, contact your dealer for service information.

This is the only warranty applicable to this product. **ALL OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. CCT IS NOT LIABLE FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL OR SIMILAR DAMAGES INCLUDING, BUT NOT LIMITED TO, LOST PROFITS OR REVENUE, INABILITY TO USE THE PRODUCT, OR ANY OTHER ASSOCIATED EQUIPMENT, THE COST OF SUBSTITUTE EQUIPMENT, AND ANY CLAIMS BY THIRD PARTIES RESULTING FROM THE USE OF THIS PRODUCT.**

This warranty gives you specific legal rights, and you may have other rights that vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the limitations or exclusions stated above may not apply.

What Is NOT Covered Under This Limited Warranty

- Normal wear and tear or cosmetic damage.
- Damage due to accidents, misuse, physical force, improper installation or operation, mishandling, neglect, fire, heat, water, humidity, liquids, insect infestation, or other intrusion.
- Products that have been repaired, altered or modified by anyone other than CCT or its authorized service representative.
- Problems caused by signal conditions, radio interference, network reliability, cable or antenna systems.
- Damage caused by use of non CCT accessories or misapplication.
- Products whose serial numbers have been removed, altered or rendered illegible.
- Products purchased, shipped from, used or serviced outside the United States.
- Batteries.
- Products used for business, commercial or institutional purposes.
- Damage caused by acts of nature such as, but not limited to, lightning damage.
- Products returned without valid proof of purchase.

Appendix

How To Obtain Warranty Service

Call our customer service center at **1-877-394-9775**. Our customer service specialist will assist you in obtaining warranty service. Please have a paper and pencil handy to write down the warranty service return instructions.

-OR-

You may visit our web site at **www.gephones.com** for troubleshooting, FAQs, and information on warranty service.

Accessibility

If you have a disability or questions about how CCT's products can accommodate persons with disabilities, please call our customer service center at **1-877-394-9775**. When calling, please let our specialists know that you have an inquiry about accessibility so your call is routed properly.

Appendix

Index

A

Alarm 23
Answer a call 11
Area code 10
Audio boost 12
Auto Talk 20

B

Base name 22
Battery charging 8
Battery installation 4

C

Caller ID 29
 delete an entry 30
 display screen messages 30
 review/call 29
 save to phonebook 30
Call intercept 35
Call screening 35
Character table 26
Charger installation 3

D

Date and time 23
Delete all messages 36
Delete message 36
Dialing mode 10

E

End a call 11
Energy save 16
Equalizer 12, 19, 22

F

FCC 45

G

General Product Care 41

H

Handset deregistration 39
Handset layout 7
Handset locator 15

Handset name 19
Handset screen display icon 9

I

Important safety instructions 42
Initiate an intercom during a call 17
Intercom 16

K

Key beeps 21
Key tone 18

L

Language 19, 21

M

Make a call 11
Message Alert 34
Message capacity 31
Message playback
 handset 36
 telephone base 36
Multiple handsets 14
Mute 11

O

Outgoing announcement 32
 delete 33
 record 33

P

Parts checklist 1
Phonebook
 add an entry 24
 add to block list 30
 delete all entries 28
 delete an entry 28
 edit an entry 27
 search entry 27
 view/call 26
Phonebook Caller-ID matching 29
Predial a call 11

Appendix

R

Redial

delete 14

dial 13

save to phonebook 13

Remote access commands 38

Remote access operation 37

Reset VMWI 15

Ring delay 34

Ringer melody 18

Ringer tone 21

Ringer volume 18

S

Security code 37

Security code for remote access 34

Speakerphone 12

T

Telephone base installation 2

Telephone base layout 5, 6

Telephone base screen display icon 9

To answer an incoming call during intercom
16

Troubleshooting guide 40

V

Voice mail 14

Volume control 12

W

Warranty 48

Appendix


Technical specification

Radio frequency band	DECT 6.0 (1910MHz to 1920MHz)
Telephone base input voltage and current	6VDC 500mA
Charger input voltage and current	6VAC 300mA
Battery specifications	2.4V 550mAh

Appendix

Remote access operation card

The remote access card below lists the commands needed to operate your answering system remotely from any touch-tone telephone.

Cut along dotted line 

Remote access operation card

1. Call your telephone number from a touch-tone telephone.
2. Enter your security code using the numeric keypad on the touch-tone telephone when your answering system takes your call and you hear your outgoing announcement.
(Default is 123).

Security code:

<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------

3. The system will start playing the remote access menu if the security code is correctly entered.

NOTE: For more details about remote access operation, refer to page 37 of the user's guide.

Fold here 

Remote access commands

Touch-tone keys	Remote command
1	Replay the current or previous message.
2	Play/stop messages.
3	Skip to the next message.
4	Turn the answering system on or off.
7	Listen to the main menu.
0	Delete the current message.

visit our website:

www.gephones.com



is a trademark of General Electric Company and is under license
by CCT Tech USA Inc., Irving, TX 75039

Model 30544
P/N: 480-95290-000002
Version 1 02/2011
Printed in China

©2011 CCT Tech USA Inc.
Distributed in the U.S.A. by
CCT Tech USA Inc.