 


Auto Power on/off

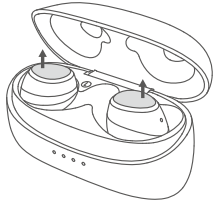

- When you pick up earphones from case, earphones will automatically power on, indicator lights blink.


Important:

* If earphones are taken out from case, indicator lights do not blink and can not turn on automatically, means batteries are low; please recharge case and earphones.

* If earphones can not turn on automatically, please touch 2 seconds to manually power on.

- When you put earphones into case, earphones will automatically power off and charge.

● If earphones and Bluetooth do not connect in over 2 minutes, earphones will automatically power off.

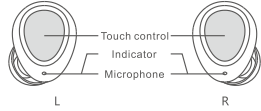

1

Auto Pairing with Mobile Phone

1. Dual earphones connect with mobile phone

- Take dual earphones from case, dual earphones automatically power on and pair.
- One earphone will blink green, another earphone will blink red and green intermittently.
- Go to Bluetooth settings and choose "Diso 807" to connect.
- To use earphones again, just pick up earphones from case, earphones will automatically connect to mobile phone.


2. Left and right earphone can be connected individually with mobile phone

- Pick up left or right earphone individually from case, earphone's indicator light will blink red and green intermittently.

- Go to Bluetooth settings and choose "Diso 807" to connect.

Important:

If earphones and Bluetooth do not connect in over 2 minutes, earphones will automatically power off.

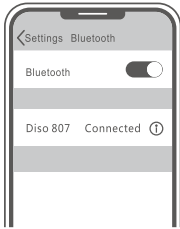

2

Key Functions

	Left	Right
⏮ Previous track	Touch twice	
⏭ Next track		Touch twice
⏮ Play / Pause(L/R)	Touch once	Touch once
🔊 Volume control	Touch 2 seconds decrease	Touch 2 seconds increase
📞 Ending call(L/R)	Touch once	Touch once
📞 Rejecting call(L/R)	Touch twice	Touch twice
📞 Receiving(L/R)	Touch once	Touch once
🗣 Siri / Voice assistant(L/R)	Touch triple times	Touch triple times
⏻ Manually Power on	Touch 2 seconds	Touch 2 seconds
⏻ Manually Power off(L/R)	Touch 8 seconds	Touch 8 seconds
Reset to factory setting	put dual earphones back into case→touch dual earphones 10 seconds→Android: take out dual earphones to find "Diso 807" to connect→Apple System: delete existing "Diso 807"→take out dual earphones to find "Diso 807", touch it to connect.	

Change Ear Tips

Choose the most comfortable fit for your ears. For example, use small ear tip for large ear canal will not seal well, will decrease bass, but can better hear environment sounds.




3

How to Wear or Change Sport Ear Hooks

- During sports activities, if normal ear hooks become loose, please change to sport ear hooks.

● If sport ear hooks are worn in reverse direction, it would affect its stability in wearing and can not recharge in case.

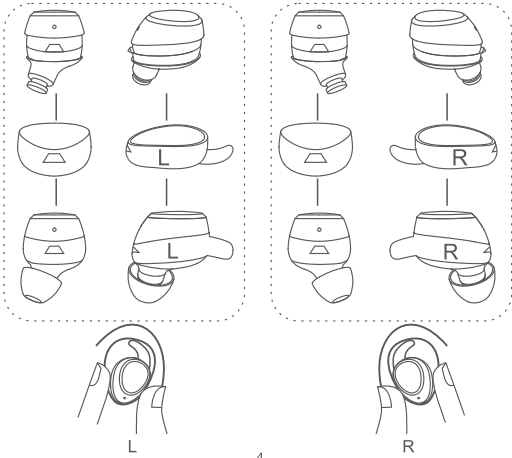


4

Charge

1. Charge case


Connect cable to Type C port and USB adapter. The indicator lights blink while charging, and will be always on when case fully charged.

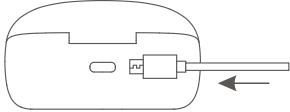

2. Charge earphones


- Place earphones into case, indicator lights blink red when charging. When fully charged, indicator lights green for one minute and extinguishes.

● If earphones are taken out from case, indicator lights do not blink and can not turn on automatically, means batteries are low, please recharge case and earphones.

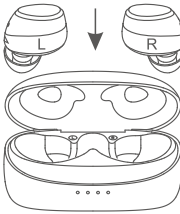


5

Products and Accessories

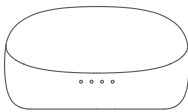

Charging case

 

True Wireless earphones



Ear hooks



 
Sport ear hooks



S M L



Ear tips



Charging cable



User manual

6

Specifications

Bluetooth	V 5.0	Case charges earphones	> 3 times
Distance	10 m	Total playing time	> 20 h
Talking time	5 h	Operating environment	-5°C~40°C
Playing time	5 h	Distortion	< 0.3%
Output power	5mW+5mW	S/N	> 70dB
FCC ID	YILMH-807		

* The earphone battery life time is the actual data based on 50% volume of the lab test, battery life and charge cycles vary by use and settings.

Troubleshooting

1. Mobile phone unable to find Bluetooth earphone or left and right earphones cannot connect and pair:

- Put earphones inside case→take them out to find "Diso 807" to connect→if still unable to find "Diso 807" or connect→reset to factory setting: put dual earphones back into case→touch dual earphones 10 seconds→Android: take out dual earphones to find "Diso 807" to connect→Apple System: delete existing "Diso 807"→take out dual earphones to find "Diso 807", touch it to connect.

2. If earphones get stuck or break off when talking and listening to music, it might be because:

- Earphone is low on battery, please charge.
- Mobile phone and earphone distance is over 10 meters.
- There is obstacle between mobile phone and earphone, ie. wall.
- In complicated Wi-Fi signal environment.

7

Warning

- Please do not use earphones when driving, riding bicycle, or crossing street.
- When doing outdoor sports, please use smaller ear tips to listen to environment sounds. Bass will decrease.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.

* The company reserves final explanation.

8

Warranty Card

Customer name: _____

Contact number: _____

Contact address: _____

Product item: _____

Problem description: _____

Warranty instructions:

Thank you for purchasing our products. To protect your legal rights, please read following items: This card is a product warranty certificate. Please provide card together with the product to our company for any after-sales repair.

This warranty card is only valid for product use within the scope of the following:

- The company products obtained through legitimate and formal channels.
- Non-human damaged product, including but are not limited to unauthorized removal, unloading, improper use, natural disasters and so on.
- Does not exceed the product warranty period of 1 year.

DISO INC
www.disosport.com
Email: diso@disosport.com

Diso[®]
Music Sport Health

True Wireless Bluetooth Earbuds
MH-807 User Manual
IPX5
Patented Product