

Instruction Manual

 
PH-BT1000
Portable Rechargeable
Bluetooth Stereo Speaker



©2014 Photive South Plainfield, NJ 07080
iPad is a trademark of Apple Inc., in the U.S. and/or other countries. iPhone is a trademark of Apple Inc., in the U.S. and/or other countries. Siri is a trademark of Apple Inc., in the U.S. and/or other countries. All other trademarks and trade names are those of their respective owners.
Made in China

1 Year Limited Warranty

For Warranty & Support Please e-mail support@photive.com

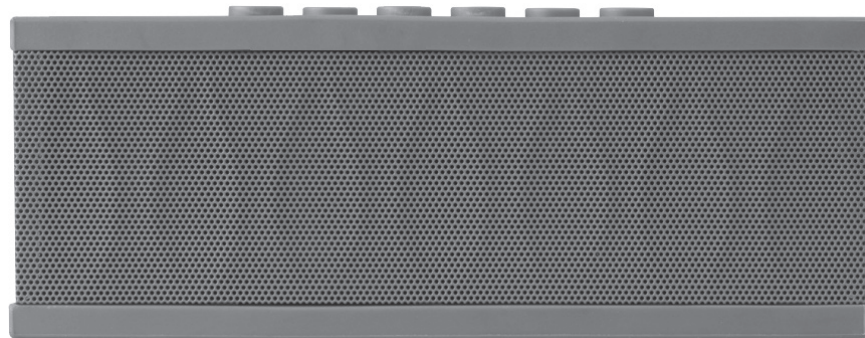

Introduction

Thank you for purchasing the Photive PH-BT1000 and welcome to the Photive family! This product is designed to provide you with portable wireless high quality sound for your iPad®, iPhone®, iPod®, computer or other Bluetooth audio devices.

This instruction booklet explains the basic operations, specifications and care of the unit. Please read them carefully and keep for future reference.

Main Features

1. Soft housing, with metal netting (customizable design)
2. Special suspension speaker driver with LF diaphragm, delivers outstanding bass
3. Low battery warning when battery power is low
4. Two 40MM 5W driver deliver massive and rich sound
5. Built-in microphone for hands-free speaker phone
6. Built-in rechargeable battery for up to 8 hours of playback
7. Wireless control of volume, tracks and speaker phone
8. Activate Siri® (on apple devices with iOS 6.0 or higher) with the push of a button
9. Easy connection to any Bluetooth device (auto connect to last paired device)
10. Customizable colors (black, red, silver, etc)

FCC

FCC NOTICE This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions;

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

To locate the FCC and IC identification numbers, please look on the underside of the speaker.

CE STATEMENT

This product is compliant with the CE directive. All returns must be made to the original place of purchase.



Carrying Case

A portable speaker is a great way to listen to your music anywhere. Included in the package with your new PH-BT1000 speakers is a stylish carrying case. The carrying case is a great accessory that allows you to easily move your speaker from one location to another while keeping it safe from dirt and dust. The case is light enough to let the music flow through it freely, but strong enough to protect your speakers from the wear and tear of every day use.


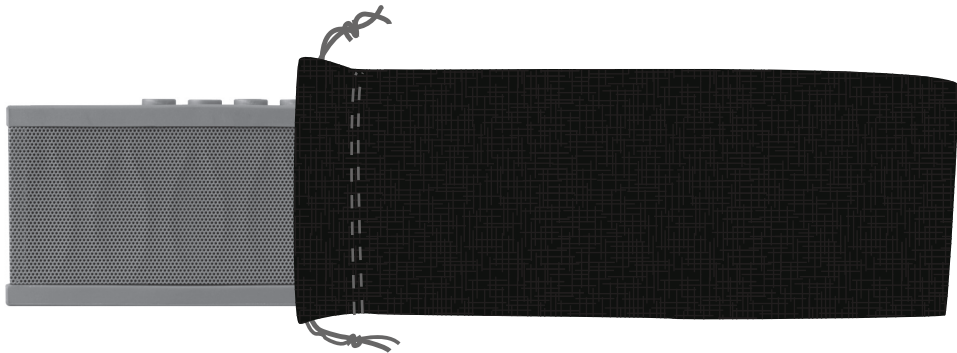 


Table of Contents

Speaker Overview	1-2
Charging your Speaker	3
Pairing your Device	4
Controlling your Music	5
Answering Calls	6
Using Line-In Audio Jack	7
Battery Status on Iphone/iPad [®]	7
Specifications	8
Safety Information	9-10

 Speaker Overview: Front

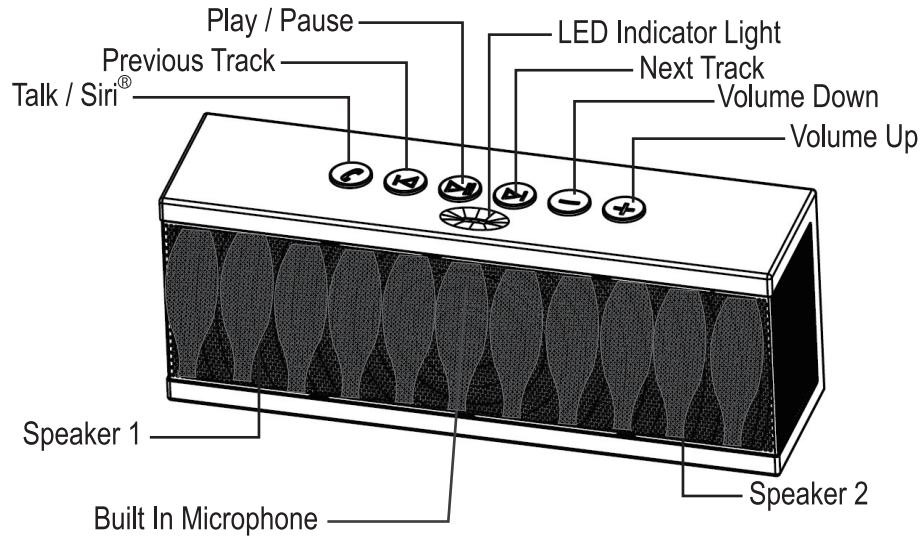

Automobile Accident Hazard

· Do not leave or store the speaker or any of its accessories near or over your automobile's air bag because serious injury may result when an air bag deploys.

Fall Hazard

· Do not place the speaker on high surfaces such as shelves. During music playback the speaker may move which could cause the speaker to shift and fall off the edge.

⚠ CAUTION

- Do not use abrasive cleaners to clean your speaker because this could cause scratches or damage.
- Do not bring your speaker in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your speaker unless otherwise specified in this User Manual. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your speaker yourself.
- Do not attempt to replace the battery of the speaker. It is built-in, and not changeable by users.
- Use only the USB charging cable supplied in the accessories package to charge the speaker, from the USB port of computer. Or charge the speaker with a wall main charger supplied from the same store where you purchase this speaker. Other chargers may look similar, but using them could result in electric shock and could damage the speaker.
- Observe all signs and displays that require an electrical device or RF radio products to be switched off in designated areas.

Safety Information

⚠ WARNING

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

 
Fire and Electric Shock Hazard

- Do not expose your speaker to liquid, moisture, humidity, or rain. Do not use the speaker near a bathtub, sink, sauna, pool, or steam room. Exposure of the speaker to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the speaker. Such actions could result in electric shock.
- Clean the speaker only with a dry cloth.
- Do not expose your speaker to extremely high or low temperatures.
- Do not leave your speaker in direct sunlight for extended periods of time.
- Do not leave your speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block ventilation openings.

Battery/Charging Hazard

- Do not dispose your speaker in a fire. The battery could explode causing injury or death.
- Only charge the speaker in accordance with this User Manual.
- Do not charge the speaker in damp areas or in extremely high or low temperatures because this could result in electric shock.
- Do not clean the speaker when it is being charged. Always unplug the charger first before cleaning the speaker.

Speaker Overview: Back

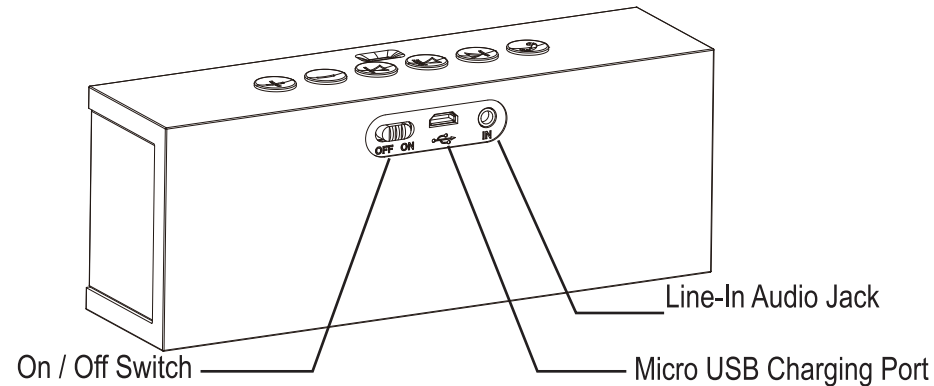


Charging your Speaker

Before using your new wireless portable speaker, please charge it using the Micro USB charging cable included in the package. Preferred charging method is through a computer USB port. For optimal AC charging, please use a 5V 1.0A USB charger.

Plug the small Micro USB pin into the charging port on the back of the speaker, and the other end of the cable (the standard USB 2.0 plug) into any standard USB port (such as a computer or USB Charger).

The LED indicator light will turn red when it is being charged. When it is fully charged, the LED indicator light will turn blue. A full charge takes about 3-4 hours.

 The speaker can be charged while playing music. The battery of the speaker will be charged until the charging process completes. If the speaker is being powered by AC input directly the battery will go into sleep mode after it is fully charged.

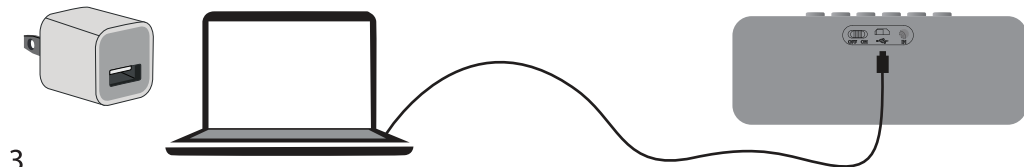

Specifications

Dimensions:	162.5MM (length) *42.5MM (width) *63MM (height)
Weight:	270g(speaker only)
Speaker driver:	stereo, 40MM, 30hm
Speaker output:	5W*2
LF diaphragm dimension:	25*40 MM
Frequency Response:	180Hz-20KHz
Signal-to-Noise Ratio:	≥80db
Distortion:	≤0.1%
Battery life:	Up to 9 hours(via audio input) Up to 8 hours(via Bluetooth) **Battery life will vary based on the volume your speaker is set to. Listening to the speaker at higher volumes will reduce battery life
Battery Charging voltage:	5V(500mA)
Working voltage:	3.3 -- 5V
Battery charging time:	3.5-4 hours
Battery capacity:	1500 mAh
Interface:	Bluetooth, 3.5MM audio line-in jack, Micro USB charging port
Operating Frequency Range:	2.4GHz-2.48GHz
Bluetooth transmission distance:	10 meters
Bluetooth compliant:	3.0+EDR

Using the Line-In Audio Jack

If your device is not Bluetooth enabled you can still enjoy your music simply by using the Line-In Audio Jack. Connect the speaker with the audio cable that is included in the package to any device with a 3.5MM standard audio jack. Once connected the speaker can be used as a wired speaker.

Please note: the TALK, PLAY/PAUSE, PREVIOUS & NEXT, VOLUME UP and VOLUME DOWN buttons only work when connected wirelessly via Bluetooth. In the case of a wired connection, music can only be controlled on your device.

Battery Status on iPhone® and iPad®

When the speaker is connected to an iPhone® or iPad® via Bluetooth, the battery status of the speaker can be displayed on the top of the iPhone®/iPad® screen, after the Bluetooth symbol. This makes it easy to know when to plug in your speaker to keep the music going or to charge up the battery.



Bluetooth battery status

Pairing your Device

- 1) Make sure the PH-BT1000 is fully charged.
- 2) Enable Bluetooth your Bluetooth device (iPhone®, iPad®, tablet). Bluetooth controls are typically found in the tools or settings menu. Turn on Bluetooth connectivity and make sure your device is "visible" or "discoverable."
- 3) Turn on your new PH-BT1000 by switching the button on the back of the speaker to "On".
- 4) After turning on the PH-BT1000, the LED lights should alternate between shining red and blue. This signals that the Speaker is in "pairing mode".
- 5) Choose "add new Bluetooth device" or "setup Bluetooth device" on your device. It will search for the PH-BT1000.
- 6) As your Bluetooth device discovers possible items to connect to, it will list their names. Select the device named PH-BT1000. This will connect your speaker to your Bluetooth device.
- 7) If the pairing attempt fails or times out (roughly 3 minutes), restart both devices and start the pairing process again (Steps 2 - 6).
- 8) Once paired successfully, the LED indicator lights will turn blue and blink twice every 3 seconds.
- 9) Enjoy your music wirelessly anywhere you go!

Controlling your Music

Once your speaker is connected to a Bluetooth device (mobile phone, tablet, PC, or laptop etc.), you are free to control your music any way you want!

Press the Volume UP and Volume DOWN button to increase or decrease the volume. There will be a reminder tone “du du du ” when the speaker is at maximum or minimum volume. Pressing the Volume UP and DOWN buttons only increases or decreases the volume of the speaker, but it does not increase or decrease the volume of the Bluetooth device. Volume can also be adjusted from the Bluetooth devices (sound source).

To switch to the previous or next song simply press the Previous and Next button on the speaker. This will switch to the previous/next song in the playlist of the Bluetooth device.

Press the Play/Pause button on the speaker to start or pause songs.

Please note that the Previous, Next, and Play/Pause buttons can only control the music playing from the default music playing software on the Bluetooth devices. If the music playing software is not the default player, the music may not be able to be controlled via these 3 buttons. And the Play button may start another song in the playlist of the default player.

Answering Calls

You can use the PH-BT1000 as a portable speakerphone for incoming calls when connected wirelessly via Bluetooth.

To answer a call, press the TALK button and talk as you would with your device if it was on “speakerphone” mode. The built in microphone will pick up your voice just like a phone.

To end a call, press the TALK button again. To refuse a call, press and hold the TALK button for 2 seconds. You can re-dial the last number called by double pressing the TALK button.

Using Siri®

When the speaker is connected to an iPhone®/iPad® via Bluetooth, press and hold the TALK button for 3 seconds to activate the Siri function on iPhone®/iPad®. Then talk to the speaker after hearing the “Siri” sound.

Please note that iPhone®/iPad® may not be able to recognize human speech when the speaker is being used in a noisy environment. Siri® may not work if iPhone®/iPad® is not connected to the internet.

When the Siri® conversation is finished, the speaker will continue playing audio.