

Contents

| | | |
|---|--------------------------------------|---|
| 1 | Spjecifications..... | 1 |
| 2 | Interface /button description..... | 2 |
| 3 | Main menu..... | 3 |
| 4 | Basic Operation..... | 4 |
| | On /Off..... | 4 |
| | Screen timeout, Wake up, unlock..... | 4 |
| | Software install and uninstall..... | 4 |
| | Locale and text..... | 4 |
| | Desktop Shortcuts..... | 4 |

| | | |
|---|---|---|
| | Networks controls..... | 5 |
| | USB Mode Select..... | 5 |
| | Connect to PC, and read the local disk..... | 5 |
| | Software Update..... | 5 |
| 5 | Questions and Answers..... | 5 |
| 6 | Maintenance Guidellines..... | 6 |

1 Specifications

- Display Screen: 7" WVGA 800*480 TFT
- Memory: 128MB SDRAM
- Flash: 8GB
- CPU: RK2808A
- Support audio format: MP3,WMA,WAV,APE,OGG,FLAC,AAC.
- Support video format: AVI,3GP/MP4,RM/RMVB,FLV,MKV,MOV,WMV
- Support photo format: JPG/JPEG/BMP/GIF/PNG
- Screen timeout: Adjust the delay before the screen automatically turns off.
- Support video output: HDMI& YPBPR
- Support for multiple languages
- USB2.0 High-speed transmission
- Support the third-party software install and uninstall, such as: games, other application software.
- Audio Input / Output: built-in stereo speakers, external microphone input, headphone output
- Port: DC jack, Headphone jack, USB 2.0*1,MINI USB*1,HDMI*1, YPBPR*1
- Use temperature: -5 to 40 degrees Celsius

2 Interface /button description

开关机键
Power Key

退出键
ESC

增加音量
VOL+

减少音量
VOL-

菜单键
Menu



电源接口
DC Jack
音频输出
Headphone jack

USB端口
USB Port

高清晰多媒体
端口 HDMI

色差分量端口
Ypbpr

迷你USB端口
MIN USB Port

TF卡槽
TF Card Slot

3 Main menu

| Applications | Function&Description |
|---------------------|--|
| Alarm Clock | Set the alarm to alert the user to do something. |
| Audio Player | Play Audio File. Support audio format: MP3,WMA,WAV,APE,OGG,FLAC,AAC. |
| Browser | Web browsing. |
| Calculator | To carry out mathematical operations |
| Email | Users can receive / editor / Send mail |
| Explorer | Resource Management: SD Card \Internal Memory \USB |
| Photo Browser | Support photo format: JPG/JPEG/BMP/GIF/PNG |
| Settings | Users can set various parameters of the system |
| Sound Recorder | Saved automatically after recording |
| Video Player | Play Video File. Support video format: AVI,3GP/MP4,RM/RMVB,FLV,MKV,MOV,WMV |

4 Basic Operation

● **On /Off**

(1)On: Slide the power key to the left side, and hold on for 3 seconds.

(2)Off: Slide the power key to the left side, and hold on for 3 seconds, and then pop-up a shutdown interface, click the item "Power off".

● **Screen timeout, Wake up, unlock**

(1)"Settings 启"→"Sound & display"→"Screen timeout", can adjust the delay before the screen automatically turns off.

(2)When screen turns off, press power key to wake up.

(3)When display "Screen locked", press menu key to unlock.

● **Software install and uninstall**

Copy the APK package which you want to install to the U disk / TF Card / Local disk, then you can install or uninstall it as follow:

(1)**Install**---Find the APK package which is in SD Card/Internal Memory/USB, Click it to Install.(The first time you install the APK package, you must pitch on the item "Settings"→"Applications"→"Unknown source")

(2)**Uninstall**---"Settings"→"Applications"→"Manage applications", at this interface, you can click the applications which you do not need to uninstall.

● **Locale and text**

(1)"Settings"→"Locale & text",you can set locale(language and region), text input and auto-correction option.

(2)You can switch the input method, or you can choose the other input method for text editing.

(3)Switch input method: Hold and press The first key in the last row of the keyboard,and then will pop up a interface, you just need to choose the item "input method".

● **Desktop Shortcuts**

(1)Press in black of the home screen and hold on, there will be appeared the "Add to home screen" interface.

(2)Optional items: Shortcuts / Widgets / Folders / Wallpapers.

- **Networks controls**

- (1)"Settings"→"Networks controls", you can click the "Wi-Fi" to turn on wireless device,
- (2)Press "Wi-Fi settings" to set up & manage wireless access points; you can select one point from the "Wi-Fi networks" list.

- **USB Mode Select**

- (1)"Settings"→"USB Mode select"→"Host mode",Select USB work as host mode, then you can mount U-disk or 3G modules.
- (2)Insert the USB device, the upper left corner will be prompted for "USB disk inserted".

- **Connect to PC, and read the local disk**

- (1)"Settings"→"USB mode select", unselect the item "Host mode".
- (2)Connect the unit and PC with mini USB cable, then pop-up the "USB connected" interface, click "Mount" button, the local disk will appear on the PC, you can copy files to the local disk.

Note: When you connect to PC first time, should update the USB drivers, which can be found "USB DRIVER" in the Drivers CD.

- **Software Update**

The method of update Software, please see the www.chinaleap.com/service.aspx

5 Questions and Answers

| Questions | Answers |
|--------------------------------|---|
| Do not boot. | Connect the power adapter for charging, and then boot again. if do not boot, please contact our distributors. |
| Do not connect to the computer | Make sure the USB cable isn't damaged. |
| Do not copy file | Make sure the internal memory isn't full |

| | |
|--|---|
| Machine exception, can not be used. | The back of the machine, there is a small hole .Through this hole user can reset. |
| I can't open some of my photos? | Some of the photo or picture file format may not be supported.Please refer to the previous [specificatons]. |
| I can't play some of my music. | Some of the music file format may not be supported.Please refer to the previous [specificatons]. |
| I can't play some of my video. | Some of the video file format may not be supported.Please refer to the previous [specificatons]. |
| Can I delete the image, music or video in the external storage device? | Yes, you can. |
| Can I delete the image, music or video in the internal storage device? | Yes, you can. |
| A customer service phone? | Hotline : 400-6385-800 |

6 Maintenance Guidellines

To enhance the performance and extend the life of the M1:

- 1.Do not open the M1 or attempt to service this product yourself. If the M1 is not operating properly or has been dropped or damaged, contact your reseller, or service provider.
- 2.Keep the M1 in a well-Ventilated area, away from excessive light, heat ,or moisture.
- 3.Unplug the M1 from the power outlet before cleaning.
- 4.Do not use liquid cleaners or aerosol cleaners.
- 5.Do not drop the M1 or place it on an unstable surface.
- 6.Do not use ammonia, alcohol, or abrasive detergent cleaning agents.
- 7.Use a clean, soft, lint-free cloth to remove dust and loose particles.
- 8.Do not apply too much pressure on the screen to avoid damaging it.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.