 


BASE UNIT Controls

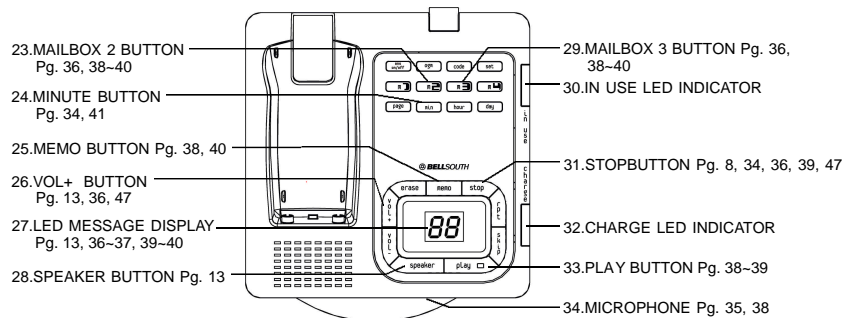

23. **MAILBOX 2** **2** **Button:** Press to activate functions for MAILBOX 2.
24. **MINUTE** **min** **Button:** Press to set the minute during time setting, or press to set the third digit of the access code during code setting.
25. **MEMO** **memo** **Button:** Press and hold down to record memo messages.
26. **VOL +** **vol +** **Button:** Press to increase the speaker volume.
27. **LED MESSAGE DISPLAY:** indicates the number of memos/messages received, status of the system.
Ea - Erase *OP* - OGM is playing *01 ~ 63* - No. of memos/messages
AO - Announce Only *FU* - Memory is full *PA* - Pause
28. **SPEAKER** **speaker** **Button:** Press to answer the incoming call using the **BASE UNIT**.
29. **MAILBOX 3** **3** **Button:** Press to activate functions for MAILBOX 3.
30. **IN USE LED Indicator:** Lights up to indicate that the **HANDSET** is in TALK mode.
31. **STOP** **stop** **Button:** Press to stop playing a message. Press and hold down for more than 3 seconds to initiate/re-initiate your answering machine, then release the button and a "beep" will sound.(See detail operations in pages 34 and 47.)
32. **CHARGE LED Indicator:** Lights up when the **HANDSET** is placed on the **BASE UNIT** for charging.
33. **PLAY** **play** **Button:** Press to play messages.
34. **MICROPHONE**

Contents

Safety Instructions	4
Getting Started	6
Desk Mounting	9
Wall Mounting	10
Cordless Telephone Operation	12
Preparing for Use	12
NO LINE Indicator	12
Receiving Calls	12
Receiving Calls Using the BASE UNIT SPEAKERPHONE	12
Placing Calls	14
Headset Feature	14
Redial Feature	15
Caller ID System Operation	16
Caller ID System	16
Viewing Caller Information During Incoming Calls	16
MSG WAITING (Message Waiting)	16
Call Waiting	17
Voice Mail Function	17
C-F (Forwarded Call)	17
L-D-C (Long Distance Call)	17
Caller List	17
Viewing the Caller List	18
Placing a Call From the Caller List	18
Editing the Caller List before Dialing	18
Saving the Name and Number in the Caller List into the DIRECTORY	19
Deleting All Records in the Caller List	19
Selective Deleting in the Caller List	19
Special Note to Caller List for Multiple Handset user	19
Name and Telephone Number DIRECTORY	19
Viewing the DIRECTORY	20
Speed Viewing the DIRECTORY	20
Saving in the DIRECTORY	20

Contents

PREFERRED CALLS	21
BLOCKED CALLS	21
Editing a Name and Number in the DIRECTORY	21
Editing the Number in the DIRECTORY before Dialing	22
Placing Calls from the DIRECTORY	23
Deleting All Records in the DIRECTORY	23
Selective Deleting in the DIRECTORY	23
Function Operation	24
A. Language	25
B. Silent On/Off	25
C. Time Set	25
D. Ringer Volume	26
E. LCD Contrast	26
F. PBX Number	26
G. Flash Time	27
H. Pause Time	27
I. Voice Mail	28
J. MSG Waiting (Message Waiting)	28
K. Handset Registration	29
L. RESET.....	30
Telephone Keypad Characters	31
Multiple Handsets Feature	32
How to Receive Calls	32
How to Place Calls	32
Privacy Feature	32
Handset to Handset Intercom Call	32
Transfer a Call to Other Extension Handset.....	33
Answering System Operation	34
Resetting the Answering System	34
Setting the Day/Time Stamp.....	34
Recording your Outgoing Messages	35
Adjusting the Speaker Volume	36
Turning the Answering System ON/OFF	36



Setting to Answer Calls	37
Setting to Announce Only	37
Screening Incoming Calls	37
Message Alert	37
Setting Ring Select	37
Recording a Memo	38
Playing of Message/Memos	38
Saving Messages	39
Erasing Message	40
When the Memory is Full	40
Two-Way Recording	40
Remote Control Operation	41
Remote Operation through a Tone Telephone	41
Remote Access Codes	41
Changing of the Remote Access Code	41
Using the Remote Instruction Code	42
Security.....	43
Recharging the Battery Pack	44
Changing the Battery Pack	45
Problem Solving	46
Technical Information	48
FCC Requirements	49
Warranty	51
Wall Mounting Template	53



Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock and/or injury, always follow these basic safety precautions when using your cordless telephone equipment.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the telephone.
3. Unplug this telephone from the wall outlet before cleaning or replacing the BATTERY PACK. Do not use liquid cleaners or aerosol cleaners on the telephone. Use a damp cloth for cleaning.
4. Do not use this telephone near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
5. Place this telephone on a stable surface. Serious damage and/or injury may result if the telephone falls.
6. Do not cover the slots and openings on this telephone. This telephone should not be placed near or over a radiator or heat register. This telephone should not be placed in a built-in installation unless proper ventilation is provided.
7. Operate this telephone using the electrical voltage as stated on the **BASE UNIT** of the telephone or in the Owner's Manual. If you are not sure of the voltage in your home, consult your dealer or local power company.
8. Do not place anything on the power cord. Install the telephone where no one will step or trip on the cord.
9. Do not overload wall outlets or extension cords as this can increase the risk of fire or electric shock.
10. Never push objects of any kind through the slots in the telephone. They could touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the telephone.
11. To reduce the risk of electric shock, do not disassemble this telephone. Take it to a qualified serviceman when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the telephone is subsequently used.
12. Unplug this telephone from the wall outlet and consult a qualified service representative in any of the following situations:
 - A. When the power supply cord is frayed or damaged.
 - B. If liquid has been spilled into the telephone.
 - C. If the telephone has been exposed to rain or water.
 - D. If the telephone does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the telephone to normal operation.

Safety Instructions

- E. If the telephone has been dropped or the case has been damaged.
- F. If the telephone exhibits a distinct change in performance.
- 13. Do not use the telephone to report a gas leak in the vicinity of the leak.
- 14. Never install telephone wiring during a lightning storm.
- 15. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- 16. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- 17. Use caution when installing or modifying telephone lines.

Battery Safety

CAUTION:

Danger of explosion if the BATTERY PACK is replaced with incorrect type. Replace only with the same or equivalent type. To reduce the risk of fire or personal injury, read and follow these instructions:

1. Use only the following type and size of BATTERY PACK:
 - Cordless Telephone BATTERY PACK
 - 3.6V, 750mAh
 - U.S. Electronics Inc.
 - Ni-MH BATTERY PACK: Model B660
 - (See page 44 for ordering information.)
2. Do not dispose of the BATTERY PACK in a fire. The BATTERY PACK may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the BATTERY PACK. Released electrolyte is corrosive and may cause damage to the eyes or skin. Electrolyte may be toxic if swallowed.
4. Exercise care in handling the BATTERY PACK to prevent shorting the BATTERY PACK with conductive materials such as rings, bracelets, and keys. The BATTERY PACK or conductor may overheat and cause burns.
5. Charge the BATTERY PACK provided with (or identified for use with) this telephone only in accordance with the instructions and limitations specified in this manual.
6. Observe proper polarity orientation between the BATTERY PACK and BATTERY CHARGER.

SAVE THESE INSTRUCTIONS

ATTENTION:

 
 
 
 
The telephone that you have purchased contains a rechargeable BATTERY PACK. The BATTERY PACK is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this BATTERY PACK into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Getting Started

Connecting Your Phone

This section is a reference guide to the basic functions and operations of your cordless telephone. For more detailed descriptions of the operations and features of this telephone, refer to the Contents on page 1.

1. Carefully remove your cordless telephone from its shipping carton. If there is any visible damage, do not attempt to operate this equipment. Return it to the place of purchase.
2. Check to be sure you have all items that come with this cordless telephone system. You should have a **HANDSET**, **BASE UNIT**, **AC ADAPTER**, **MOUNTING BRACKET**, **TELEPHONE LINE CORD**, **SHORT TELEPHONE LINE CORD**, **BELT CLIP**, and an Owner's Manual.

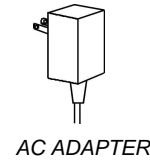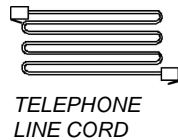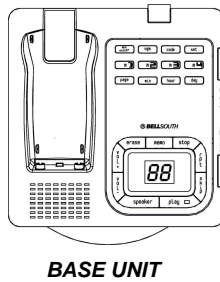


3. Insert the small plug on the end of the **AC ADAPTER** into the **POWER-IN CONNECTION JACK** at the back of the **BASE UNIT**.
4. Plug the **AC ADAPTER** into a 120V AC wall outlet, and the **BASE UNIT POWER LED** indicator will light up.




USE ONLY WITH CLASS 2 POWER SOURCE 12V DC, 500 mA.

5. Insert one plug of the **TELEPHONE LINE CORD** into the house **TELEPHONE JACK** and the other end into the **TELEPHONE LINE CONNECTION JACK** at the back of the **BASE UNIT**. (If you have an older 4-prong **TELEPHONE JACK**, you will need an **RJ-11C TELEPHONE JACK ADAPTER**. This adapter is available at the same place you purchased your telephone.)
6. We recommend not placing this unit next to appliances. Doing so may cause interference.

 
Getting Started

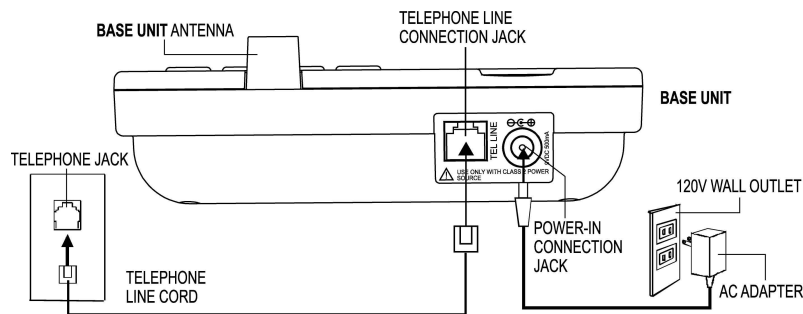

7. Install the BATTERY PACK by plugging it into the BATTERY CONNECTOR inside the BATTERY COMPARTMENT. The **HANDSET** LCD Screen will display "WAIT REG." **Follow the Handset Registration in page 29 to register your HANDSET.**
8. Place the BATTERY PACK inside the BATTERY COMPARTMENT.
9. Slide the **HANDSET** BATTERY COMPARTMENT COVER firmly into place in its closed position.
10. **IMPORTANT: Before initial use, charge the HANDSET for 12 hours.**
11. TONE/PULSE Select Switch:
 - A. If your home is equipped with a tone dialing system, set the TONE/PULSE Select Switch to the TONE position.
 - B. If you have a rotary dialing system, set the TONE/PULSE Select Switch to the PULSE position.
 - C. If you are unsure which system you have, set the TONE/PULSE Select Switch to the TONE position. Press the **talk** button on the **HANDSET** and make a call. If the call connects, leave the switch as is; otherwise set to the PULSE position.

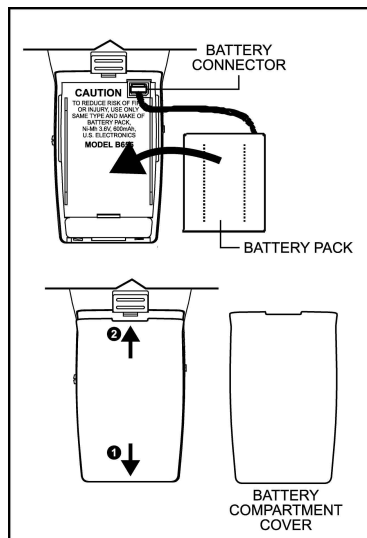 


Getting Started

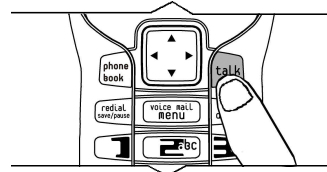 

Press the **talk** button to confirm that you have a dial tone. If you do not get a dial tone, review steps 3 through 11. If you still do not have a dial tone, refer to the Problem Solving section on page 46.

 BELT CLIP HOOK

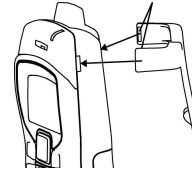

With the back of the **HANDSET** facing up, insert one side of the BELT CLIP HOOK into the matching slot at the top side of the **HANDSET**. Press down on the opposite side of the BELT CLIP until the other HOOK locks into the slot on the side of the **HANDSET**.

12. Set the date and time on the **HANDSET**. (See page 25 for details.)
13. Press and hold the **stop** button to initiate your Answering System. (See details on page 34.)
14. Set the date and time on the **BASE UNIT**. (See page 34 for details.)

*You are now ready to use your new
BellSouth Cordless Telephone.*

IMPORTANT
In order to utilize the Caller ID feature, you must subscribe to Caller ID service from your local telephone company.

Desk Mounting

Desk Mounting

One of the special features of your telephone is the unique design of the MOUNTING BRACKET which can hold your phone at an angle when desk mounting or wall mounting.

With the back of the **BASE UNIT** facing up, rotate the MOUNTING BRACKET to the position as in Figure 1 (follow the arrow direction for the DESK MOUNT). Place your telephone on any flat surface of desk as in Figure 2

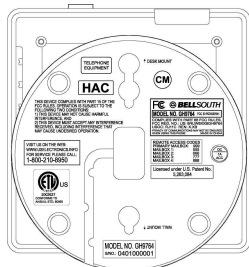 


FIGURE 1

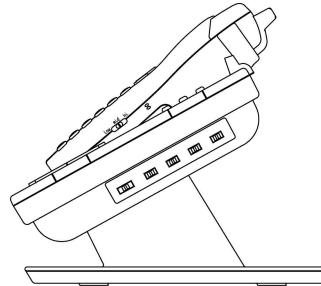 


FIGURE 2

IMPORTANT: Attach the MOUNTING BRACKET when using your phone on a desk.

IMPORTANT

Placing your **BASE UNIT** near appliances such as televisions, refrigerators, radios, or microwave ovens may cause interference.

Wall Mounting

Wall Mounting

You may choose to put the **BASE UNIT** of your cordless telephone on a wall.

1. With the back of the **BASE UNIT** facing up, rotate the MOUNTING BRACKET to the position shown in Figure 1 (follow the arrow direction for the WALL MOUNT).
2. Insert the small plug on the end of the AC ADAPTER into the POWER-IN CONNECTION JACK at the back of the **BASE UNIT**.
3. Plug the AC ADAPTER into a 120V wall outlet.
4. Connect the SHORT TELEPHONE LINE CORD to the TELEPHONE LINE CONNECTION JACK. Put the SHORT TELEPHONE LINE CORD inside the MOLDED WIRING CHANNEL as shown in Figure 2.
5. Plug the free end of the SHORT TELEPHONE LINE CORD into the MODULAR WALL JACK.

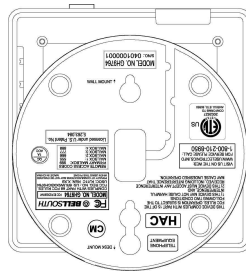 


FIGURE 1

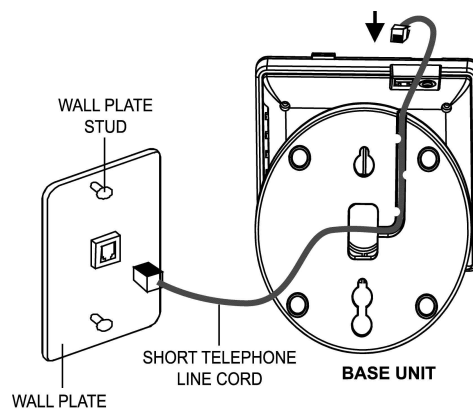 


FIGURE 2