


MATT77™

by DayMark®


Quick Start Guide

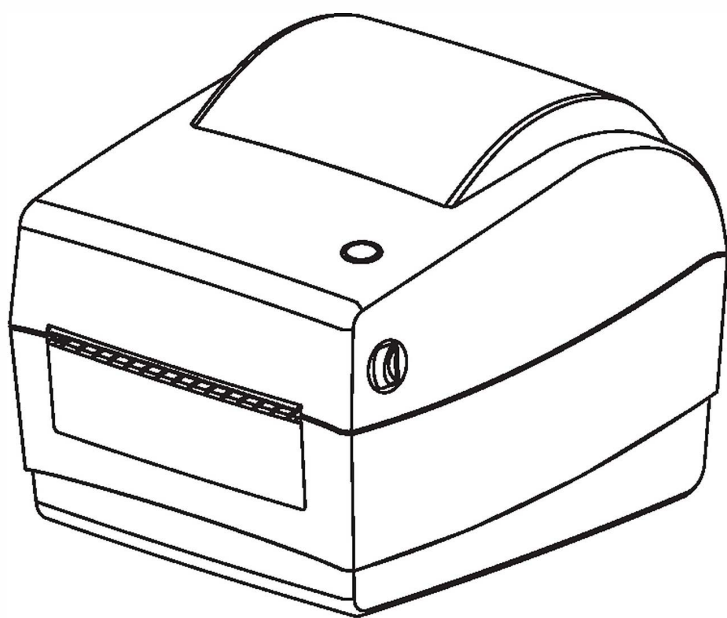


THE DIFFERENCE IS NIGHT AND DAY.™

DayMark
Safety Systems

Out-of-Box: Standard Accessories

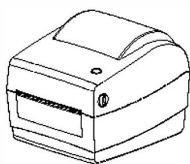

Printer

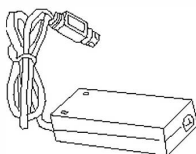

Adapter



Power Cable




Quick installation
guide

- It is recommended to keep the printer packaging after opening to be able to re-package and safely transport the printer, if needed.
- If damage or loss of product is found after opening the package, please contact DayMark Safety Systems toll-free at **866.517.0490** to reach customer service.


About the MATT77 Thermal Label Printer

• Front view

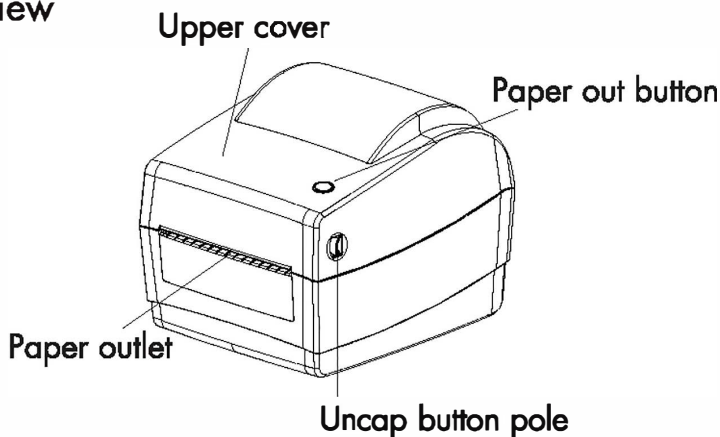


THE DIFFERENCE IS NIGHT AND DAY.™

- Rear view

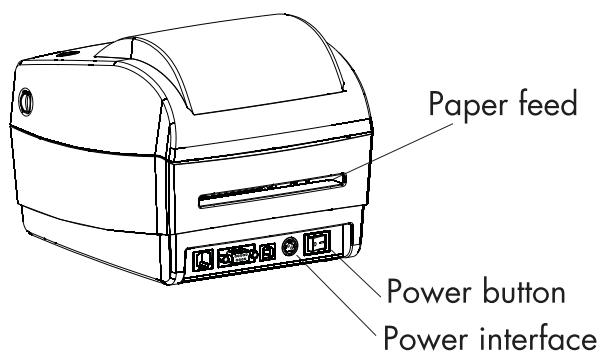


- Inner view

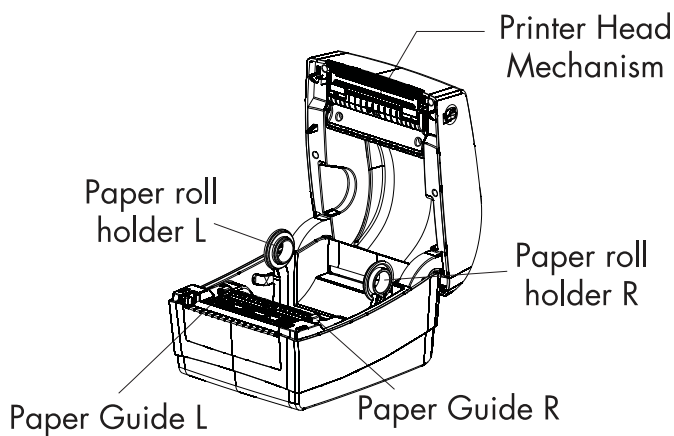

Connect the Cable

1. Make sure the printer's power button is in the 'Off' position (0).
2. Connect adaptor plug to printer
3. Connect the adaptor pin plug to the power socket.
4. Connect the other end of the power cable to electrical outlet.

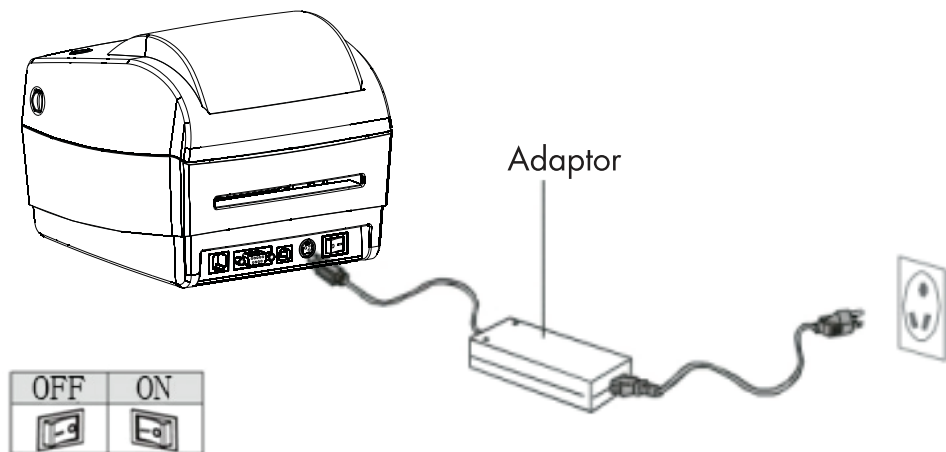


Power Connection

- Make sure the original, compatible power adaptor is used to avoid damaging the printer.
- When not using printer for an extended period, disconnect it from power.


THE DIFFERENCE IS NIGHT AND DAY.™

Install Label Rolls


1. Open and install label roll with printed face outward.

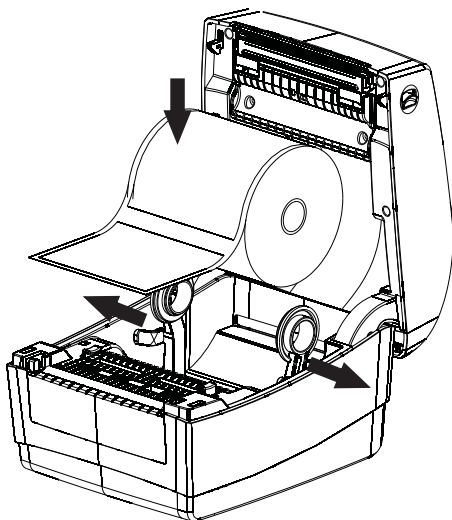

2. Pull label roll through paper guide. Pull label past rubber roller; adjust guide to fit according to label roll width.

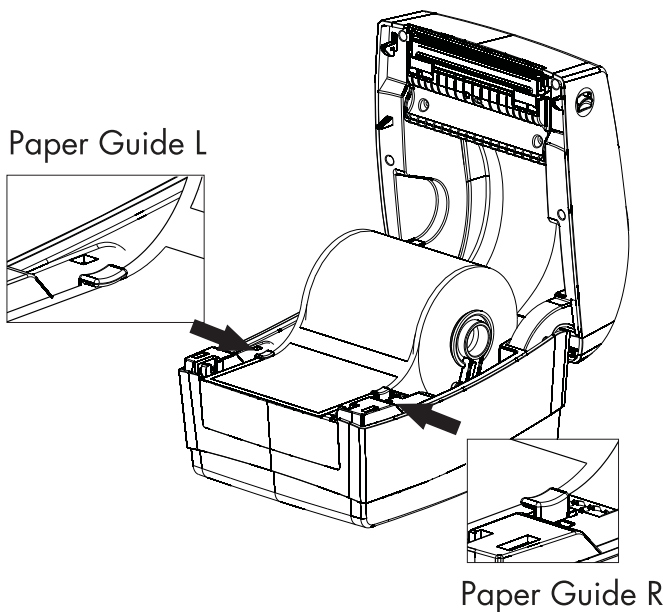

3. Close printer cover; press down until it locks in place.

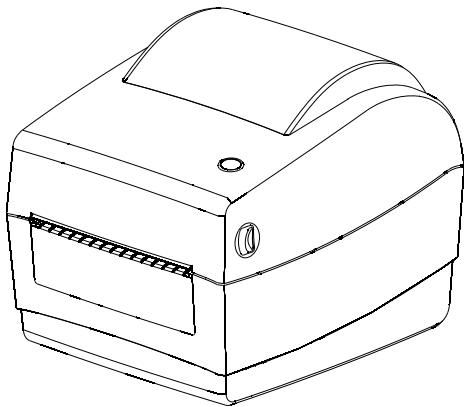

LED Indicators & FEED Button Instruction

FEED Operation Method

Printer status	Operation of FEED	Function
Standby	Press	Automatically feed blank paper
Standby	Hold (3 seconds)	Begin learn mode
Power off	Hold (release after power on)	Print out self test page
Cover open	Hold (10 seconds)	Factory Reset
Printing	Press	Print pause
Print pause	Press	Resume Printing

THE DIFFERENCE IS NIGHT AND DAY.™

LED Indicator of Printer Status

LED status	Printer Status
Green light - solid	Standby
Green light - flashing	Printing in progress
Blue light - solid	RAM test Errors
Blue light - solid	Bluetooth connected
Pink light - solid	Printer head overheating
Red light - solid	Cover open
Red light - flashing	No paper detected
Yellow light - solid	Low input voltage
Yellow light - flashing	Paper jam
White light - solid	Print pause

1 YEAR GUARANTEE

The MATT77 Thermal Label Printer, by DayMark Safety Systems, covers all parts and craftsmanship, under normal use, for one year from the date of purchase.



TECHNICAL SUPPORT

0800 085 2226

techsupport.uk@daymarksafety.com

From outside the UK, call: **+44 (0) 1606 869100**

THERMAL PRINTER POWERED WITH



MENUPILOT™
by DayMark®



FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

ISED RSS Warning/ISED RF Exposure Statement

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator& your

body.This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Le rayonnement de la classe b respecte ISED fixaient un environnement non contrôlés.Installation et mise en œuvre de ce matériel devrait avec échangeur distance minimale entre 20 cm ton corps.Lanceurs ou ne peuvent pas coexister cette antenne ou capteurs avec d'autres.



Safety Systems

DayMark Safety Systems
12836 S. Dixie Hwy.
Bowling Green, OH 43402
800.847.0101
DayMark.com