

## EF-45N™

# Next Generation Iris Recognition System

(Derivative Model : EF-45, UMX-10, UMX-20, UMX-G)

User Manual  
(v0.1.1, July 1, 2016)



Intuitive face display positioning



Internal automatic motorized tilt cameras



LAN / RS485



Optional face image capture and face recognition

---

User graphics and screen shots in this guide may vary from actual  
Some of the contents in this manual may differ from current operating library release

## Introduction to the EF-45N™ Iris Recognition System

This new iris recognition system offers highly intuitive, hands-free iris biometrics imaging in a compact and elegantly designed identification and authentication terminal for use in a wide range of identity management applications.

The front facing nominal 5.0 inch LCD serves to display the user's face image for fast, easy and highly natural positioning for proper iris image capture. The subject merely puts his or her face in the center of the LCD, and then moves toward the system to size his or her head to the brackets in the display to be in proper range. Image capture is fast and automatic. While user instructions are very simple, almost all subjects will be able to interact with the system without any directions.



EF-45N™ Next Generation  
Iris Recognition System

And the internal automatic tilt mechanism adjusts to the user's height or vertical position over a range of 50 cm (about 20 inches), making the EF-45N ideal for countertop, desktop, wall mount or kiosk installations.

The EF-45N is an embedded terminal, which means that all image processing and machine control is performed on the internal Linux-on-ARM mainboard. Typical connectivity to host systems is through TCP/IP (Ethernet). And iris biometric encoding and matching is typically performed on-board as well, so identification or authentication decisions are made locally for fast responsiveness. For access control, there are Wiegand connections for dedicated, local communications to door controllers or panels.

Other typical options include WiFi and a smart card reader.

For all specifications, please see Specification section.

For complete depiction of all EF-45N on-board screens, see "EF-45N LCD Control Screens and On-Board Demo Application" manual.

## Key Features

- Iris user interface with intuitive LCD display face positioning, like smart phone “selfie”
- Contactless iris imaging at range of 35 to 45 cm stand-off
- Internal, automatic face and iris camera tilt mechanism with nominal height range of 50 cm
- Positioning guidance vocalizations selectable on / off and delay time. English standard, all other languages available with .wav file substitution
- Simultaneous dual iris recognition with typical capture speed of under 1 second
- On-board iris encoding and matching, with internal data base of up to 10,000 users in either 1:1 (authentication) or 1:N (identification) modes
- Optional Combined Face and Iris modes:
  - Face as primary modality, with face recognition rejects decisions automatically switch over to iris recognition
  - Supplemental face recognition in case of iris recognition failure-to-capture (FTC), so that face recognition follows iris recognition attempt
- Supports dual factor authentication with card or PIN
- Optimized imaging for difficult ambient lighting conditions
- Optimized image capture for most sunglasses, glasses, and facial veils
- Supports imaging of all iris colors
- Kensington lock slot standard
- Standard communications connectors and protocols for TCP/IP (Ethernet RJ-45), RS-484 and -232, dual Wiegand I/O, TTL, and dry contact relay
- Connection cables with press-in connectors included in accessories kit
- External audio connector
- Tamper switch on rear panel
- Access control (AC) configuration includes wall mount plate
- Optional WiFi support (choice of compact or antenna type modules)
- Integrated Smart Card reader (choice of basic MiFare / DesFire card or HID multi-class reader)
- Meets CE mark, FCC, IEC 62471 eye safety, and RoHS standards. Iris recognition meets ISO 19794-6 2011 standard
- Design and production meet ISO 9001 2015 standard

## Cautions

### FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

### FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## Accessories Kit

| Includes:  | ID Management<br>Version | Access Control and Time<br>& Attendance Versions |
|--|--------------------------|--|
| Power supply (IEC C13 female)  | Yes                      | Yes  |
| Power cord (IEC C14 male), power side<br>connector type by country                             | Yes                      | Yes  |
| Basic MiFare / DesFire card reader<br>(internal)   | No                       | Yes  |
| Standard back cover  | Yes                      | No   |
| Wall mount bracket   | No                       | Yes  |
| ID I/O cables with push in connectors for<br>device, and pig tails for external<br>connections | Yes                      | No   |
| Includes cables for RS 485, RS 232, TTL (2),<br>dry contact relay                              |                          |  |
| AC I/O cables with push in connectors for<br>device, and pig tails for external<br>connections | No                       | Yes  |
| Includes cables for Wiegand (2), RS 485, RS<br>232, TTL (2), dry contact relay                 |                          |  |
| diode  | Yes                      | Yes  |

## Mounting Instructions



Recommended mounting height and UI (left), Capture Volume of EF-45N (right)

The recommended mounting height for the EF-45N is 144cm (57 inches) from floor to the bottom of EF-45N. The mounting height can be adjusted to accommodate the height of the average user.


High ambient light and / or direct light into the EF-45N should be avoided. Sunlight, halogen lamps or other strong illumination may reduce the performance of the EF-45N and may result in increased failure-to-capture rates or failed authentication events.

The EF-45N was designed for indoor use only. This unit is not weatherproof and must not be exposed to water, ice, extreme temperatures or other adverse weather conditions. If it is required to use this unit in outdoor or extreme environments contact local sales or [support@cmi-tech.com](mailto:support@cmi-tech.com) for more information.


Note: Installation in extreme environments without proper protection may cause permanent damage and void warranty.

See System, Rear diagram for wall mounting instructions.

## System, Front

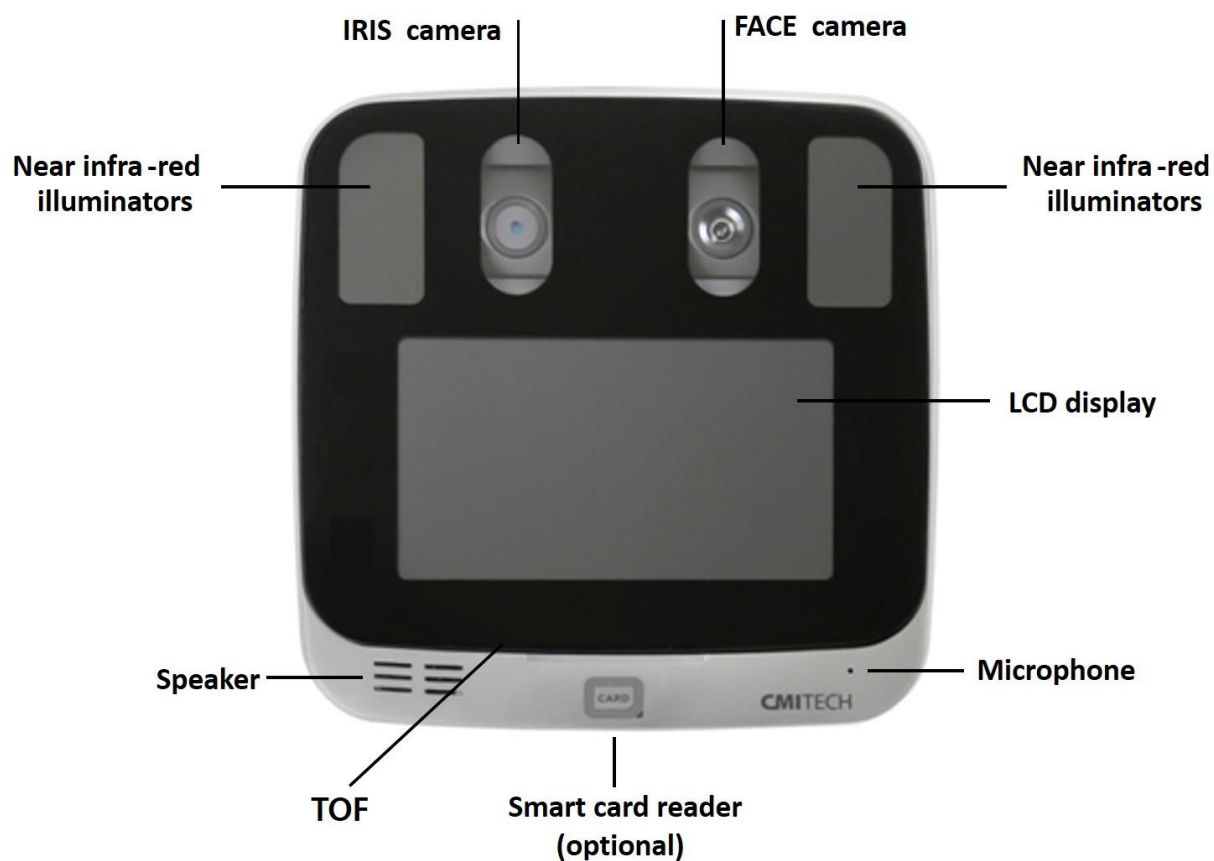


## System, Bottom

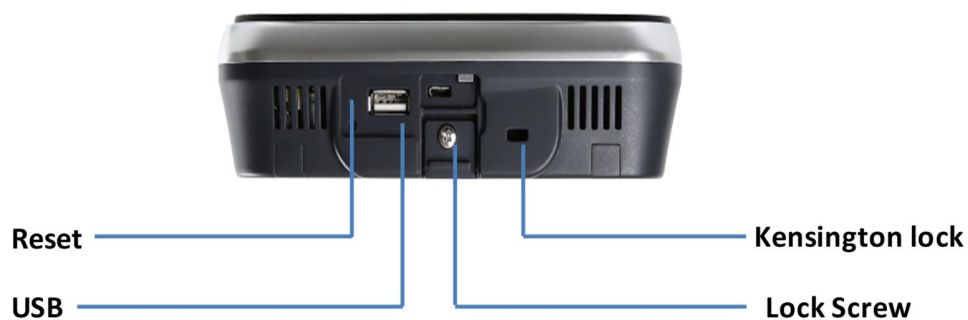


## System, Rear

Rear View

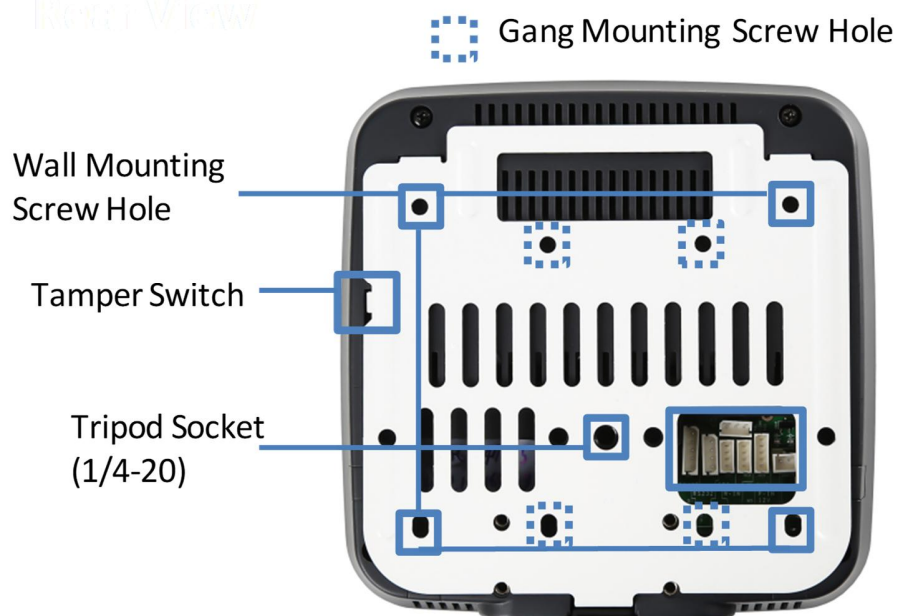

## System Rear Connections Block

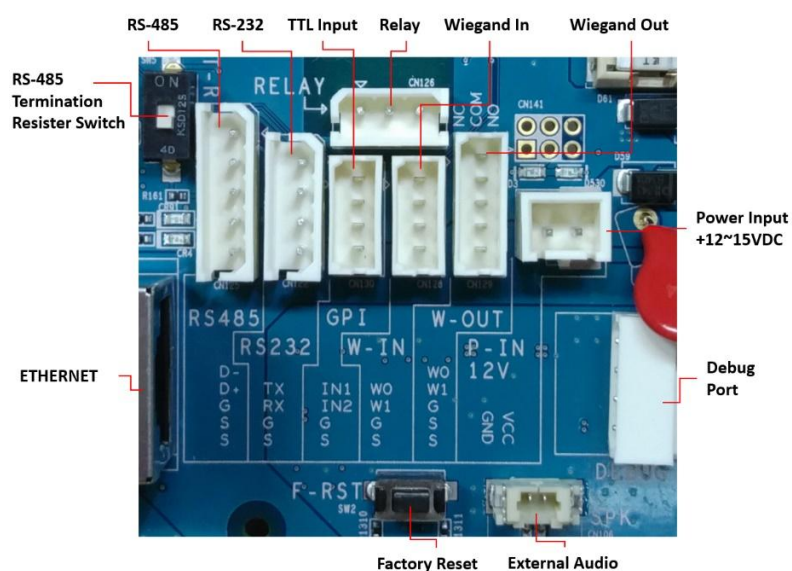



## User Interface for Iris Image Capture


- Position yourself facing straight at the LCD display. When the device detects your movement within 1.0 meter parameter, it initiates the image capture sequence. A rectangular-shaped user guide box will appear on the screen. If it is BLUE, it means you are too far from the device. Move forward.



- Move towards the system to size your face to the LCD display. If the user guide box flashes GREEN, it means you are at an appropriate position. Stop and hold your position until the device captures image of your face and/or iris.



- If you are standing too close to the device, your face will not fit in the LCD display. When the user guide box flashes RED, it means the device cannot capture your image because you are too close. Move back until the box turns green.

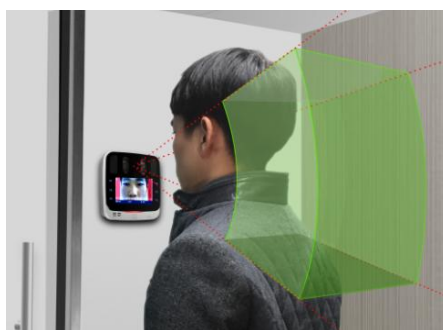


- EF-45N captures the image of your face and iris automatically.

## On-board Demonstration Application


The on-board demonstration application shows the full capabilities of the EF-45N for image capture including subject positioning with the face display user interface, enrollment, and on-board matching (authentication).

The system boots up in this demo application. It is initiated by the video based motion detector that first finds the subject from about 1 meter distance, and then continues the natural iris image capture sequence for capture in recognition / authentication mode.

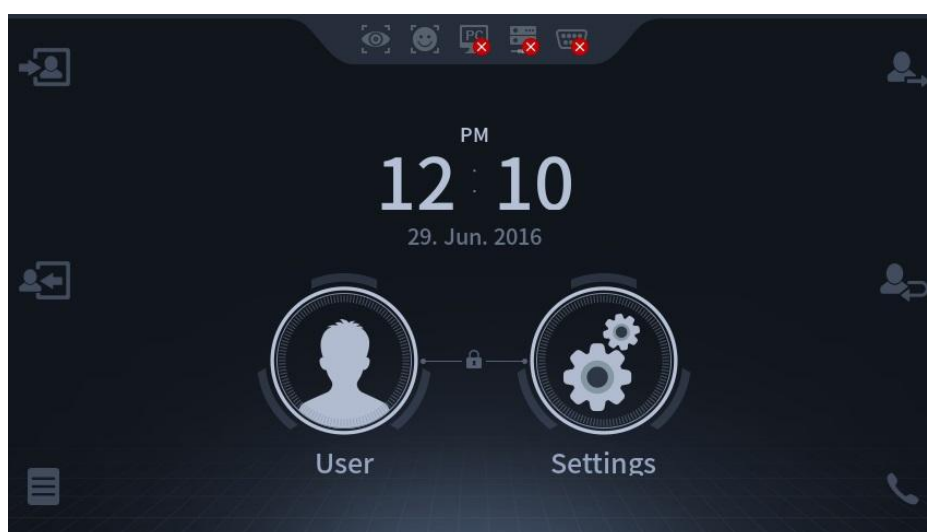


To switch to enrollment mode, press large User icon in center of main Launcher page. If the system is in image capture mode, press Home icon (🏠) on top left of active user interface display, which will stop Recognition mode and return system to Launcher page.

The following main User screen appears:

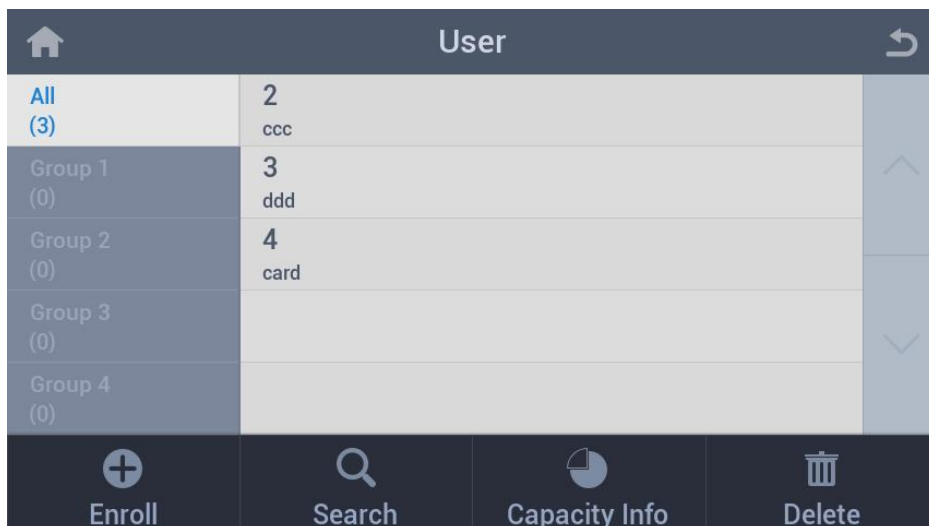


This user screen also allows simple database management. By tapping the **Delete** icon in the bottom right, one can easily delete information of enrolled users.

To enroll a new user, press the **Enroll** icon to bring up **Enroll User** screen.

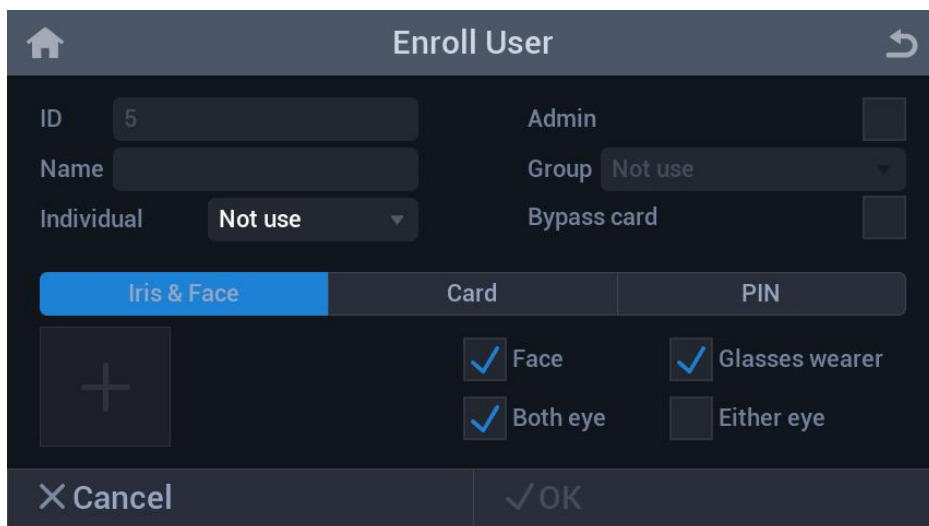


Press the plus(+) button in the bottom left to capture image of the new user.

An instruction screen will appear for 3 to 5 seconds, and then switch to the user interface.

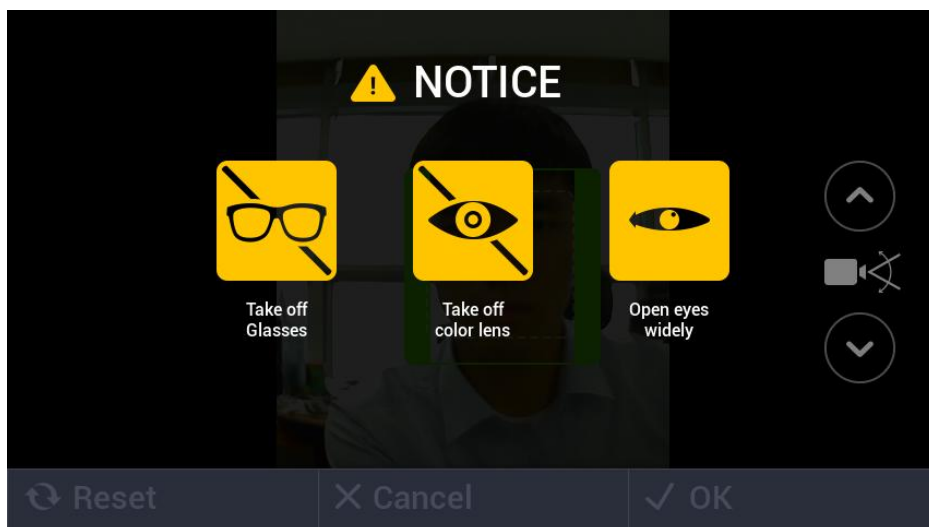

After successfully capturing iris images, click on **✓OK** to accept images. The system then returns to Enroll User screen. Click on Name field to enter name of subject, then click on **✓OK** complete enrollment.

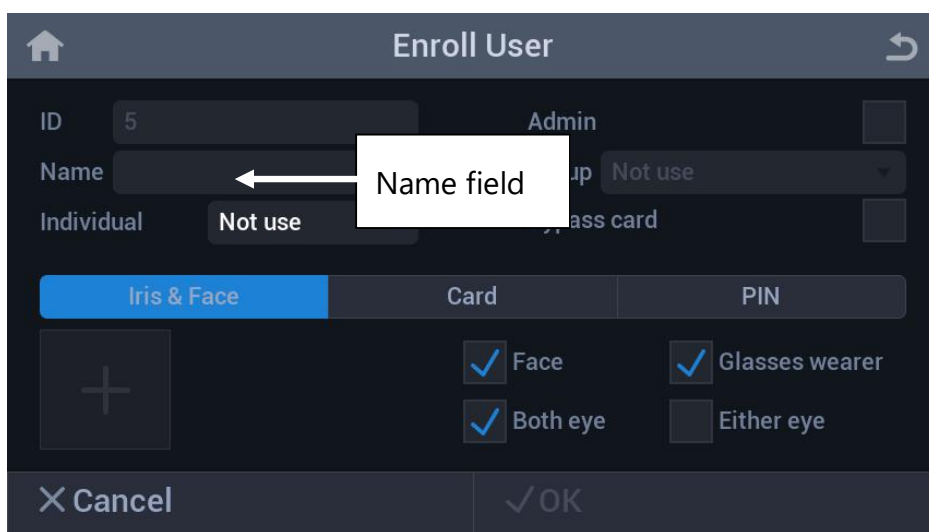

Press the Home icon (🏠) to return to the Launcher page to re-start Recognition and Authentication mode.

## Summary of Specifications

### Software and Platform Technical Specifications (Tentative)

|  |   |
|--|---|
| Embedded CPU and OS  | Freescall iMX6 Cortex A9 Quad Core ARM with Linux Yocto v1.8 OS |
| Iris on-board algorithm for encoding and matching                        | Optional  |
| Face on-board algorithm for Combined Face and Iris encoding and matching | Optional  |
| Web services configuration application (with embedded web server)        | Yes, RESTful type SDK with C# and C++ versions for host side    |

### Other Technical Specifications (Tentative)

|  |  |
|--|--|
| Dimensions   | 166 x 166 x 43 mm(6.5 x 6.5 x 1.7 inches) without mounting wall plate  |
| Weight   | 630 g without wall plate   |
| On-board data size   | Up to 10,000 iris template pairs, usable in either 1:1 (authentication) or 1:N (identification) modes<br>Supports dual factor authentication   |
| Iris image output  | Meets new ISO 19794-6 2011 standard:<br>MTF of minimum of 2 lp/mm @ $\geq 60\%$ contrast, and 160 pixels across 1.0 cm iris  |
| Iris image pixel resolution  | 640 x 480 pixels, 8 bit depth. Supports multiple formats.  |
| Iris encoding and matching algorithm                                   | Delta ID (ISO 19794-6 compliant)   |
| Operational iris imaging distance (stand-off range) and depth of field | 35 to 45 cm range (10 cm depth of capture range) in both Enrollment and Recognition modes  |
| Iris positioning indicators  | Face positioning within box in LCD display for X – Y<br>Face sizing to bracket (or box) within LCD display for distance (Z) positioning with simultaneous color bar display for correct distance positioning:<br>Blue: too far away<br>Green: OK<br>Red: too close<br>Supplemental voice distance feedback standard. Convertible to local language via .wav file substitution. |

## Other Technical Specifications (Tentative) (continued)

|  |   |
|--|---|
| Auto tilt  | Yes, internal: +25 deg to -20 deg tilt  |
| Iris inter-pupillary distance covered                                    | 45 to 85 mm   |
| Iris time of capture   | Typically about 0.5 second from time subject's eyes are placed within proper capture volume   |
| IR illumination for iris imaging   | Dual LED: wavelengths of 850 nm nominal (about 50%); and 750 nm nominal (about 50%)   |
| Iris maximum user positioning speed                                      | 125 mm per second (4.9 inches per sec.) in "Z" direction (distance from front of system)  |
| Face image capture   | Standard 24 bit color (for reference image)   |
| Face recognition imaging   | Optional on-board encoding and matching. Algorithm tbd.   |
| Audio  | 24 bit, 1.8 W embedded speaker<br>Line out connector for external speaker   |
| Operating temperature range  | 0 to 45°C   |
| Humidity   | 10 to 90% RH, non-condensing  |
| Illuminator eye safety standard  | IEC 62471   |
| Network interface  | 10/100 Base-T Ethernet (RJ45 connector)   |
| Other standard ports   | USB host or slave (for service only)  |
| Standard mounting  | ¼ - 20 UNC (camera tripod).   |
| Physical Access Control (PACS) configuration: other communications ports | Terminal and wired connectors for: Wiegand in/out, RS-232, RS-485, 2X TTL inputs, USB host (internal), USB slave (for service), 1 dry contact relay |
| Physical Access Control configuration: internal ID card reader           | Standard: ISO /IEC 14443 A/B (MiFare) contactless reader<br>Optional: HID multi-class reader (model to be determined)                               |
| Physical Access Control configuration: wall mounting with tamper switch  | Detachable wall mount plate for easy installation. Tamper switch standard in PACS configuration   |
| Power supply   | Input 110 to 240V AC<br>Output 15V DC, 3.5A. Provided standard with system.   |

## Contact Information

### **CMITech Company, Ltd.**


5th Floor, 38, Burim-ro, 170beon-gil, Dongan-gu,  
Anyang-si, Gyeonggi-do, 14055, Republic of Korea  
Tel : +82.70.8633.8278  
Fax: +82.31.624.4490  
Contact: sales@cmi-tech.com

### **CMITech America, Inc.**

2033 Gateway Place, Suite 500  
San Jose, CA 95110 USA  
Tel: (1) 408 573-6930

## Appendix 1

# EF-45N LCD Control Screens and On-Board Demo Application

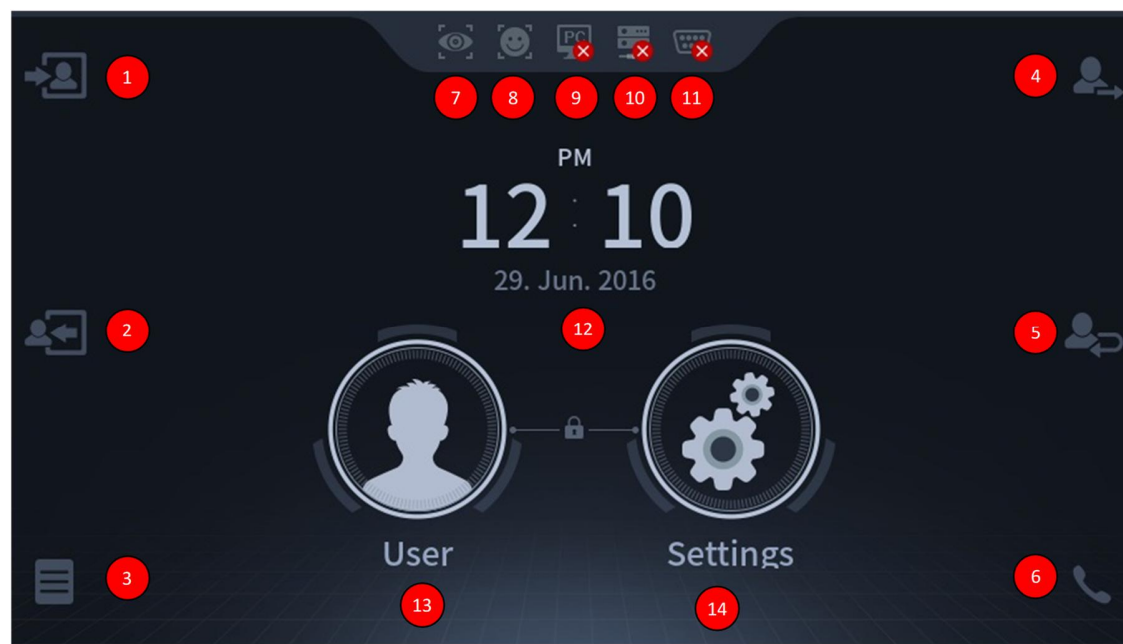

Main Launcher Page

- |   |   |
|---|---|
| ① Check Attendance (F1 Key)               | ⑧ Notice Icon of Face mode is operating                           |
| ② Leave Work (F2 Key)                     | ⑨ Notice Icon of CMID manager is connected                        |
| ③ Supplement T&A (F3 Key)                 | ⑩ Notice Icon of IP network is connected                          |
| ④ Go Out (F4 Key)                         | ⑪ Notice Icon of Serial Communication is connected                |
| ⑤ Return Button (same as F5 Key)          | ⑫ Clock display   |
| ⑥ Interphone Call Button (same as F6 Key) | ⑬ User Button for registration, search, modification and deletion |
| ⑦ Notice Icon of Iris mode is operating   | ⑭ Settings Button for system configuration                        |



# Table of Contents

## Settings



### 1 Device

- 1.1 Configuration
  - 1.1.1 User Positioning Interface
  - 1.1.2 Motion Wait Time
- 1.2 Bio
  - 1.2.1 Security Level
  - 1.2.2 Iris
    - 1.2.2.1 Max Distance
- 1.3 Sound
  - 1.3.1 Speaker Volume
  - 1.3.2 MIC Volume
- 1.4 Date & Time
  - 1.4.1 Manual Setup
- 1.5 Door
  - 1.5.1 Relay
  - 1.5.2 Driven By
  - 1.5.3 Duration
  - 1.5.4 Door Sensor
  - 1.5.5 Door Sensor Type
  - 1.5.6 Held Open Period(sec)
  - 1.5.7 Lock Time
  - 1.5.8 Unlock Time
- 1.6 Device Info
- 1.7 Interphone
  - 1.7.1 IP Address
- 1.8 Memory Info
- 1.9 Camera
  - 1.9.1 Power Line Frequency
- 1.10 Reset
  - 1.10.1 Reboot
  - 1.10.2 Factory Default
    - 1.10.2.1 Reset All Settings
    - 1.10.2.2 Delete All Data
    - 1.10.2.3 Delete All Data and Reset All Settings

### 2 Network

- 2.1 TCP/IP
  - 2.1.1 LAN Type
  - 2.1.2 IP Address
  - 2.1.3 Gateway
  - 2.1.4 Subnet
- 2.2 Server
  - 2.2.1 Server IP
- 2.3 Serial
  - 2.3.1 RS485-PC
  - 2.3.2 RS485-NET
  - 2.3.3 RS232
- 2.4 USB Memory
  - 2.4.1 FW Upgrade
  - 2.4.2 Import
  - 2.4.3 Export

### 3 Display

- 3.1 Voice Instruction
- 3.2 Central Timer
- 3.3 Menu Timeout
- 3.4 Screen Saver
- 3.5 Pop-Up Timeout
- 3.6 Backlight Timeout
- 3.7 Date Display
- 3.8 Language

### 4 Authentication

- 4.1 Auth.
  - 4.1.1 Combination Mode (Step 1)
- 4.2 T&A
- 4.3 T&A Mode

 
### 5 Mode

- 5.1 Operation
  - 5.1.1 Dual Authentication
  - 5.1.2 Match Timeout
  - 5.1.3 Card Mode

### 6 Log

- 6.1 Log Info

## User



### 1 Enroll User


- 1.1 Name
- 1.2 Individual
- 1.3 Group
- 1.4 Iris & Face Process
  - 1.4.1 Face Capture
    - 1.4.1.1 Tracking Guide Box UI
  - 1.4.2 Iris Capture
    - 1.4.2.1 Tracking Guide Box UI
  - 1.4.3 Save Data / Complete Enrollment
  - 1.4.4 Complete Enrollment
- 1.5 Card
  - 1.5.1 Save Data
- 1.6 Pin
  - 1.6.1 Input
  - 1.6.2 Save Data

### 2 Search


### 3 Capacity Info

### 4 Delete

## Settings

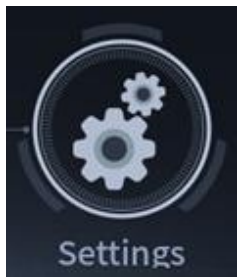


Tap the **Settings** icon in the home screen.

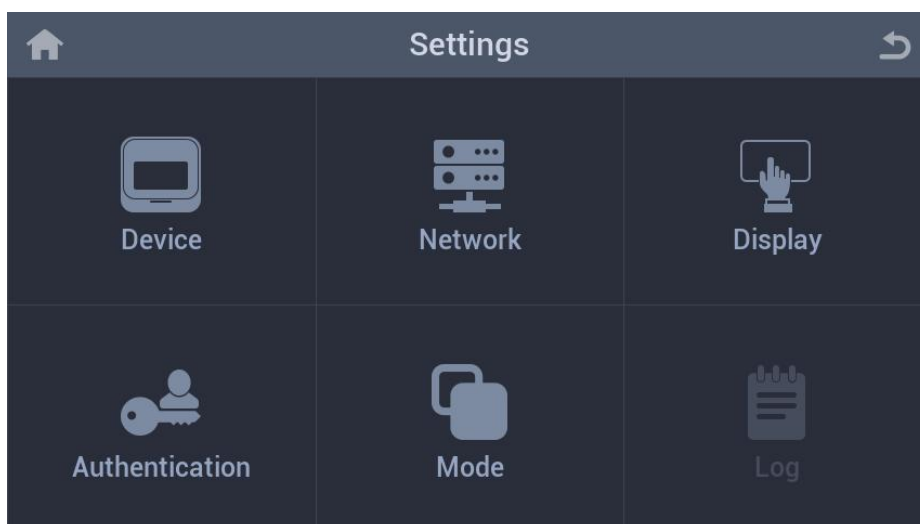

|                       |   |
|-----------------------|---|
| <b>Device</b>         | Configuration for device operating  |
| <b>Network</b>        | Configuration for IP & serial communication                               |
| <b>Display</b>        | Configuration for screen display  |
| <b>Authentication</b> | Configuration for authentication method and T&A                           |
| <b>Mode</b>           | Configuration for recognition operation                                   |
| <b>Log</b>            | Information of saved log and log search viewer<br>(Note: In construction) |

# 1 Device

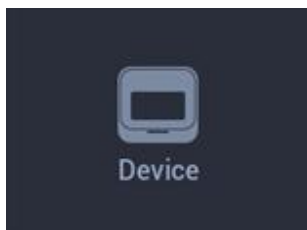

Configure settings for device operation.

## 1.1 Configuration

| Device        |                            |                          |
|---------------|----------------------------|--------------------------|
| Configuration | User Positioning Interface | Box >                    |
| Bio           | Motion wait time           | 2 >                      |
| Sound         | Motion detect              | <input type="checkbox"/> |
| Date & Time   | Debug                      | <input type="checkbox"/> |
| Door          |                            |                          |
|               |                            |                          |


**User Positioning Interface** Select a guide display UI when enrollment and recognition

**Motion wait time** Set motion detection delay time from last recognition operating

**Motion detect** Select motion detection enable/disable for starting recognition

**Debug** Select Debug mode enable/disable (captures image stream for off-line analysis)

### 1.1.1 Configuration → User Positioning Interface

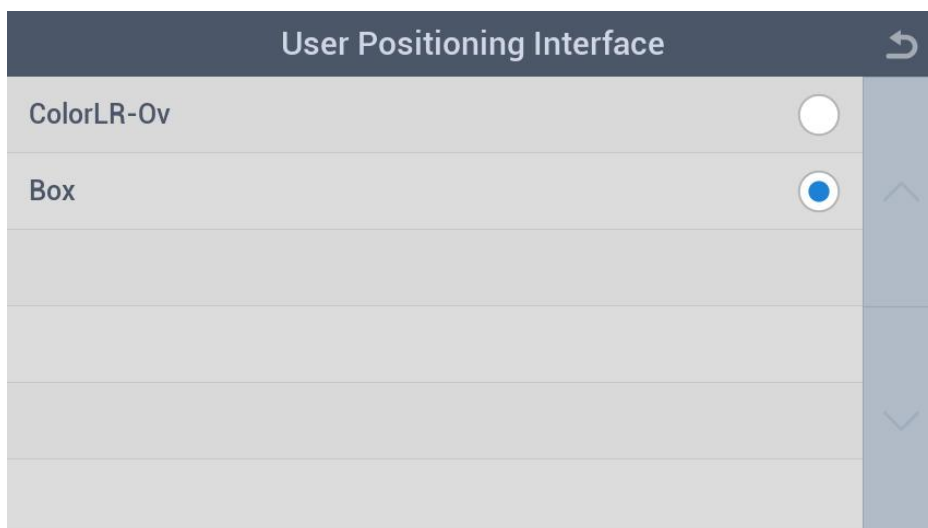


The screenshot shows a 'User Positioning Interface' window with a dark header bar containing a back arrow. Below the header is a list of two options: 'ColorLR-Ov' and 'Box'. Each option has a radio button to its right. The 'Box' option's radio button is selected, indicated by a blue dot. To the right of the list is a vertical scrollbar with up and down arrow buttons.

**ColorLR-Ov**                      Select Color overlay type guide UI display


**Box**                                Select tracking box type guide UI display

### 1.1.2 Configuration → Motion Wait Time

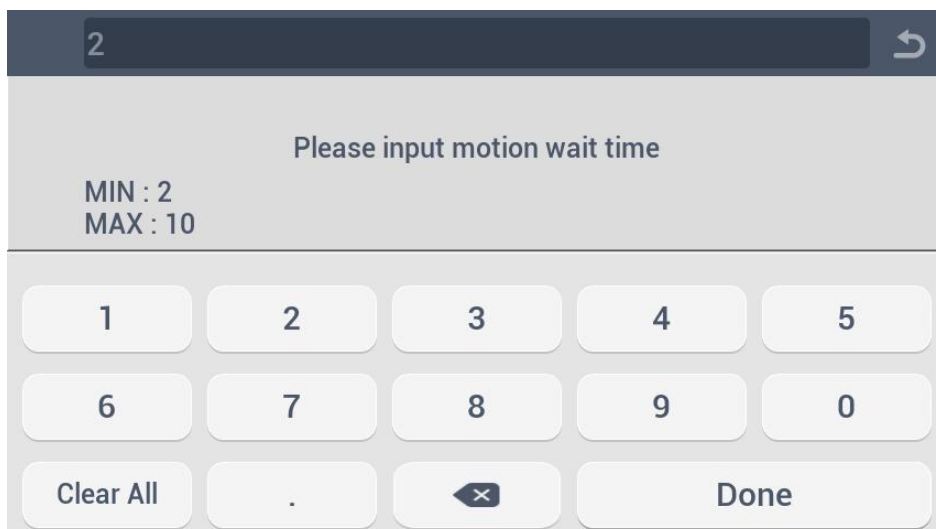

The screenshot shows a 'Motion Wait Time' input interface. At the top, a dark header bar contains the number '2' and a back arrow. Below the header is a light gray area with the text 'Please input motion wait time' and 'MIN : 2' and 'MAX : 10'. Below this is a numeric keypad with buttons for digits 1 through 0, a 'Clear All' button, a decimal point button, a backspace button (indicated by a left arrow and an 'x'), and a 'Done' button.

## 1.2 Bio

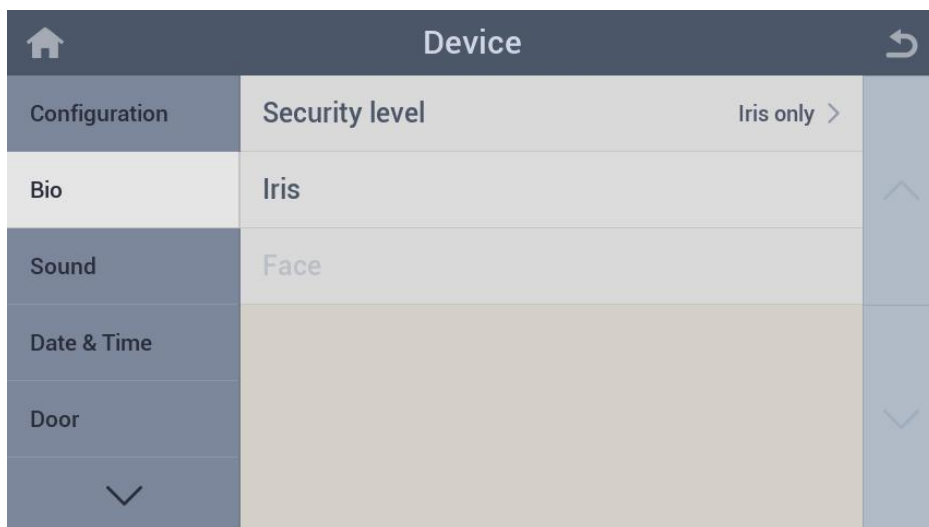

### Security Level

Select a combination mode of Face and Iris


### Iris

Additional configuration for Iris enrollment and recognition

### Face

Additional configuration for Face enrollment and recognition (note: in construction)

### 1.2.1 Bio → Security Level (Must have face recognition option)

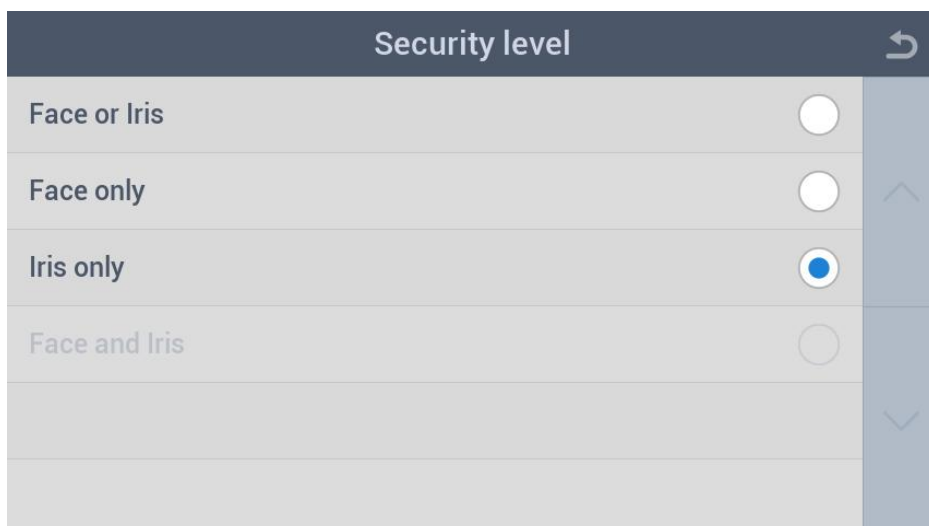

|                      |  |
|----------------------|--|
| <b>Face or Iris</b>  | Select 2 stage Face or Iris recognition mode (Face recognition first, and then automatic switch-over to Iris upon Face recognition non-match)                |
| <b>Face only</b>     | Select Face only recognition mode  |
| <b>Iris only</b>     | Select Iris only recognition mode  |
| <b>Face and Iris</b> | Select 2 stage Face and Iris recognition mode (Face recognition first, and then automatic switch-over to Iris upon multiple matches) (note: in construction) |

### 1.2.2 Bio → Iris



| Iris                    |                                     |
|-------------------------|-------------------------------------|
| Recognition sensitivity | 50 >                                |
| Enroll sensitivity      | 50 >                                |
| Min distance            | 35 >                                |
| Max distance            | 45 >                                |
| Recognition either eye  | <input checked="" type="checkbox"/> |
| Enroll either eye       | <input checked="" type="checkbox"/> |

|                               |   |
|-------------------------------|---|
| <b>Max distance</b>           | Set max distance for Iris recognition                 |
| <b>Recognition either eye</b> | Select enable/disable for either eye recognition mode |
| <b>Enroll either eye</b>      | Select enable/disable for either eye enrollment mode  |

### 1.2.2.1 Bio → Iris → Max Distance


45

Please input maximum distance

MIN : 40  
MAX : 49

|           |   |   |      |   |
|-----------|---|---|------|---|
| 1         | 2 | 3 | 4    | 5 |
| 6         | 7 | 8 | 9    | 0 |
| Clear All | . | ⌫ | Done |   |


## 1.3 Sound

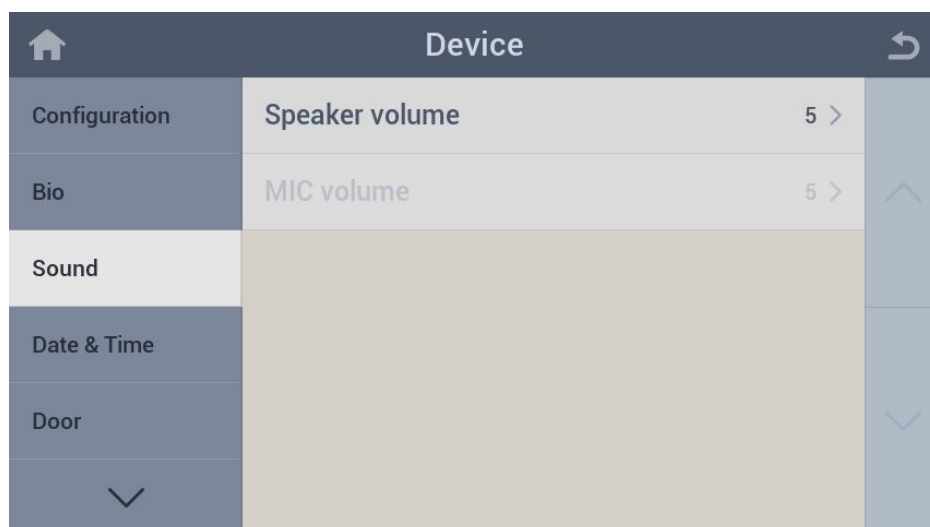

**Speaker volume** Set speaker volume for instruction sound and interphone voice

**MIC volume** Set microphone volume for interphone voice (note: in construction)

### 1.3.1 Sound → Speaker Volume

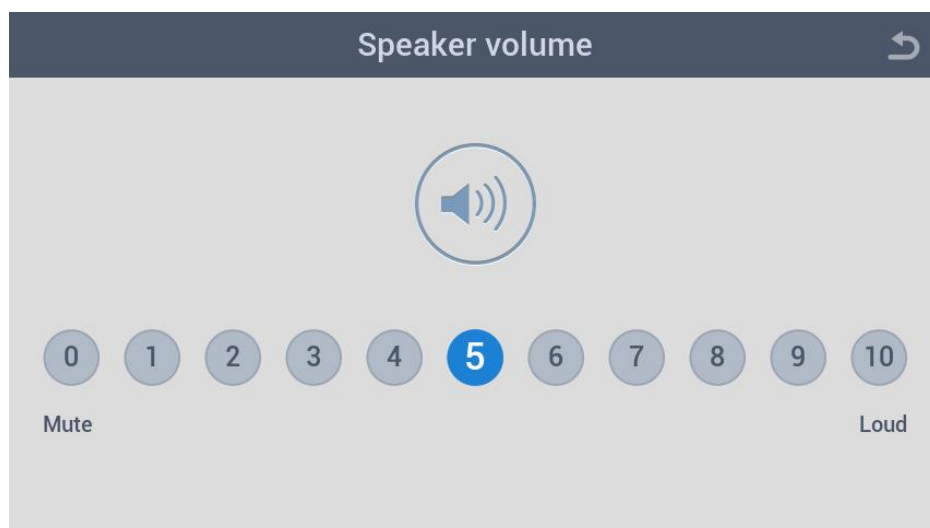


### 1.3.2 Sound → MIC Volume

Identical to settings for speaker volume




## 1.4 Date & Time

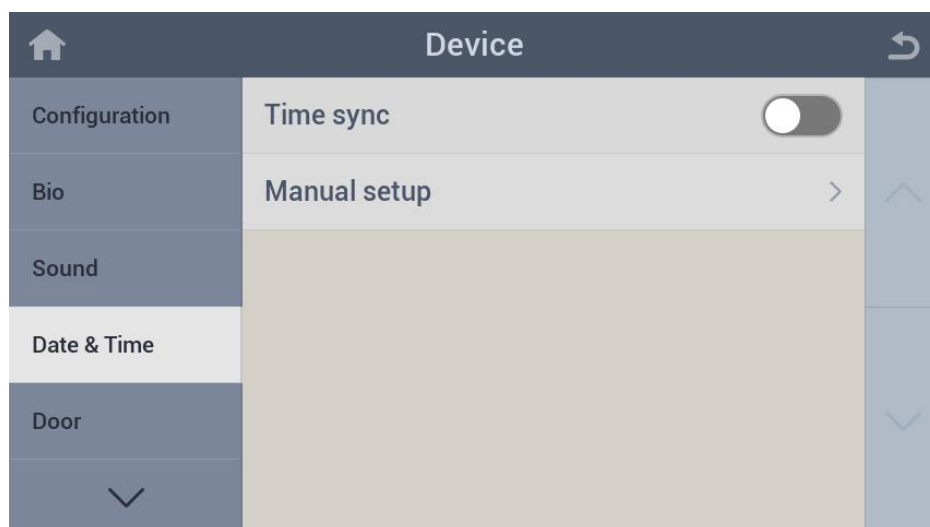

**Time sync** Select enable/disable for time sync with CMID manager

**Manual setup** Set date and time manually

### 1.4.1 Date & Time → Manual Setup

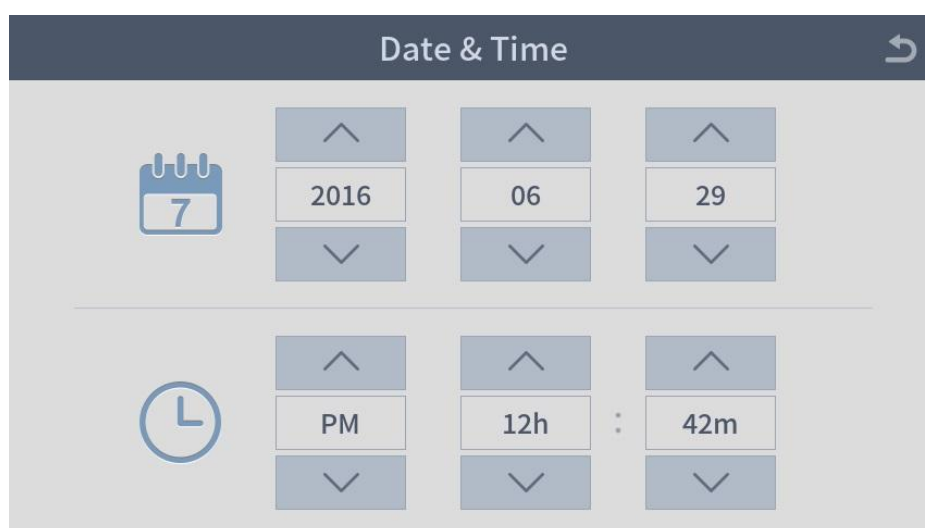

## 1.5 Door

| Device        |                      |              |   |
|---------------|----------------------|--------------|---|
| Configuration | Relay                | Not use >    | ^ |
| Bio           | Driven by            | All Events > |   |
| Sound         | Duration(sec)        | 5 >          |   |
| Date & Time   | RTE(Request To Exit) | Not use >    | v |
| Door          | RTE Type             | N/O >        |   |
|               | Door sensor          | Not use >    |   |

**Relay** Select a door open relay

**Driven by** Select an event mode for door open relay

**Duration (sec)** Set time duration for door open relay operation

**RTE (Request to Exit)** Select a door exit button (Note: in construction)


**RTE Type** Select a door exit button operating type (Note: in construction)

**Door sensor** Select a door sensor (Note: in construction)

| Device        |                       |                          |   |
|---------------|-----------------------|--------------------------|---|
| Configuration | Door sensor type      | N/O >                    | ^ |
| Bio           | Held open period(sec) | 30 >                     |   |
| Sound         | Lock time             | Never >                  |   |
| Date & Time   | Unlock time           | Never >                  | v |
| Door          | Tamper                | <input type="checkbox"/> |   |
|               |                       |                          |   |

|                               |   |
|-------------------------------|---|
| <b>Door sensor type</b>       | Select door sensor operating type (note: in construction)           |
| <b>Held open period (sec)</b> | Set time duration for door open operation (note: in construction)   |
| <b>Lock time</b>              | Set door lock time (note: in construction)                          |
| <b>Unlock time</b>            | Set door unlock time (note: in construction)                        |
| <b>Tamper</b>                 | Select enable/disable for tamper (off the wall detection) operation |

### 1.5.1 Door → Relay

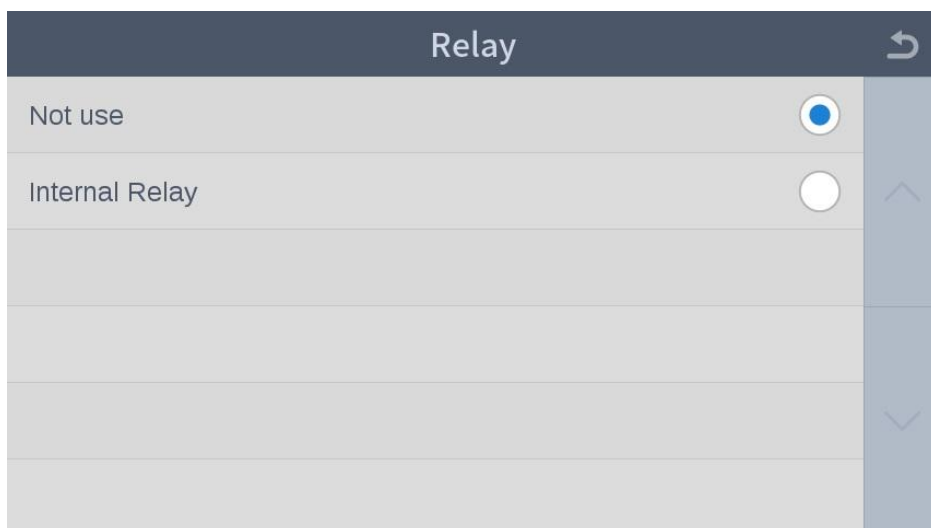

|                       |                       |
|-----------------------|-----------------------|
| <b>Not use</b>        | Select not use        |
| <b>Internal Relay</b> | Select internal relay |

### 1.5.2 Door → Driven by

| Driven by                  |                                  |   |
|----------------------------|----------------------------------|---|
| All Events                 | <input checked="" type="radio"/> |   |
| Authentication             | <input type="radio"/>            | ↑ |
| T&A Event                  | <input type="radio"/>            |   |
| Authentication + T&A Event | <input type="radio"/>            |   |
| Disabled                   | <input type="radio"/>            | ↓ |

**All Events** Select door open for all events

**Authentication** Select door open for authentication event

**T&A Event** Select door open for T&A event

**Authentication + T&A Event** Select door open for authentication plus T&A event

**Disabled** Select door open disable

### 1.5.3 Door → Duration (sec)

| 5                          |   |   |      |   |  |
|----------------------------|---|---|------|---|--|
| Please input duration(sec) |   |   |      |   |  |
| 1                          | 2 | 3 | 4    | 5 |  |
| 6                          | 7 | 8 | 9    | 0 |  |
| Clear All                  | . | ⌫ | Done |   |  |

### 1.5.4 Door → Door Sensor

| Door sensor |                                  | ↶                         |
|-------------|----------------------------------|---------------------------|
| Not use     | <input checked="" type="radio"/> | <div>↑</div> <div>↓</div> |
|             |                                  |                           |
|             |                                  |                           |
|             |                                  |                           |
|             |                                  |                           |
|             |                                  |                           |


### 1.5.5 Door → Door Sensor Type

| Door sensor type |                                  | ↶                         |
|------------------|----------------------------------|---------------------------|
| N/O              | <input checked="" type="radio"/> | <div>↑</div> <div>↓</div> |
| N/C              | <input type="radio"/>            |                           |
|                  |                                  |                           |
|                  |                                  |                           |
|                  |                                  |                           |
|                  |                                  |                           |

**N/O**                      Select door exit button sensor as Normal Open type

**N/C**                      Select door exit button sensor as Normal Close type

### 1.5.6 Door → Held Open Period (sec)

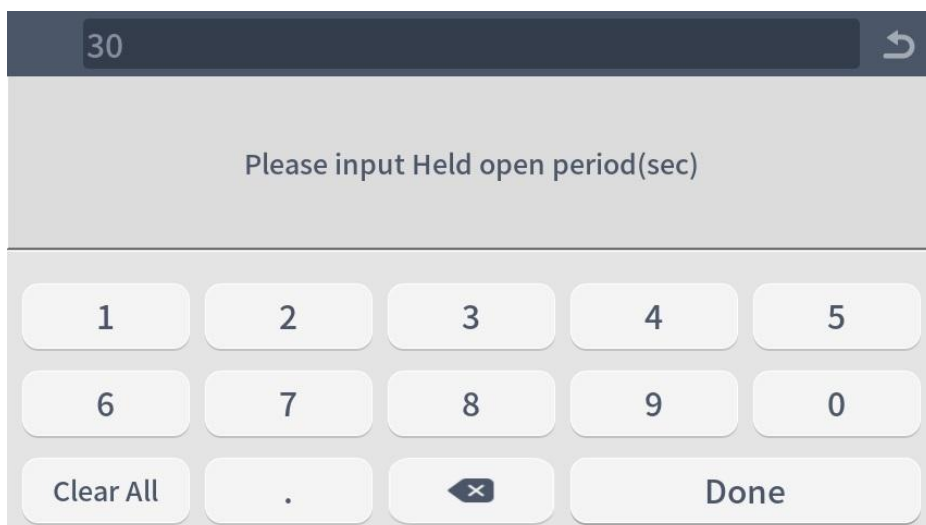


30


Please input Held open period(sec)

1 2 3 4 5

6 7 8 9 0

Clear All .  Done

### 1.5.7 Door → Lock Time

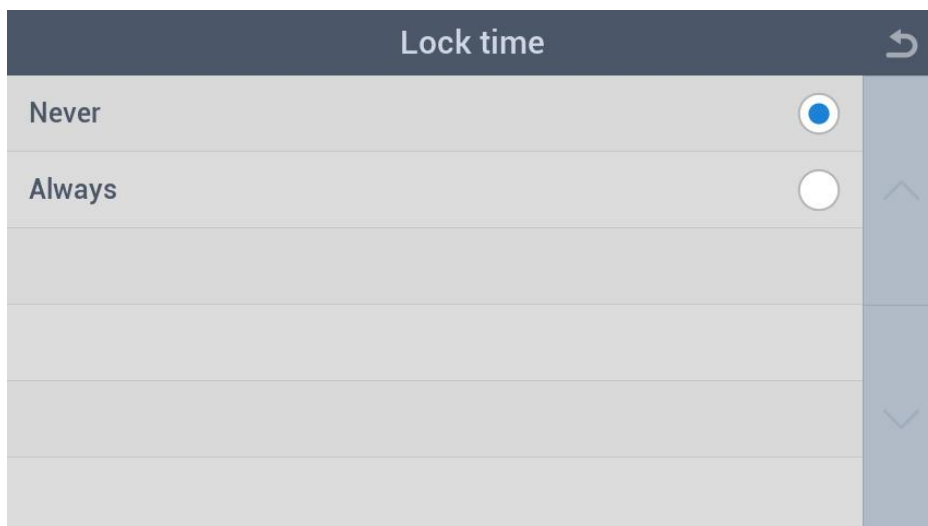

Lock time

Never ☒

Always ☐

^

↓

**Never** Select door lock time -- never

**Always** Select door lock time -- always

### 1.5.8 Door → Unlock Time

| Unlock time |                                  | ↶ |
|-------------|----------------------------------|---|
| Never       | <input checked="" type="radio"/> | ↑ |
| Always      | <input type="radio"/>            |   |
|             |                                  | ↓ |
|             |                                  |   |
|             |                                  |   |
|             |                                  |   |
|             |                                  |   |
|             |                                  |   |

**Never**                      Select door unlock time -- never

**Always**                     Select door unlock time -- always

## 1.6 Device Info

| Device           |                |                                  |   |
|------------------|----------------|----------------------------------|---|
| Model            | UMX-10         |                                  |   |
| Device Info.     | FW Version     | umx-ota-upgrade-es_d20160707.bin | ^ |
| Interphone       | Device ID      | HC0706A000019                    |   |
| Memory Info.     | Kernel version | 1.1.7                            |   |
| Touchscreen Cal. | HW version     | 0x0201                           | v |
|                  | MAC            | 00:25:ff:fe:47:9a                |   |

**Model** Model name of this device

**FW Version** Version name of released firmware (F/W) file

**Device ID** Identification number of this device

**Kernel version** Revision number of kernel

**HW version** Revision number of hardware board

**MAC** MAC address of this device

| Device           |                     |        |   |
|------------------|---------------------|--------|---|
| Boot version     | 1.0.0               |        |   |
| Device Info.     | Root version        | 1.1.9  | ^ |
| Interphone       | Recovery version    | 1.1.4  |   |
| Memory Info.     | Application version | 1.1.11 |   |
| Touchscreen Cal. | FPGA version        | 2.6.0  | v |
|                  |                     |        |   |



|                            |   |
|----------------------------|---|
| <b>Boot version</b>        | Revision number of boot loader          |
| <b>Root version</b>        | Revision number of root file system     |
| <b>Recovery version</b>    | Revision number of recovery firmware    |
| <b>Application version</b> | Revision number of Launcher application |
| <b>FPGA version</b>        | Revision number of Camera FPGA firmware |

## 1.7 Interphone



**Interphone** Select enable/disable for interphone use (note: in construction)

**IP Address** IP address of PC which interphone program is installed (note: in construction)

### 1.7.1 Interphone → IP Address




## 1.8 Memory Info



**System** Memory capacity of system area (note: in construction)


**User data** Memory capacity of user area (note: in construction)

## 1.9 Camera

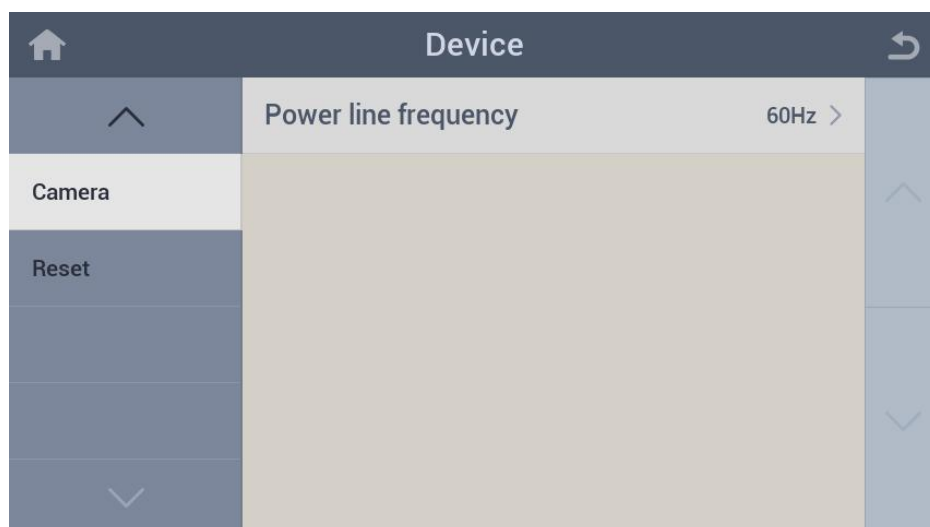

**Power line frequency**      Select power line frequency that supplying to device

### 1.9.1 Camera → Power Line Frequency

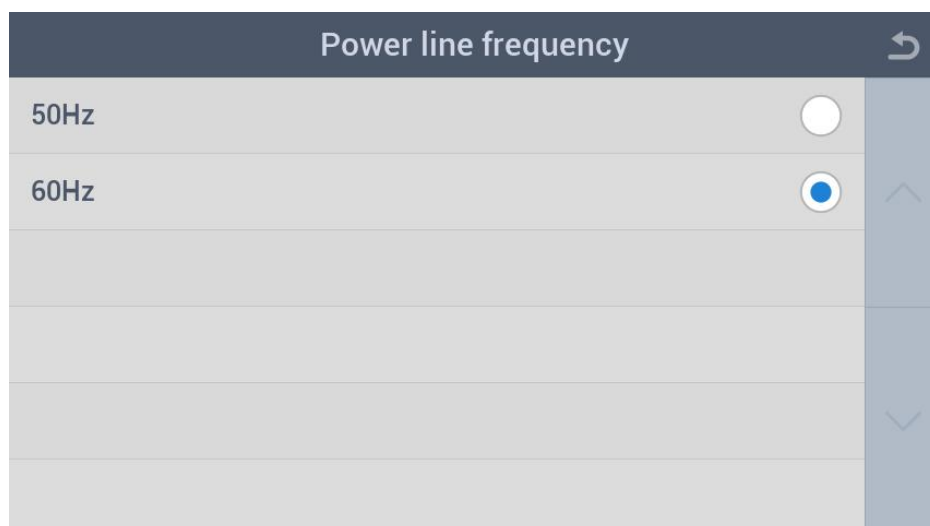

**50Hz**      Select power line frequency to 50Hz

**60Hz**      Select power line frequency to 60Hz


## 1.10 Reset




**Reboot** Reboot device

**Factory Default** Reset all configuration settings and/or delete all user data

### 1.10.1 Reset → Reboot

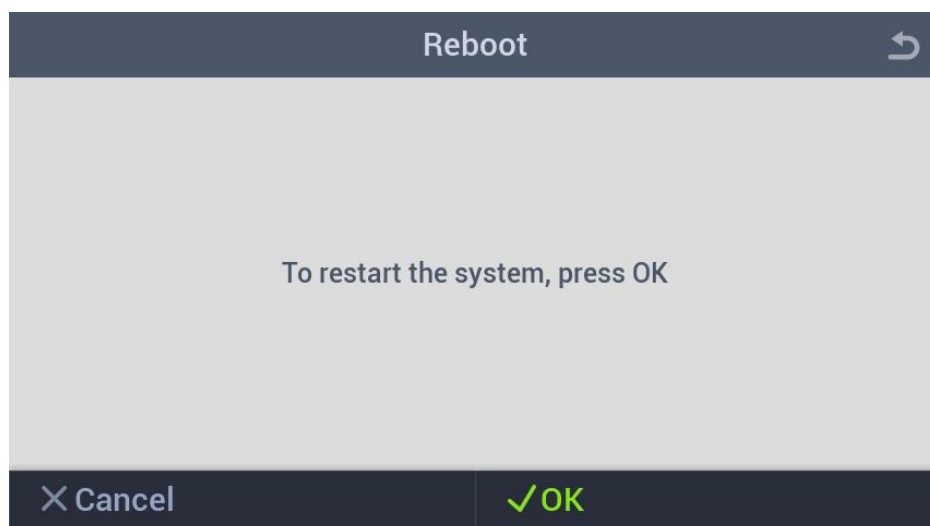

## 1.10.2 Reset → Factory Default

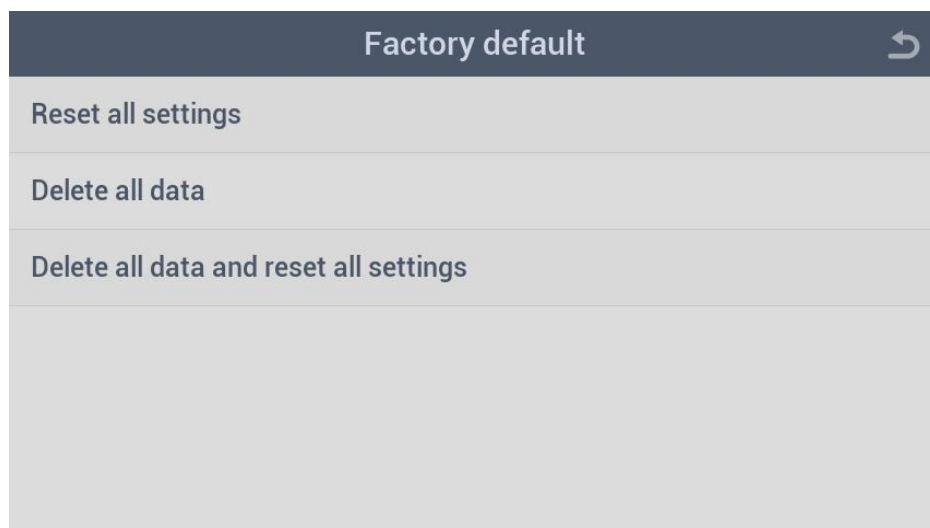


**Reset all settings**      Reset all configuration settings


**Delete all data**      Delete all user data

**Delete all data and reset all configuration settings**      Reset all configuration settings and delete all user data


### 1.10.2.1 Reset → Factory Default → Reset All Settings

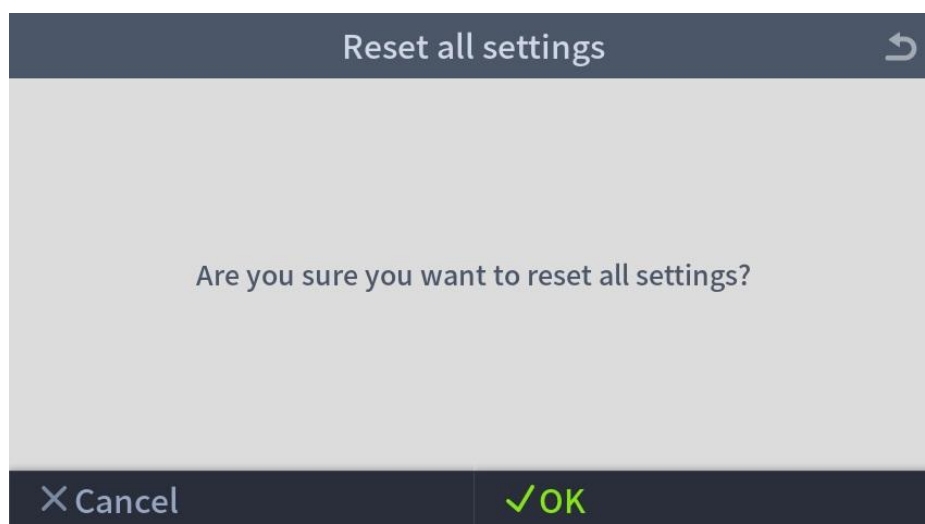


### 1.10.2.2 Reset → Factory Default → Delete All Data

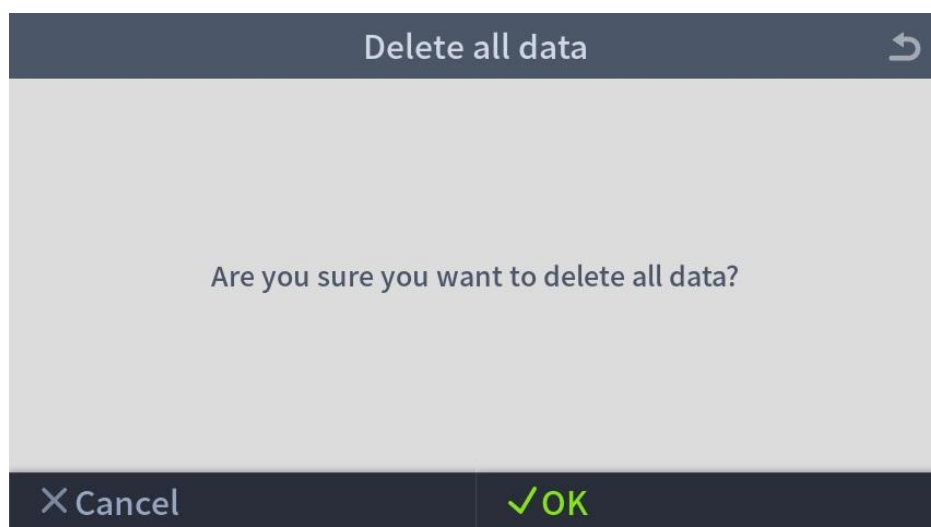

### 1.10.2.3 Reset → Factory Default → Delete All Data and Reset All Settings

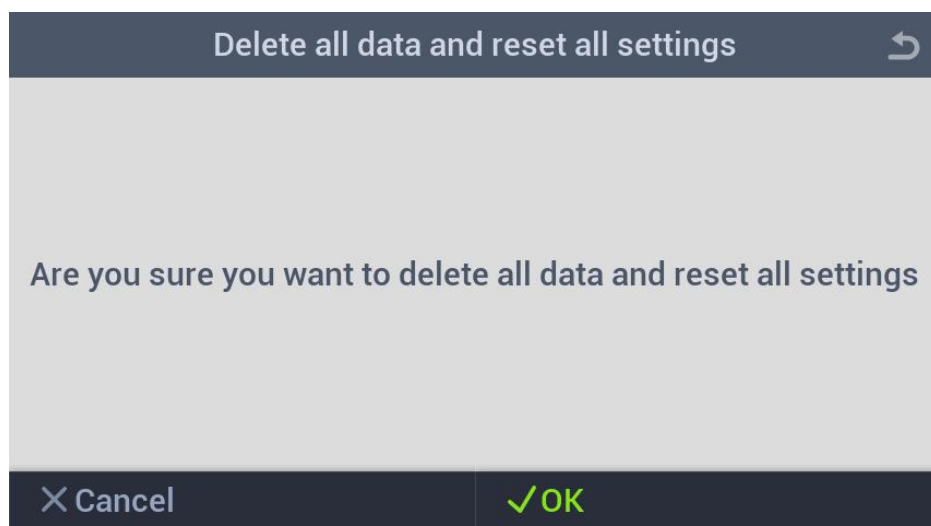

## 2 Network

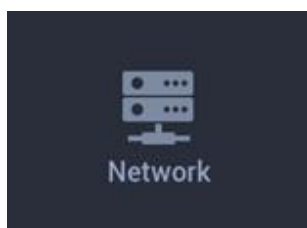

Configure settings for IP and serial communication.


### 2.1 TCP/IP

| Network    |            |                                       |
|------------|------------|---------------------------------------|
| TCP/IP     | Lan type   | Ethernet >                            |
| Server     | DHCP       | <input checked="" type="checkbox"/> > |
| Serial     | IP Address | 192.168.0.7 >                         |
| USB Memory | Gateway    | 192.168.0.1 >                         |
|            | Subnet     | 255.255.255.0 >                       |
|            |            |                                       |

|                   |                                 |
|-------------------|---------------------------------|
| <b>LAN type</b>   | Select a type of LAN            |
| <b>DHCP</b>       | Select enable/disable DHCP mode |
| <b>IP Address</b> | Set static IP address           |
| <b>Gateway</b>    | Set static gateway IP address   |
| <b>Subnet</b>     | Set static subnet mask          |




### 2.1.1 TCP/IP → LAN Type

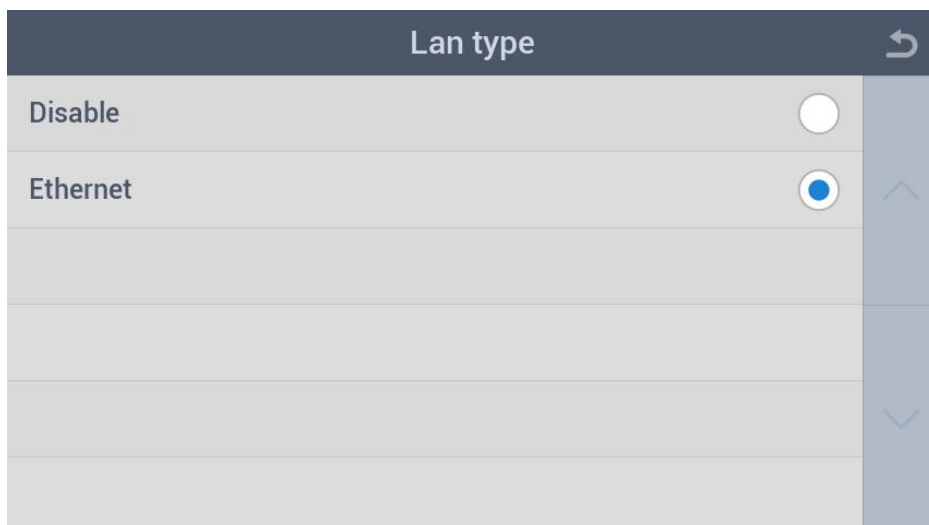

**Disable**                      Disable LAN use

**Ethernet**                    Select Ethernet for LAN use

### 2.1.2 TCP/IP → IP Address



### 2.1.3 TCP/IP → Gateway




192.168.0.1 ↩

Please input gateway

|           |   |   |      |   |
|-----------|---|---|------|---|
| 1         | 2 | 3 | 4    | 5 |
| 6         | 7 | 8 | 9    | 0 |
| Clear All | . | ⌫ | Done |   |

### 2.1.4 TCP/IP → Subnet

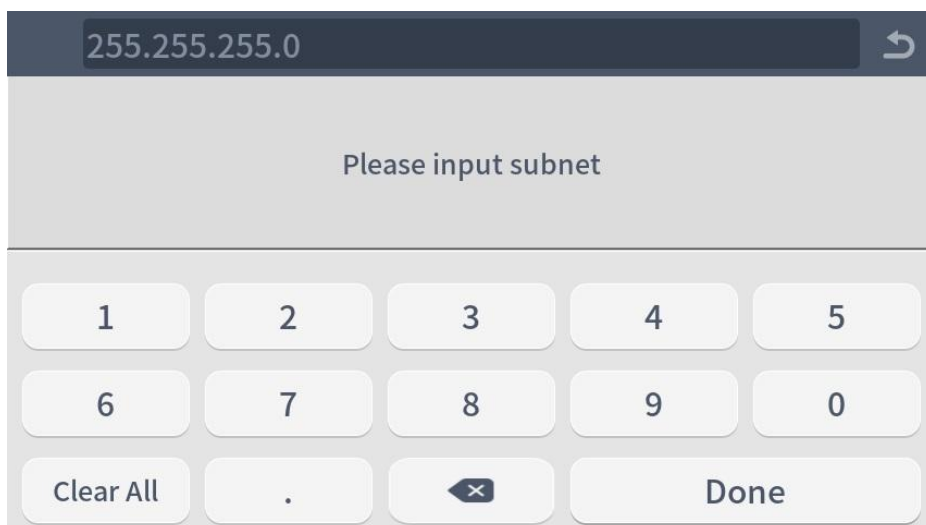


255.255.255.0 ↩

Please input subnet

|           |   |   |      |   |
|-----------|---|---|------|---|
| 1         | 2 | 3 | 4    | 5 |
| 6         | 7 | 8 | 9    | 0 |
| Clear All | . | ⌫ | Done |   |

## 2.2 Server

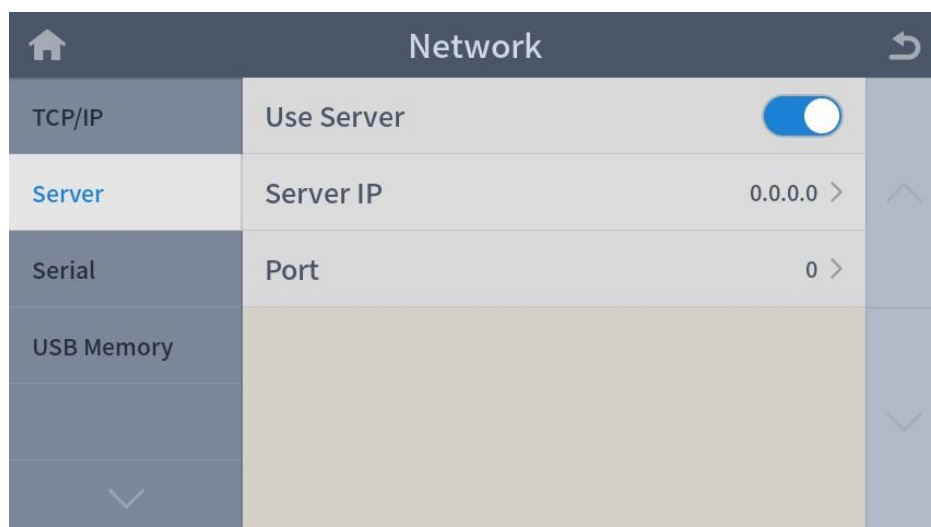

(Currently settled server is CMID PC for time sync)

**Use Server** Select enable/disable for server use (Note: In construction)

**Server IP** Set IP address of server (Note: In construction)

**Port** (Note: To be eliminated)

### 2.2.1 Server → Server IP



## 2.3 Serial

| Network    |           |           |   |
|------------|-----------|-----------|---|
| TCP/IP     | RS485-PC  | Not use > | ↑ |
| Server     | RS485-NET | Not use > |   |
| Serial     | RS232     | Not use > |   |
| USB Memory |           |           | ↓ |
|            |           |           |   |
| ↓          |           |           |   |

**RS485-PC** Select a baud rate for RS485 (note: in construction)

**RS485-NET** Select an operating mode for RS485 (note: in construction)

**RS232** Select a baud rate for RS232 (note: in construction)

### 2.3.1 Serial → RS485-PC

| RS485-PC |                                  |   |
|----------|----------------------------------|---|
| Not use  | <input checked="" type="radio"/> | ↑ |
| 9600     | <input type="radio"/>            |   |
| 19200    | <input type="radio"/>            |   |
| 38400    | <input type="radio"/>            | ↓ |
| 57600    | <input type="radio"/>            |   |
| 115200   | <input type="radio"/>            |   |

### 2.3.2 Serial → RS485-NET


| RS485-NET |                                  | ↶ |
|-----------|----------------------------------|---|
| Not use   | <input checked="" type="radio"/> | ↑ |
| NET-HOST  | <input type="radio"/>            |   |
| NET-SLAVE | <input type="radio"/>            |   |
|           |                                  | ↓ |
|           |                                  |   |
|           |                                  |   |

- Not use**                      Disable RS485
- NET-HOST**                Set RS485 operating mode as host
- NET-SLAVE**              Set RS485 operating mode as slave

### 2.3.3 Serial → RS232


| RS232   |                                  | ↶ |
|---------|----------------------------------|---|
| Not use | <input checked="" type="radio"/> | ↑ |
|         |                                  |   |
|         |                                  |   |
|         |                                  | ↓ |
|         |                                  |   |
|         |                                  |   |

## 2.4 USB Memory

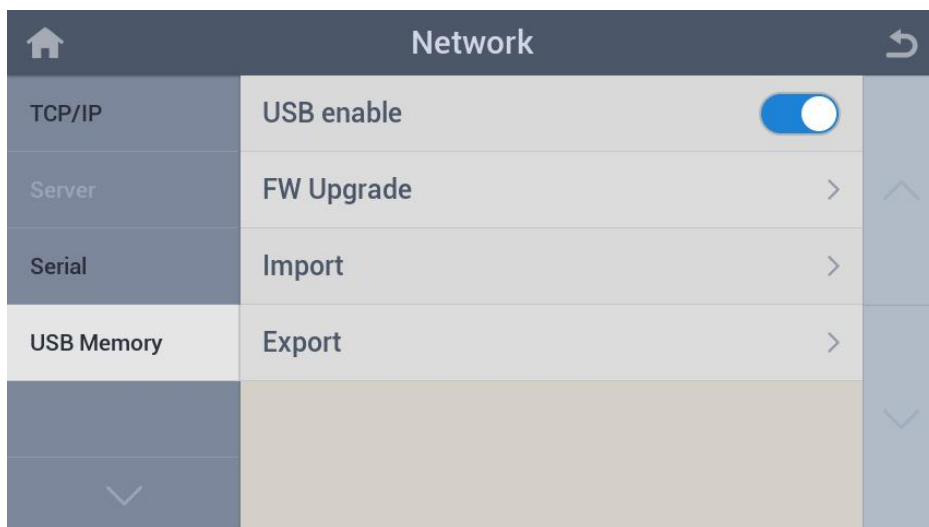

- USB enable**                      Select enable/disable for USB memory use
- FW Upgrade**                      Go into firmware (F/W) upgrade from USB memory
- Import**                              Go into backup data (user & log data) restore from USB memory
- Export**                              Go into backup data (user & log data) save to USB memory

### 2.4.1 USB Memory → FW Upgrade

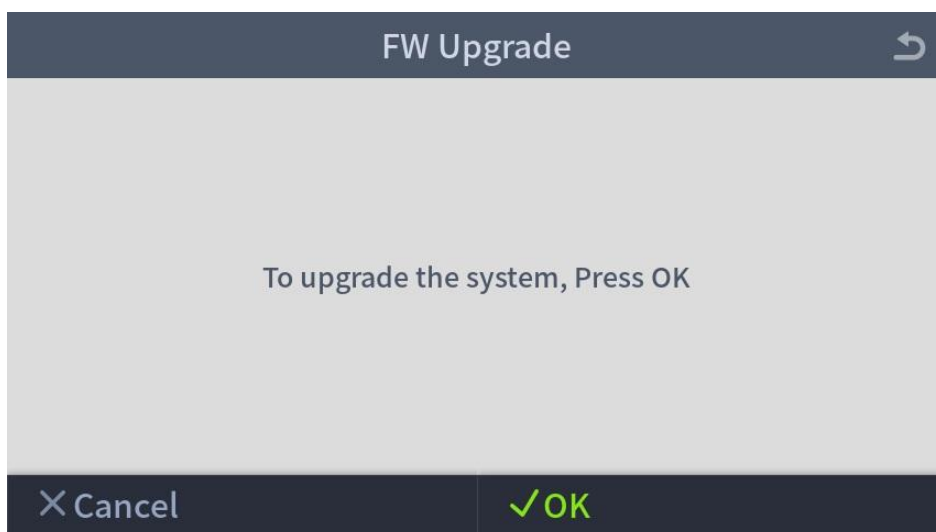


Upgrade F/W by tapping on ✓ OK button on the bottom right.



If the FW file (new firmware and operating library) does not exist in USB, message appears as shown above.

## 2.4.2 USB Memory → Import

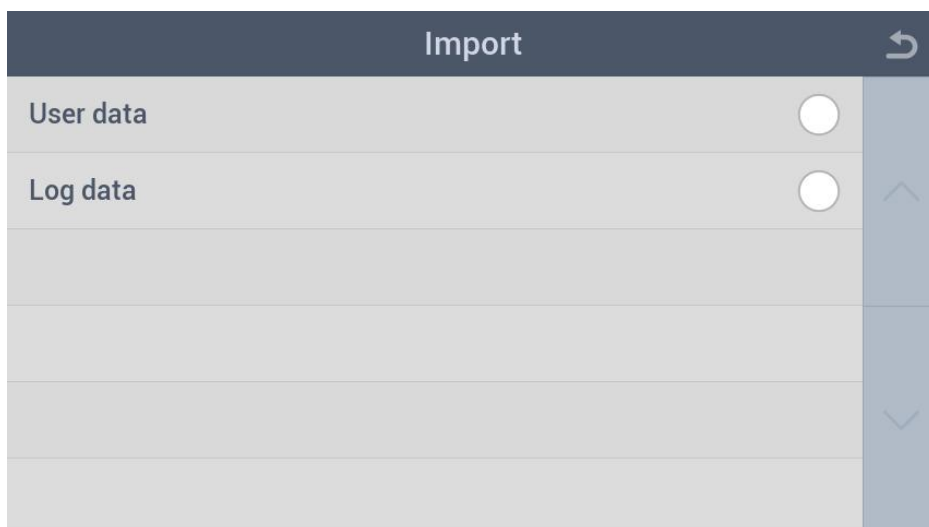

**User data** Restore user enroll data from USB memory

**Log data** Restore log data from USB memory

### 2.4.3 USB Memory → Export


| Export    |                       | ↶ |
|-----------|-----------------------|---|
| User data | <input type="radio"/> | ^ |
| Log data  | <input type="radio"/> |   |
|           |                       | v |
|           |                       |   |
|           |                       |   |
|           |                       |   |

**User data**                      Backup user enroll data to USB memory

**Log data**                      Backup log data to USB memory



### 3 Display

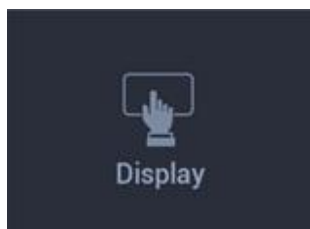

Configure settings for screen display.

#### 3.1 Voice Instructions



##### Voice Instruction

Select enable/disable for voice guide positioning / instructions

## 3.2 Central Timer



### Central Timer

Select enable/disable for clock display on the center of Launcher application


## 3.3 Menu Timeout



### Menu Timeout

Set timeout for auto exit from menu display after leaving untouched


### 3.4 Screensaver

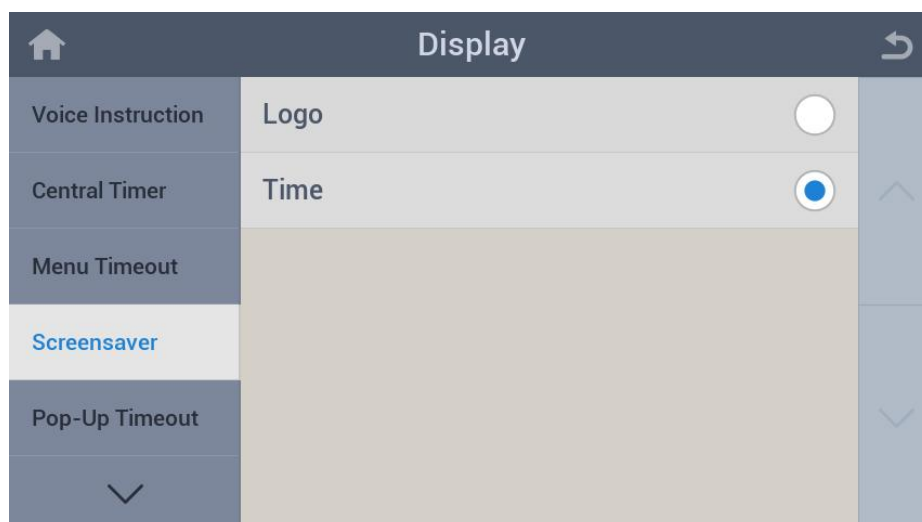

**Logo** Select logo display as screensaver

**Time** Select clock display as screensaver

### 3.5 Pop-Up Timeout

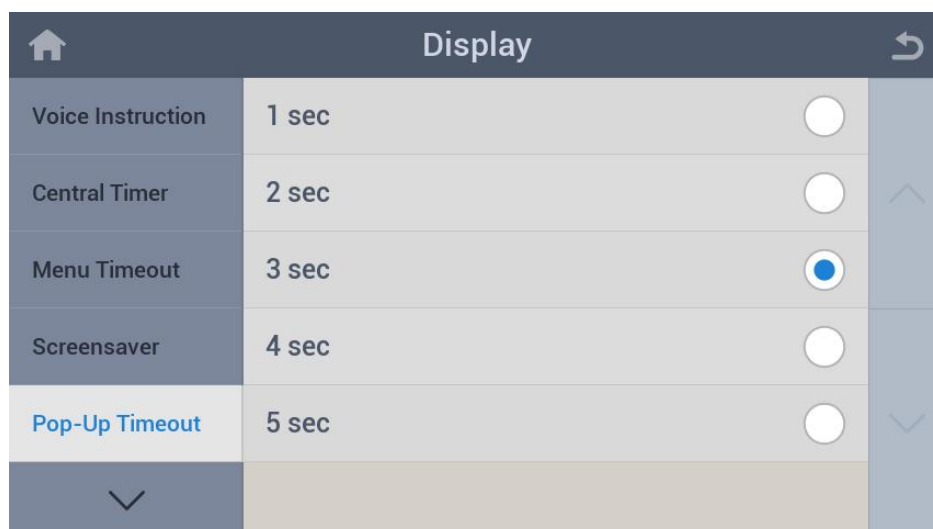




 


**Pop-Up Timeout** Set pop-up message window (recognition complete etc.) display duration

### 3.6 Backlight Timeout

|  | Display  |  |
|---|----------|---|
|  | Infinity | <input checked="" type="radio"/>  |
| Backlight Timeout   | 10 sec   | <input type="radio"/>   |
| Date Display  | 20 sec   | <input type="radio"/>   |
| Language  | 30 sec   | <input type="radio"/>   |
|   | 40 sec   | <input type="radio"/>   |
|  | 50 sec   | <input type="radio"/>   |

**Pop-Up Timeout** Set timeout for auto off of LCD backlight after leaving unused


### 3.7 Date Display

|  | Display    |  |
|---|------------|---|
|  | YYYY/MM/DD | <input type="radio"/>   |
| Backlight Timeout   | DD/MM/YYYY | <input checked="" type="radio"/>  |
| Date Display  |            |  |
| Language  |            |   |
|   |            |  |
|  |            |   |

**YYYY/MM/DD** Select year/month/day display mode

**DD/MM/YYYY** Select day/month/year display mode


### 3.8 Language

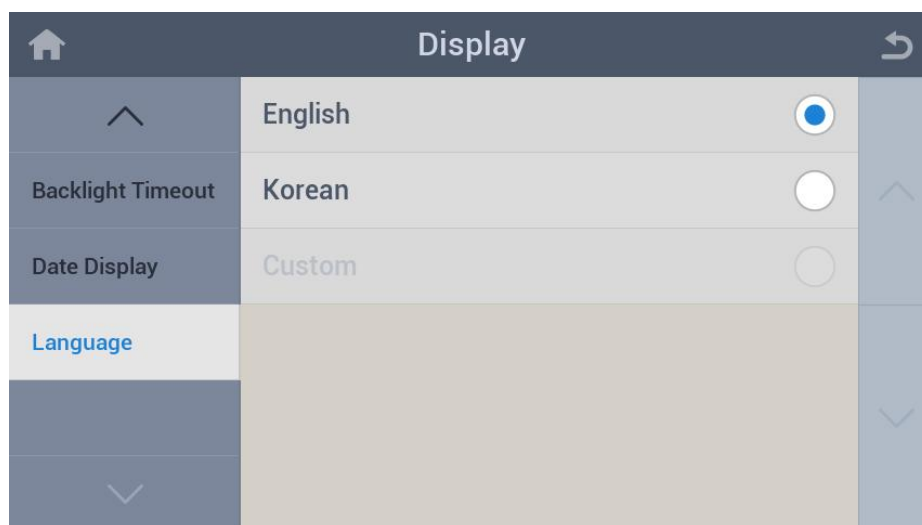

#### Language


Select a language to use (Note: In construction)

## **4 Authentication**

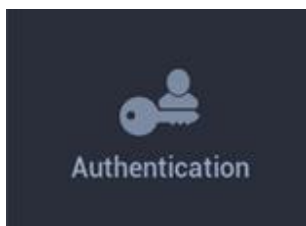

Configure settings for authentication method and T&A.

### **4.1 Auth.**

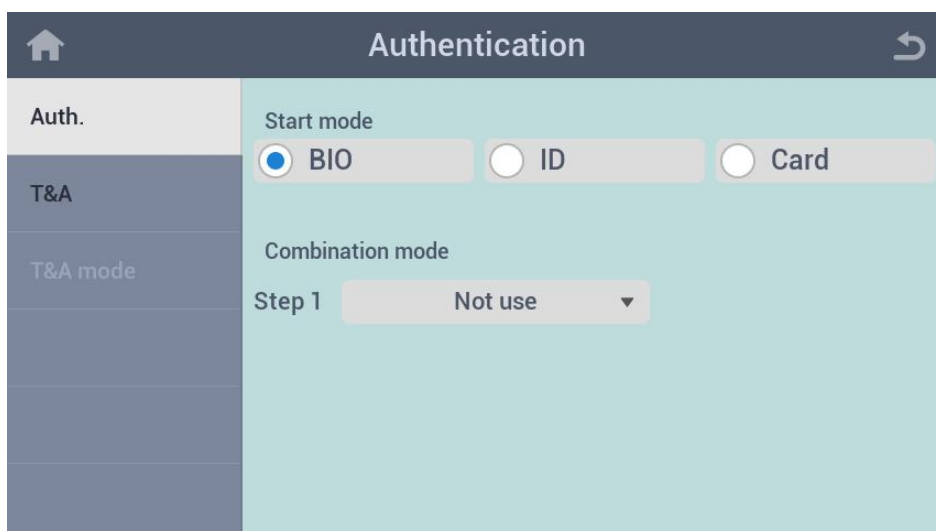

**Start mode**                      Select a basic (first) recognition method

**Combination mode**              Select a combination (additional) recognition method if necessary

#### 4.1.1 Auth. → Combination Mode (Step 1)

| Step 1  |                                  | ↩ |
|---------|----------------------------------|---|
| Not use | <input checked="" type="radio"/> | ↑ |
| Bio     | <input type="radio"/>            |   |
| ID      | <input type="radio"/>            |   |
| Card    | <input type="radio"/>            | ↓ |
| PIN     | <input type="radio"/>            |   |
|         |                                  |   |

Select a combination (additional) recognition method.

#### 4.2 T&A

| Authentication |                   | ↩                                   |
|----------------|-------------------|-------------------------------------|
| Auth.          | Use T&A           | <input checked="" type="checkbox"/> |
| T&A            | T&A > Recognition | <input type="radio"/>               |
| T&A mode       | Recognition > T&A | <input type="radio"/>               |
|                |                   |                                     |
|                |                   |                                     |
|                |                   |                                     |

**Use T&A** Select enable/disable for T&A usage mode (note: in construction)

**T&A > Recognition** Select T&A mode (Attendance etc.) first, then recognition


**Recognition > T&A** After recognition, then input T&A mode (Attendance etc.)

## **4.3 T&A Mode**

(Note: In construction)



## 5 Mode

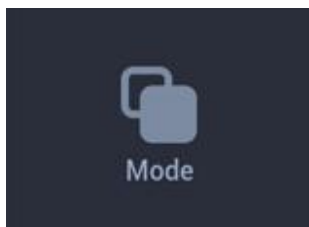

Configure settings for recognition operation.

### 5.1 Operation

|              | Mode                                      |   |
|--------------|---|---|
| Operation    | Face detection <input type="checkbox"/>   |   |
| Camera Event | Individual auth. <input type="checkbox"/> | ^ |
|              | Dual authentication Never >               |   |
|              | Match timeout 5 sec >                     |   |
|              | Card mode Use CSN >                       | v |
|              |   |   |

|                            |  |
|----------------------------|--|
| <b>Face detection</b>      | Select enable/disable for face image saving at recognition (note: to be eliminated)  |
| <b>Individual auth.</b>    | Select enable/disable for permission of individual authentication                    |
| <b>Dual authentication</b> | Select a dual authentication (simultaneous 2 persons) method (note: in construction) |
| <b>Match timeout</b>       | Set a recognition trying timeout   |
| <b>Card mode</b>           | Select use or not for CSN in RFID card (note: in construction)                       |

### 5.1.1 Operation → Dual Authentication

| Dual authentication |                                  | ↶ |
|---------------------|----------------------------------|---|
| Never               | <input checked="" type="radio"/> | ↑ |
| Always              | <input type="radio"/>            |   |
|                     |                                  | ↓ |
|                     |                                  |   |
|                     |                                  |   |


### 5.1.2 Operation → Match Timeout

| Match timeout |                                  | ↶ |
|---------------|----------------------------------|---|
| 3 sec         | <input type="radio"/>            | ↑ |
| 5 sec         | <input checked="" type="radio"/> |   |
| 10 sec        | <input type="radio"/>            |   |
| 20 sec        | <input type="radio"/>            | ↓ |
| 30 sec        | <input type="radio"/>            |   |
| 60 sec        | <input type="radio"/>            |   |

### 5.1.3 Operation → Card Mode

| Card mode |                                  | ↶ |
|-----------|----------------------------------|---|
| Not use   | <input type="radio"/>            | ↑ |
| Use CSN   | <input checked="" type="radio"/> |   |
|           |                                  | ↓ |
|           |                                  |   |
|           |                                  |   |
|           |                                  |   |
|           |                                  |   |
|           |                                  |   |

## 6 Log

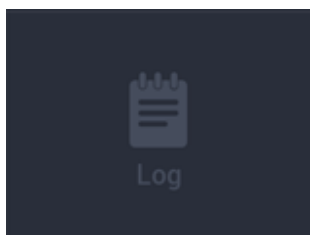


View information of saved log and log search viewer.

### 6.1 Log Info



(Note: In construction)

## User

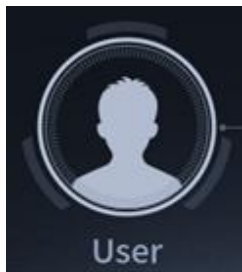

Tap the **User** icon in Home screen.

| User  |   |      |   |
|---|---|------|---|
| All (3)   | 2 | ccc  |   |
| Group 1 (0)   | 3 | ddd  | ^ |
| Group 2 (0)   | 4 | card |   |
| Group 3 (0)   |   |      |   |
| Group 4 (0)   |   |      |   |
| <div> <div>+</div> <div>Enroll</div> </div> <div> <div>Q</div> <div>Search</div> </div> <div> <div>📊</div> <div>Capacity Info</div> </div> <div> <div>🗑️</div> <div>Delete</div> </div> |   |      |   |

**Displays the registered user lists in All and Group 1, 2, 3, 4**

 
**Enroll button** Switch to enroll process

**Search button** Switch to search process

**Capacity Info button** Show the used memory percentage

**Delete button** Switch to delete process

## 1 Enroll User



Tap the **Enroll** button to enroll a new user.

The screenshot shows the 'Enroll User' form with the following fields and callouts:

- 1: ID field (value: 4)
- 2: Name field
- 3: Individual dropdown menu (value: Not use)
- 4: Admin checkbox
- 5: Group dropdown menu (value: Not use)
- 6: Bypass Card checkbox

Below the form, there are three tabs: 'Iris & Face' (selected), 'Card', and 'Pin'. Under the 'Iris & Face' tab, there is a plus icon for adding a new iris/face and two checked options: 'Face' and 'Both eye'. There are also two unchecked options: 'Glasses wearer' and 'Either eye'. At the bottom, there are 'Cancel' and 'Save' buttons.

Enroll User Page

- ① ID: Created a user ID number automatically or input manually
- ② Name: Input user name manually
- ③ Individual: Set user individual authentication mode if necessary
- ④ Admin: Can make a user administrator or not
- ⑤ Group: Can make a user belong to a group
- ⑥ Bypass Card: Can register a user who holding bypass card (highest priority card)

## 1.1 Name

Please input user name

q w e r t y u i o p  
a s d f g h j k l  
↑ z x c v b n m ✕  
ABC ,?123 Space . Done


## 1.2 Individual

Individual mode


|              |                                  |
|--------------|----------------------------------|
| Not use      | <input checked="" type="radio"/> |
| Bio only     | <input type="radio"/>            |
| Bio and ID   | <input type="radio"/>            |
| Bio and Card | <input type="radio"/>            |
| Bio and PIN  | <input type="radio"/>            |
| ID only      | <input type="radio"/>            |

Select an individual authentication mode.

## 1.3 Group

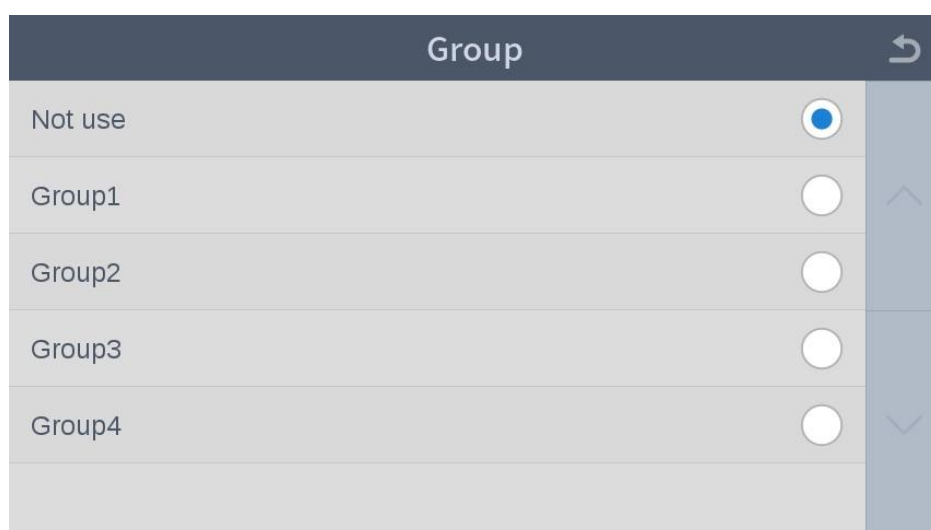

## 1.4 Iris & Face Process

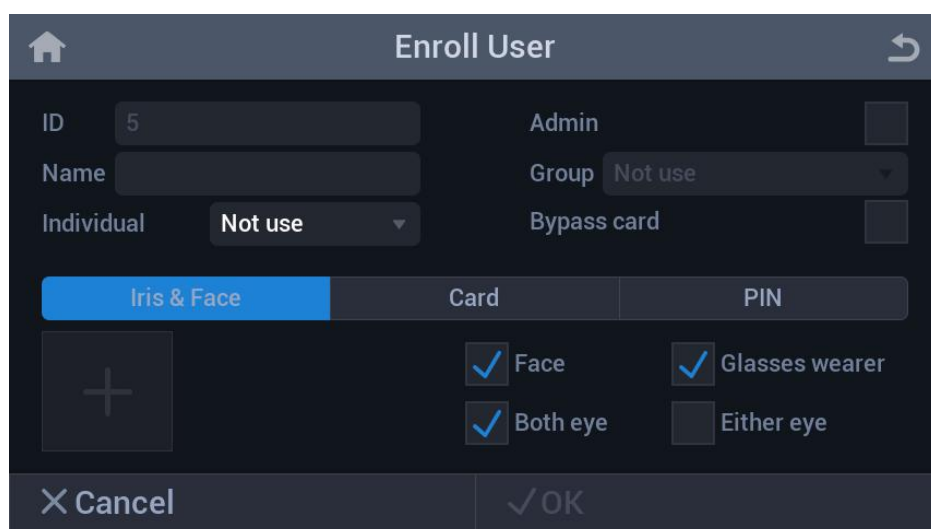

### Iris & Face tab

Selection changes tab to blue color

Bio select check boxes are shown

### Face

Select box for face image capture

### Glasses wearer

Select box for face taking off glasses additionally if necessary



|                        |                                       |
|------------------------|---------------------------------------|
| <b>Both eye</b>        | Select box for "both eye" Iris mode   |
| <b>Either eye</b>      | Select box for "either eye" Iris mode |
| <b>Start(+) button</b> | Switch to enroll process              |


#### 1.4.1 Iris & Face Process → Face Capture




※ **Note: Only operational if "Combined Face and Iris" mode is active**

|   |  |
|---|--|
| <b>Color Overlay</b>  | BLUE means too far<br>GREEN means OK<br>RED means too close.   |
| <b>Up/Down Arrow</b>  | Can tilt camera manually if necessary (note: to be eliminated) |
| <b>Switch to Iris Capture stage after good face image acquisition</b> |  |


#### 1.4.1.1 Iris & Face Process → Face Capture → Tracking Guide Box UI

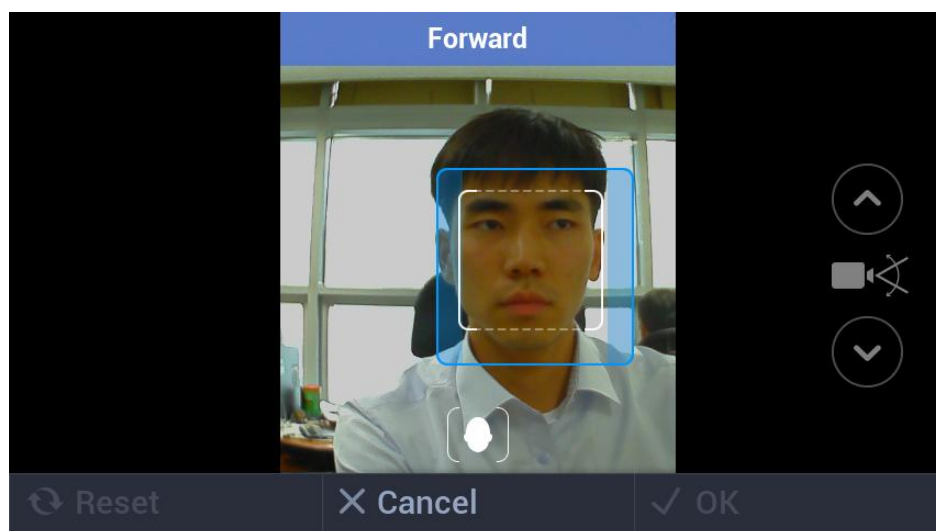


Positioning box appears in order to guide subject.

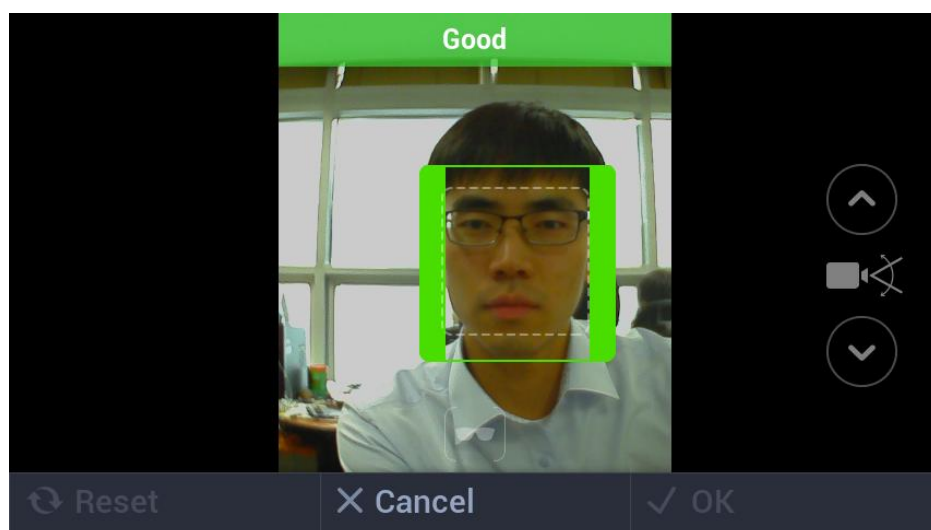

Capture normal face images.

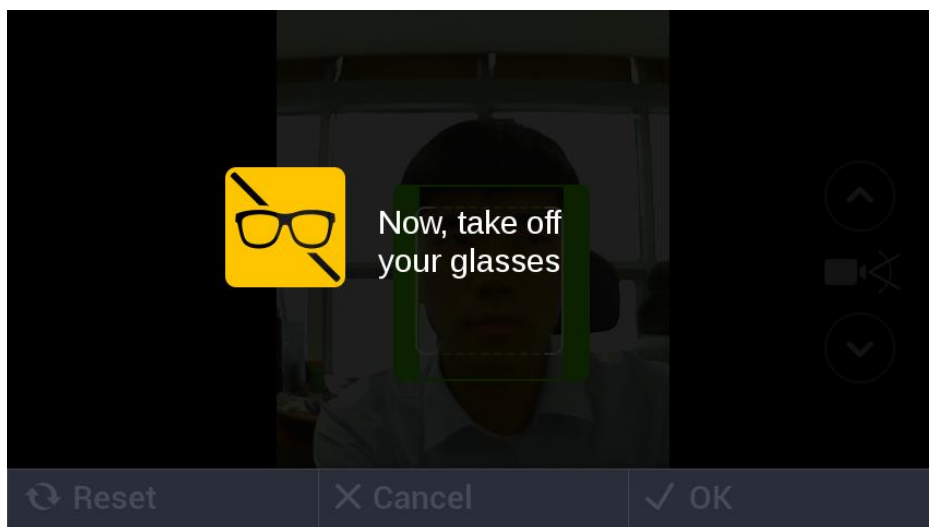


In case of selection of Glasses wearer check box, will be active for about 3 to 5 seconds.

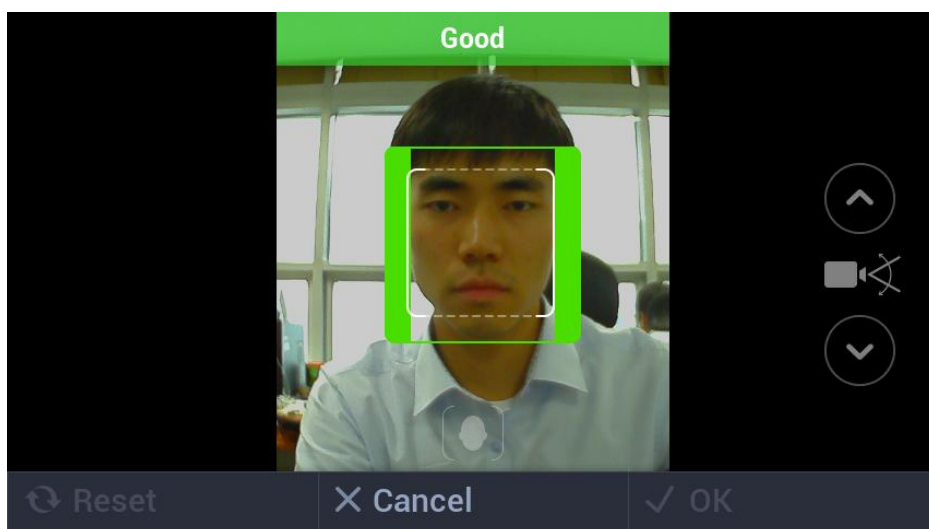


Capture additional face images taken off glasses.

### 1.4.2 Iris & Face Process → Iris Capture

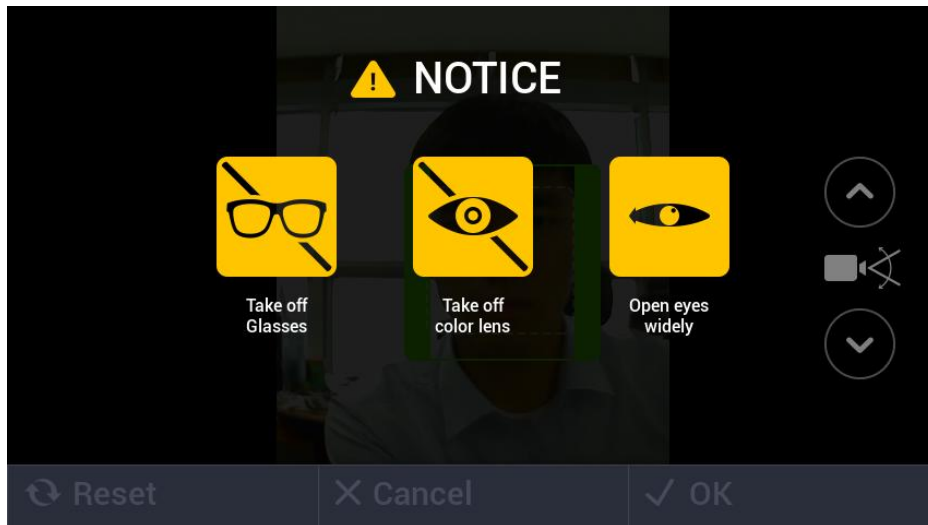


In case of Tracking Guide Box UI mode, display will be active for about 3 to 5 seconds.

#### 1.4.2.1 Iris & Face Process → Iris Capture → Tracking Guide Box UI

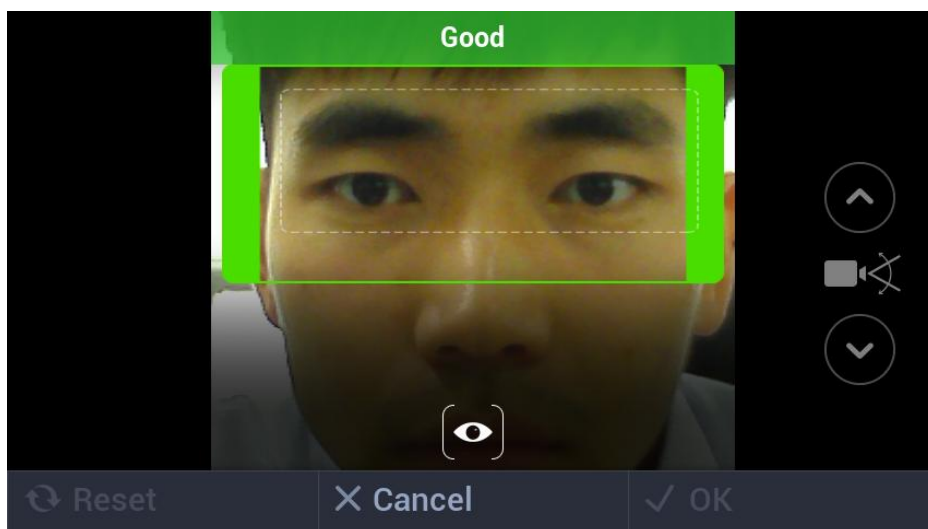


Capture iris images.

### 1.4.3 Iris & Face Process → Save Data / Complete Enrollment

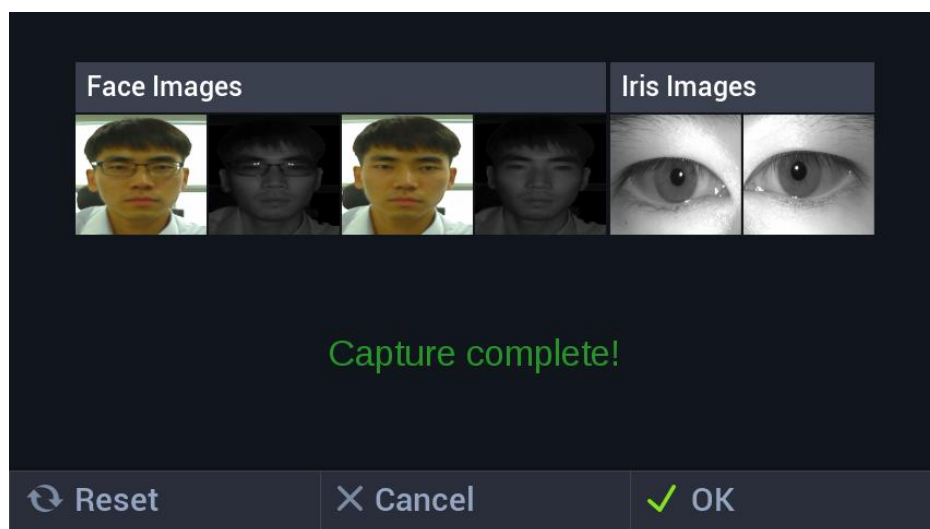

|               |  |
|---------------|--|
| <b>Reset</b>  | Return to face capture stage               |
| <b>Cancel</b> | Return to Enroll User screen               |
| <b>OK</b>     | Move to next screen to complete enrollment |


### 1.4.4 Iris & Face Process → Complete Enrollment

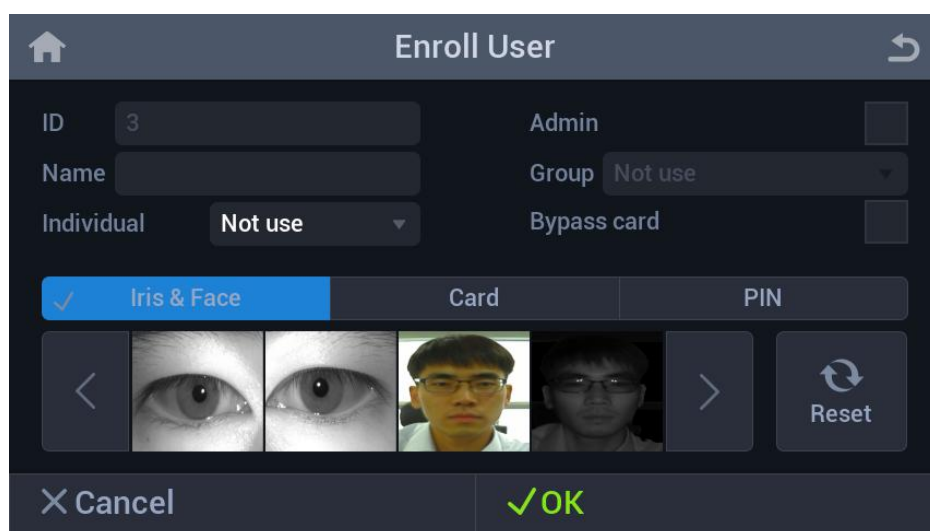

|               |                            |
|---------------|----------------------------|
| <b>Cancel</b> | Return to User Main screen |
|---------------|----------------------------|

**OK** Save user data to complete biometrics Enrollment, then return to User Main screen

## 1.5 Card

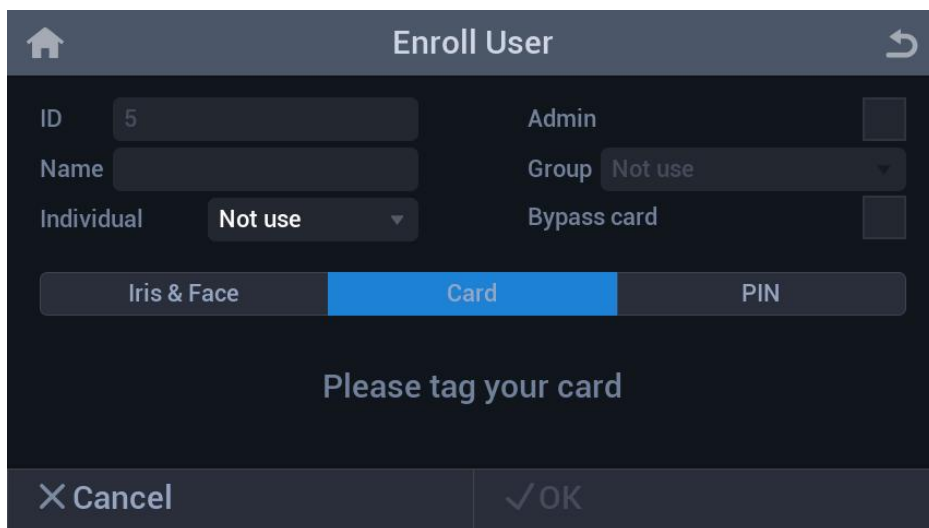


The screenshot shows the 'Enroll User' screen. At the top, there is a home icon and a back arrow. The title is 'Enroll User'. Below the title, there are input fields for 'ID' (containing '5'), 'Name', 'Individual' (a dropdown menu showing 'Not use'), 'Admin' (a checkbox), 'Group' (a dropdown menu showing 'Not use'), and 'Bypass card' (a checkbox). Below these fields are three tabs: 'Iris & Face', 'Card' (which is highlighted in blue), and 'PIN'. Below the tabs, the text 'Please tag your card' is displayed. At the bottom, there are two buttons: 'X Cancel' and '✓ OK'.

**Card tab** Selection changes tab to blue color

If "Please tag your card" message appears, touch front-bottom part of device with user card.

### 1.5.1 Card → Save Data

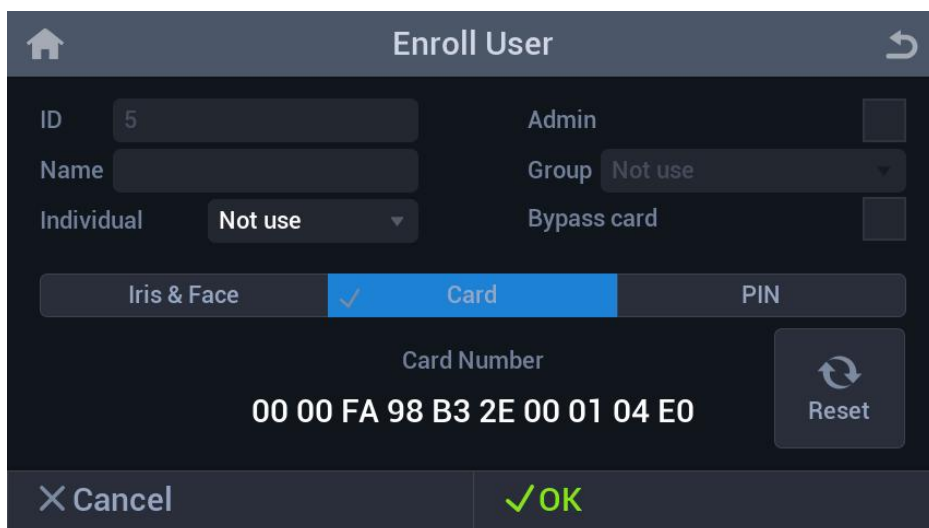

The screenshot shows the 'Enroll User' screen with the 'Card' tab selected. The 'Card Number' is displayed as '00 00 FA 98 B3 2E 00 01 04 E0'. There is a 'Reset' button with a circular arrow icon. The 'OK' button is now green and shows '✓ OK'.

Card number is shown on tagging a card

|               |   |
|---------------|---|
| <b>Reset</b>  | Clear card number and "Please tag your card" message is shown |
| <b>Cancel</b> | Return to User Main screen                                    |
| <b>OK</b>     | Save user data and return to User Main screen                 |

## 1.6 Pin

|                         |                                     |
|-------------------------|-------------------------------------|
| <b>PIN tab</b>          | Selection changes tab to blue color |
| <b>Start (+) button</b> | Switch to input screen              |

### 1.6.1 Pin → Input

### 1.6.2 Pin → Save Data

Pin number is shown as "\*" character.

 
**Reset** Clear pin number and (+) button is shown

**Cancel** Return to User Main screen

**OK** Save user data to complete PIN enrollment / return to User Main screen



## 2 Search



Tap the **Search** icon to browse list of enrolled users.




(Note: In construction)

### 3 Capacity Info




Tap the **Capacity Info** icon to check storage space.

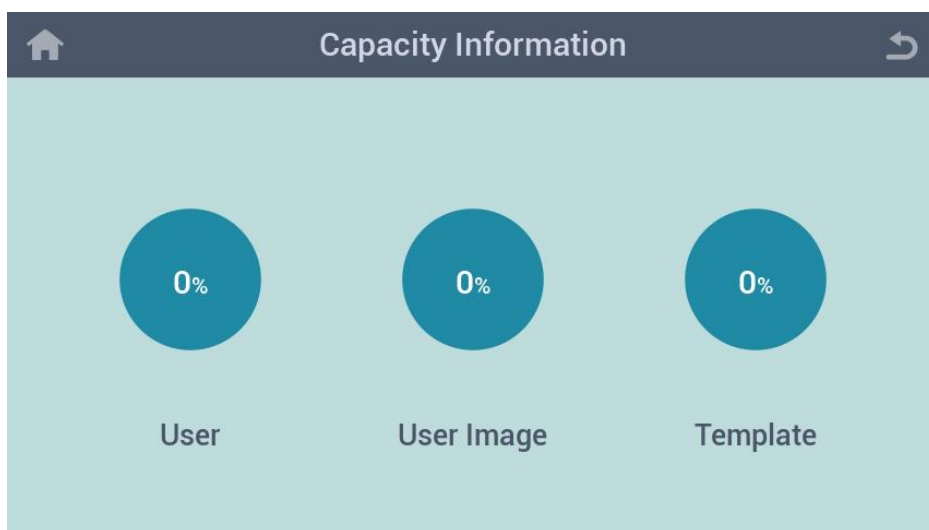


(Note: In construction)

## 4 Delete

 

Delete information of enrolled user.

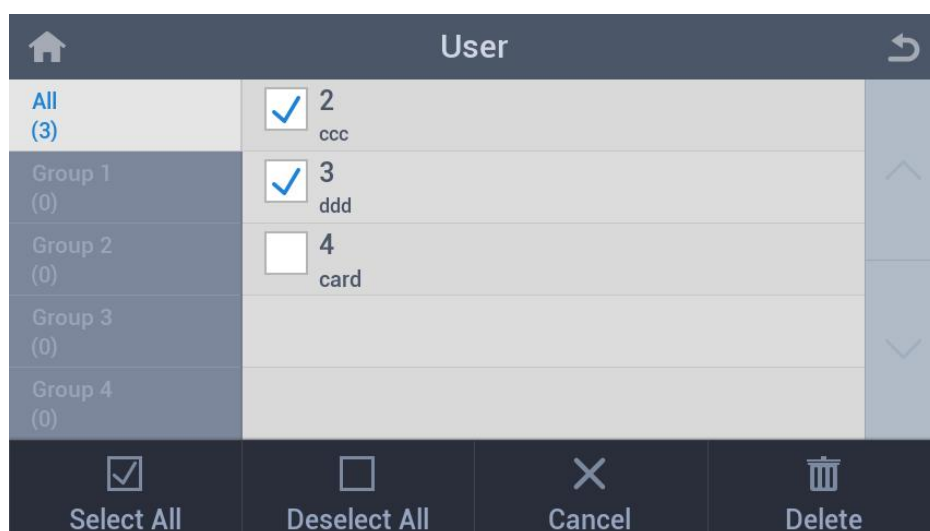


|                     |                            |
|---------------------|----------------------------|
| <b>Select All</b>   | Select all users           |
| <b>Deselect All</b> | Deselect all users         |
| <b>Cancel</b>       | Return to User Main screen |
| <b>Delete</b>       | Delete selected user(s)    |

## Recognition Process


### 1.1 Recognition Process

Recognition process is identical to the enrollment process.

### 1.2 Recognition / Authentication Success

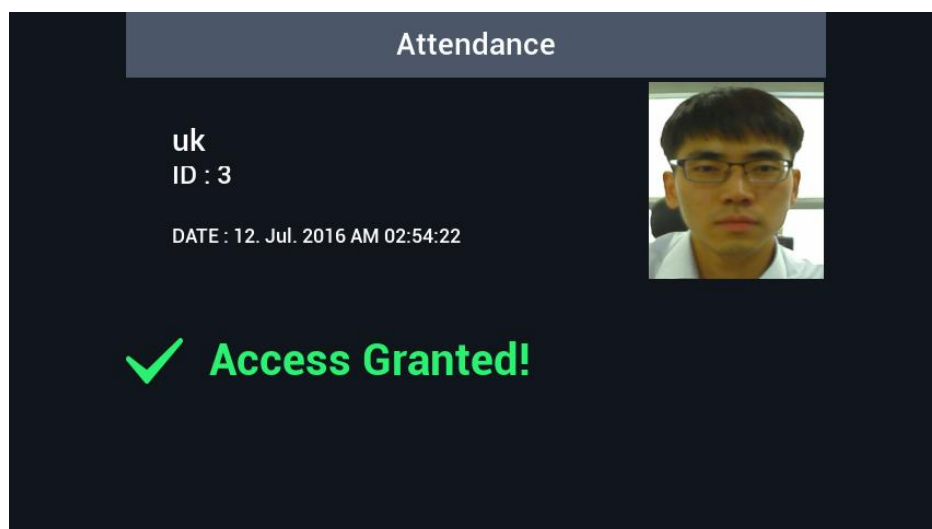

### 1.3 Recognition / Authentication Failure

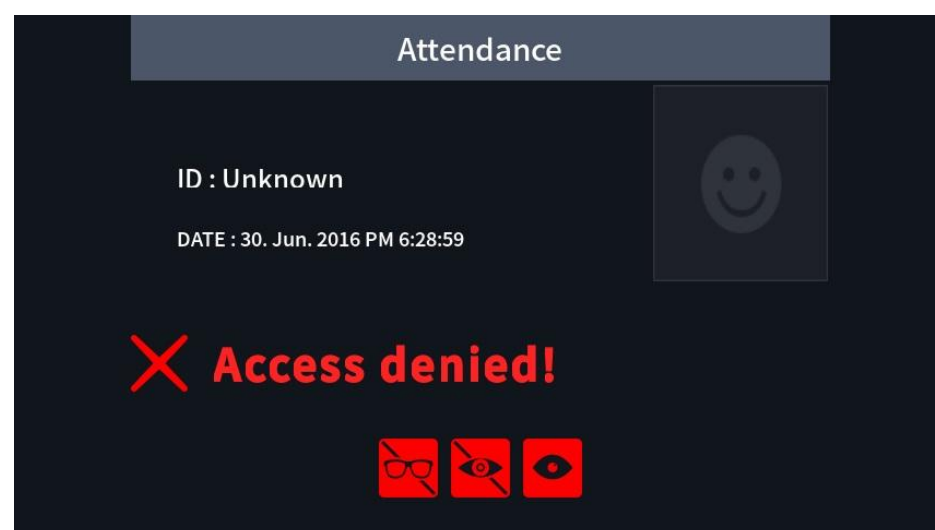

When access is denied, warning icons can appear on the screen.

- . Glasses: Device detects occlusion by glasses.
- . Color Lens: Device detects colored lenses.
- . Small Eye: Device cannot fully detect iris due to eyelid.