


**COMMAX**<sup>®</sup>

# DIGITAL DOORLOCK

Model No. CDL-100/100R

User's Manual

Home Automation  
**COMMAX**<sup>®</sup>

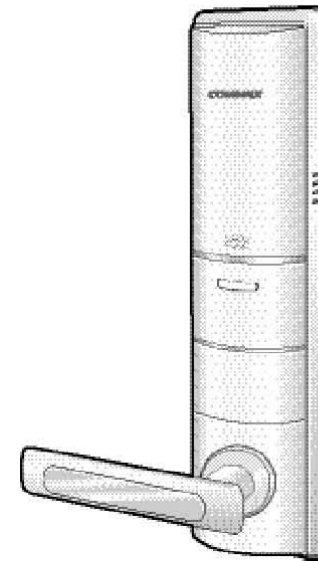

## COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu,

Seongnam-si, Gyeonggi-do, Korea

Int'l Business Dept. :

Tel.; +82-31-7393-540~550

Fax.; +82-31-745-2133

Web site : [www.commax.com](http://www.commax.com)

## COMMAX Co.,Ltd.

- Thank you for purchasing our **COMMAX** product.
- Please carefully read this User's Guide (in particular, precautions for safety) before using the product and follow the instructions to use your product exactly.
- The company is not responsible for any safety accidents caused in abnormal operation of the product.

# Features



## Open the door without key!

Using access code or RF card, you can open the door. In addition, you can input control code against possible exposure of access code to an outsider, so you can use the product with confidence.



## Input your own access code and RF-card!

For multi-user conditions, the product offers individual password and RF card input function to each user. You can easily change or delete the input access code. (Even when batteries are replaced, the input access code and RF card are retained in the system).



## Automatic door locking!

When the door is shut, the system automatically locks the door. No further manual locking!



## Lock and lock! Enjoy more security through dual lock function!

Dual Lock function ensures you more security at night when you should take good care of security and offers you more convenience.



## Anti-prank function!

When anyone from outside inputs any number more than 15 digits long or incorrect access codes more than 3 times, the system automatically shuts down the power.

# Contents

## Before Use

Warning for Safety .....	3
Main Parts .....	5
Components .....	8

## Essentials

How to Register Your Access Code .....	9
How to Register RF card .....	11
How to Register Remote Controller .....	12
How to Unlock from Inside .....	13
How to Unlock from Outside (How to Use Emergency Key) .....	14

## Applications

Warning Alarm/Dual Lock Function .....	16
Silence (Manner) Mode .....	17
Auto Lock Error .....	18
Warning Alarm Function .....	19
Keep Unlocking & Dual Lock Function .....	20

## Miscellaneous

When and How to Replace Batteries .....	21
Check Points Before Trouble Notice .....	22
Product Specifications .....	22

### Attention

Do not fail to keep the emergency key outside!!

# Warning for Safety

▶ These warnings are to secure user's safety and prevent from the possible loss of property.  
Please read carefully to use the product in a correct manner.

## Warning!

Not to follow the instruction may lead a user to injuries or even to death.

## Attention!

Not to follow the instruction may incur injuries or the loss of property.


## Signs

 indicates "Prohibition."

 indicated "Do not disassemble."


 indicates "Indication that a user must comply with."

## Warnings

 Do not operate the device with wet hand. Be careful that the liquids (water, beverage, etc.) should not seep into the inside of the device.


● It may cause mechanical troubles.




 Do not disassemble, repair or modify the device by any unauthorized person.


● It may cause mechanical troubles.  
For necessary repairs, please contact the company.



 Install the device at the places free from moisture and with good ventilation.


● Installing the device at the place free from snow, rain and direct sunlight, which may cause mechanical troubles.

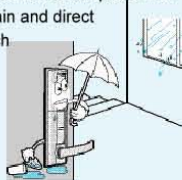

 When mechanical troubles or other problems occur, please call the company's nearest service center or agency.




## Attentions


 Do not impact on the device with any tool.


● It may cause mechanical troubles or damages.




 Do not operate the device forcefully (eg. Press the button with excessive strength).


● It may cause mechanical troubles.

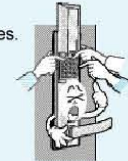

 Be careful to keep and manage your access codes.


● Leakage of access code threatens to possible burglaries. Change your access code from time to time.

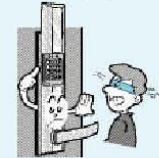

 Do not use water, benzene, thinner and alcohol when washing the device.


● It may cause an electric shock or a fire.

 



 Keep the gap between the door and its frame less than 5mm.


● Gap over 5mm may hinder auto lock from functioning normally.




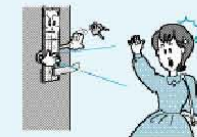
 Be careful that button part cover should not be damaged or broken.



 When you go outside, do not fail to check that the door is closed.

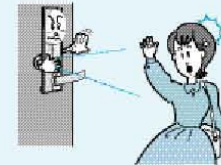


 Be careful not to lose the emergency key or RF card.



## Main Parts

▶ Outside (model CDL-100/100R)

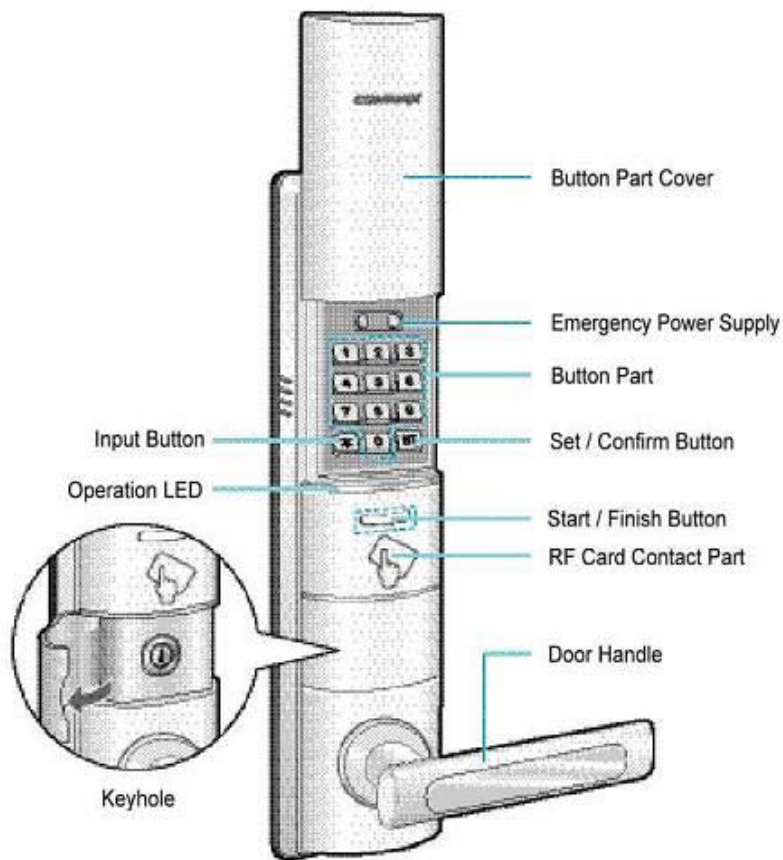

## Product Specifications

<b>Model Name</b>		CDL- 100/100R
<b>Power</b>		AA-type alkaline batteries
<b>Operation</b>		Electronic Control Method
<b>Weight</b>		3.2Kg
<b>Size</b> (W×L×H)	<b>Outside</b>	75 x 300 x 38(mm)
	<b>Inside</b>	86 x 278 x 40(mm)

- This product cannot cover whole range of security functions. To ensure your security, you are recommended to install the dedicated security product.
- Any disassembly, re-assembly or modification of the product and use of the disassembled, re-assembled or modified product for technical purpose without approval from COMMAX Co., Ltd. may cause legal sanctions.
- All the intellectual property rights including trademark and copyrights in this manual belong to COMMAX Co., Ltd. Illegal copy, duplication or reproduction, partly or entirely, of this manual is not permitted.

▷ Class B device

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.



However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


**CAUTION :** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

# Main Parts



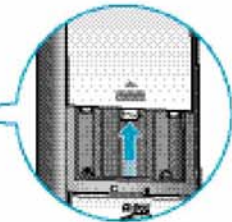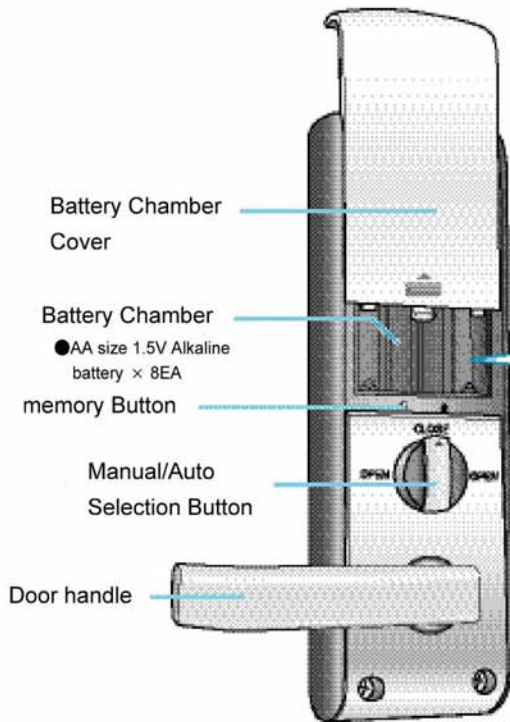










## ▶ Inside





How to open the cover of battery chamber:

- Press  part lightly and at the same time, push the cover in the direction of arrow mark.
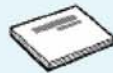
## Components

 Locking Device (1 EA)	 <b>A B</b> Installation Components (Type A: 1 EA, Type B: 1 EA)	 <b>RH LH</b> Convexo-concave Components (LH: 1 EA, RH: 1 EA)	 Rubber Pad (1 set; 2 EA)
 RF-Card	 Screws (for fixing the main frame; 4 EA)	 Screws (for locking device; 2 EA)	 Screws (for installation; 2 EA)
 AA size Alkaline Batteries (8 EA)	 Latch Stick Stopper (1 EA)	 Latch Stick Washer (1 EA)	 Emergency Keys (1set; 3EA)
		 User's Manual (1 Copy)	

## Remote Controller (Option)

 In door RC	 Out door RC
---	--


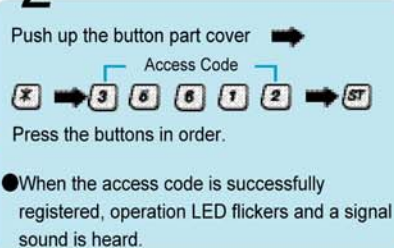
# How to Register Your Access Code

▶ User can register a total of 6 access codes including an initial access code and 5 additional ones using the numbers with 1 to 10 digits.



## To register an initial access code (address #0) (eg. To input an access code 35612)

When the product is shipped, the default access code is set as 0.

- 1  Press the memory button
- 2  Push up the button part cover →  
Access Code  
\* → 3 → 6 → 6 → 1 → 2 → \*  
Press the buttons in order.  
● When the access code is successfully registered, operation LED flickers and a signal sound is heard.

※ In the event of input errors, operation LED flickers and a signal sound is heard. In this case, restart the above registration process. When user inputs any number more than 15 digits long or incorrect access codes more than 3 times, the registration process is automatically stopped for 30 seconds.



## ▶ To change the registered access code

According to the same procedure as above access code registration, input new access code to the address where an existing access code is registered. In this case, the existing access code is automatically changed to new one.

**TIP!** ● The initial access code can be changed but cannot be deleted from the system. For the rest addresses (#1 to 5), however, access codes registered there can be freely changed and deleted.

## To add access codes (eg. To input an additional access code 4701604)

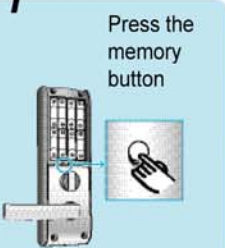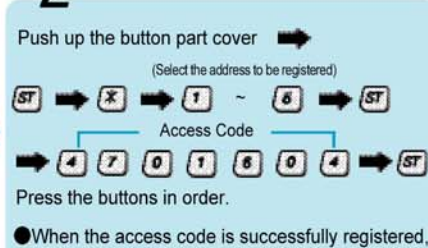


The system provides a total of 5 additional access codes (address #1 to 5).

- 1  Press the memory button
- 2  Push up the button part cover →  
(Select the address to be registered)  
\* ST \* → \* → 1 ~ 5 → \* ST \*  
Access Code  
\* → 4 → 7 → 0 → 1 → 6 → 0 → 4 → \*  
Press the buttons in order.  
● When the access code is successfully registered, operation LED flickers and a signal sound is heard.

※ In the event of input errors, operation LED flickers and a signal sound is heard. In this case, restart the above registration process. When user inputs any number more than 15 digits long or incorrect access codes more than 3 times, the registration process is automatically stopped for 30 seconds.

## ▶ To delete all the registered access codes

This function is used to delete access codes registered at address #1 to 5, except for the initial access code in address #0. In this case, however, please note that the control code is also deleted.

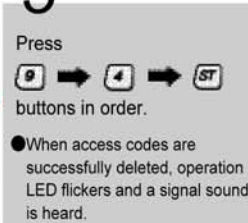- 1  Press the memory button.
- 2  Push up the button part cover  
→ Press \* ST \*  
→ Press \* \*
- 3  Press \* 9 \* → \* 4 \* → \* ST \* buttons in order.  
● When access codes are successfully deleted, operation LED flickers and a signal sound is heard.

(continued)

## How to Register i-Buttons or RF cards

- ▶ User can register a total of 100 i-Buttons or RF cards at address #0 to #99.
- ▶ To register other i-buttons(RF cards) than are initially provided in the system, please purchase additional ones.

### To register an initial i-Button or RF card (address #0)

- 1 Press the memory button
- 2 Push up the button part cover →  
Press **6** → **0** → **ST** buttons in order. Then, put the i-Button or RF card to be registered to the i-Button or RF card contact part.  
● When the i-Button (RF card) is successfully registered, a signal sound is heard.

### To register additional i-Buttons (RF cards)

- 1 Press the memory button
- 2 Push up the button part cover →  
select the address to be registered  
Press **6** → **0** ~ **99** → **ST** buttons in order. Then, put the i-Button (RF card) to be registered to the i-Button (RF card) contact part.  
● When the i-Button (RF card) is successfully registered, a signal sound is heard.

### To delete a registered i-button or RF card (individual deletion)

For example, follow the instructions below to delete an i-Button or RF card registered in address #2.

- 1 Press the memory button.
- 2 Push up the button part cover →  
**ST** → **\*** → **9** **8**  
→ **2** (An address where an i-Button or RF card to be deleted is being registered) Press the buttons in order.  
● When the i-Button(RF card) is successfully deleted, a signal sound is heard.

### To delete all the registered i-Buttons or RF cards (lump-sum deletion)

- 1 Press the memory button.
- 2 Push up the button part cover →  
**ST** → **\*** → **9** **9**  
→ **ST** Press the buttons in order.  
● When all the i-Buttons or RF cards are successfully deleted, a signal sound is heard.

## How to Register Remote Controller (Option)

- ▶ User can register a total of 5 remote controllers at address #1 to #5.
- ▶ Our remote controllers adopt FM method and are duly authorized by governmental authorities in Korea.

### To register an initial remote controller (address #1)

- 1 Press the memory button
- 2 Push up the button part cover →  
**1** → **ST** Press the buttons in order and press the remote controller button.  
● When the remote controller is successfully registered, a signal sound is heard.

### To register additional remote controllers

- 1 Press the memory button
- 2 Push up the button part cover →  
select the address to be registered  
**2** ~ **5** → **ST**  
Press the buttons in order and press the remote controller button.  
● When the additional remote controller is successfully registered, a signal sound is heard.

### To delete a registered remote controller (individual deletion)

For example, follow the instructions below to delete a remote controller registered in address #2.

- 1 Press the memory button.
- 2 Push up the button part cover →  
**ST** → **\*** → **9** **8**  
→ **2** (An address where a remote controller to be deleted is being registered)  
→ **ST** Press the buttons in order.  
● When the remote controller is successfully deleted, a signal sound is heard.


● When a user do not use remote control function, delete all the registered. And it helps to extend the product's life cycle.

### To delete all the registered remote controllers (lump-sum deletion)

- 1 Press the memory button.
- 2 Push up the button part cover →  
**ST** → **\*** → **9** **8** → **0**  
→ **ST** Press the buttons in order.  
● When all the remote controllers are successfully deleted, a signal sound is heard.

## How to Unlock from Inside

- ▶ Follow the instruction to unlock the door and go outside. User can easily open the door only by putting down the door handle. No need for special actions.
- ▶ Using remote controller, you can open the door only by pressing the remote controller button without approaching the door.

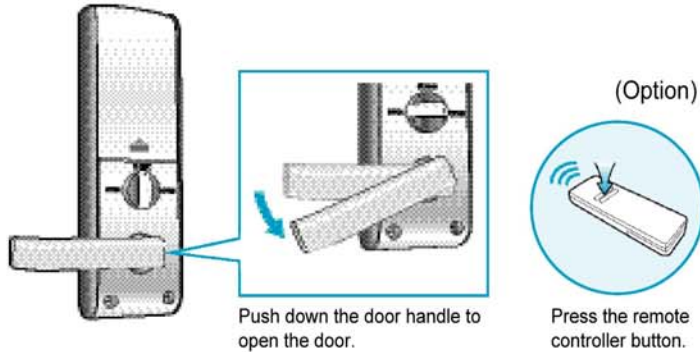


### ▶ How to Lock the Door from Inside

Shut the door, and the door will be automatically locked.


### ▶ How to unlock the Door from Inside using Video phone (Dry contact type)

- Please connect 2 wire from the digital door lock to the door lock terminal on the video phone.
- When there is call from the out door Camera. Press door open key on the video phone.

**TIP!** ● If the side locking device looks as shown in the picture when you open the door, the door is in a normal condition. Although the uppermost dead bolt projects outside about 3mm, this projection neither affect the normal operation of the system nor cause you inconvenience in using it. Do not worry. It is not a kind of mechanical trouble.

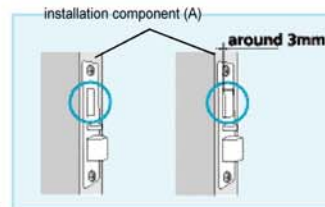


- In case that the gap between a locking device and door frame is more than 5mm, replace flat components (B) with convex-concave ones. In this case, convex-concave components should be installed at right place according to the installation direction of door lock. Do not confuse left-hand component with right-hand one.

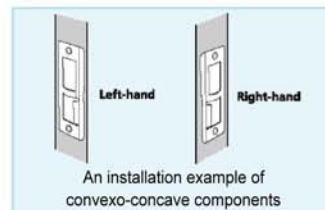

## How to Unlock from Outside


- ▶ Follow the instructions below to open the door from outside.

To unlock the door using an access code (eg. To input an access code 35612)

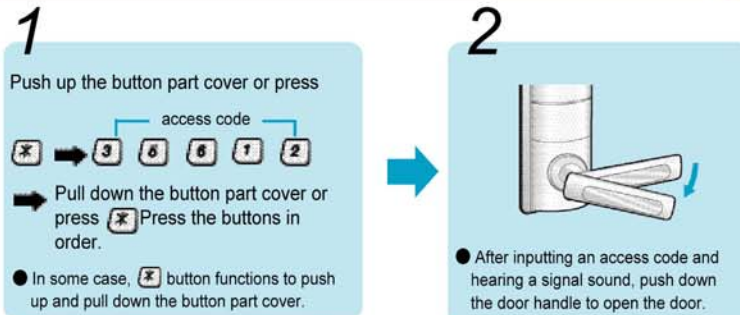

- In some case, [X] button functions to push up and pull down the button part cover.
- If you do not open the door within 5 seconds after inputting an access code, the door is automatically locked again for security. In this case, input an access code again to open the door.

To unlock the door using an i-Button or RF card

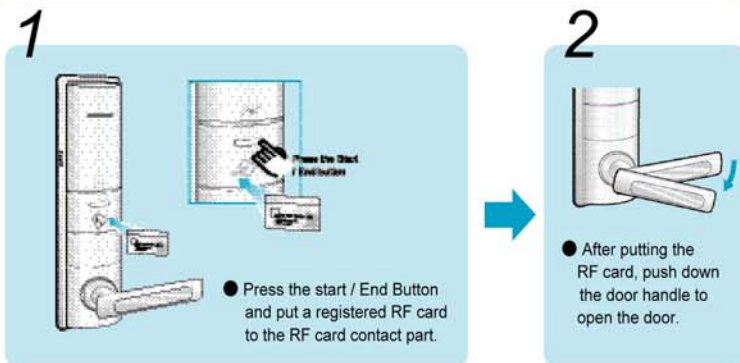

- If you do not open the door within 5 seconds after putting the RF card, the door is automatically locked again for security. In this case, put the or RF card again to open the door.


**TIP!** ● In case of forgetting access code or loss of RF card, You can open the door with the emergency key(see p.15)



## How to Unlock from Outside (continued)

▶ Follow the instructions below to open the door from outside.

To unlock the door using a remote controller

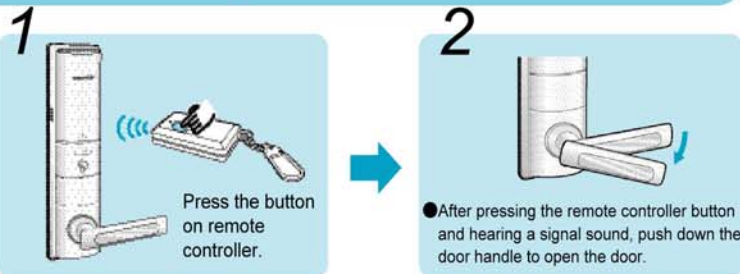


● If you do not open the door within 5 seconds after pressing the remote controller button, the door is automatically locked again for security. In this case, press the remote controller button again to open the door.

▶ How to Replace the Battery for Remote Controller


Indoor Remote Controller

1. Open the cover of battery chamber at the rear side of remote controller.
2. Pull out the consumed battery and put into the new one (6F22x(Fc-1)9V).

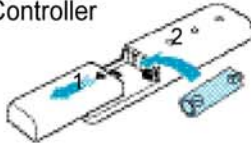

Outdoor Remote Controller

1. Unscrew the rear side of remote controller.
2. Pull out the consumed battery and put into the new one (12V/23A).

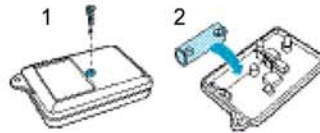

To unlock the door using emergency key

(If you forget your access code, you can unlock the door using emergency key.)




- TIP!**
- Open the door when the giving the key a turn. If you remove the key from the hole before you open the door, the door is automatically locked.
  - You are recommended to keep emergency key outside (your car or office) or always carry it.
  - In case that dual lock function is set, warning alarm goes off. (See p. 16)


## Warning Alarm Function

▶ If anyone tries to unlock the door in a forceful manner when it is being locked, warning alarm will go off. If you input a proper access code, warning signal is automatically cleared.

To set the warning alarm function

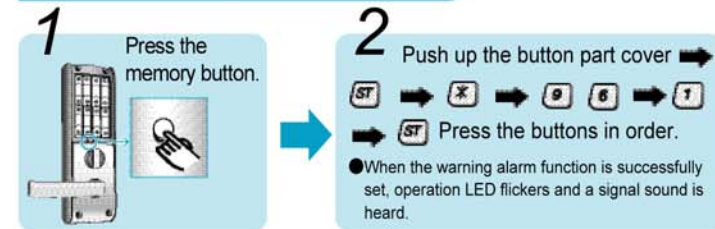

▶ To cancel the warning alarm function

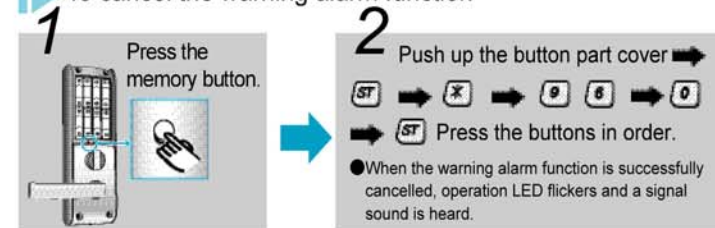


**TIP!** ● When the product is shipped from factory, warning alarm function is set cancelled.

## Dual Lock Function


▶ This function offers dual control by access code and RF card. This function is available only when both access code and RF card are registered in the system. In other cases, error signal will go off. (This function gives you convenience especially when you are out for a long time or take a trip.)

▶ Dual lock function is automatically cancelled once you use it, so you should set this function every time you want to use it.

▶ To set dual lock function

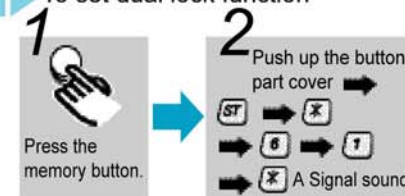

▶ To use dual lock function

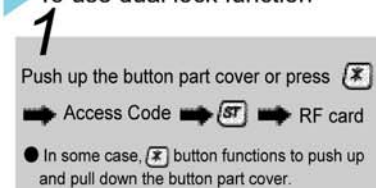



When you press \* button, operation LED starts flickering.


## Silence (Manner) Mode

► Silence mode is useful if you feel that the signal sound of button is too loud when you unlock the door using access code. If you press the button in silence mode, button signal sound is not heard but only operation LED flickers. Follow the instructions below to set and cancel this function.


### To set the silence (manner) mode

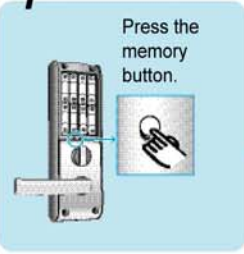
- 

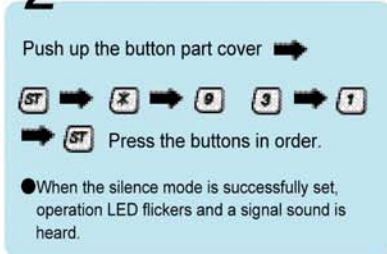
1 Press the memory button.
- 

2 Push up the button part cover →  
  
 → ST Press the buttons in order.  
 ● When the silence mode is successfully set, operation LED flickers and a signal sound is heard.

### To cancel the silence (manner) mode

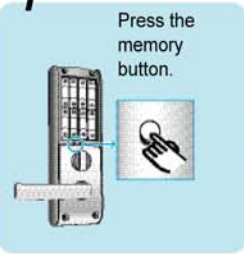- 

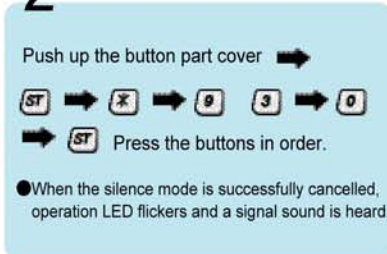1 Press the memory button.
- 

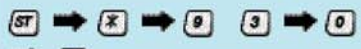
2 Push up the button part cover →  
  
 → ST Press the buttons in order.  
 ● When the silence mode is successfully cancelled, operation LED flickers and a signal sound is heard.


- TIP!**
- When the product is shipped from factory, this function is set cancelled.
  - Even if silence mode is being set, warning alarm sound goes off normally.


## Auto Lock Error Warning Alarm Function

► Using this function, warning alarm goes off when door is shut but not automatically locked. Follow the instructions below to set and cancel this function.


### To set the auto lock warning alarm function

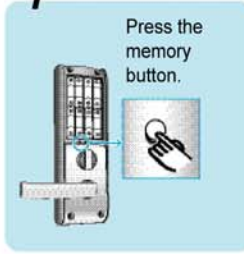
- 

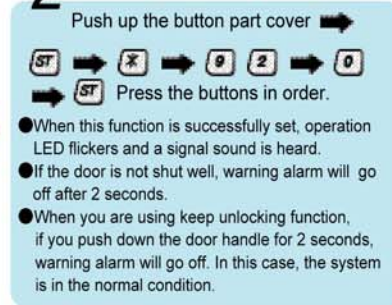
1 Press the memory button.
- 

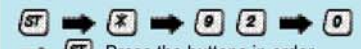2 Push up the button part cover →  
  
 → ST Press the buttons in order.  
 ● When this function is successfully set, operation LED flickers and a signal sound is heard.  
 ● If the door is not shut well, warning alarm will go off after 2 seconds.  
 ● When you are using keep unlocking function, if you push down the door handle for 2 seconds, warning alarm will go off. In this case, the system is in the normal condition.

### To cancel the auto lock warning alarm function

- 

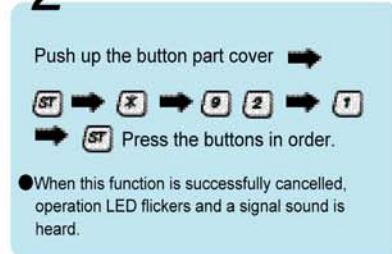1 Press the memory button.
- 

2 Push up the button part cover →  
  
 → ST Press the buttons in order.  
 ● When this function is successfully cancelled, operation LED flickers and a signal sound is heard.

- TIP!**
- When the product is shipped from factory, this function is set up.
  - Keep this function cancelled to prevent warning alarm from going off when keep unlocking function is on.
  - Even the door is shut, but if the warning alarm will go off, it means the door is not shut well. In this case, shut the door again.

# Control Function

▶ If you feel that an access code alone is not enough for security when you are out for a long time, set this control function. Setting this function, you should input control and access code to open the door. (Control and access code should not be the same. For control code, only 7-digit number is available.)

To register the control code

(e.g. To register control code 1234567)


1

Press the memory button.




2

Push up the button part cover →

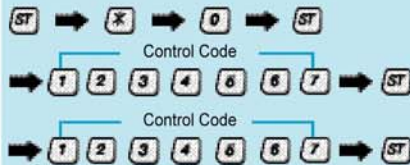

Press the buttons in order.

 ● When this function is successfully set, operation LED flickers and a signal sound is heard.



▶ Press the button in order (to confirm the setting)

- ※ To change the control code, input new code following the above procedure.
- ※ To delete the control code, refer to "To delete all the registered access codes" at p.10. Deletion of control code automatically cancels the control function. In this case, all access codes (address #1 to 5), except for the initial code at address #0, are cleared.

To unlock the door in control mode

(When control function is on, follow the instructions below to unlock the door.)

1

Push up the button part cover or press \*



▶ Press the buttons in order.

● In some case, \* button functions to push up and pull down the button part cover.

2

\* → Access Code




Pull down the cover or press \*

# Keep Unlocking Function

▶ The door is locked immediately after it is shut. Using this function, however, you can keep the door always unlocked. This function gives you convenience when a lot of people come in and go out (e.g. family events).

To set the keep unlocking function

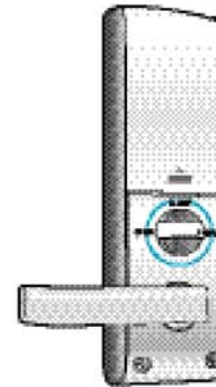

When the door is being opened, press the manual /auto selection button.

● When this button is being pressed back, this function is successfully set and activated.

▶ To cancel the keep unlocking function





Pull this button out and place it to the initial position.

# Compulsory Lock Function

 ▶ Using this function, an outsider cannot open the door even with access codes and emergency keys. compulsory lock function gives you more security at night when special attention to security is needed.

To set the compulsory lock function

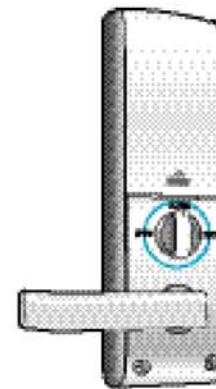

When the door is being shut, press the manual /auto selection button.

● When this button is being pressed back, this function is successfully set and activated.


▶ To cancel the compulsory lock function



Pull this button out and place it to the initial position.

## When and How to Replace Batteries

▶ When battery power gets low, the operation LED blinks and 'beep' sounds. This indicates that the batteries need to be replaced. Follow the instructions below to replace batteries.

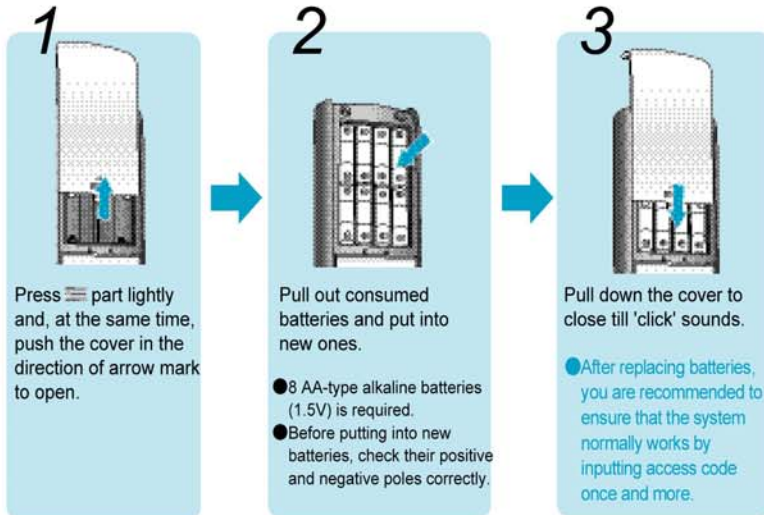


### Warning

- Before putting into new batteries, check their positive and negative poles correctly.
- For digital door lock products, AA-type alkaline batteries must be used. Do not mix and used other kinds of batteries.
- Incorrect insertion of batteries may cause disruption, leakage and heating.



- If batteries are not replaced with new ones even when their power gets low, the system converts the door into compulsory lock mode before batteries are completely discharged. In this case, unlock the door using 9V battery or emergency key and (RF card) replace the consumed batteries.
- Even when batteries are replaced, the registered access codes, i-Buttons (RF cards), control code and remote controller are retained in the system.
- When replacing batteries, replace all of them(8 EA) at once (not a part of them).
- If batteries are abruptly discharged and you do not hold any emergency key, connect a 9V battery to emergency power supply to supply emergency power to the system. (In this case, battery's poles do not affect the emergency power supply; any direction is all right).
- For the battery replacement for remote controllers, please see p. 15.

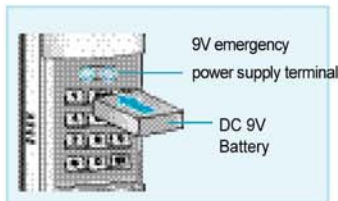

## Check Points Before Trouble Notice

▶ Do not fail to check following points before your trouble notice to our agencies.

Troubles	Check Point	Actions
I pressed the button, but the system doesn't work.	Does operation LED flickers?	Batteries are completely discharged. Open the door with emergency key and replace the consumed batteries (see p. 21)
I input the access code, but the door isn't unlocked.	Are you sure that you open the door within 5 seconds after inputting the access code?	The door is automatically locked 5 seconds after access code is input. Input access code again to open the door. (see p.14)
	Are you sure that control function is in off mode?	To open the door when the control function is activated, you should press the control code before inputting access code. Press the control code first and input access code. (see p. 19)
I contact i-Button (RF card) to the system, but the door isn't unlocked.	Are you sure that you open the door within 5 seconds after contacting the i-Button(RF card)?	The door is automatically locked 5 seconds after i-Button(RF card) is input. Contact i-Button(RF card) to the right place again to open the door. (see p.14)
	Are you sure that you use the registered i-Button (RF card)?	Check whether the i-Button (RF card) is normally registered and try again. Otherwise, register i-Button (RF card). (see p. 11)
The door isn't locked automatically.	Are you sure that keep unlocking function is in off mode?	When the keep unlocking function is on, the door cannot be shut automatically. Cancel the keep unlocking function (see. p. 20)
When the door is shut, warning alarm goes off.	Don't you activate the keep unlocking function?	When auto lock error warning alarm function is on, it is normal that a signal sound is heard. It's not a kind of mechanical trouble.(see. p. 18)


## Product Specifications

Model Name	CDL-100 / CDL-100R	
Power	AA-type alkaline batteries (1.5V, 8 EA)	
Operation	Electronic Control Method	
Weight	3.5Kg	
Size (WXLXH)	Outside	75 x 300 x 38(mm)
	Inside	86 x 278 x 40(mm)

- This product cannot cover whole range of security functions. To ensure your security, you are recommended to install the dedicated security product.
- Any disassembly, re-assembly or modification of the product and use of the disassembled, re-assembled or modified product for technical purpose without approval from COMMAX Co., Ltd. may cause legal sanctions.
- All the intellectual property rights including trademark and copyrights in this manual belong to COMMAX Co., Ltd. Illegal copy, duplication or reproduction, partly or entirely, of this manual is not permitted.

## When and How to Replace Batteries

- ▶ When battery power gets low, the operation LED blinks and 'beep' sounds. This indicates that the batteries need to be replaced. Follow the instructions below to replace batteries.

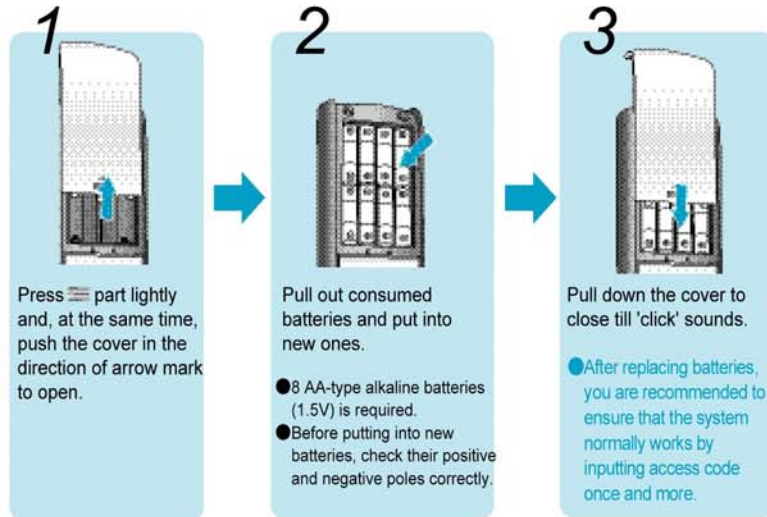


### Warning

- Before putting into new batteries, check their positive and negative poles correctly.
- For digital door lock products, AA-type alkaline batteries must be used. Do not mix and used other kinds of batteries.
- Incorrect insertion of batteries may cause disruption, leakage and heating.



- If batteries are not replaced with new ones even when their power gets low, the system converts the door into compulsory lock mode before batteries are completely discharged. In this case, unlock the door using 9V battery or emergency key and (RF card) replace the consumed batteries.
- Even when batteries are replaced, the registered access codes, i-Buttons (RF cards), control code and remote controller are retained in the system.
- When replacing batteries, replace all of them(8 EA) at once (not a part of them).
- If batteries are abruptly discharged and you do not hold any emergency key, connect a 9V battery to emergency power supply to supply emergency power to the system. (In this case, battery's poles do not affect the emergency power supply; any direction is all right).
- For the battery replacement for remote controllers, please see p. 15.

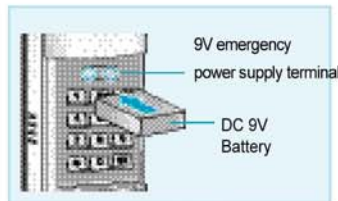

## Check Points Before Trouble Notice

- ▶ Do not fail to check following points before your trouble notice to our agencies.

Troubles	Check Point	Actions
I pressed the button, but the system doesn't work.	Does operation LED flickers?	Batteries are completely discharged. Open the door with emergency key and replace the consumed batteries (see p. 21)
I input the access code, but the door isn't unlocked.	Are you sure that you open the door within 5 seconds after inputting the access code?	The door is automatically locked 5 seconds after access code is input. Input access code again to open the door. (see p.14)
	Are you sure that control function is in off mode?	To open the door when the control function is activated, you should press the control code before inputting access code. Press the control code first and input access code. (see p. 19)
I contact i-Button (RF card) to the system, but the door isn't unlocked.	Are you sure that you open the door within 5 seconds after contacting the i-Button(RF card)?	The door is automatically locked 5 seconds after i-Button(RF card) is input. Contact i-Button(RF card) to the right place again to open the door. (see p.14)
	Are you sure that you use the registered i-Button (RF card)?	Check whether the i-Button (RF card) is normally registered and try again. Otherwise, register i-Button (RF card). (see p. 11)
The door isn't locked automatically.	Are you sure that keep unlocking function is in off mode?	When the keep unlocking function is on, the door cannot be shut automatically. Cancel the keep unlocking function (see. p. 20)
When the door is shut, warning alarm goes off.	Don't you activate the keep unlocking function?	When auto lock error warning alarm function is on, it is normal that a signal sound is heard. It's not a kind of mechanical trouble.(see. p. 18)

## Product Specifications

Model Name	CDL-100 / CDL-100R
Power	AA-type alkaline batteries 6V (1.5V × 8EA)
Operation	Electronic Control Method
Weight	3.5Kg
Size (WXLXH)	Outside 75 x 300 x 38(mm)
	Inside 86 x 278 x 40(mm)

- This product cannot cover whole range of security functions. To ensure your security, you are recommended to install the dedicated security product.
- Any disassembly, re-assembly or modification of the product and use of the disassembled, re-assembled or modified product for technical purpose without approval from COMMAX Co., Ltd. may cause legal sanctions.
- All the intellectual property rights including trademark and copyrights in this manual belong to COMMAX Co., Ltd. Illegal copy, duplication or reproduction, partly or entirely, of this manual is not permitted.