



Box contents

1. Balance Keyboard
2. Wireless Receiver
3. User Guide
4. Two AAA Batteries




Keyboard Setup



Step 1:

Remove the back housing and insert AAA batteries.
Remove Wireless Receiver from housing.

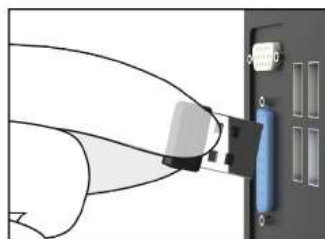

Step 2:

Plug the Wireless Receiver into an open USB port.



Step 3:


Enjoy using your Balance Keyboard!

Function and Media Control Keys

- A. Media Control
- B. Application Functions
- C. Interface Functions
- D. Volume Control
- E. Fn Key



Function and Media Control Keys

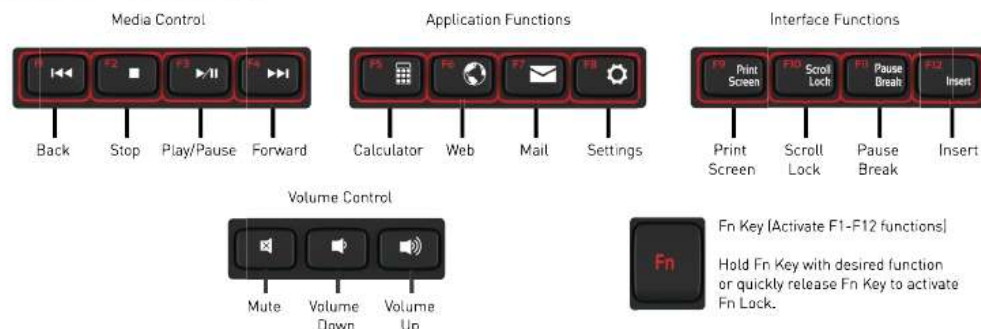

Connection Troubleshooting

In the event that your Balance Keyboard loses connection, please try the following solutions:

- Make sure the wireless receiver is plugged into a working USB port on your computer. Unplug the receiver and re-insert it after a few seconds.
- Verify that the batteries in the keyboard are fully charged. Remove one battery and re-insert it after a couple of seconds.
- Confirm that the wireless receiver is not too far from the keyboard, or too close to other wireless devices.
- Press the Reset button under the keyboard while the button itself is very close to the wireless receiver.

If trouble persists please consult our online troubleshooting guide at contourdesign.com

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.

DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for

compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Contour Design, Inc



contour 