


# 2.4GHz WIRELESS DATA TRANSCEIVER USER MANUAL

MODEL:15-2400RSK

## Panel View

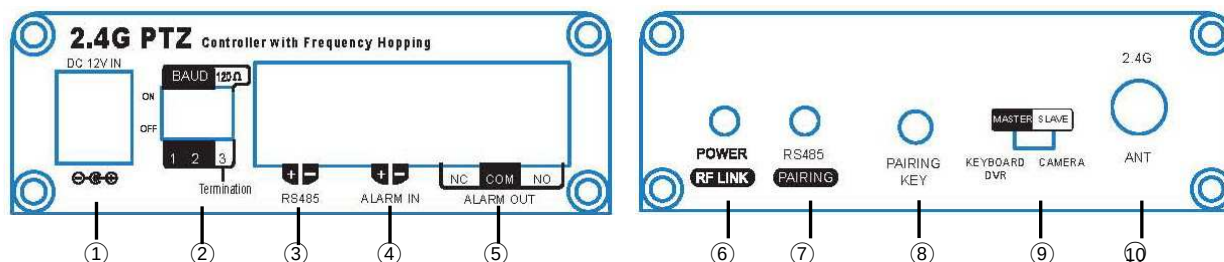

1. **DC+12V IN:** DC 12V Power Input
2. **BAUD RATE and TERMINATION:** Baud rate and 120 Ohm termination setting by DIP switch.  
(Note: After changing the baud rate by DIP switch, please re-boot the device again.)

| Baud Rate Setting |     |          |
|-------------------|-----|----------|
| ON                | 1 2 | 2400 bps |
| ON                | 1 2 | 4800 bps |
| ON                | 1 2 | 9600 bps |
| ON                | 1 2 | 2400 bps |

3. **RS485 PORT:** 2-wire Half-Duplex RS485 support.
4. **ALARM IN:** TTL/CMOS digital Input which could be connected to alarm sensor or digital control signal, e.g.: Magnetic Reed Switch Detector.
5. **ALARM OUT:** Reed Relay Output (NC/COM/NO) that could be connected to alarm devices, e.g.: Siren, Flashing Unit.
6. **POWER ON or RF LINK LED:** Indicated to power on or RF link status.

| Indications  | Power/RF LINK LED |
|--------------|-------------------|
| Power On     | On                |
| RF Link Loss | Low Flashing      |

7. **RS 485 or PAIRING LED:** Indicated to RS485 data are transmitted or received and waiting pairing status.

| Indications     | Power/RF LINK LED |
|-----------------|-------------------|
| RS485           | High Flashing     |
| Waiting Pairing | Low Flashing      |

8. **PAIRING KEY:** To set the device into pairing mode. Please do the pairing procedure before connecting the devices to RS485 network. (Please refer to the pairing procedure for more detail.)
9. **MASTER or SLAVE:** For RF pairing only.
10. **ANT:** SMA connector for connected to 2.4 GHz antennas.

**REMARK:** Don't close 802.11 a/b/g AP router and other 2.4GHz devices.

### Pairing procedure:

- (1) Make sure these two devices, one is set to "**Master**" and another is "**Slave**".
- (2) Please hold the "**Pairing KEY**" of the master device until the device connected to DC12V power supply and then you can find the "**Pairing LED**" of **master device** is flashing.
- (3) Please do the same procedure as step (2) again for the slave device.
- (4) When the pairing procedure is complete, the "**RF Link LED**" of two devices is on.

## 2. Caution for Installation

- 2.1 Be careful, never let any water in this equipment.
- 2.2 If necessary, use a soft cloth moistened with alcohol to wipe off the dust.
- 2.3 Be extra careful not to shake the unit.
- 2.4 Avoid places where temperatures exceed 55 °C or higher.
- 2.5 Avoid places where there are frequent vibrations or shocks.
- 2.6 When any abnormalities occur, make sure to unplug the unit and contact your local dealer.

## 3. Packing

- 3.1 Transceiver ×2
- 3.2 Antenna ×2
- 3.3 User manual ×1
- 3.4 Screws ×8
- 3.5 Plastic-Conical-Anchor ×8
- 3.6 Power Adaptor ×2 [Option]

## 4. Specification

|                                                                      |                                                                                                                                |
|----------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| Items                                                                | 15-2400RSK                                                                                                                     |
| Frequency Channels                                                   | 2402 ~ 2480 MHz, 79-CH (CE/FCC)                                                                                                |
| RF TX Power                                                          | 100 mW (Average)                                                                                                               |
| Min. RX Sensitivity                                                  | -86dBm                                                                                                                         |
| RF Impedance                                                         | 50Ω                                                                                                                            |
| RS485                                                                | 2-wire RS485 Half Duplex<br>Data Baud Rate :2400/4800/9600 bps<br>Fixed Format:1 Start bit, 1 Stop bit, 8 Data Bits, No Parity |
| Dual Directional<br>ALARM I/O                                        | -ALARM Input: TTL/CMOS<br>-ALARM Output:NC/COM/NO (Dry Contact)<br>Contact Rating: AC 125V / 0.5A ; DC 24V / 1A                |
| Power Consumption                                                    | 60 mA Max. @ DC12V                                                                                                             |
| Weight (without antenna)                                             | < 124.8g (4.4 oz)                                                                                                              |
| Operation Temperature                                                | -10°C ~ 55°C                                                                                                                   |
| Storage Temperature                                                  | -30°C ~ 85°C                                                                                                                   |
| Dimensions (W × L × H)<br>(excluding connectors and without antenna) | 92 × 75 × 25mm (3.62" × 2.95" × 1.00")                                                                                         |

## FCC Part 15 Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
  2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.
  3. Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.