


HD MULTIMEDIA KARAOKE

HDK2000 QUICK GUIDE

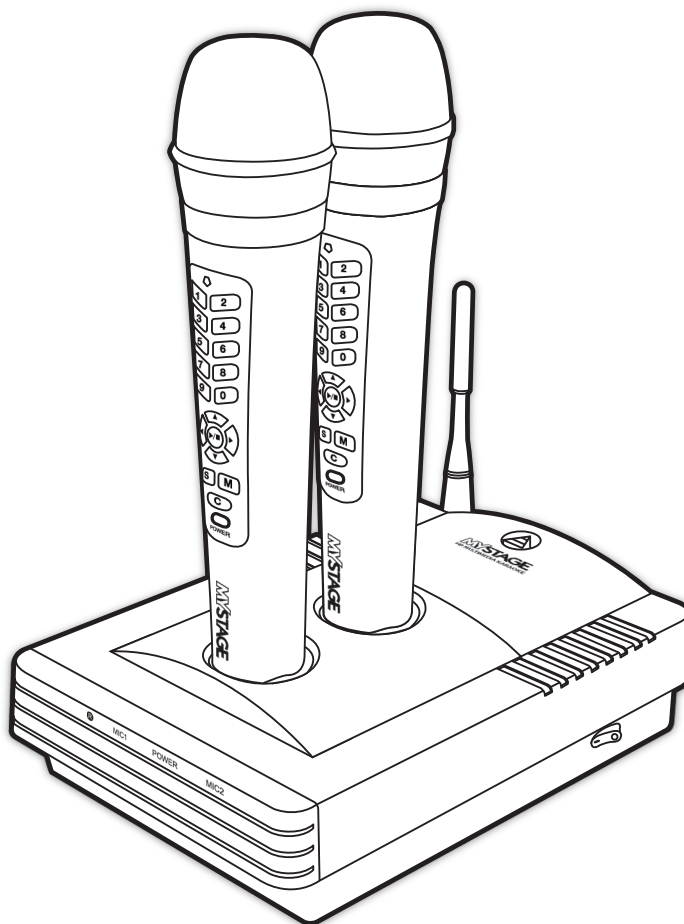

Limited warranty included


- **Model No.** : HDK2000 / CW224K
 - **Dimensions** : 147(W) x 57(H) x 205(D)
 - **Weight** : 480g
 - **TV Input Channel** : HDMI / Composite
 - **Display Resolution** : 1280 x 720(HDMI), 720 x 480(NTSC)
 - **Audio Output Power** : Max 2Vrms
 - **Operation Temperature** : 0~60°C
 - **Power Supply** : AC Adaptor(DC 9V/1.5A)
 - **MIC Type** : Digital Wireless Microphone
- ※ Approximately lasts for 10 hours with AA batteries.
Hours may vary depending on the circumstances.

MYSTAGE
HD MULTIMEDIA KARAOKE


COMPONENTS AND FUNCTIONS	01
HOW TO INSTALL	02
SONG SEARCH, MENU, CONFIGURATION	03
APP(Application), EXTRA FUNCTIONS	04,05
PRECAUTION	06
TROUBLESHOOTING	06
LIMITED WARRANTY	07

I Main Device


TOP

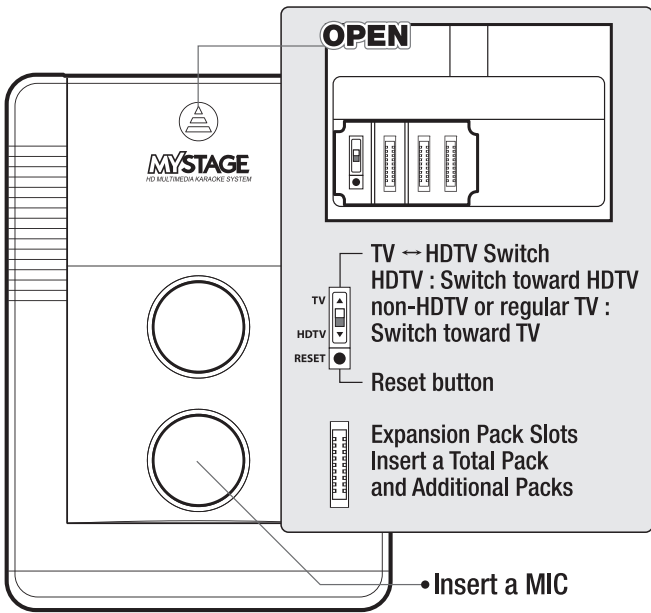


SIDE

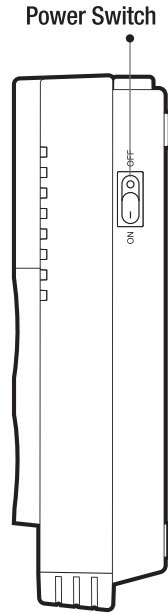


II 2 Wireless MIC (4 AA Batteries included)

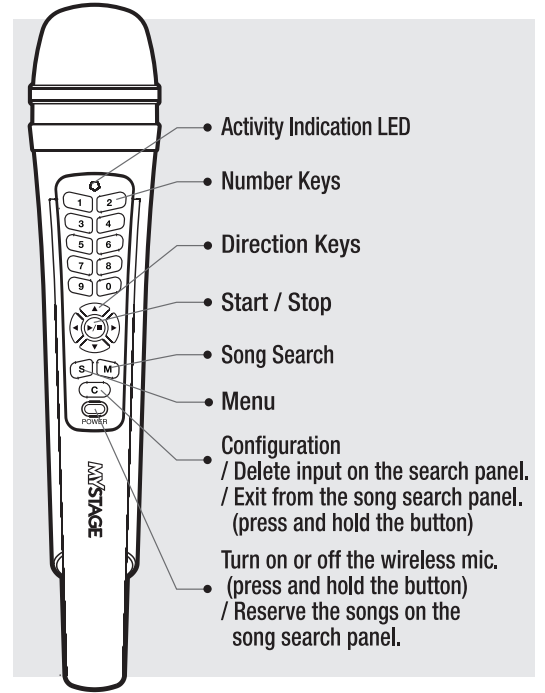


BACK

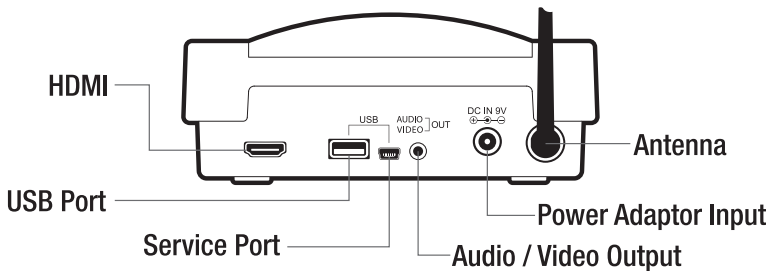

FRONT

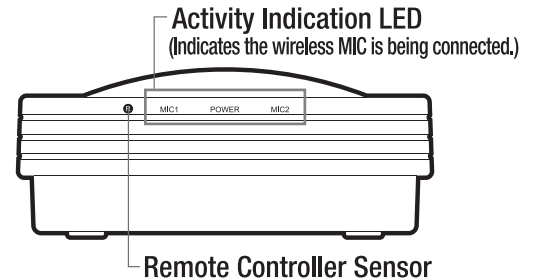


III Remote Controller (2 AAA Batteries included)

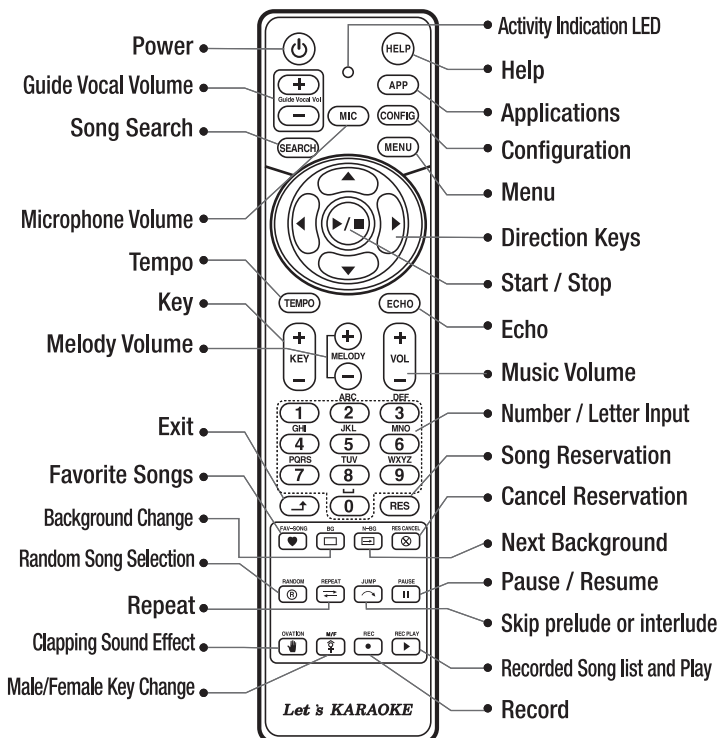

IV Accessories

HDMI Cable, Tri-color RCA cable, Power adaptor, Quick guide

 HDMI Cable




Tri-color RCA cable

120cm (47.2 inch)

Yellow for Video OUTPUT

 190cm (74.8 inch)
Red for stereo/
Audio Right Output
and White for stereo/
Audio Left Output




※ Please adjust the switch located above song pack slots at the top of the device to HDTV or TV depending on to which kind of TV the device will be connected.

1 HDTV with speakers built in

HDMI cable : Connect one end of the cable to the HDMI output on the backside of the main device and the other end of the cable to the HDMI input on your HDTV.


※ Please make sure that the external input setting on your HDTV corresponds to the external input on your HDTV, to which the karaoke device will be connected.

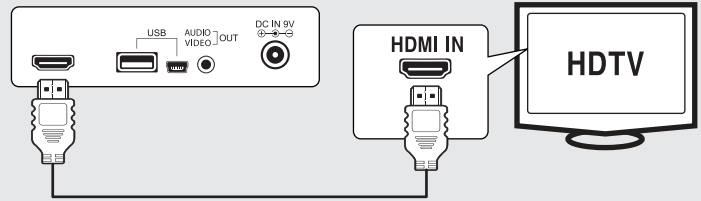

2 HDTV without speakers built in



For video output, follow the same instruction as 1. above. For audio, use the tri-color RCA cable. Connect the cable to the audio/video output on the backside of the main device and connect Red(right) end and White(left) end of the cable to corresponding audio inputs on speakers or other audio devices.

※ Please make sure that the external input setting on your HDTV corresponds to the external input on your HDTV, to which the karaoke device will be connected.

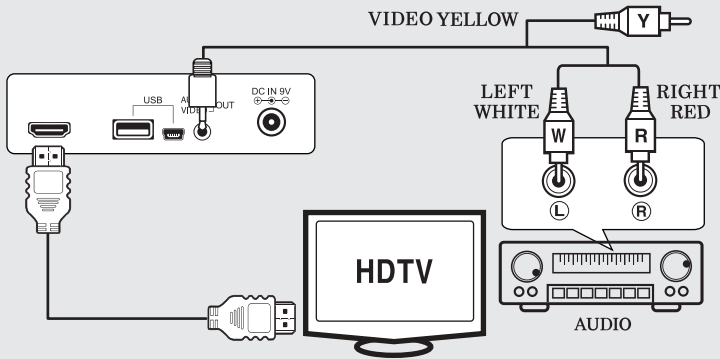

3 TV with speakers built in

Connect the Tri-Color RCA cable from the audio/video output on the backside of the main device to the corresponding audio/video inputs on your TV.

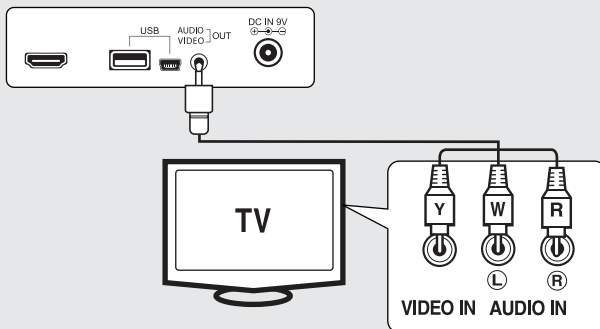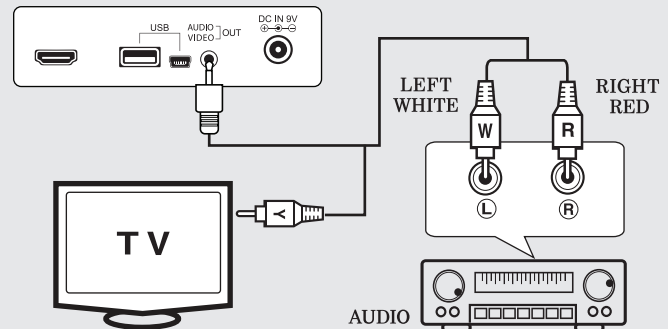

4 TV without speakers built in

For the video output, connect Yellow(Video) end of the cable to the TV video input. For the audio output, connect Red(right) end and White(left) end of the cable to audio inputs on speakers or other audio devices.

5 How to use digital wireless MIC

Buttons on the MIC will function similarly to those on the remote controller provided. Press and hold **POWER** to turn ON or OFF the MIC.

/ Press **POWER** to reserve the songs on the song search panel.


Press **SEARCH** to move to configuration and delete input on the song search panel.

/ Press and hold **SEARCH** to exit from the song search panel.

Press **SEARCH** to search for songs you would like to sing.


Press **SEARCH** to search for all the functions of the karaoke.

※ MIC turns off automatically, if there is no voice input or other button inputs for 10 minutes.

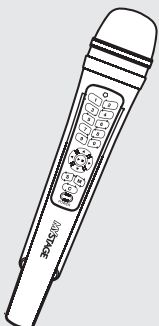

6 How to power on/off

 Connect the power adaptor as shown in the picture. And turn on the power switch on the right side of the main device. To turn it off, press **POWER** button on the remote controller and turn off the power switch on the right side of the main device.



I Song Search

Button	Letter Input
1	1
ABC 2	A → B → C → 2 → A → Circulate (Press repeatedly.)
DEF 3	D → E → F → 3 → D → Circulate (Press repeatedly.)
GHI 4	G → H → I → 4 → G → Circulate (Press repeatedly.)
JKL 5	J → K → L → 5 → J → Circulate (Press repeatedly.)
MNO 6	M → N → O → 6 → M → Circulate (Press repeatedly.)
PQRS 7	P → Q → R → S → 7 → P → Circulate (Press repeatedly.)
TUV 8	T → U → V → 8 → T → Circulate (Press repeatedly.)
WXYZ 9	W → X → Y → Z → 9 → W → Circulate (Press repeatedly.)
← 0	← → 0 → ← Circulate (Press repeatedly.)

1. Press **SEARCH** to open the search panel
2. **SEARCH** TITLE → SINGER → LYRIC → NUMBER → TITLE → Circulate
(Press repeatedly.)
3. **MENU** ALL → GUIDE VOCAL → Listing by Country → ALL → Circulate
(Press repeatedly.)
4. **CONFIG** Alphabet → Other Languages Available → Alphabet → Circulate
(Press repeatedly.)
5. Press to move the cursor to the right (or after 2 seconds the cursor will move to the right without pressing .)
6. Press to delete the letter.
7. Press to select a song.
8. Press to play (resume) / stop.
9. Press to pause / resume.

II MENU Press **MENU** → Press to move to the menu you want to use → Press or to select that menu → Press to select the content and/or adjust the value → Press or to save → Press to exit from the menu.

 MELODY VOL Adjust melody volume	 MUSIC VOL Adjust music volume	 TEMPO Adjust tempo	 KEY Adjust key	 MUSICAL NOTE Turn on/off the musical note	 OCTAVE Adjust octave	 ECHO Adjust echo	 MIC VOL Adjust MIC volume
 GUIDE VOCAL VOL Adjust volume of guide vocal	 VOCAL ASSIST Turn on/off guide vocal	 INSTRUMENT Change melody instrument	 M/F Change male/female key	 REPEAT Set a part of song to be repeated	 CONTINUE Play songs continuously	 SCORE Change settings for score	 BACK GROUND Change background

III CONFIGURATION

Press **CONFIG** or **APP** to open a page for



- **[MIC EFFECT]** Select from Echo (short), Echo, Echo (long), Reverb (room) or Reverb (hall).



- **[AUTO MIC EFFECT]** Automatically uses the MIC effect (Echo) only when you start a song.



- **[SONG COUNTDOWN]** Turn on/off the song countdown "4, 3, 2, 1" which indicates the starting point of a song.



- **[LYRICS]** Turn on/off the lyrics on the screen.



- **[LYRICS POSITION]** Select the position of the lyrics on the screen.



- **[LYRICS LINE]** Choose the number of lines to be displayed in 2 LINES or 3 LINES.



- **[SCORE CHECK]** Set the scoring mode to None, Beginner, Amateur or Professional.

















- **[WIRELESS MIC CHANNEL]** Choose the channel for the wireless MIC. For example, if you want to select [channel 3], please turn off the MIC and then press button [3] and the power button simultaneously until the color of LED becomes red.










- **[FACTORY RESET]** Reset all settings to the factory default settings.

I APP (Application)

MOVIE

 Turn the power off →  (USB PORT) Insert the USB memory device →  Turn the power on → **APP** →  
  Select  →  Open the screen →     Select a folder or file →  Open the selected folder or the file.

MUSIC

 Turn the power off →  (USB PORT) Insert the USB memory device →  Turn the power on → **APP** →  
  Select  →  Open the screen →     Select a folder or file →  Open the selected folder or the file.

PHOTO













 Turn the power off →  (USB PORT) Insert the USB memory device →  Turn the power on → **APP** →  
  Select  →  Open the screen →     Select a folder or file →  Open the selected folder or the file.

CDG Karaoke










 Turn the power off →  (USB PORT) Insert the USB memory device →  Turn the power on → **APP** →  
  Select  →  Open the screen →     Select a folder or file →  Open the selected folder or the file.

SERIAL NUMBER




 
 










The serial number stored in your USB memory device is needed when purchasing any additional songs from the website www.netkara.com.

 Turn the power off →  (USB PORT) Insert the USB memory device →  Turn the power on → **APP** →  
  Select  →  Open the screen →  Save the Serial Number in the USB memory device →  Check whether the saving was successful →  Exit.










 

USB CONTENTS

 Turn the power off →  (USB PORT) Insert the USB memory device →  Turn the power on → **APP** →  
  Select  →  Open the screen → The main device will automatically find additional songs on USB memory device and move them to the internal memory inside the main device.

MOVE TO T-PACK

 Turn the power off →  (EXPANSION PACK SLOT) Insert an additional pack and total pack in an empty expansion pack slot →  Turn the power on → **APP** →     Select  →  Open the screen →   Select an Additional Pack from which data will be transferred to the Total Pack →  Transfer the data from the Additional Pack to the Total Pack → After the sign of completion  Exit →  Turn the power off →  (EXPANSION PACK SLOT) Remove the additional pack from which the data have been transferred.

MANUAL

APP →     Select  →  Open the screen →   View the next page,   View the previous page →  Exit.

II Extra Functions

HELP View a help menu

If you want to know the detailed explanation for a specific function of each key button on remote controller, please press the key button you want, which leads you to the corresponding page of the manual in Help menu.

Reserving songs

On the search panel → Select a song
→ Reserve a song.

Cancelling reserved Song

In the RESERVED SONG LIST → Select a song
→ Cancel the reservation.

Add to the Favorite Song List

1) On the search panel → Select a song → Add a song to the favorite song list.
2) While playing a song → Add a song to the favorite song list.

Delete from the Favorite Song List

While on the standby, press to move to the FAVORITE SONG LIST → Select a song → Delete the song.

Background

Choose the background setting to be MOVIE, PHOTO or AUTO. If there are video files in the VIDEO folder or photo files in the PHOTO folder in a JPEG format that can be used in your USB memory device, these files will be played as backgrounds first and files built in the main device will be played afterwards.

Next Background

View the next background in order.

Skip

Skip prelude or interlude.

Clap

Play the clapping sound effects.

Record

1) On the search panel → Select a song → Start recording → or End recording.
2) On the FAVORITE SONG LIST → Select a song → Start recording → or End recording.
3) On the RESERVED SONG LIST → Select a song → Start recording → or End recording.
4) While playing a song → Start recording → or End recording.

Copy recorded songs to the USB Memory device

Turn off the main device → (USB PORT) Insert the USB memory device → Turn the main device on → On the RECORDED SONG LIST → Select a song → Copy a recorded song to your USB Memory device.

Delete a recorded song

On the RECORDED SONG LIST → Select a song → Delete the recorded song.

Section move

While playing a song → to pause the song → to move to the previous lyrics to move to the next lyrics
 to move to the previous page and to move to the next page → or to play the song again

PRECAUTION



Use the adaptor that comes with MY STAGE only. There are many adaptors that are plug-compatible with MY STAGE, but have different electrical specifications. These adaptors would work only for a short period of time but would soon damage MY STAGE.



Do not plug MY STAGE in if it is wet. Please contact the service center immediately, if the device has been used in wet condition. If any solid object or liquid gets inside of MY STAGE, unplug it and have it checked by the service center.



Do not drop MY STAGE. Any external or internal damage due to dropping is not covered under warranty.



Do not insert or remove additional packs, total pack and USB memory device while MY STAGE is turned on.



Do not store MY STAGE in direct sunlight, in a high temperature, or a highly humid room.



Do not use strong chemicals to clean MY STAGE, as these chemicals may damage the device. Keep MY STAGE away from pets and small children.



Do not press the LED/LCD part



Never use a sharp object on the keypad.



Do not immerse MY STAGE in water or splash water on it. Water damage is not covered by the warranty.



Do not disassemble MY STAGE into parts. This will void the warranty.

TROUBLESHOOTING

In cases of problems, please check the following recommendations before contacting the service center.

• **If MY STAGE cannot be turned on**

MAIN DEVICE : Make sure the adaptor is correctly plugged into the power outlet. Check if the plug is properly inserted to the corresponding jack.
In case you are using the device with wireless MIC, check if the battery type is AA. If the battery is low, MY STAGE wireless MIC may not work properly.

• **If the user's voice cannot be heard**

Press the VOL button and check the MIC volume of MY STAGE.

• **If the TV does not show pictures or emit sound**

Make sure HDMI cable and/or A.V cables are properly connected between MY STAGE and HDTV(SDTV). And check if the input setting of HDTV(SDTV) corresponds to the external input of your TV to which the cables are connected.

• **The display screen of MY STAGE has frozen or disappeared from TV screen**

Press the power button off and turn it back on.

※ When MY STAGE needs to be repaired, please send it to your nearest service center or the place you purchased it from.

COREWILL CO.,LTD.

Ver 2.0

Address : 4F 1484-2 MISUNG-DONG, GWANAK-GU, SEOUL,
151-894, KOREA

Tel : +82-2-863-0155 | Fax : +82-2-863-0154

Web address : www.corewill.com

Made in Korea



PRODUCT NAME : My Stage MODEL NUMBER : HDK2000
FCC : ANDOHDK

This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions :

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications to the equipment not expressly approved by the responsible for compliance could void user's authority to operate the equipment.



COREWILL YEAR(S) LIMITED WARRANTY

Thank you for purchasing a product of COREWILL.

COREWILL warrants its products against defects in materials and workmanship under generally accepted industry standards for a period of () year(s) for labor and parts from the date of retail purchase. The warranty obligation is limited to the terms and conditions set forth as below;

TERMS AND CONDITIONS

1. If a defect or defectes exist, at its option, COREWILL will repair the product at no charge, using new or refurbished replacement parts, provided the product does not fall into one of the categories of Section Number 9 "The warranty does not cover as below:". Replacement parts are warranted for the balance of the original applicable warranty period.
2. To obtain warranty protection, notice of the alleged defects must be given promptly upon discovery with the warranty card bearing the date of purchase, the product's model number with its serial number and other fill-ins must be presented with the proof of purchase (Tax invoice/receipt) to one of our authorized service centers.
3. Our decision on all questions with respect to complaints as a result of defects, either materials or workmanship, shall be conclusive.
4. In order to ensure that you are covered by the warranty, you should use only genuine parts and components such as adaptors and cables provided.
5. Authorized Service Centers will repair products under warranty at no charge, given all quidelines and restrictions are followed. Shipping expenses may or may not apply to customer depending on the region. Please contact local service center before sending any unit for repair.
6. After warranty period, to have normal service, customers shall bear all costs in shipping the product(s) for both ways. (Customers to service centers and Service centers to customers)
7. All of returned products must be packaged appropriately, and it is recommended that they be insured or sent by a method that provides for tracking of the package. The recipient (service center(s)) is not responsible for any product that is lost or damaged in transit.
8. Please be noticed that the warranty will not be effective and all the costs of both repair and shipping in and out shall be born by customers if they purchase the products flowed in or purchased from other countries.
9. The warranty does not cover as below:
 - 1) Defects, damage and breakages resulting from accidents, misuse (breakages, spillage of food/liquid substances that defect the product and parts such as P.C.B, battery leakage and Etc.), wrong usage of electrical supply and voltage, abuse, alternation, modification, improper testing, tampering or failure of the user to follow normal operating procedures.
 - 2) Product subjected to unauthorized disassembles and/or repairs which negatively affect the performance of the product.
 - 3) In case of non-authorized third party engagement.
 - 4) Normal and customary ware and tear, corrosion, rusting or stains.
 - 5) Scratches and damages to the outer surface areas and externally exposed parts that are due to normal customer use.
 - 6) Claims for damaged/missing parts or accessories after 3 days from the original date of goods received.
 - 7) Product which has its serial number removed or altered or made illegible/ tempered.
 - 8) If the warranty card is being altered, defaced or erased in any manner whatsoever.
 - 9) Accessories in the product package provided by COREWILL such as MIC adaptors, cables which are considered as consumable articles.
 - 10) The warranty period for a voice coil of the MIC is 6 months from the date of a retail purchase.
10. Any service charge due to the clauses of "The warranty does not cover" will be billed to customers and the service charge will vary depending on each service center in each country. Please consult the service charge with your service center.

LIMITED WARRANTY

PRODUCT		CITY / STATE / ZIP CODE	
MODEL NUMBER		TELEPHONE	
WARRANTY PERIOD	YEAR(S) FROM PURCHASE DATE	DATE OF PURCHASE DAY / MONTH / YEAR	
PURCHASER'S NAME		PURCHASED FROM	
ADDRESS		REASON FOR SERVICE	



COREWILL YEAR(S) LIMITED WARRANTY

FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Information : This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

IMPORTANT NOTE:**FCC RF Radiation Exposure Statement:**

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.