



# CS900 Mobile User Guide

## General Information

Congratulations on the purchase of your CPR CS900!

We are endeavouring to improve our products and services. We reserve all the rights to revise and change the description of this product and its software as well as this user's manual without obligation to notify any person of such revisions and changes.

All the pictures in this manual are for reference only. There may be slight difference between the appearance of phone/ keys/ contents of display used

in this guide and those of your phone. Please refer to your phone for actuality. Some features introduced in this manual are network or subscription supported features.

Please contact your network operator for further information.

Please check the package contents to ensure that all components listed below are included. If the product is defective or if there is a component missing, immediately contact the retailer where you purchased this handset.

Your CPR **CS900** box contains:

- 1 mobile phone
- 1 desktop charger
- 1 travel charger

- 1 battery
- 1 USB cable
- User manuals

If you find the size of the script not easily readable for you, you can also find this guide on our website:

[support.cprcallblocker.com](http://support.cprcallblocker.com)

Device code:

This device code ensures that unauthorized persons will not be able to use your phone. The default code is *0000*

PIN-code

The PIN-code will be supplied to you by your network operator.

	<b>General</b>	
Information .....		2
	<b>Device</b>	
Code: .....		4
	<b>PIN-</b>	
Code: .....		4
Directory .....		5
	<b>Your</b>	
Phone .....		11
	<b>Getting</b>	
started .....		14
What is a SIM card? .....		14
Insert the SIM card and Micro SD card .....		15

Insert the battery as follows: .....	18
Charging the battery: .....	18
Switching the telephone on or off .....	20
Screen icons:.....	21
Menu Operation: .....	25
Torch: .....	26
... ..	26
Connect an optional headset: .....	26
<b>Call</b> <b>function</b> .....	27
Make a call: .....	28
Make a call using the phone book .....	28

Answering a call: .....	29
Operations during a call: .....	30
Hands Free: .....	30
Menu .....	31
Phonebook .....	31
To access the phonebook: .....	31
Add new contact: .....	32
To edit a Phone Book entry: .....	32
To delete all entries from the phone or SIM card: .....	33
To copy all entries from the phone or	

	SIM
card: .....	33
Store a Phonebook entry to a Speed	
dial key.....	34
Direct Number: .....	34
Making calls using the Photo Contacts .....	35
... ..	35
Create photo contact:.. ..	36
<b>Call Blocking</b> .....	<b>38</b>
Messages .....	
	39
Inbox: .....	
	42



Drafts: .....	43
Outbox: .....	43
Broadcast messages: .....	44
Voicemail server: .....	45
Message settings: .....	46
<b>Call</b>	
<b>history</b> .....	48
Missed Dialed and Received: .....	48
Delete call logs: .....	48
Organizer .....	49

Alarm: .....	49
Tasks: .....	50
Calculator: .....	50
<b>Multimedia</b> .....	<b>53</b>
Camera: .....	53
Take a picture: .....	54
Show pictures: .....	56
FM-Radio: .....	57
File Manager: .....	59

Settings .....	60
Profiles (Tone settings) : .....	60
Silent mode: .....	61
SOS settings: .....	61
SOS description: .....	62
SOS settings: .....	65
Phone settings: .....	65
Time and date: .....	65
Language: .....	.. 66

Pref. Input method: .....	66
Display: .....	66
.....	LED
Mode: .....	67
Night mode: .....	67
Call settings: .....	68
.....	Caller
ID: .....	68
Call waiting: .....	68
.....	Call
divert: .....	68

Call barring: .....	69
Call time reminder: .....	69
Answer Mode: .....	69
Network settings: .....	70
Network selection: .....	70
Set automatic or manual mode: .....	70
Security settings: .....	71
Connectivity: .....	71
Bluetooth: .....	71
Visibility: .....	... 71

	My
device: .....	72
Search audio device: .....	72
Search audio device description: ....	73
	My
Name: .....	73
Restore factory settings: .....	74
Basic Specifications: .....	74
FAQ .....	75
Battery .....	79
Phone .....	81

For your

safety .....	83
Operating environment: .....	85
Electronic devices: .....	85
Pacemakers: .....	86
Hearing aids: .....	87
Other medical devices: .....	87
Posted facilities: .....	88
Potentially explosive atmospheres: .....	88
Vehicles: .....	89
Certification information (SAR): .....	90

Information .....	90
Liability Disclaimer: .....	90
Contact Information:.....	92

## Your Phone





1	Left menu key / Main menu key
2	Dialling / History Calls
3	Block nuisance numbers
4	* Key, <i>Press this button on the idle screen to enter the following symbols : * /+ /P / W.</i>
5	Receiver
6	<p>Navi key:</p> <p>Key up: <i>On the idle screen this button takes you to the Messages menu.</i></p> <p>Key down:</p> <p><i>On the idle screen this button takes you to the Photo contacts.</i></p>
7	Right menu key, <i>On the idle</i>

	<i>screen this button takes you to the Phonebook menu.</i>
8	Power on/off /End key
9	Direct dialling numbers M2
10	Power on/off /End key
11	Camera Key
12	<i># Key, Long press can switch between in silent mode with general modes; In edit mode, change the input method.</i>
13	SOS button
14	Polyphone loudspeaker
15	Headset , Jack 3.5mm
16	Micro USB charger port
17	Volume key +
18	Volume key 17/18 - Torch key, <i>Long press the flashlight</i>

## Getting started


### *What is a SIM card?*

Every mobile phone has a SIM card (Subscriber Identity Module). This is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it.

Keep the SIM card away from children. The SIM card can easily be damaged or bent. You should therefore handle the SIM card with care during installation and/or removal.

### *Insert the SIM card and Micro SD card*

- 1 Make sure that the phone is switched off and the charger is disconnected from the phone.
- 2 Turn the phone over and remove the battery cover.
- 3 If the battery is already inside, remove it.

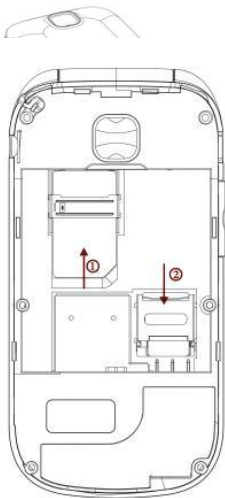



- 1 Plug the charger into the charger connector.
- 2 Plug the other end into an electrical outlet.
- 3 The phone may need several hours for reaching a full charge.  
When your phone is power off, it might take a few seconds to show charging display and it shows charge complete when finished.  
When your phone is power on, the battery icon flickers when it starting

- charging and become still with full bars in battery icon when finished.
- 4 The battery is fully charged when the red LED is off. Disconnect the charger from the phone and the AC outlet.

*Note: Charge the battery for at least 12 hours before using the phone for the first time.*

## ***Switching the telephone on or off***

Make sure that your SIM card is in your mobile phone and that the battery is charged.

- 1 Press the *red key* to switch the phone on.
- 2 If prompted, choose your language and press *OK*.

3 If you have entered a PIN-code before, the phone will ask for the code now. Enter the PIN-code and confirm by pressing *OK*.


4 To turn off your phone, press and hold the *red key* for two seconds.

If you don't insert a SIM card, your phone will show *Insert SIM*. None of the functions related to SIM card can be used. You can make an emergency call only

### *LED Description*




Green LED	Incoming call, missed call or unread message
-----------	--

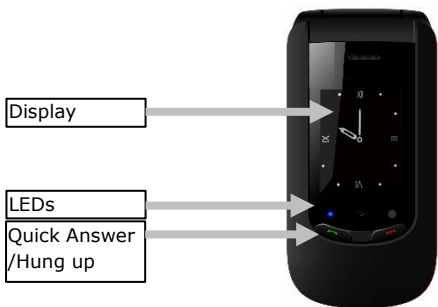



Red LED	Battery low (flash), Battery charging (light)
White LED	Torch





## Screen icons:

	<p><b>Signal Strength</b></p> <p><i>The vertical bars show the network connection strength.</i></p>
	<p><b>New messages</b></p> <p><i>This icon shows when you receive a new message.</i></p> <p><b>SIM Card has an unread message</b> <i>The inbox is full.</i></p> <p><i>This icon flickers when the inbox is full and you need to delete messages to receive new messages.</i></p>
	<p><b>Earphone</b></p> <p><i>This icon shows when you plug the earphone in. Sound will be heard from the</i></p>

	<i>earphones.</i>
	<p><b>Missed Calls</b></p> <p><i>This icon shows when you have missed a call.</i></p>
	<p><b>Alert Type</b></p> <p><i>Ring</i></p> <p><i>Silent mode on and Vibration only</i></p> <p><i>Vibrate and ring</i></p>
	<p><b>Call Divert</b></p> <p><i>This icon shows when you divert all calls unconditionally.</i></p>
	<p><b>GPRS</b></p> <p><i>This icon shows when the GPRS connection is available or active.</i></p>



### Turn alarm on

*This icon shows when you turn alarm on.*



### Roaming

*This icon shows when your phone is in roaming state.*



### Bluetooth

*This icon shows when the Bluetooth is active.*



### Battery capacity

*This icon colour changes according to the status of battery capacity:*




## *Menu Operation*

Menu lists are used for set up and operation.

The left and right menu keys initially are

*Menu* () and *Phonebook* ().

Note: symbols not displayed if the analogue style clock is set for idle mode.

Press *Menu* () and the display changes and the soft keys become *OK* and *Back*. Use *Up* or *Down* to move up or down menu lists, and *OK* or *Back* for the next or previous display.

## *Torch*

Press and hold on the side volume keys of the phone to switch the built-in torch on/off.

### *Connect an optional headset*


You can use a headset (not supplied) with the 3.5 mm type, plugged into the Headset socket on the top side of the handset.

When using headsets, pay attention to volume levels and read its user guide for safety instructions. Do not connect incompatible products.

When correctly inserted the headset icon is shown.

### *Headset Connector:*

Plug in headset accessory for headset use.

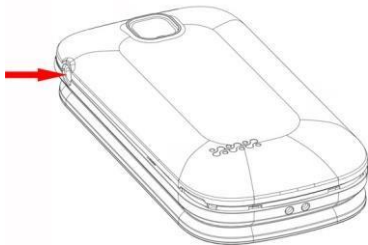

(3,5mm Audio Jack)

## Call function

### *Make a call*

- 1 To make a call, enter the phone number with the prefix and press the *green key*. For international calls, enter '+' by pressing for 2 sec. Then enter the country code followed by the telephone number, in which the 0 of the prefix must be dropped.
- 2 If you have entered a wrong number, press the soft key 'right' *Clear* to remove the number to the left of the blinking cursor.
- 3 Press the *green key* to call the number.

- 4 Press the *red key* to end the call or to cancel the call attempt.

## *Make a call using the phone book*

If you have saved a name and number in the phone book, you can also use the phonebook to make a call.

In standby mode, press the soft key 'right' to go to *Phonebook*.

- 1 Scroll with the up and down arrow key to the name you want to call.
- 2 Press the *green key* to call the number.
- 3 Press the *red key* to end the call or to cancel the call attempt.



## *Answering a call*

When there is an incoming call, the phone rings and/or vibrates and shows the number or the corresponding name.

- 1 Press the *green key* or *Answer* if you would like to answer a call.
- 2 Press the *red key* or *silent* if you would like to reject a call, or for ending the connection after the call.

Earphone/Bluetooth Mode: When plugging the earphone (including Bluetooth earphone), you can answer a call by pressing the key on the earphone.

## *Operations during a call*

Press the right Menu key for Hands free

Press left menu key “*Options*” to perform

following operation during a call: *Mute:*  
de/activate the microphone *Phonebook:*  
To go to *Phonebook.*

*Hold:* Hold this call.

*Message:* To go to *Messages.*

*New Call:* To dial the number

*End:* End this Call.

## *Hands Free*

During a call you can turn the hands free equipment on (Loudspeaker on).or off with the right Menu key.

## **Menu**

Press the up arrow key to go to the Menu. Scroll through the menu using the arrow keys.

# Phonebook

You can store names and phone numbers in the internal phone book, save up to 200 numbers.

## *To access the phonebook*

In idle mode, press *Right menu key*.



In idle mode, press *Left menu*



*key, Phonebook* and press *OK*

*Note: Indicates entries in SIM phone book, Indicates entries in the internal phone book.*

## *Add new contact:*

- 1 Select *Menu, Phonebook* and press *left menu key*.

- 2 Select *Add new contact* and press *left menu key*
- 3 Select Preferred storage, *To SIM* or *To Phone*, if you choose *to phone*: you can edit *Name*, *Number* and Caller ringtone. Press *Options* and *save* if you want to save the contact.

*To edit a Phone Book entry:*

- 1 Press *right menu key* to phone book search which one You want to change, press *left menu key* select *Edit* then modify the name, press *Down* modify the number.
- 2 Press *Option* and *OK* to save the change(s).

*To delete all entries from the phone or SIM card:*

- 1 Select *Menu, Phonebook* and press *left menu key*.
- 2 Select *Phonebook settings* and press *left menu key*
- 3 Select *Delete all Contacts* and press *left menu key*
- 4 Select *From Phone* or *From SIM*
- 5 *Delete all*
- 6 Press *OK* again to confirm

*To copy all entries from the phone or SIM card:*

- 1 Select *Menu, Phonebook* and press *left menu key*.
- 2 Select *Phonebook settings* and press *left menu key*
- 3 Select *Copy all* and press *left menu key*

- 4 Select *To Phone* or *To SIM* From *SIM/Phone*
- 5 Press *OK* again to confirm

*Store a Phonebook entry to a Speed dial key (2-9)*

- 1 Select *Menu, Phonebook* and press *left menu key*.
- 2 Select *Speed dial* and Press *OK*
- 3 Set *Status* to *On*, press down to *Set numbers*.
- 4 Press *OK* the display shows ,2-9
- 5 Press *Up* or *Down* to choose the key to save to

6 Press *OK* to confirm the memory entry.

*Direct Number:*

- 1 Select *Menu, Phonebook* and press *left menu key*.
- 2 Select *Direct Number* and press *left menu key*.

Add *M1* and *M2* dial numbers.

Press in Standby mode *M1* or *M2* for call

*Making calls using the Photo Contacts:*

In the default screen, press the *downwards arrow key*.

Here you can select up to 8 photo contacts. Scroll with the *Arrow keys* to the desired photo contact and then press the *Call key* (green key).

The selected photo appears in the photo contact directory. Carry out the following steps in order to assign a photo to this contact:

### *Create photo contact:*

- 1 In the default screen, press the *Arrow key (downwards)* in order to go to the photo contact menu.
- 2 Use the arrow keys to scroll.
- 3 To edit a photo contact, press



- 4 “Options” ( *left menu key*), select *Edit*
- 5 and confirm with the “OK” ( *left menu key*).
- 6 Enter the telephone number and add a caller picture.
- 7 You have the option to take a picture directly with the camera (from Camera with Photo size: “Photo call settings”) or to select an already saved photo (from a folder) using the file manager.
- 8 Add the photo and press “Back” ( *right menu key*)

After you have finished editing the contact, to save it press “Back”

## **Call Blocking**

The CS900 is pre-loaded with CPR’s

nuisance robocall lists so from the start you will see a reduction of unwanted calls.

### ***How to block calls:***

The quickest way to block calls is by using the big red **BLOCK NOW** button on the telephone keypad. This will disconnect the call and add that caller to the Black List.

### ***Call Blocking Menu:***

1. Select Menu, Call Blocking and press OK

2. Scroll to Black List to setup blocking specific numbers from calling you, here you can add/remove up to 900 numbers.
3. To turn the Black List function ON/OFF, scroll to Black List and then scroll to Turn ON/OFF.
4. To quickly add numbers that have called you to the Black List press Green Answer key scroll to the number you wish to block and press Options then scroll to Add to Black List.
5. To quickly add SMS Text message numbers to the Black list navigate to the SMS message press Options then

View then Options and scroll to Add to Black List..

6. Scroll to White List to setup blocking all calls apart from those added into your white list, here you can add/remove up to 900 numbers.
7. To turn the White List function ON/OFF scroll to Block List and press Turn ON/OFF. The phone password is 1122

## Messages

### *Write messages:*

- 1 Select *Menu, Messages* and press *OK*

- 2 Press *Write message*
- 3 Select *SMS* or *MMS* and press *OK*

In this menu, you can compose messages.

The number of letters used can be seen at the upper right edge of the display.

### *Text input:*

The following functions are available:

- Press *0* to add a space.
- Press the *\** key to add special characters; using the “*Arrow keys*”, you can navigate to the desired symbols.
- Press the arrow key to move the position indicator to the left or right.

- Press *Delete* to delete a letter; to delete the entire text, press and hold *Delete*.
- Press the # key to switch between upper and lower case and word recognition: *Smart*, *ABC*, *abc*, *123* and pay attention to the symbol in the top left of the display.

### *Word recognition:*


Enter the desired word by pressing the keys for each individual letter only **once**. The word changes depending on which key is pressed.

E.g. To write “**Hello**”, press the “**43556**” key.

- 1 Enter contents and press *left menu key* to enter *Options*. (You can select *Send to*, *Insert symbol*, *Input Method*, *Advanced: Insert number and name*, and *Save*.)
- 2 Select *Send to* and press *left menu key* again.
- 3 Select *Enter number* or *Add from Phonebook*.
- 4 Select telephone numbers and press *OK*.
- 5 Press *left menu key* to enter *Options* and press *left menu key* to *Send*

### *Inbox:*

The *Inbox* is for storing received SMS messages. Depending on the selected mode, the phone vibrates or rings when you receive a new message.

And in the standby mode you see this  icon until you have read the new SMS message.

You can choose the following options while reading your received SMS: *View, Reply by SMS, Reply by MMS, Call sender, Forward, Delete, Delete all, Save to Phonebook\** In the *Advanced* option: *Copy to Phone\*, Move to Phone\*, Copy all and Move all.*

*\*These options may not appear according to the storage location.*

**Note:** *The new message icon keeps flickering in the standby mode when your inbox is full. Please delete some messages for receiving new messages.*



### *Drafts:*

By *Drafts* you can view the draft SMS messages you have saved.

You can choose the following options while reading your draft:

*View, Send, Edit, Delete, Delete all* and *Advanced*.

### *Outbox:*

The *Outbox* to view the messages you don't sent but saved.

You can choose the following options while reading your sent SMS:

*Send, Edit, Delete* and *Delete all*.

### *Sent messages:*

The *Sent messages* to view the messages you sent.

You can choose the following options while reading your sent SMS:

*View, Forward, Delete, Delete all and Advanced.*

In the *Advanced* option: *Copy to Phone\* Move to Phone\*, Copy all and Move all \*These options may not appear according to the storage location.*

*Broadcast messages:*

Look up the broadcast messages. Your options include:

*Receive mode:*

Turn on or turn off cell broadcasting.

*Channels:*

You can add, edit channel and can

delete the current channel and cancel the read.

*Languages:*

set the cell broadcast language.

*Read messages:*

Save read cell broadcast information

*Voicemail server:*

Voicemail is a service supplied by your network operator. For more information and for the voice mailbox number, contact your network operator. When you have a new voice mail message, your phone will receive a message.

- 1 Select *Menu, Messages* and press *left menu key*.

- 2 Select *Voice mail server* and press *left menu key*.
- 3 Press *Option* and choose *Call* or *Edit*.
- 4 If you choose *Edit*, edit the name and number of the voice mail. After enter the number press *OK*.

*In standby mode:*

Press and hold key number 1 for directly calling the *Voice mail*. Only the number saved under voice mail address 1 is called.

*Message settings:*

You can define the SMS settings. The following functions are available:

*SIM (Profile settings):*

Here you can set, among others, the message service centre number (SMSC) (dependent on the network operator) and other SMS settings.

*Memory status:*

With this option, the SMS memory status from your SIM card and your telephone are displayed.

*Text msg. counter:*

Counts the number of text message sent and received by you

*Sent messages:*

Switch on/off the storage of sent messages

*Preferred storage:*

Select the storage location for the SMS

*Telephone or SIM*

## Multimedia Messages

*Data account:*

Select the data account to be used

*Common settings:*

The following settings are available:

*Compose, Send, Retrieval, Preferred storage and Memory status.*

**Important note:**

**In order to be able to send or receive MMS messages, you require a memory card that supports the CS900, Micro SD cards with up to 16 GB memory.**

In order to configure the MMS settings properly, please contact your network operator. You can create a data account in the following menu:

*Settings – Connectivity – Data account.*

## Call History

The phone registers the phone numbers of *Missed*, *Received*, *Dialled* and *All calls*.

When you press *OK* by *Missed*, *Dialled* or *Received*, you can view the calls you

*Missed, Dialled* or *Received*. If you press *Option* you can choose the following options:

*View, Call, Sent text message, sent multimedia message, Save to Phonebook, and Delete.*

## **Delete call logs**

You can delete all the records of the *Dialled, Missed* and *Received calls*, you can also choose delete *All calls* to delete all the records of the above-mentioned calls logs.

## **Organizer**

*Alarm*



- 1 Select *Menu*, *Organizer* and press *left menu key*.
- 2 Select *Alarm* and press *left menu key*.
- 3 You can set a maximum of 5 different alarms.
- 4 To set an alarm clock:
- 5 Select one alarm and press *Edit*.
- 6 *Edit alarm*: set *On* or *Off*, (*with helping the M1 and M2 key*) *Time*, *Repeat* and *Alert type*.
- 7 Press *Save* to save the *Alarm*.

When alarm sounds, you can stop the alarm by pressing *Stop*. If you press *Snooze*, the alarm stops and rings after 5 minutes again.

## *Tasks*

1 Select *Menu, Organizer* and press *left menu key*.

2 Select *Tasks* and press *left menu key*  
*Add events:*

Press *Options* and select *Add*.

Enter the desired details.

To save the event, press *Options* and *Save*.

If there are some existed event in the task list, press the *up / down* key to select an event to get into the *options: View, Add, Edit, Delete, Delete overdue, Delete all* and *View uncompleted*

## *Calculator*

- 1 Select *Menu, Organizer* and press *left menu key*.
- 2 Select *Calculator* and press *left menu key*
- 3 The phone is provided with a calculator. This calculator has limited accuracy and rounding errors may occur, especially in long divisions.

In Calculator mode, the following functions are available to you:

Key	Function
1-0	The keys 1 to 0 insert a digit.
#	To insert a decimal
Arrow key up	+

<b>Arrow key down</b>	-
<b>M1</b>	x
<b>M2</b>	÷
<b>Camera key</b>	=

- The keys 1 to 0 insert a digit.
- To insert a decimal, press #.
- Press the up and down arrow key for +, -
- Press M1 and M2 key for x and ÷.
- Press Camera key for =.

To get the result, press *Equal*. Press and hold *Clear* to clear the display for a new calculation.

## Calendar

- 1 Select *Menu, Extras* and press *OK*
- 2 Select *Calendar* and press *OK*
- 3 *Add events:*
- 4 Press *Options* and select *Add event*.
- 5 Enter the desired details.
- 6 To save the event, press *Options* and *Save*.
- 7 If there are some existed event in the task list, press the *up / down* key to select an event to get into the *options: View, Add, Edit, Delete: Delete all, overdue, Delete all* and *Specific period*

On the calendar interface, press the Navi keys to browse through different days.

# Multimedia

## *Camera*

- 1 Press *Camera* key  
or
- 2 Select *Menu, Multimedia* and press  
*OK*
- 3 Select *Calendar* and press *OK*

## *Take a picture:*

Aim the camera lens at the place / object, and press key “camera”, to take a picture. Keep the camera lens

steady for a while for a better image quality.

**Important: To save several photos, please use a memory card (Micro SD card up to 16 GB).**

In photo mode, the following functions are available to you:

Key	Function
1	Change image resolution
2	Image quality
4	White balance
6	Delay timer
Arrow key left	Underexpose picture (EV- )

<b>Arrow key right</b>	Overexpose picture ( EV+ )
------------------------	----------------------------------

Under *Option* you have access to the following functions:

### *Photos:*

Here you can view the saved pictures.

Also the pictures you received by

Bluetooth. The pictures that the

camera makes are saved as a .jpg

file. If you press *Option* by a picture

you can choose the following options:

*View, Browser style, Send, Use as,*

*Rename, Delete, sort by, Storage and*



*Image information.*

*Camera settings:*

Here you can set the *Shutter sound, EV, Contrast, Anti-flicker* and *Delay timer*.

*Image settings:*

Here you can adjust the *image size* and *image quality*.

*White balance:*

Adapt to the ambient lighting conditions.

*Scene mode:*

Here you can choose between: *Auto* or *Night*.

*Effects:*

Here you can add different photo effects.

*Storage:*

Choose storage: *Phone* or *Memory card*

*Restore default:*

Restore the default settings.

*Note: The photos are stored on the phone, for more pictures please use a memory card. So please install this*

*card if you want to take and save pictures.*

## *Image viewer*

1. Select *Menu, Multimedia* and press *OK*

2. Select *Image viewer* and press *OK*

View the saved photos (in .jpg format). You can send and also receive the photos via *Bluetooth*.

The following functions are available to you under *Options*:

*View, Browser style, Send, Use as, Rename, Delete, sort by, Storage and*

*Image information.*

## *FM-Radio*

Select *Menu, Multimedia* and press *OK*

Select *FM-Radio* and press *OK*

The tuned frequency is displayed.

In FM-Radio mode, the following functions are available to you:

<b>Key</b>	<b>Function</b>
<b>Arrow left</b>	Search previous channel
<b>Arrow right</b>	Search next channel
<b>Arrow key</b>	volume up

<b>up</b>	
<b>Arrow key down</b>	volume down
<b>OK key</b>	On/off the radio function

Enter *Options*, you can make the following operations:

*Channel List:*

There are 30 channels for you to store.

*Manual Input:*

Inputs the FM frequency you prefer.

*Current channel save:*

When a station has been found, select *Current channel save* and press *OK*

*Note: Auto search needs some time, so please be patient.*

*For better radio reception connect a headset to the headset socket.*

### *File Manager*

- 1 Select *Menu, Multimedia* and press *OK*
- 2 Select *File Manager* and press *OK*
- 3 Press the *left menu key* to enter File manager. After inserting the memory card, there are two options you can choose: *Phone* and *Memory card*.

- 4 Select one of them and you can see the contents as follows:
- 5 Enter *Phone* or *Memory card* and then press the *left menu key* to access the submenus.

If you press *Option* by a file or folder you can choose the following options:

*Open:* To display the content of the selected folder.

*New folder:* To create a new folder.

*Rename:* To rename a folder.

*Delete:* To delete a folder.

## Settings

## *Profiles (Tone settings)*

Enter in the function; display the profile mode list including *General, Silent, Meeting, Outdoor*.

Select one mode and enter the option menu:

*Activate:* Activate the profile mode.

*Customize:* Customize the profile mode as following:

*Alert type, Ring type, Ring tone, Ringtone volume, Message tone, Message volume, Alarm tone, Alarm volume, Keypad tone, Keypad volume, Power on, Power off, Cover open, Cover Close and System alert.*

*Reset:* Reset the setting to the default.



### *Silent mode*

Silent is a fixed profile with ring tone, keypad tone and message tone disabled. The alarm signals even if the phone is set to silent. Press and hold # to activate/deactivate Silent mode.

### *SOS Emergency Assist settings*

The SOS function is a simple function which can save lives at the deciding moment. In all, you can save 5 SOS numbers (relatives, neighbours, friends and rescue). These numbers, previously saved in order of sequence, will be automatically dialled in an SOS by pressing the *SOS button* on the back of the mobile phone. During the SOS call, a warning tone sounds so the person that you rang knows that it is an

emergency! If you cannot get through on the first number, the second number will be called automatically. If you cannot get through on the second number, the third number will be called etc.

If no emergency number is saved or your phone card has run out, or you are not allowed under a foreign network (e.g. Roaming not activated), you can dial 112 or another emergency number on the numerical keypad.

### *SOS description*

Press the *SOS button* on the back of the mobile phone for 3 seconds. If you want to stop or cancel the SOS call, press the *SOS button* again.

Functionality:

By pressing the *SOS button*, the phone will send an SOS SMS person (in case mobile number or telephones with SMS function is available for emergency contact) to the emergency numbers you have previously saved and will be automatically dialled in the given sequence. (The emergency button also functions when the phone is closed). The mobile phone switches on the hands free function at full volume and at the same time, if the SOS call is not answered within 25 seconds the next number is dialled etc.

Note:

- If you want to stop or cancel the SOS call, press the *right menu key* or *SOS Key*.
- As a rule, the international emergency call 112 can still be called outside of the regional network of your network operator.
- When changing a phone card: Always make sure that there is sufficient credit on your phone card because private emergency numbers cannot be dialled without sufficient credit.

*Attention: If the SOS call is forwarded to the voicemail, the SOS mode will end.*

*Attention: If you want to save SOS numbers such as the ambulance service, the police, fire brigade etc. as an SOS number, you must gain permission from each of these institutions beforehand. There will be no liability for possible costs arising from calling them by accident.*

## ***SOS settings***

*Set SOS:*

Set *On* or *Off* the SOS alarm tone function.

*Set SOS numbers:*

There you can edit and save at most five SOS number in your phone.

### *SOS message:*

Edit the content of the SOS message which will be sent out automatically when the SOS function is using.

## **Phone settings**

### *Time and date:*

*Set Home city and time and date*

*Language:*

Here you can choose the language you want in your display.

*Pref. Input method:*

Here you can choose the Input method you want for write.

*Display:*

*Wallpaper:*

Select your favourite picture as the wallpaper of the standby window.

*Sub LCD Wallpaper:*

Select your favourite picture as the wallpaper of the standby window.

### *Show date and time:*

In this menu, you can show/hide the time and date display in default mode.

### *LED Mode:*

#### *On:*

Set LED model for open, when there is a missed call and unread message, mobile phone green tip LED lights flashing. The red light glows when connecting the charger is connected the charger is charging tips.

#### *Off:*

The LED function is off

### *Night mode:*



Night mode for activating / deactivating the operation of the LED of the front cover. When set to "Night mode", light time is from 8.00 till 20.00.

### *LCD backlight:*

LCD backlight for setting up the duration (sec) of backlight and brightness.

### *Call settings:*

Depending on network operator support and subscription, you can choose the following options:

### *Caller ID:*

Set the function of caller ID

### *Call waiting:*

When this network service is activated, the network notifies you of a new incoming call while you have a call in progress. Press *OK* to answer the waiting call. The first call is put on hold or press the *red key* to reject the call.

### *Call divert:*

To divert your incoming calls to your voice mailbox or some other phone number (network service). Select the divert option you want. Several divert options may be active at the same time.

### *Call barring:*

With this network service you can restrict the making and receiving of calls with your phone.

*Call time reminder:*

Choose to remind you *Periodic* (30–60 seconds) or select *Single* (1–3000 Seconds) or select *Off*.

*Answer Mode:*

*Cover answer:*

*Open the phone to answer the incoming call.*

*Any Key:*

You can press any key to answer a call.

*Auto answer when headset mode*

The phone answer the call automatically.

### *Network settings:*

This menu has connection with the network suppliers, so please get in touch with them when you use this function. If you want to get into one network which doesn't have the roaming protocol with the original network you have been in, the phone will display the content that you can make an emergency call.

### *Network selection:*

Depending on network operator support, you can choose the following options:

Selection mode

Set *automatic* or *manual mode*

*GPRS connection*

When needed and  
always.

GPRS transfer pref.

You can select data prefer or call prefer.

### *Security settings:*

You can choose the following options:

*SIM security:* To turn your SIM  
PIN code *On* or *Off*, *change PIN* and  
*change PIN2*.

*Phone security:* To lock your phone with a password. The default password is: *0000*.

*Change password:* Here you can change your password of: *Phone password*.

### *Connectivity:*

You can connect wirelessly to other Bluetooth compatible devices.

### *Bluetooth:*

In standby mode: Press the down arrow key to go directly to Bluetooth.

You can choose the following options:

### *Power:*

Here you can choose to turn Bluetooth *On* or *Off*.

### *Visibility:*

You can set the visibility *on* or *off*.

### *My device:*

List of saved devices and enables you to add new devices; *Search new device*.

### *Search audio device:*

Search for available Bluetooth audio devices. If Bluetooth is not enabled you can enable it now by pressing *Yes*.

### *Search audio device description:*

- 1 Press *OK*, the phone is going to search for new devices.
- 2 Select the devices you want to connect with and press *Pair*.

- 3 When connecting with another Bluetooth device you need a shared passcode. Enter the passcode and press *OK*.
- 4 Select the device from the list and press *Option*. Can choose the following options: *Connect*, *Rename*, *Delete* and *Delete all*.

### *My Name:*

Here you can set the Bluetooth device Name.

### *Advanced:*

Here you can set your: *Audio path*, *Storage* and check the *my address*.

### *Data Account:*



In order to be able to use the MMS function, you must create a data account. The configuration of a data account is dependent on the data of your network operator.

### *Restore factory settings:*

To reset some of the menu settings to their original values. The password is:

*0000*

### *Basic Specifications:*

Network-Dual	GSM
Band	900/DCS1800
Dimension :	101x50.5x19.5mm
Battery :	Li-ion 3.7V - 1000mAh

Standby time:	up to 350 hours*
Talk time:	Up to 500 minutes*

*\*Variation in operation times may occur depending on SIM card, network, and usage settings, usage style and environments.*

## FAQ's

If your phone appears the questions frequently, please refer to the answers as follows. After that, you cannot solve the

questions, please contact with the mobile phone dealers or network operator.

*Can't turn the phone on:*

- Check battery installation, please install battery correctly.
- Check if battery level is low, change a battery or charge the battery.
- Check if entered incorrect PIN code 3 times in a row.

If yes, the phone is locked, then you should enter your PUK code (please contact your network operator for your PUK code).

### *SIM error:*

- Is the SIM card dirty? Please clean it.
- Try and reinstall the SIM card.
- Is the SIM card damaged? Please contact your network operator.

### *Weak signal or no signal:*

- You may be in a location where the reception is bad, such as tunnel or cellar, please relocate and try again.
- You can try turning around slightly or get near the window if you are in a room.
- Please contact your network operator, if you still have a weak signal or no signal.

### *Bad talking quality:*

- Weak signal? See: Weak signal or no signal.
- Check if battery if battery is low. Charge the battery or change the battery.
- Use the up volume key to adjust the microphone volume during a call.

#### *Can't make a call:*

- Check if you enter the correct number and press *green key*.
- Check if you set call barring, if yes, please cancel it.
- Check if the SIM card is registered in the network.
- If your SIM card is a prepaid card, please make sure there is enough money on the card.

#### *Can't receive calls:*

- Is the SIM card registered in the network?
- Check if your phone is turned on. Check if screens show no signal, if yes, see: Weak signal or no signal.
- Check if you set call barring, if yes, please cancel it.

*Screen is dark:*

- Check if battery if battery is low. Charge the battery or change the battery.
- Adjust the wallpaper.
- Your phone may be affected with damp, keep it dries.

*PIN locked:*

- Check if entered incorrect PIN code 3 times in a row.

If yes, the phone is locked, then you should enter your PUK code (please contact your network operator for your PUK code).

## Battery

- Your phone is powered by a rechargeable battery.
- Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles! The battery can be charged and discharged hundreds of times but it will eventually wear out.

- When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery. Use only batteries approved by the phone manufacturer and recharge your battery only with the chargers approved by the manufacturer.
- Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than 10 days, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.
- Temperature extremes can affect the ability of your battery to charge.
- Use the battery only for its intended purpose.



- Never use any charger or battery which is damaged.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.
- Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C. A

phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries performance is particularly limited in temperatures well below freezing.

- Do not dispose of batteries in a fire!
- Dispose of batteries according to local regulations (e.g. recycling).
- Do not dispose as household waste.
- Do not charge your mobile phone if the battery is not installed.

## Phone

- Your phone is a product of superior design and craftsmanship and should be treated with care.
- The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.
- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.

- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not attempt to open the phone. Non-expert handling may damage it.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.

- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications or
- Attachments could damage the Phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to your phone, battery, charger or any accessory. If any of them is not working properly, take it to your nearest qualified service facility.

**For your safety**

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Road safety comes first

Do not use a hand-held phone while driving.

Switch off in aircraft

Wireless devices can cause interference in aircraft.

Switch off in hospitals

Follow any regulations or rules. Switch the phone off near medical equipment.

Switch off when refuelling

Do not use the phone at a refuelling point. Do not use near fuel or chemicals.

### *Traffic Safety:*

Do not use a hand-held telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop. Remember road safety always comes first!

### *Operating environment:*

Remember to follow any special regulations in force in any area and always switch off your phone whenever

it is forbidden to use it, or when it may cause interference or danger.

Use the phone only in its normal operating positions.

Parts of the phone are magnetic.

Metallic materials may be attracted to the phone, and persons with a hearing aid should not hold the phone to the ear with the hearing aid.

Always secure the phone in its holder, because metallic materials may be attracted by the earpiece.

Do not place credit cards or other magnetic storage media near the phone, because information stored on them may be erased.

*Electronic devices:*



Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

*Pacemakers:*

Pacemaker manufacturers recommend that a minimum separation of 20 cm (6 inches) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should always keep the phone more than 20 cm (6 inches) from their pacemaker when the phone is switched on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

### *Hearing aids:*

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you

may want to consult your network.

*Other medical devices:*

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

*Posted facilities:*

Switch your phone off in any facility where posted notices so require.

*Potentially explosive atmospheres:*

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised to switch off the phone when at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

### *Vehicles:*

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic

anti-skid (anti-lock) braking systems, electronic speed control systems, air bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

### **Certification information (SAR):**

This model phone meets the EU and US requirements for exposure to radio waves.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit recommended by The Council of the European Union is 2.0 W/kg. Tests for SAR have been conducted using standard

operating positions with the phone transmitting at its highest certified power level in all tested frequency bands.

The highest SAR value for this device when tested at the ear was **0,972W/Kg**.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the EU requirements for RF exposure.

## **FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment



off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **Specific Absorption Rate (SAR) information:**

This MOBILE PHONE meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Mobile Phone (FCC ID: 2AQ2D-CS900) has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the phone kept 10mm from the

body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.



## Contact Us

Should you need any help with your CS900 Mobile, simply contact our friendly technical support team FREE:

*USA Customer Care:*

888-507-7486

*AUS Customer Care:*

1-800-187-358

*ROW Customer Care:*

+448006527780

*Email:* [support@cprcallblocker.com](mailto:support@cprcallblocker.com)

*Website:* [www.callblockerusa.com](http://www.callblockerusa.com)



Thank you for purchasing  
the  
**CPR CS900 Mobile**

From the

*CPR Team*