


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.


Please read the instructions carefully before operating the toy. Please keep this instructions sheet for later references.

Contents

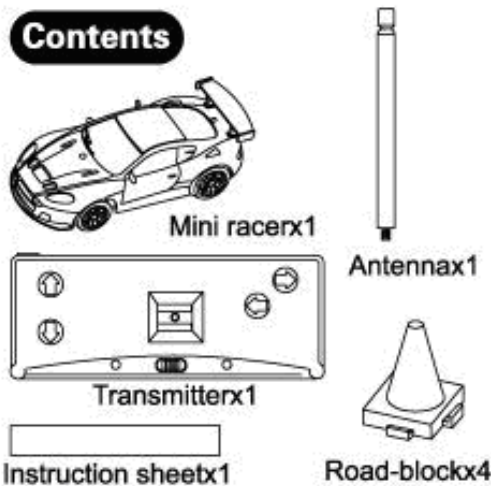


Preparation

1. Tear off the stickers, and then take off the transparent plastic cover as illustrated.
2. Holding the pedestal using one hand, use the other hand to grab one end of the controller, then pull hard to take out the controller (A); then take out the antenna (B); Reversed at the end of pedestal, counter-clockwise undo the screw(C), then slide the mini racer towards the illustrated direction to take it off the pedestal (D).

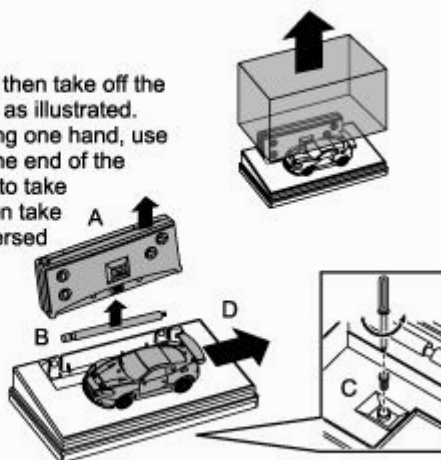


3. Take out the four ROAD-BLOCKS out from the bottom of the pedestal as illustrated. These road-blocks are accessories.

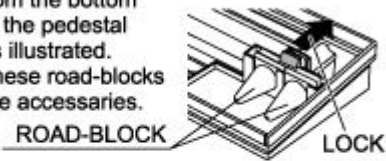


4. Slide the transmitter's battery compartment cover towards the direction shown and open it.



5. Insert 2 x AA batteries with the correct polarity, then replace the battery compartment cover.

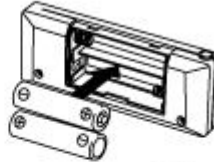

6. To ensure that the batteries are installed correctly, press any button on the controller, the FUNCTION INDICATOR should light up.

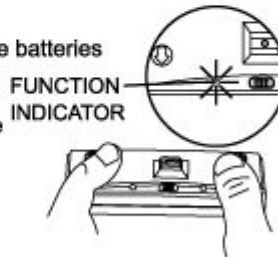

7. Insert and tighten the antenna to the antenna hole on the transmitter as illustrated.




Charging


1. Open the charger cover as illustrated and take out the CHARGING PLUG.



2. Insert the CHARGING PLUG to the CHARGING JACK on the bottom of the mini racer, the CHARGING INDICATOR lights up to indicate the charging is in process.

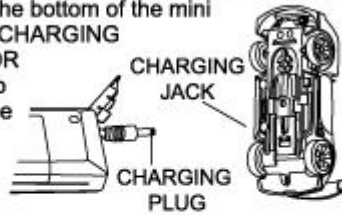


3. The mini racer is fully charged when the CHARGING INDICATOR goes off.

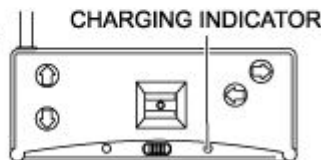

Operation


1. Extend the transmitter's antenna for better signal reception. Move the ON/OFF switch on the mini racer to ON, and place it on the ground.

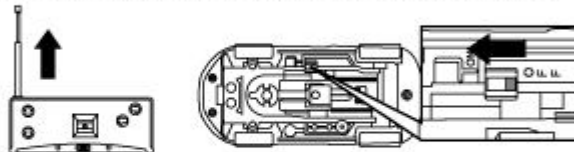

2. The transmitter is full-function:

- (1) The FUNCTION INDICATOR lights up when any button on the transmitter is pressed.
- (2) The mini racer run forward and lights up its headlights when the transmitter's FORWARD button is pressed. The mini racer run reverse and lights up its tail lamps when the transmitter's REVERSE button is pressed.

- (3) Pressing the LEFT/RIGHT button on the transmitter while the mini racer is running forward or reverse, the mini racer will make left/right turns.

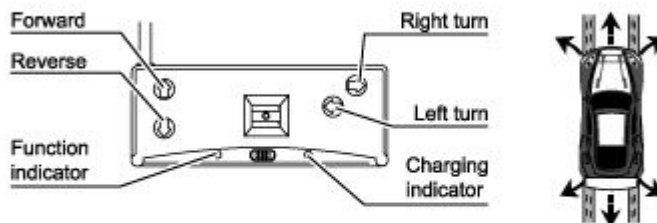

3. The DIRECTIONAL GUIDE is used to adjust the mini racer's direct-line-running-performance.



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Cautions

- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Exhausted batteries should be removed from the product.
- Do not dispose of batteries in fire, or batteries will explode or leak.
- The supply terminals are not to be short-circuited.
- Batteries are to be inserted with the correct polarity.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before being charged (if removable).
- Remove batteries if the product is not to be used for an extended period.
- The packaging has to be kept since it contains important information.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.