


MAJESTY 800S

RADIO CONTROLLED ELECTRIC POWERED RACING BOAT

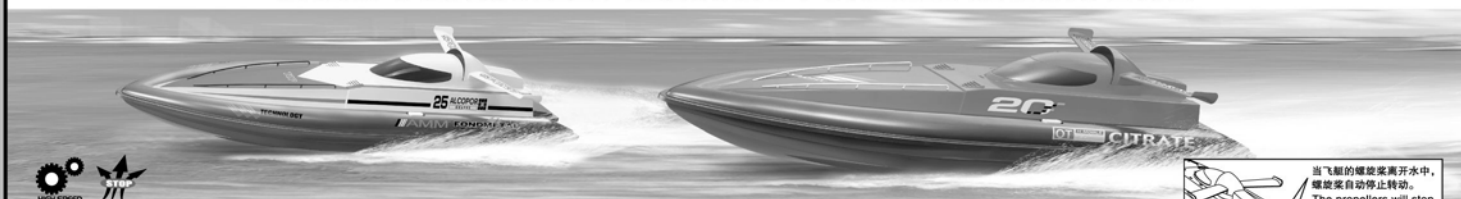

R/C SYSTEM INCLUDED
POWERFUL HIGH SPEED MOTOR
PROFESSIONAL LARGE TORSION PROPELLER
LARGE CAPABILITY RECHARGEABLE BATTERY


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



创新玩具
CREATE TOYS




1. 电池的安装 Installation of battery

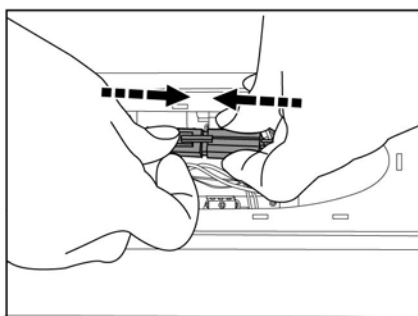


(1)、电池与接收机上的插口按正确方向连接好。

(1). Connect the socket of the rechargeable battery pack and the socket in the boat cabin.

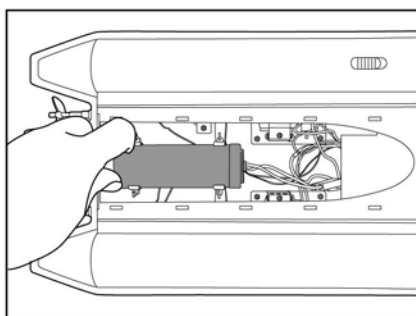

(2)、将电池放在飞艇后部的定位内，并确认其不会晃动。

(2). Place the rechargeable battery pack into the bracket at the rear area of the boat cabin, and make sure it is well secured.

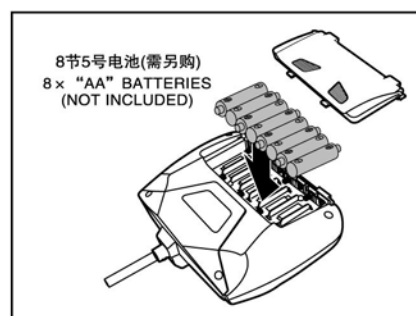

8节5号电池(需另购)
8 x "AA" BATTERIES
(NOT INCLUDED)


(3)、将相同种类的8节5号电池按正确极性装入遥控器内，并盖好电池盖。

(3). Remove the battery cover on the controller, place 8 x AA batteries into the battery compartment with correct polarity, then replace the battery cover.


2. 船舱盖的安装 Installation of hatch cover

如右图所示，将船舱盖板前部插入船体，并将船舱盖板向前推到底。

As shown, insert the hatchcover into the front area of the boat hatch, push the hatchcover forward to lock the bolts. Then move the two snap fasteners at the rear area of the hatchcover towards the rim to lock them.

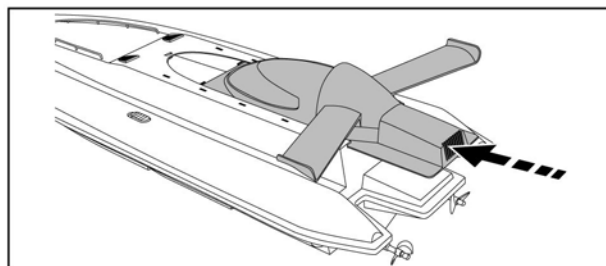


3. 开关 Switch

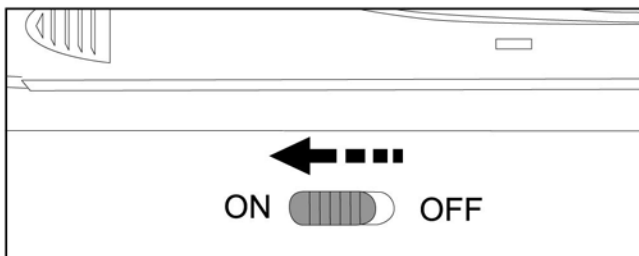

将飞艇电源开关推至打开位置后再打开遥控器电源开关，手不要放在螺旋桨附近，并确认螺旋桨周围没有障碍物，防止螺旋桨高速旋转时伤人。

The power switch of the boat is on the deck. When playing, move the switch to "ON" position before turn on the controller. Keep hands away from the propellers, and make sure no obstacle around the propellers, to avoid possible injury.

4. 充电 Charging

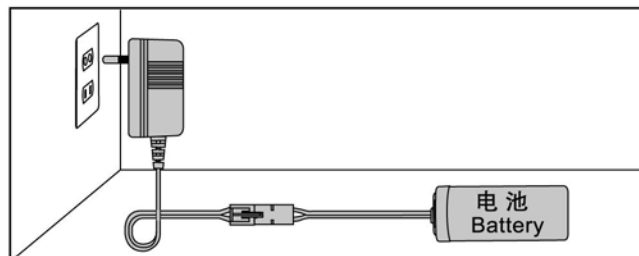

电池充电时请使用本套材内专用充电器，充电时使用标准交流电源，充电时间约6小时。

注意：请小心维护电池，充电前尽量将电池电量放空，按标准充电时间为电池充电，以延长使用寿命，避免不当使用造成的损坏。

Please use the dedicated charger in the package for charging the rechargeable battery pack. The standard charging time is 6 hours. NOTE: Please take good care of the battery pack. Before charging, please completely discharge the battery pack. Please charge the battery pack according to standard charging time to prolong its service life, Avoid damage of battery caused by improper use.

5. 操作 Operation

(1)、把飞艇放入水中，将遥控器左手柄向前推，两个螺旋桨同时旋转，飞艇前进。将右手柄向左推，左桨停，右桨工作飞艇左转。右手柄向右推，右桨停，左桨工作飞艇右转(图1)。

(2)、使用前请确定周围无相同频率干扰。

注意! ①、14岁以下的使用者必须在成人的指导下操作。
②、禁止在游泳或有人游泳的水面中航行，以免伤人。
③、下水航行前先观察水中有无杂物，如果杂物过多，飞艇航行时可能会被缠住螺旋桨停航，建议不要在此类水面操作飞艇。

(3)、长时间不使用本飞艇时，请取出遥控器及飞艇的电池，并用套材内所附的六角扳手将飞艇传动轴接头处的紧固螺丝钉旋松，将传动轴取下擦净后抹油置于干燥处，艇身内两根铜管均请适量注油，以备下次使用(图2)。

(4)、本飞艇产品遥控半径40米，请注意不要超出遥控范围，以免发生失控现象。

(5)、当飞艇的螺旋桨离开水中，螺旋桨自动停止转动。

(6)、在无水的情况下测试飞艇的功能：将导电棍如图所示放在两根铜管上(图3)，将遥控器左手柄向前推，螺旋桨转动，表示通电正常(图4)；将遥控器左手柄向前推，螺旋桨不动，表示电池没电或出现故障(图5)。

(7)、飞艇表面避免阳光长时间暴晒及沾染油污，以免损坏漆面。使用后可用中性洗洁精加清水冲洗。

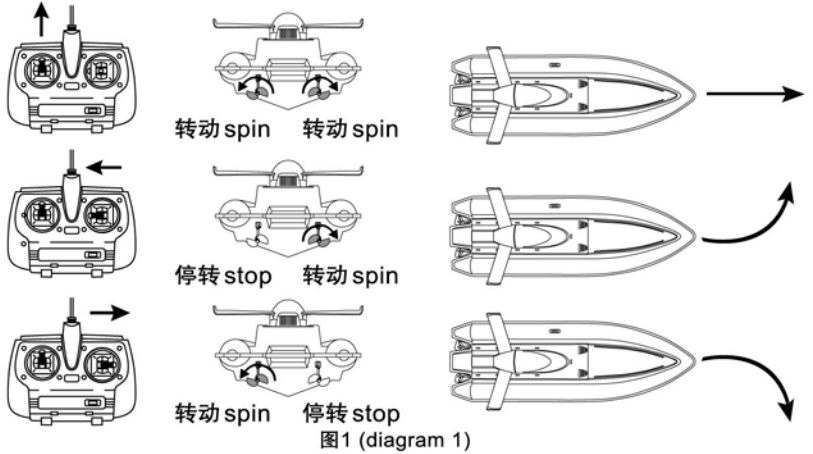


图1 (diagram 1)

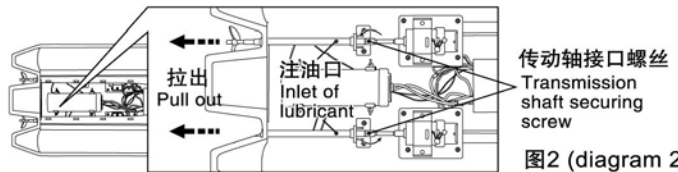


图2 (diagram 2)

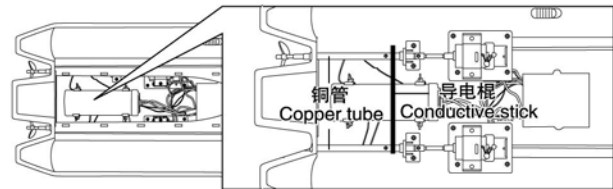


图3 (diagram 3)

(1). Put the boat on the water. When pushing the left handle of the remote controller forward, two propellers will spin simultaneously making the racing boat move forward. When pushing the right handle of the controller leftward, only the right propeller (rear view) will spin, making the racing boat turn left. When pushing the right handle of the control rightward, only the left propeller (rear view) will spin, making the racing boat turn right. (diagram 1).

(2). Make sure there is no equipment working at the same frequency in the vicinity to avoid interference.

NOTE: ①. Users under 14 years old should follow guidance of adult.

②. Please do not play the racing boat on swimming pool or water with people swimming to avoid injury.

③. Please observe if there is dirt in water before playing. We suggest not play the boat on dirt water since the dirt in water may enwind and hence damage or stop the propellers from working.

(3). If the racing boat is not be used for an extended period, remove the batteries from the controller and the boat. And use the wrench included in the package to loosen the screws securing the transmission shafts; take off the transmission shafts, clean them and store in a dry place. Lubricate the copper tubes for later use (diagram 2).

(4). The remote control range of this product is 40 meters. Please make sure the boat does not go out of control range.

(5). The propellers will stop rotating when the boat is taken out of water.

(6). To test the racing boat when it is not in water, put a conductive stick onto the copper tubes in the boat cabin as shown (diagram 3). Then push the left handle of the controller forward, if the propellers rotate then the boat is in normal function. If when pushing the left handle of the controller forward, the propellers don't spin, then the batteries may be exhausted, or some other components have malfunction.

(7). Please keep the racing boat away from sun light and oil pollution, Please clean it with water and moderate abluent.



图4 (diagram 4)



图5 (diagram 5)

6. 升级 Upgraded

当你想进一步提升飞艇的速度时，你可另购配件对飞艇进行改造。


(1)、飞艇升级时，主要改造马达及传动机构，而马达及传动机构外形与原理配置是一样的，只是内部尺寸不一样，用户在改造过程中参照原配置即可。

(2)、升级配件有左右共有两套，请按包装时的标识进行改造。

Optional upgrade kit can be purchased for upgrading the speed of the racing boat.

(1) The upgrade kit contains upgrade components with same outlook of the original components, but with parameters for faster speed. Please refer to the assembly of the original components when installing the upgrade components.

(2) The upgrade kit contains 2 different sets of components (one set for left side and the other set for right side). Please pay attention to their identification when upgrading.

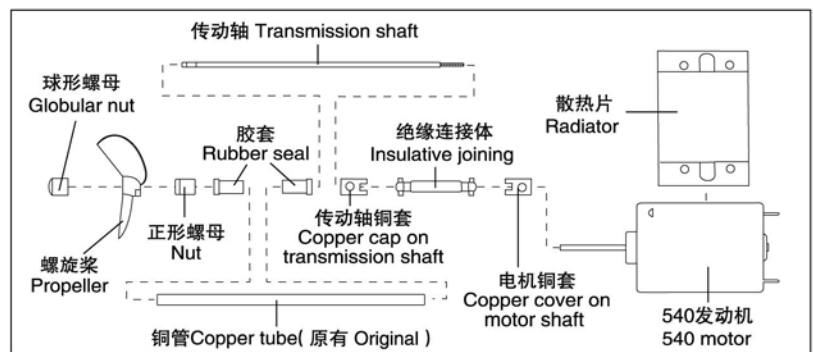

警告 (WARNING)

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

1. Batteries should be replaced by adult.
2. Do not charge the rechargeable battery pack immediately when it exhausts, wait until it cools down before charging.
3. Use only recommended batteries.
4. Batteries should be installed with correct polarity.
5. Never mix different types of batteries, or new and used batteries.
6. Never try to recharge non-rechargeable batteries.
7. Always remove rechargeable batteries from the product before recharging them.
8. Rechargeable batteries must only be recharged under adult supervision.
9. Remove dead batteries immediately and replace them with new batteries of the same type. Put dead batteries in a recycling container.
10. Do not short-circuit the battery terminals.
11. When charging, keep the battery and charger away from reach of children.
12. Do not charge battery near fire, hot place, or wet place.
13. Do not touch the propellers.

Please keep the instruction for future reference.