

Remote Trainers

GS-7001 GS-6001

Cabela's® Gun Dog® Remote Trainer Kit

FIRST THINGS FIRST

You will need to charge your Gun Dog® Transmitter and Collar Receiver before you can use them. While your Gun Dog® Transmitter and Collar Receiver are charging, read this manual to become familiar with the devices.

GS-6001 Transmitter




GS-7001 Transmitter




OR

Collar Receiver

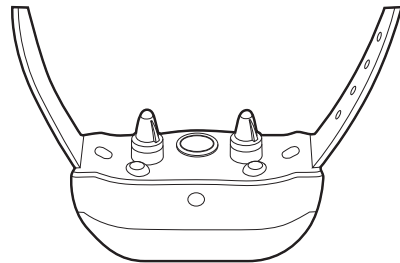


Gun Dog® Hardware
includes Antenna, Test Light, Lanyard, Belt Clip, Long Contacts, and Contact Wrench.

Gun Dog® Charging System

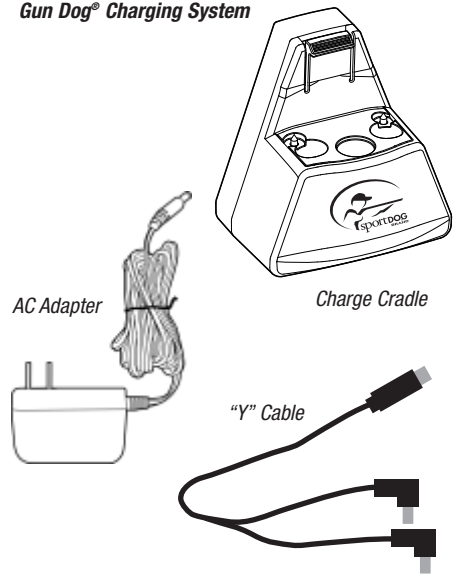

Quick Start Guide

Step 1 Charging the Batteries

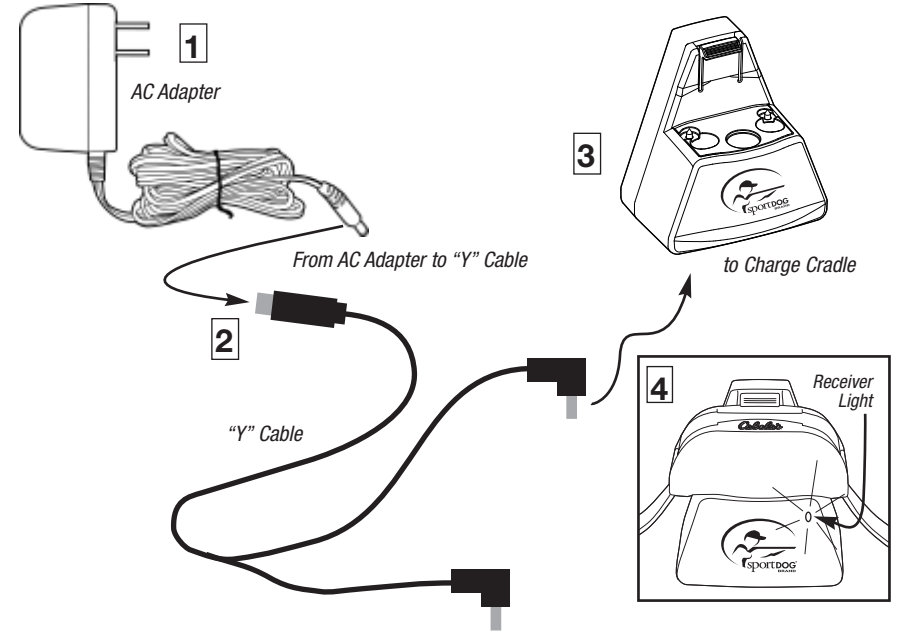


1. Plug the AC Adapter into a 120VAC electric outlet.
2. Connect the AC Adapter to the "Y" cable.
3. Connect the "Y" cable to the Charge Cradle.
4. Put the Receiver on the Charge Cradle as shown in figure 4 (both logos are on the same side).

CHARGE CRADLE INDICATOR LIGHT

| OPERATIONAL MODE | LIGHT COLOR | LIGHT FUNCTION |
|--|-------------|--|
| No Collar Receiver on the Charge Cradle but charger is connected | Green | Light is solid in color |
| Unit is charging | Red | Light is solid in color while charging |
| Unit is fully charged (Collar Receiver on Charge Cradle) | Green | Light flashes once per second once the battery is completely charged |

5. On the Transmitter, move the Charge Port Cover away from the Charge Port. Connect the remaining end of the "Y" cable to the Transmitter's Charge Port. Charge the transmitter for at least 2 hours.


Back view of Transmitter

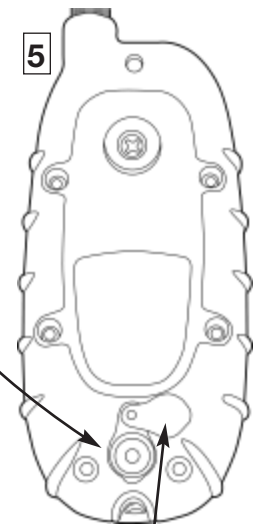

Charge Port Cover

Quick Start Guide

Step 2 Turning the Collar Receiver ON and OFF

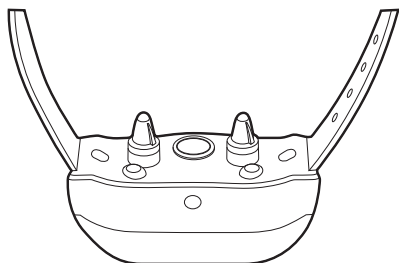

To Turn the Collar Receiver ON:

Press and release the On/Off Button when the Collar Receiver Indicator Light comes on. The Collar Receiver will emit a start up tone.

To Turn the Collar Receiver OFF:

Press and release the On/Off Button when the Collar Receiver Indicator Light comes on solid (red) and the Collar Receiver will emit an off tone.

To extend the life between charging cycles, turn the Collar Receiver off when it is not in use.

NOTE: Approximate battery life between charges is 40 to 60 hours, depending on frequency of use.

Step 3 Fit the Collar on Your Dog



Put the collar around your dog's neck and adjust to find the proper fit. Fasten the collar so the fit is snug, yet loose enough to allow one finger to fit between the strap and the dog's neck. Fit is important because a loose collar may cause inconsistent performance.

Step 4 Begin Training


Read the information in the Training section on page 13. Though your dog may show good initial response to the training, be sure to continue training for several weeks. The convenience that your new remote training system offers is well worth the time invested.

Throughout this manual, items in a bordered box apply to **GS-7001 ONLY**.


THE TRANSMITTER

The waterproof Transmitter signals the electronic Collar Receiver to produce a harmless, yet effective stimulation and/or tone. The no-slip grip feels comfortable in your hand for extended periods of training time or field time.

Explaining the Transmitter Keypad Buttons:

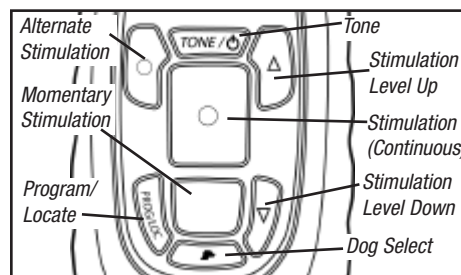

GS-7001 keypad shown above,
GS-6001 keypad shown below.

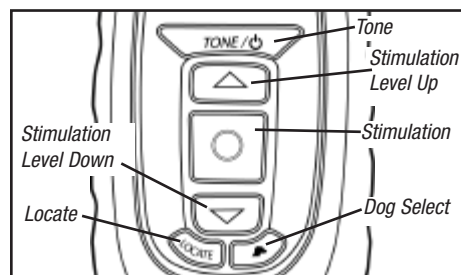

Above keypad buttons are explained as follows:

Tone – When pressed, causes the Collar Receiver to produce a tone. No stimulation is delivered.

Stimulation – also called the “Stim Button,” when pressed, this sends a continuous stimulation signal to the Collar Receiver at the intensity shown in the display for as long as you hold down the button (See “Over Stimulation Protection” on page 13.)


Button features one raised bump to easily locate by touch, even with gloves on! (See “Program the Stim Type” on page 7.)


Stimulation Level Up & Stimulation Level Down – adjusts the stimulation intensity through a range of levels. GS-7001 stimulation range is 1 to 20. GS-6001 stimulation range is 1 to 15.

Exclusive Feature: Hold either stim level up or stim level down button for half a second for the Rapid Ramp™ feature to start – The Transmitter display scrolls through stim levels more quickly.

Dog Select – Switches Transmitter control from Dog (Collar) 1 to Dog (Collar) 2, for training two dogs. You can purchase a second collar to expand the system for training two dogs.

GS-7001 ONLY:

Alternate Stimulation (Alt Stim) – (top left red button) – When you press the Alt Stim button, the  symbol displays. Program this preset button to the desired stimulation level. (See *Alternate Stimulation (Alt Stim)* on page 8.)

Momentary Stimulation – When you press the Momentary Stim button (large gray button below the Stimulation button), the  symbol displays. **Momentary** pulse stimulation is one quick stim per button press (also called Nick stimulation or Brief-tap stimulation).

Explaining the Transmitter Keypad Buttons (continued)

Prog/Loc (GS-7001 only) – Pressing and holding this dual-function button until the PROG symbol appears in the display puts the Transmitter in programming mode.

Briefly pressing this button starts or stops Locate Mode (explained on page 10).

Locate (GS-6001 only) – Press this button to start or stop Locate mode (explained on page 10).

 
Transmitter Display Symbols:

The display stays on for 30 minutes after a button press. After 30 minutes with no button presses, the display shuts off. Pressing any button will make the display turn back on.

Various symbols you might see in the Transmitter display are explained as follows:



(Numeric readout) – Appears in the middle of the display, this shows the chosen stimulation level. Adjust with the Stim level up / Stim level down (arrow) buttons.



– The left symbol displays when the Transmitter is controlling Dog Collar Receiver 1. You can purchase a second collar to expand the system for training two dogs. The right symbol displays when controlling Dog Collar Receiver 2. Switch between Collar Receivers by pressing the Dog Select button. Both symbols display when in Dual Dog mode. (See *Set Dual Dog mode* on page 7.)



– This symbol appears whenever Tone is part of the Stimulation type chosen. (See *Program the Stim Type* on page 7.)

GS-7001 ONLY:



– This symbol appears when the Transmitter is in programming mode. (See *Programming Mode* on page 7.)



– This symbol appears when the Transmitter is in Locate mode.



– The battery indicator provides constant awareness of your battery's power level. (See *Battery Indicator* on page 9.)

Backlight – The Transmitter features a backlit display. The display backlight stays on for 5 seconds after a button press.

USING THE TRANSMITTER Turning ON the Transmitter

Power up the Transmitter by pressing any button. You will see the display turn on when you press any button.

Reset All Programmable Settings

Press ▼ and ▲ at the same time to reset all programmable settings to the **default settings**. The Transmitter Display shows all symbols for two seconds during reset.

Transmitter Default Settings

GS-6001 Defaults

Dog 1&2 Primary Stim Level: 5

GS-7001 Defaults

Dog 1&2 Stim Type: **Stim without Tone**

Dog 1&2 Primary Stim Level: 7

Dog 1&2 Alt Stim Level: 14

Set Stim Button Intensity Level

To change the intensity level for the Stim button:

Press ▼ or ▲ until the desired stimulation level is displayed. When the Stim button is pressed, the Receiver will deliver a stimulation at this setting.

GS-7001 ONLY:

Programming Mode

To enter Programming Mode, press and hold the Prog/Loc button until the PROG symbol displays, then release the button. The Transmitter is now in Programming mode.



To exit Programming Mode, press and release the Prog/Loc button again. The PROG symbol no longer displays.

GS-7001 ONLY:

Program the Stim Type (Tone Option)

For GS-7001 Transmitters, stimulation may be delivered with or without a tone. The Transmitter's default setting is *Stim without Tone*.

To choose:

1. Choose desired dog. Press  (Dog Select button).
2. Press the Prog/Loc button until the PROG symbol shows in the Transmitter display. Release Prog/Loc button.
3. Press and release TONE. If you keep pressing the TONE button, the selection switches between these choices:
 - *Stim without Tone* (no Tone symbol displayed)
 - *Stim with Tone* (Tone symbol displayed) 
4. Press and release the Prog/Loc button to save setting and exit.

For additional information regarding using the Tone, see *Training Tone Option* on page 14.



GS-7001 ONLY:

Set Dual Dog mode

In Dual Dog mode, the continuous stimulation button (red) controls Dog 1 Collar Receiver, and the Momentary Stimulation button (gray) controls Dog 2 Collar Receiver. You control two dogs without using the Dog Select button to switch between dogs. In this mode, Stim type is *stim without tone*.



continued from previous page

To use Dual Dog mode:

1. Turn on Collar Receiver 1.
2. Set the desired Dog 1 stim level with the UP and DOWN arrow keys.
3. Press Dog Select button to switch to Dog 2. 
4. Turn on Collar Receiver 2.
5. Set the desired Dog 2 stim level with the UP and DOWN arrow keys.
6. Press the Prog/Loc button until the PROG symbol displays, then release the button.
7. Press the Dog Select button to switch between DOG 1 – 2 mode (displays single dog head symbol and stim number) and DUAL DOG mode (displays both dog head symbols and “2d” in the display). 
8. Repeatedly pressing the Dog Select button switches between DOG 1 – 2 mode and DUAL DOG mode.
9. To save the chosen setting and exit programming, press and release the Prog/Loc button.

Remember, the red stim button is for Dog Collar Receiver 1, and the gray stim button is for Dog Collar Receiver 2.

When using Dual Dog mode, the following buttons are not functional:



- Tone
- Alt Stim
- stim level down 
- stim level up 

GS-7001 ONLY: Alternate Stimulation (Alt Stim)

Some trainers depend upon instant access to a higher stimulation setting for circumstances where the dog may not respond to lower levels, such as a high distraction environment. Your GS-7001 Transmitter features a red, preset Alt Stim button that you can use to deliver an alternate (higher) level of stimulation.

Program the Alt Stim Button

To change the stimulation level of the GS-7001 Alt Stim button:

1. Press the Prog/Loc button and hold until the PROG symbol is displayed, then release the button.
2. Press the Alt Stim button.
3. Press  or  until you get to the desired stimulation level.
4. When finished, press and release the Prog/Loc button.

Battery Indicator



*Battery is at 2/3 to Full capacity.
Transmitter is fully functional.*



*Battery is at 1/3 capacity.
Transmitter is still fully functional.*



*Battery is at 1/6 capacity.
Transmitter will operate the Collar Receiver, but recharge Transmitter battery as soon as possible.*



*Battery is almost dead.
Transmitter is unable to operate the Collar Receiver. Fully recharge to use again.*

When the Battery Indicator shows the low battery symbol (1/6 capacity), recharge the Transmitter soon. When only the battery outline is displayed, the Transmitter's battery is too low to send transmissions to the Collar Receiver. Transmitter must be recharged to regain operation.



Battery Cautions

Do not charge batteries every night. To maximize battery life, use the Transmitter until the Low Battery symbol (1/6 capacity) displays and use the Collar Receiver until the LED light blinks red.

- Do not disassemble batteries
- Do not short circuit batteries
- Do not expose to high temperature: 60°C/140°F
- Do not incinerate batteries
- Keep batteries out of reach of children

Batteries must be recycled or disposed of properly. Batteries should **NEVER** be discarded in municipal waste.

CABELA'S EXCLUSIVE! TRANSMITTER LOCATOR


At Cabela's, we listen to bird hunters, gun dog owners, and our customer feedback. This feedback provides us with a huge source of information about remote training systems and desired features. You've made an investment in this deluxe remote training system, so we decided to develop a method for locating your transmitter, should it become lost while in the field.

To turn ON Locate Mode, press and release the LOCATE button (GS-6001) or PROG/LOC button (GS-7001); the LOC symbol appears in the display. If the transmitter is motionless for 10 minutes, an alarm sounds from the transmitter. This alarm is easily heard up to 30 yards away in most outdoor conditions. The alarm sounds until a Transmitter keypad button is pressed, or the battery goes dead. On a full charge, the alarm sounds for up to 24 hours. This Transmitter Locator alarm helps you find a lost transmitter. **To turn off Locate Mode**, press and release the LOCATE button (GS-6001) or PROG/LOC button (GS-7001) and the LOC symbol goes off in the display.

Cold Weather Operation

In cold temperatures (10°F or below), the liquid crystal display (LCD) on your Transmitter may be dim or slow to respond. Wait until the display becomes visible before selecting any training commands.

Cold temperatures may lead to a premature low battery signal, so keep the transmitter close to your body (when not in use) during cold weather.

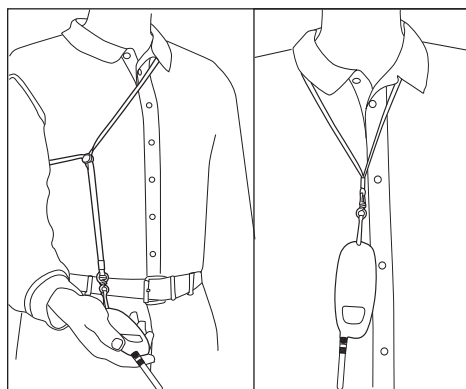


Use the Lanyard: Attach the included lanyard to the Transmitter. As shown in the above graphics, slip the lanyard over your head and shoulder (left) or position in front of you (right) to carry your Transmitter close to your body. Your body's warmth will improve cold-weather operation.

Operating Range

Your Transmitter communicates with the Collar Receiver via a radio signal. The system's operating range, as stated on packaging, is based upon line-of-sight.


For best results to achieve maximum distance, keep your fingers away from the Transmitter antenna. When in use, hold the transmitter upright, at or above shoulder level, and away from your body as shown.

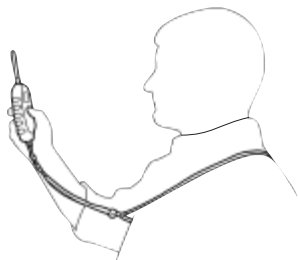

THE COLLAR RECEIVER

The lightweight, comfortable electronic Collar Receiver is integrated into a sleek fashionable collar strap your dog wears. The Collar Receiver produces a harmless, yet effective stimulation and can emit a training tone. The Collar Receiver is waterproof and is safe for your dog to wear even while swimming. The Collar Receiver is rechargeable; the Charge Cradle Indicator light glows red while charging and glows green (flashing once per second) when charging is complete.

The Collar Receiver uses the LED to let you know its status.

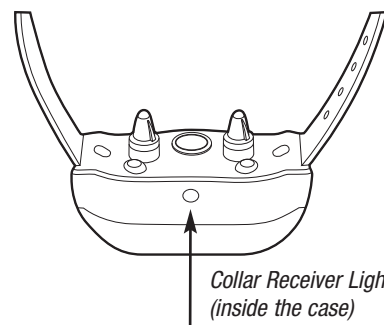

To Turn the Collar Receiver ON:

When turning ON, the Collar Receiver will emit a start-up tone sequence, and the Collar Receiver light will show battery charge level (green, amber, or red).

To Turn the Collar Receiver OFF:

Press and release the On/Off Button when the Collar Receiver Indicator Light comes on solid (red) and the Collar Receiver will emit an off tone.

To extend the life between charging cycles, turn the Collar Receiver off when it is not in use.

NOTE: Approximate battery life between charges is 40 to 60 hours, depending on frequency of use.

Fitting the Collar Receiver

The collar strap should fit snugly towards the top of your dog's neck with the receiver on the bottom of the neck.



Check that the Cabela's® logo is right side up. You should be able to get one finger between the collar strap and your dog's neck. The contacts must touch the dog's skin for proper operation. A little hair thinning may be required. **Do not shave your dog's neck.**

Occasionally, check the tightness of the contacts to ensure they will not be lost from the Collar Receiver. Lost parts are not covered under your warranty.

Trim excess strap. You'll want to leave about 2 inches of excess strap. **Note** if your dog is young and you expect it to grow, you'll want to leave extra strap to allow for future collar fastening. Replacement straps are available from Cabela's.

Note: Dogs' coats are as unique as dogs themselves. You may wish to try the longer contacts if your dog has a very heavy coat. Be certain your dog can feel stimulation before training begins.

Match the Collar Receiver and Remote Transmitter

To reset the Collar Receiver to work with a new Remote Transmitter or to reprogram a new Collar Receiver to work with your existing Remote Transmitter:

1. Turn the Collar Receiver off
2. Press and hold the On/Off Button. The Collar Receiver Indicator Light will come on, then turn off after 5-6 seconds. If the On/Off Button is released too early, the Collar Receiver Indicator Light will begin flashing as normal. If this occurs, start over and repeat from 1.
3. After the Collar Receiver Indicator Light has turned off, release the On/Off Button.
4. Press and hold the Upper Button on the Remote Transmitter until the Collar Receiver Indicator Light flashes 5 times. You may need to hold both units 2-3 feet from each other before this occurs. Once the Receiver Indicator Light has flashed 5 times, the Collar Receiver has been reset and will begin flashing as normal. If the Receiver Indicator Light does not flash 5 times, start over and repeat from 1.

Two Dog Systems

If you wish to add another Collar Receiver to the training system, accessory Collar Receivers are available through Cabela's catalog, retail stores, or website.

1. Holding the second Collar Receiver, set your Transmitter to Dog 2 (Dog Select button), and repeat the above steps 1-4.

The Transmitter sends signals to the Collar Receiver of the dog symbol appearing in the Transmitter display.

To switch between Collar Receivers, press the Dog Select button until the desired dog symbol displays.

For information on using Dual Dog mode (controlling two dogs without using the Dog Select button), see page 7.



Dog 1 symbol




Dog 2 symbol

Testing the Collar Receiver

In order to make sure the Collar Receiver is getting signals from the Transmitter, you may wish to test the Collar Receiver from time to time.

To test:

1. Hold the included Test Light across the Collar Receiver's contacts. (The holes in the Test Light go over the contact tips; make sure the wire inside the hole touches the contact tip.)
2. Press the Stimulation button on the Transmitter.
3. The Test Light lights up. The intensity of the Test Light depends on the stimulation level. The light is dim for low stimulation levels and is brighter with higher stimulation levels.

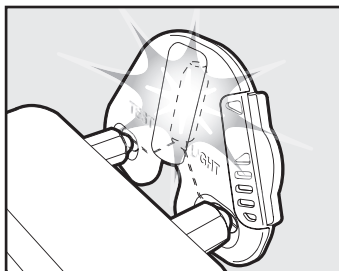

TRAINING

Always start training your dog with the lowest stimulation, and increase to a higher level only if necessary. You will know when you've reached the right level when your dog responds by twitching his head, neck, or shoulders, or by perking up his ears. If the dog vocalizes, you need to go to a lower level.

When using GS-7001's **Continuous stimulation** button, you control the duration of the stimulation by the length of time you press the stim button. For a short stimulation, press and release the button. For a longer stimulation, hold the button down. A maximum of 10 seconds of stimulation may be applied before the safety lockout feature (**over-stimulation protection, see below**) starts.

When using GS-7001's **Momentary stimulation** button, each Momentary stim button press produces one short, quick stim at the Collar Receiver (also called Nick stimulation or Brief-tap stimulation). Release the Momentary stim button and press it again to deliver another momentary stim.

Over-Stimulation Protection

The Transmitter can transmit continuously (Tone or Stim) for up to 10 seconds. If you attempt to transmit continuously for more than 10 seconds, the transmitter enters a 10 second lockout mode during which time no transmissions are allowed (hence, no stimulation allowed).

Training Tone Option

The Tone button causes the collar to produce a sound. No stimulation is delivered when the Tone button is pressed. The tone continues for as long as the button is held down, up to 10 seconds. A tone can help strengthen a dog's response to training. The tone can be used as a warning tone prior to pressing the stimulation button; or can be a reward tone when presented with praise, play, or food for good behavior.

The use of a training tone is optional. Its use varies among popular training methods. Some trainers choose to use the tone option as a warning tone prior to stimulation, others prefer to use the tone option as a reward tone, and still others prefer to not use it at all. It is imperative for successful dog training to use the tone option consistently through-out the training process. Whether the tone will mean reward or warning to your dog is up to the training method **you choose**.



Remember: the training tone **CANNOT** be both a warning tone and a reward tone. To learn more about tone training, consult a qualified dog training professional.

To program the GS-7001 Transmitter for Tone operation, (see *Program the Stim Type (Tone Option)* on page 7).

Training Tips


- We recommend your dog be at least six months old before starting a remote training system program.
- Always praise your dog for good behavior!
- Teach him what the commands mean before introducing the Collar Receiver as a reinforcement tool.
- Keep training sessions brief, about ten minutes of training and then a rest or play period of at least equal length.
- Dogs learn through repetition. You may have better training success if you can elicit an undesired behavior when you can anticipate it. For example, if the dog misbehaves and jumps on visitors, have someone come in and out of the front door several times over a half-hour period. You'll be expecting it and will be ready to teach your dog the right behavior.
- Always end a training session on a positive note. Let the dog have success. This way he'll look forward to the next session.

- Training should be fun for both you and your dog. Never train when you are angry. If you get frustrated during training, stop and come back to it later. Your dog will learn better when you are both relaxed.
- The goal of training is to condition your dog to respond to your verbal commands in all situations. You should plan on using the Collar Receiver for at least four months. A good rule is, once started with a remote training system, regularly have the Collar Receiver on when you take the dog out. This will ensure that he will always be imprinted with the correct response to your commands and that you are always in control.

CLEANING & CARE

1. Use a soft damp cloth to clean the Transmitter and Collar Receiver.
2. Do not use alcohol or cleaning solutions to clean the Transmitter and Collar Receiver.
3. Dry the Transmitter and Collar Receiver with a dry, lint-free cloth should they get wet.

IMPORTANT ADVICE

1. Read the entire instruction manual and follow all directions. If you have any questions, please call 1-800-732-0144.
2. This system is intended for use only on dogs. Never attempt to use it for any purpose not described in this manual.
3. Keep out of the reach of children
4. Never perform set-up procedures while the Collar Receiver is on your dog.
5.  Any collar worn for extended periods can cause a condition similar to bedsores, known as Pressure Necrosis. To reduce the possibility, you must do the following:
 - Never leave the collar on the dog for more than 12 hours per day.
 - Examine the dog's neck daily for any signs of a rash or a sore.
 - Supervise your dog during the first 2 days of training.
 - Check the fit to prevent excessive pressure; you should be able to insert one finger between the collar strap and your dog's skin.
 - Wash the dog's neck area and the contacts of the collar weekly with a washcloth and mild hand soap; rinse thoroughly.
 - If the condition persists beyond 24 hours, consult your veterinarian.
6. Metal tags and collars should be removed when using the remote training collar as they may interfere with proper operation.
7. Do not attempt to dismantle or repair any components of this system; doing so **will void the warranty in full.**

8. Realize that because dogs have unique temperament, there is no way of knowing how your dog will react to the introduction of a remote training collar system. For the safety of your dog, a long lead should be used during initial training so you have complete control of the situation.
9. If you have reason to believe that your dog may pose a danger to others, harm itself, or react adversely to the collar, do not rely solely on this product to train your dog. If your dog shows signs of growling, snarling, or biting while using the collar, stop immediately. Aggression in dogs has many causes. We recommend that you consult a knowledgeable professional dog trainer or animal behaviorist who has experience with aggressive dogs if your dog has shown any of these characteristics.
10. Occasionally, a dog cannot be trained to respond to a remote training collar. Sometimes even a properly trained dog may disobey a command. Therefore, Cabela's® cannot guarantee that the system will, in all cases, keep the customer's dog from disobeying commands.

TROUBLESHOOTING

If the Transmitter and Collar Receiver appear to be not working, try the following:

- Adjust the collar strap to fit better.
- Test the Collar Receiver using the Test Light. If no light, recharge the Collar Receiver's battery.
- If the Transmitter display is off, first try pressing any button. If the display remains off, recharge the Transmitter.
- Carefully turn on the components as shown in the Quick Start Guide (beginning of this manual).
- Check that the Collar Receiver contacts are properly tightened.
- Ensure that the Collar Receiver contacts are touching the dog's skin.
- If necessary, trim the dog's hair or use the longer contacts to ensure proper skin contact. **Never shave the dog's neck.**
- Try a stronger stimulation level.

If you cannot solve the problem by following these steps, please call **1-800-732-0144**.

COMPLIANCE WITH U.S. FCC REGULATIONS

This Remote Training System is designed to meet U.S. FCC requirements for telecommunications compliance. This system contains both Collar Receiver and Transmitter devices. Each transmitter device complies with Part 95 and/or Part 15 of the FCC rules; each receiver device complies with Part 15 of the FCC rules.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a specific installation. If interference does occur to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the Collar Receiver.
- Connect the equipment to an outlet on a circuit different from that to which the Collar Receiver is connected.
- Contact the Customer Care Center at 1-800-732-0144 or an experienced radio/TV technician for assistance.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Each device may display indications as to where this system is compliant worldwide. Note that in some countries, the use of this Remote Training System may be limited due to national frequency planning requirements, and the user is always responsible for respecting national and local rules before operating.

TWO YEAR WARRANTY

Cabela's[®] warrants to the original retail purchaser, that your Cabela's[®] Gun Dog[®] Remote Training System will be free from defects in material and workmanship, under normal use, for a period of two years from the date of the original retail purchase (proof of purchase required). This Limited Warranty excludes: accidental damage due to dog chews, lost parts, lightning damage, neglect, alteration, or misuse.

After two years from date of original retail purchase, we will at our option, repair or replace your product for a minimum service charge based upon the component.

Manufacturer is not liable or responsible for any incidental or consequential damages resulting from the use of the product, or caused by any defect, failure, or malfunction of the product, whether a claim is based upon warranty, contract, negligence, or otherwise.

PATENTS

This product may be covered by one or more of the following patents:
U.S. Patent Numbers: 6,184,790;
6,327,999; 6,459,378 and 6,807,720.

REGISTER YOUR PRODUCT

To get the most protection out of your warranty, please register your product within 30 days at www.sportdog.com/cabelasgundog. By registering, and keeping your receipt you will enjoy the product's full warranty and should you ever need to call the Customer Care Center, we will be able to help you faster. Most importantly, we will never give or sell your valuable information to anyone. Complete warranty information is available online at www.sportdog.com.

Symbols

2d 8

A

AC Adapter 2

Advice, Important 15

Alt Stim 8

B

Batteries 3

Cautions 9

Indicator 9

Recycle 9

C

Charge Port Cover 3

Cold Weather Operation 10

Collar Fit 4, 11

Cleaning & Care 14

Contents, Kit 2

Cradle, Charge 2, 3

D

Default Settings 7

Dual Dog Mode 7, 8

F

FCC Compliance 16

G

Guide, Quick Start 3, 4

I

Important Advice 15

K

Kit Contents 2

L

Lanyard 10

Locate Mode 10

M

Mode, Dual Dog 7

O

ON/OFF Command 4, 11

Operating Range 10

Operation, Cold Weather 10

Over-Stimulation Protection 13

INDEX**T**

Test Light 12

Tone Option 7, 13

Training 13

Tips 14

Transmitter 5

Backlight 6

Display 6

Dog Select 5

Keypad Buttons 5

Prog/Loc 6

Programming 7

Stimulation 5

Troubleshooting 16

Two Collar Use 12

W

Warranty 17

Weather, Cold Operation 10

Website 17

Y

Y Cable 2, 3

P

Patents 17

Port, Charge, Cover 3

Programming 7

Program Tone Option 7

Protection, Over-Stimulation 14

Q

Quick Start Guide 3, 4

R

Range, Operating 10

Receiver 11

LED Indicator Light 11

Turn On/Off 11

Status Indicators 11

Test Light 12

Receiver Cradle 2, 3


Register Your Product 17

Reset 7

S




Stim Intensity 7

 
Stimulation, Alternate (Alt Stim) 8



NOTES

    NOTES





NOTES

NOTES

