 


chicco

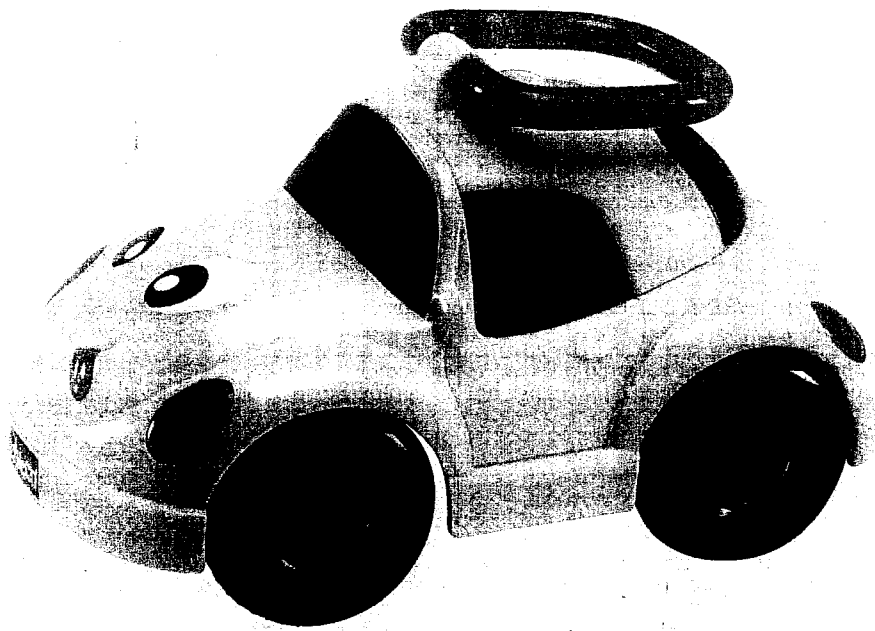

Cod. 69238

Artsana S.p.A. - Como - Italy - Made In China





- | | |
|-------------------|------------------|
| RADIO CONTROL CAR | SIMONE CABRIOLET |
| SIMONE CABRIOLÉ | KABRIOLET SIMONE |
| SIMO KABRIOLETTI | CABRIOLET R/C |

www.chicco.com




chicco

 **2+**

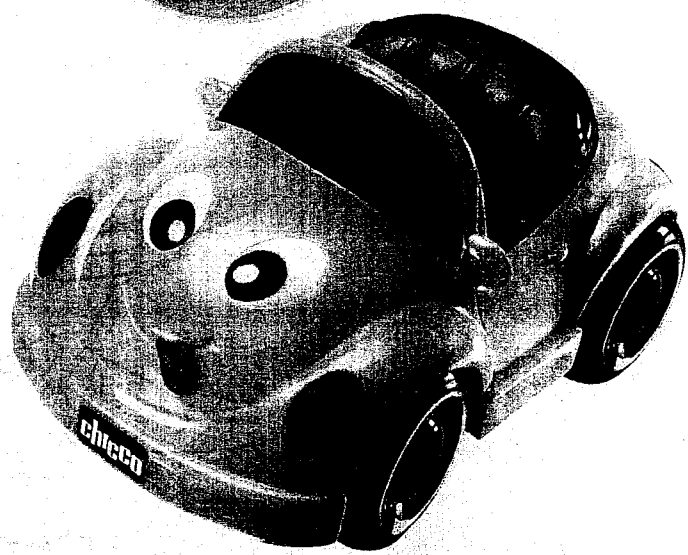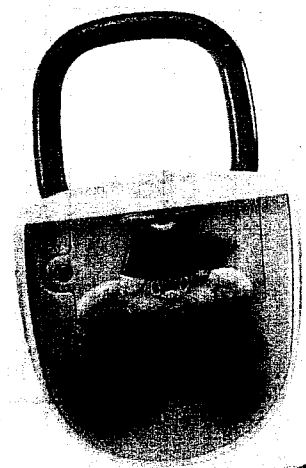  

- | | |
|--------------------|-------------------------|
| SIMONE CABRIOLONE | CABRIOLET R/C |
| AUTO TÉLÉCOMMANDÉE | RADIO CONTROL CAR |
| FERNLENK SPEEDY | AUTOMÓVEL TELECOMANDADO |



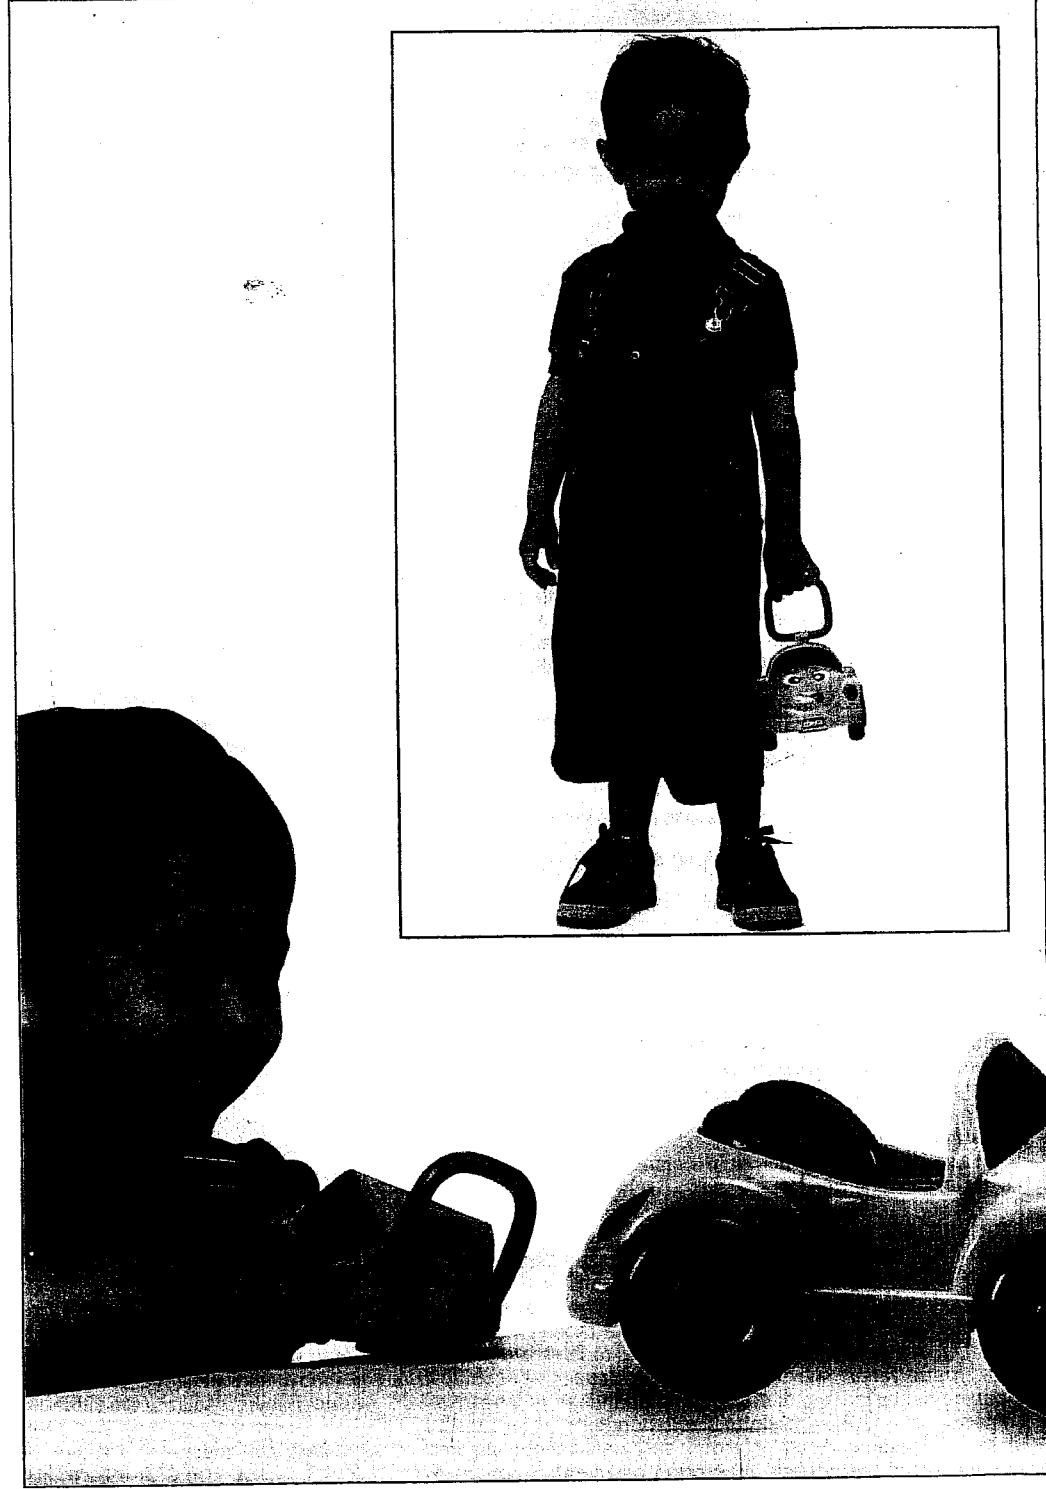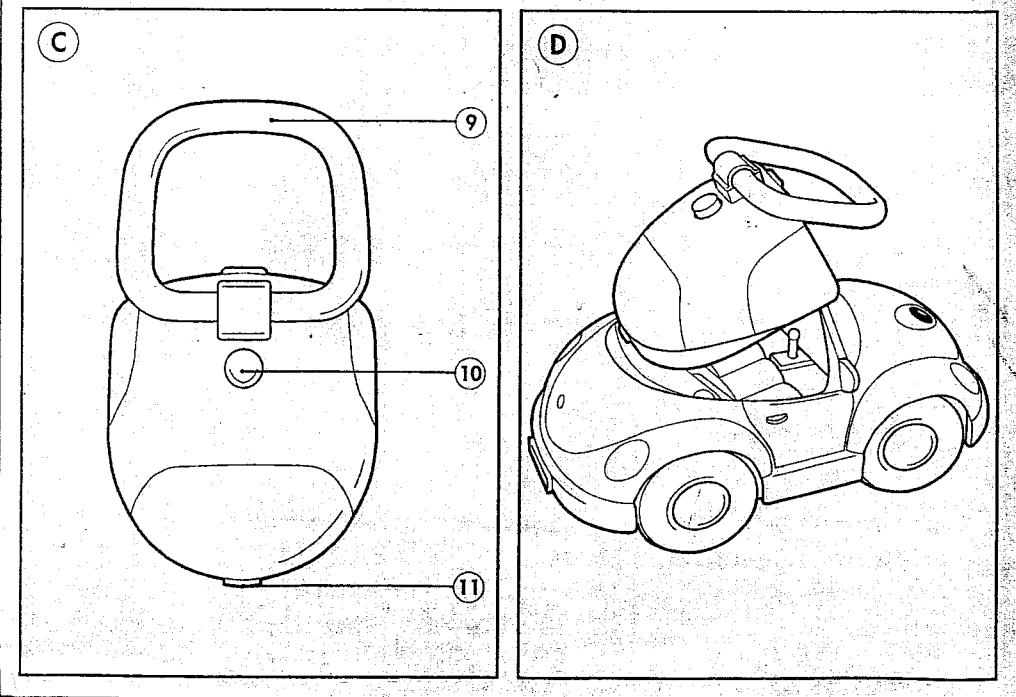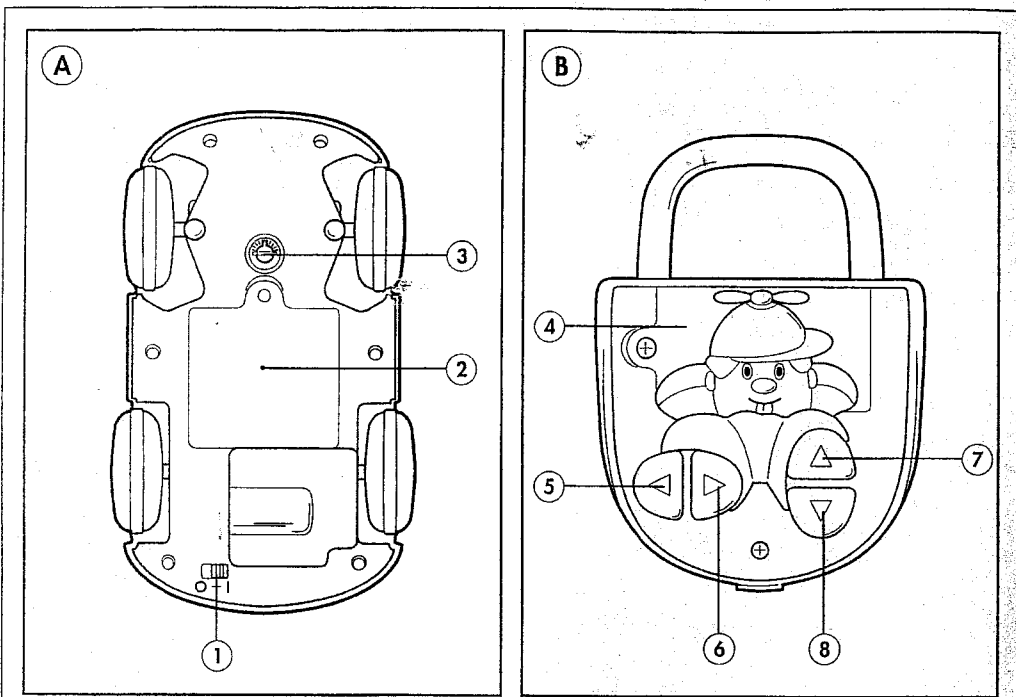   

Age: From 2 years +

Please read these instructions carefully and keep for future reference.

- This car requires 4 x 1.5 Volt, "AA" alkaline type batteries, while the remote control requires 2 x 1.5 Volt, "AA" alkaline type batteries. The batteries are not included.

For your child's safety:

CAUTION!

Before use remove and dispose of any plastic bags and any other packaging (e.g. fasteners and fixing ties etc) and keep them out of reach of children.

WARNING

- Check the toy regularly for signs of wear and damage. Should any part be damaged, do not use and keep out of reach of children.
 - **Caution!**
 - Do not touch the wheels of the toy when in movement.
 - Do not use the toy on the road.
 - Do not use the toy on wet, sandy or dusty surfaces.
 - Do not leave the remote control close to heat sources.
 - The functioning of the toy can be affected by interference to the remote control caused by the following: the simultaneous use of two cars with the same frequency, high tension cables, high voltage transformers, certain types of buildings or walls, electromagnetic pollution, the presence of signals emitted by other equipment.
- The remote control has an effective range of approximately 7 metres (this could be further reduced due to environmental conditions).

TECHNICAL FEATURES

Transmitter current absorption = 20 mA

Receiver current absorption = 600 mA

Car:

Fig. A

- 1) On/off switch lever (O / I)
- 2) Battery compartment cover
- 3) Direction setting selector

Remote Control:

Fig. B

- 4) Battery compartment cover
- 5) Forward left button
- 6) Forward right button
- 7) Forward straight button
- 8) Reverse straight button

Fig. C

- 9) Aerial - handle
- 10) Button to release the remote control
- 11) Fitting prong

INTRODUCTION TO THE TOY

Cabriolet R/C is an electric remote control car that moves in four directions (forward straight, reverse straight, forward to the left, forward to the right).

Thanks to its simple commands, the car can be used by two years old and upward. At this age a child can begin to use the remote control by simply pressing the buttons and watching the direction the car takes. This exercise is very important because it allows children to extend their field of vision and develops their ability to coordinate hand movements.

By the age of three, a child learns to associate the direction selected by using the remote control with the effect produced (corresponding to the car's movement). At the beginning, children learn to control the car until it meets an obstacle. At a later stage, they learn to coordinate precisely the correct use of the remote control to achieve the desired direction.

HOW TO USE THE TOY

1. Switch on the toy by positioning the ON/OFF switch lever (fig. A-1), located under the car, on I.
2. Activate the car by pressing the buttons on the remote control. The remote control has four buttons, which correspond to the following directions: forward left (fig. B-5), forward right (fig. B-6), forward straight (fig. B-7), reverse straight (fig. B-8).
3. After use the car should always be switched off by positioning the sliding switch (fig. A-1) on O.

Fitting the remote control onto the car

- When the car is switched off, the remote control can be fitted onto the car. When fitting, position the remote control as shown in diagram D ensuring that the prong (fig. C-11) is inserted in the rear section of the car. Then press down until securely fitted.
- When the remote control is fitted, the aerial (fig. C-9) functions as a handle to allow the toy to be easily carried.
- To remove the remote control, press the button indicated and then lift (fig. C-10).

Regulating the direction settings

When pressing the forward straight button (fig. B-7), if the car does not maintain a straight direction, it is possible to correct the direction by adjusting the selector located underneath the car one notch at a time (fig. A-3).

FITTING AND/OR REPLACING BATTERIES

- Batteries must only be fitted by an adult.
- To replace spent batteries: Loosen the screw on the battery compartment cover (fig. A-2 for the car and fig. B-4 for the remote control) with a screwdriver and open the cover. Then remove the spent batteries and fit new ones, ensuring that they have been fitted in the correct polarity (as shown on the product), close the battery cover, and tighten the screw.
- Only use alkaline batteries of the same type or equivalent to the type recommended for the correct function of this product.
- Never mix new and old or different types of batteries.
- Always keep batteries and tools out of reach of children.
- Do not short-circuit the battery terminals.
- Always remove spent batteries from the toy to avoid the danger of leakage from the battery damaging the product.
- Always remove the batteries if the toy will not be used for a long period of time.
- Remove the batteries from the car and remote control before disposal.
- Do not burn or dispose of into the environment spent batteries. Dispose of them at an appropriate differentiated collection point.
- In the case of battery leakage, replace them immediately and clean the battery compartment carefully. Wash hands thoroughly if they come into contact with the leaked fluid.
- Do not attempt to recharge non-rechargeable batteries as they might explode.
- Do not use rechargeable batteries as this could affect the functioning of the toy.
- If rechargeable batteries are used, remove from the toy before recharging. This operation should only be carried out under the supervision of an adult.
- The toy is not designed for use with replaceable lithium batteries. CAUTION. Improper use could be dangerous.

Declaration of Conformity to EC Regulations

Hereby, Artsana S.p.A., declares that this remote control toy MOD. 1T is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

CARE & MAINTENANCE

- Use a soft damp cloth to clean the toy. Do not submerge the toy in water.
- Protect the toy from shocks, heat, dust, sand, humidity and water.

Made in China.

69238 Cabriolet R/C

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

NOTES:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- a) Reorient or relocate the receiving antenna;
- b) Increase the separation between the equipment and receiver;
- c) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected;
- d) Consult the dealer or an experienced radio / TV technician for help.