



Instruction Guide

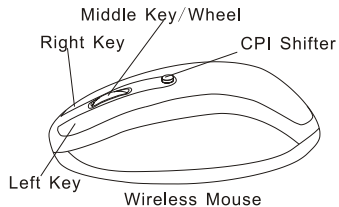

Instruction Guide



Mouse Dongle

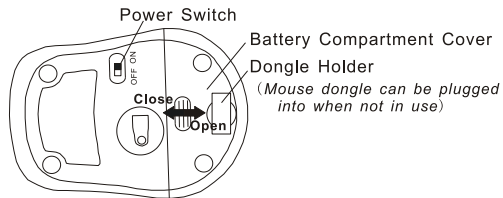

Wireless Mouse (Upward View)

- iv) Wireless mouse is on working now
- v) Pressing CPI Shifter can change mouse CPI, this can change the mouse cursor moving speed on your PC screen.

Technical Parameters (2.4G Wireless Mouse)

Model NO.	EM10577		
Dimension	94L*65W*36H(mm)	Battery	1 AA /1.5V
Technology	2.4G wireless RF	Power	0.045W
Frequency	2403~2479MHz	V/A	1.5V/30mA

Technical Parameters (2.4G RF Dongle)

Model NO.	EM10578		
Technology	2.4G wireless RF	Power	0.2W
Frequency	2403~2479MHz	V/A	5V/40mA

Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Step By Step

- i) Connect Dongle with your PC USB port, Windows system will automatically detect a new hardware and complete the setup.
- ii) Open Battery Compartment Cover, load a AA battery (Alkaline cell suggested, ensure correct polarity)
- iii) Switch on the mouse (Power Switch)