

[iT80X CDMA Cellular Phone](#)



[User Manual](#)

<u>I</u>	<u>Introduction</u>	<u>8</u>
<u>II</u>	<u>Important information</u>	<u>8</u>
	(1) Phone Components	10
	(2) Using the Battery Pack	15
	(3) Installing the Battery	15
	(4) Removing the Battery	16
	<u>(5) Battery Charge Level</u>	<u>16</u>
	<u>(6) Accessories</u>	<u>20</u>
<u>III</u>	<u>Basic Functions</u>	<u>21</u>
	<u>(1) Alphanumeric. Symbol key</u>	<u>21</u>
	<u>(2) Turning the Phone On and Off</u>	<u>23</u>
	<u>(3) Making a call</u>	<u>24</u>

(4) Receiving Calls.....	26
(5) Speed Dialing.....	27
VI Phone Menu Reference.....	27
(1) Chapter 1 Contacts.....	27
① To List Contacts.....	28
② Add New.....	31
③ Find Name.....	33
④ Multicopy.....	34
⑤ Groups.....	35
⑥ Erase All Contacts	37
⑦ Speed Dial List.....	39
⑧ Memory State.....	43
⑨ My Number.....	43

(2) Chapter 2 Messages.....44

① New Message.....44

② Inbox.....46

③ Outbox.....48

④ Quick-text.....49

⑤ Erase Messages.....50

⑥ Voice Mail.....52

⑦ MSG Settings.....53

⑧ Memory State.....53

(3) Chapter 3 Recent Calls.....57

① Incoming.....58

② Missed.....58

③ Outgoing.....58

④ Erase Lists.....	58
⑤ Call Timers.....	58
<u>(4) Chapter 4 Amusement.....</u>	<u>60</u>
① Kong Ming chess	60
<u>(5) Chapter 5 Setting Up Your Phone.....</u>	<u>62</u>
① Display.....	62
② Security.....	68
③ Network Service.....	70
④ Call Setup.....	71
⑤ Phone Info.....	71
<u>(6) Chapter 6 Working with Profile.....</u>	<u>72</u>
① Normal.....	73
② Outdoor.....	76

③ Car.....	76
④ Meeting.....	76
⑤ Silent.....	76
<u>(7) Chapter 7 Using the Tools.....</u>	<u>77</u>
① Schedule.....	78
② To Do List.....	82
③ Alarm Clock.....	84
④ Voice Memo.....	88
⑤ Calculator.....	89
⑥ World Clock.....	91
⑦ Stop Watch.....	92
<u>(8) Chapter 8 My Media.....</u>	<u>194</u>
① Picture.....	94

② Music.....	94
③ Other.....	94
④ Memory Status.....	96
⑤ Sort Setting.....	96
(9) Chapter 9 UIM Tools.....	97
(10) Chapter 10 FM Radio.....	98
(11) FCC Regulations.....	105
(12) RF Exposure Information (SAR) ...	107

I Introduction

Congratulations on your purchase of the advanced and compact phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system such as greatly enhanced voice clarity this phone offers:

- Large, easy-to-read color LCD.
- messaging, voice mail, and caller ID.
- 21-key keypad.
- Menu-driven interface with prompts for easy operation and configuration. Any key answer, auto answer, auto retry, one-touch and speed dialing

with 200 memory locations.

- Support multiple languages.

II Important information

This user's manual provides important information on the use and operation of your phone. Please read all

the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications void your warranty.

Phone Components

The following shows key components of your mobile phone.



1. **Earpiece connection:** Connect earpiece
2. **LCD Screen:** Displays messages and indicator functions.
3. **Left Soft Key:** Use to select an action within a menu.
4. **SEND Key:** Use to place or answer calls.
5. **Microphone:**Collect voice
6. **4 Navigation Key:** Use for quick access to phone functions
 - **Up Key:** Change the idle screen wallpaper
 - **Down Key:** Enter the contact menu
 - **Left Key:** Set the profiles
 - **Right Key:** Enter the messages menu
7. **OK Key:** Confirm or enter selected menu.
8. **Right Soft Key:** Use to exit from the current menu or as a CLR key to erase text input.
9. **END/PWR:** Use to turn the power on/off and to end

a call. Pressing “PWR” key, you can return to the main menu display screen.

10.**Alphanumeric Keypad:** Use to enter numbers and characters and choose menu items.

11.**Bottom Connector:** To connect to charger, hands-free headset or data cable.

Using the Battery Pack

Note: It is important to charge the battery fully before the initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time when using the phone. This phone will only operate with the battery provided with the phone, or from an authorized retailer.

Installing the Battery

To install the battery, insert the bottom of the battery into the opening on the back of the phone. Then push the battery down until the latch clicks.

Removing the Battery

Turn the power off. Lift the release latch to detach the battery

Battery Charge Level

The battery charge level is shown at the top right of the LCD screen.



When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying **LOW BATTERY WARNING!** If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

Battery Information and Care

1. Never use an unapproved battery since this could damage the phone and / or battery and could cause the battery to explode.
2. The battery does not need to be fully discharged before recharging.
3. Use only approved chargers specific to your phone model since they are designed to maximize battery life.
4. Do not disassemble or short-circuit the battery.
5. Keep the battery's metal contacts clean.

6. Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
7. Recharge the battery after long periods of nonuse to maximize battery life.
8. Do not expose the battery charger to direct sunlight or use it in areas of high humidity such as a bathroom.
9. Battery life will decrease if exposed to extreme hot or cold temperatures.
10. Battery life will vary due to usage patterns and environmental conditions.
11. The use of extended backlighting, MiniBrowser, and data connectivity kits affect battery life and talk/standby times.

Accessories

There are a variety of accessories available for your mobile phone. You can select these options according to your personal communication requirements. Consult your local dealer for availability.

Your phone will come with one Travel Charger and one battery.

Optional Accessories: Hands-free headset, data cable.

III Basic Function

Alphanumeric, Symbol key

0	1.Press it to show 0 2.Press it to show 0 when in edit mode.
1	1.Press it to show 1 when dialing 2.Press it to show 1 when in edit mode.
2	1.Press it to show 2 when dialing 2.Press it to show 2, A, B, C, a, b, c when in edit mode.
3	1.Press it to show 3 when dialing 2.Press it to show 3, D, E, F, d, e, f when in edit mode.
4	1.Press it to show 4 when dialing 2.Press it to show 4, G, H, I, g, h, i when in edit mode.
5	1.Press it to show 5 when dialing 2.Press it to show 5, J, K, L, j, k, l when in edit mode.
6	1.Press it to show 6 when dialing

	2.Press it to show 6, M, N, O, m, n, o when in edit mode.
7	1.Press it to show 7 when dialing 2.Press it to show 7, P, Q, R,S, p, q, r, s when in edit mode.
8	1.Press it to show 8 when dialing 2.Press it to show 8, T, U, V, t, u, v when in edit mode.
9	1.Press it to show 9 when dialing 2.Press it to show 9, W, X, Y,Z, w, x, y, z when in edit mode.
*	1.Press it to show * ,+,P,T when dialing 2.Press it to show punctuation when in edit mode.
#	1.Press it to show # . 2.Press to change the input mode when in edit mode.

Turning the Phone On and Off

Turning the Phone On

1. Install a charged battery pack or connect the phone to an external power source such as charger.
2. Press and hold "POWER" key for a few seconds until the display turns on.

NOTE: Like any other radio device, avoid any unnecessary contact with the antenna while your phone is on.

Turning the Phone Off

Press and hold "POWER" key until the display turns off.

Note: Turning the phone off while the charger is connected will put the phone into charging mode.

Making a call

You can make a phone call by the following ways:

1. Key in the phone number and press "SEND" key.
2. Find the record in phone book and press "SEND" key.
3. Press "SEND" key in idle mode and select from the call logs and press "SEND" key again to make a call.
4. Select received SMS, and return the call to the sending party by press "SEND" key.
5. Speed dialing by key in the list number and "SEND" key.

Receiving Calls

1. When there is an incoming call, press “send key” to answer.
2. Press “END” key to end the call.

Receiving call method can be set in the “Answer Call” menu item. You can choose from “Flip Open”, “Any Key” or “SEND Only” mode. The phone will be set to “SEND Only” by default.

Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly and easily. Your mobile phone can store as many as 98 items in its memory.

When “Speed Dial List” is populated with numbers, you can

key in the item number and press “SEND” key to make a call the number in the Speed Dial List.

VI Phone Menu Reference

Chapter 1 Contacts

The phone book can store 200 records. Each contact can contain five phone numbers, two address, two emails, two URLs, and one note. .

To List Contact

1. Press “Contact” in idle screen (The right Soft Key).
2. Select “List Contacts”

Note:

(1) When one contact is selected, the phone number will show up in the highlighted bar at the bottom of the window. If the contact has more than one number, an arrow will show up at both end of the highlighted bar. You can press left/right key to view the other phone numbers. If you want to call the selected number, you can press "SEND" key to make the call.

(2) To quickly find a name, you can key in the first character of the name. The first name start with the character will be selected. For example: press "m", it locate the first name that start with "m".

3. More operations are available by pressing "Options" soft key
4. Select "Details" in "Option" menu
5. Press "Options" soft key, you can choose from the

listed 4 more operations.

- 5.1 "Send Message": Send SMS to selected number.
- 5.2 "Change": Edit and change the selected contact.
- 5.3 Select "Add" in the options menu add new item to contact.
- 5.4 "Erase": Erase the record.

To add new a contact

1. In idle screen, select "Contact".
2. Select "Add New".
3. select "Add number" or "Add Email" or "Add Street etc".
4. Key in the contact number or other, press "Enter"
5. When input name edit box is empty, the left soft key becomes "Find". You can find a name, save the

number or email or street to this existent contact.

6. Input name to edit box, if the name already exists in the contact, it will save the number or email or street to this existing contact.

New contact contain number, Select number type menu will display.

To find name

1. Select "Contact" in idle screen.
2. Select "Find Name"

Note: It is not case sensitive.

To multicopy contacts

1. Select "Contact" in idle screen

2. Select "Multicopy"
3. Select "All Copy" to copy all contacts from UIM to phone or from phone to UIM.
4. Select "Choice Copy" to choice contacts in total list from UIM to phone or from phone to UIM.

Managing Groups

1. Select "Group" in "contacts" menu.
2. Select "Options" in the groups.
 - 2.1 Select "Change Group" in "Options", you can only change group1 and group2 name, the rest group names cannot be changed.
 - 2.2 Select "Group Ring" to Change group ring.
3. Select "view Group" in "Options".

Note: There must be record in phone book to allow the following operation:

4. The group "Family" is empty, it will prompt "No Members, add new member?", press "Enter" to add new member, press "Options" in "Family" group.
5. Select "Add" in "Options" to add member to this group.
6. Select "Erase member" to erase the selected member.

Select "Erase all member" to erase all members in this group.

To erase a contact

1. Select one contact in the contact list.

2. Press “Options” soft key.
3. Select “Erase” in “Option” menu
4. Press “Enter” soft key to confirm or “Return” soft key to cancel.

To erase all contacts

1. Select “Contact” in idle screen.
 2. Select “Erase All Contacts” in “Contacts” menu
 3. Select “UIM Contacts” to erase all the contacts stored in UIM:
 4. Select “Phone Contacts” to erase all the contacts in phone
- Press “Enter” soft key to confirm and “Return” soft key to cancel.

Creating and Using the Speed Dial

List

1. You can assign number 02 to 99 to some contacts in "Speed Dial List". In idle screen, after key in the Speed List number (02 to 99), you can press "SEND" to dial immediately, or you can key in "#" to view the number and then "SEND" to dial.

To add/edit a phone number to speed dial list

1. Select "contact" in idle screen.

2. Select "Speed Dial List"
if no contact is assigned to the Speed Dial Number in this item, **<empty>** will be displayed, or else the contact's name will be displayed instead, and displayed number in the status bar.
3. Select one Speed Dial Number (the index is the short number). Press "Options" soft key.
 - 3.1 Select "Set Number" in "Options" menu
 - 3.2 Select one contact, if the contact has more than one number, you can press left/right key to select the phone number you want. Press soft key "Enter" to save it to speed list.
 - 3.3 Select "Remove" to erase selected Speed Dial Number.

3.4 Select “Remove All” to erase all Speed Dial Numbers.

To list memory state

1. Select “Memory state” in “contacts” menu

To show my number

1. Select “My Number” in “contacts” menu to show my own phone number.

Chapter 2 Messages

This chapter introduces the usage of Short Message.

To check for received text messages

1. When a new message comes, you will be noticed and “You have 1 new message!” will be displayed on screen.
2. Press left soft key to view.

Compose and send new message

3. Select “Messages” from main menu
4. Select “New Message” to edit the text message.
5. Select “Options->Send” to enter the number you want to send. Or you can search the number that you want to send message to in contact list, select “search” in the left soft key bar to search the number.

6. Select "OK" to send the message.

Inbox

1. Select "Messages" in main menu
2. Select "Inbox"
3. Select one message to read a text message.
4. Select "Options->Reply" to reply to the people who send this message to you.
5. Select "Options->Forward" to forward this message to other people.
6. Select "Options->Call Him/Her" to call up him/her.

7. Select "Options->Save Address" to save the phone number of the people who send this message to you.
8. Select "Options->Erase" to erase a text message.

Outbox

1. Select "Messages" in main menu
2. Select "Outbox"
3. Select one message to read a text message.
4. Select "Options->Forward" to forward this message to other people.

5. Select "Options->Save Address" to save the phone number of the people who you want to send this message.

6. Select "Options->Erase" to erase a text message.

Quick-Text

1. Select "Messages" in main menu.

2. Select "Quick-Text", you can see messages in common use.

3. Select "Options->Add New" to add a new message or "Options->Send" to send this message to somebody.

Erase Messages

1. Select "Messages" in main menu.
2. Select "Erase Messages".
3. Choose which message you want to delete by "UP" and "DOWN" keys. For example, you want to delete all messages, you can select "Erase All" to delete all messages, there will be a prompt message to indicate you.
4. Select "Enter" to erase all messages and select "Cancel" to cancel delete.

Voice Mail

1. Select menu "Messages" in main menu.
2. Select menu "Voice Mail".
3. Select one voice mail message.
4. Select "Options->Call Him/Her" to call him/her back.
5. Select "Options->Erase" to erase this voice message. There will be prompt information to indicate you whether you are sure to delete this message, select "Enter" to delete and select "Cancel" to cancel delete.

MSG Settings

1. Select menu "Messages" in main menu.
2. Select menu "MSG Settings"

Enable/disable auto save outgoing message

Select "Auto Save/Do Not Save" to enable/disable auto save outgoing message.

Set Call Back Number

If you enable Callback number, every message you sent would postfix the number you set here and the receiver will know which number to callback when he read the message.

Set Priority

You can set priority of sent message, and the receiver will know which priority the message is when he read it. Select menu "Priority".

Enable/disable auto delete incoming message

Select "On/Off" to enable/disable auto delete incoming message.

Choose storage device of incoming message

Select "UIM/Phone/Both" to choose the incoming message storage device.

Chapter 3 Recent Calls

1. The call history supports 3 different categories of

call logs. Incoming Calls, Outgoing Calls, and Missed Calls.

2. This information can be contained in 3 separate call lists, each of which is capable of storing the last 10 entries
3. The call history support saving the number into the phone book (if it is not in the phone book).
4. Numbers dialed, regardless of whether the call is successfully connected, must be recorded in the outgoing call history.
5. If there is a record in the phonebook, the display will match the caller's phone number and display the name accordingly.

To List Missed call

List all the Missed Call.

To List Incoming call

List all the Incoming Call.

To List Outgoing call

List all the Outgoing Call.

To erase lists

Erase the Call history.

Check Call Timer

3. Show The Call Time.

Chapter 4 Amusement

kong Ming chess

1. If you don't know how to play, you can read instructions by selecting **[Instructions]**.
2. The game rule is as follows:
Use **[Up]/[2]**, **[Down]/[8]**, **[Left]/[4]** and **[Right]/[6]** to control the cursor. Use **[OK]/[5]** to select a chessman. When Chessman X moves over Chessman Y next to it, Y will be removed from the chessboard. Only one chessman can be removed at one time. Player wins if there is only one chessman left in the center of the chessboard

Chapter5: Setting Up Your Phone

To personalize your phone, you can set and view many properties for display, security, network service, call setup, phone info.

Select [**Menu**] from the idle screen and press “Up/Down” key until you reach the “Setting” screen. Press [**Enter**] to enter the “Settings” menu.

Setting up the Display

Customizing your display by creating a banner, adjusting the backlight, selecting the language, etc.

Creating a display banner

Edit a banner you like.

Setting backlight Timer

1. Select [**Display**] menu item.
2. Select [**Backlight**] menu item.
3. Select [**Timer**] menu item.
4. Select an option.
5. Select [**Enter**] to save or [**Return**] to cancel.

Setting backlight Brightness

1. Select [**Display**] -> [**Backlight**]
 2. Select [**Brightness**] menu item.
 3. Select an option.
- Select [**Enter**] to save or [**Return**] to cancel.

Setting the display Screens Wallpaper

1. Select [**Display**] -> [**Screens**]

2. Select [**Wallpaper**] menu item.

3. Select an option.

Press 'Left' or 'Right' key to change image.

Select "Enter" to save.

Note: in idle screen, press "Up" key can also change the wallpaper.

Setting the Menu Style

Setting the menu style

1. Select [**Display**] -> [**Menu Style**] menu item.

2. Select an option.

Select [**Enter**] to save or [**Return**] to cancel.

Setting the Theme Colors

1. Select [**Display**] -> [**Theme Colors**] menu item.

2. Select an option.

Select **[Enter]** to save or **[Return]** to cancel.

Setting the display language

1. Select **[Display]** -> **[Language]** menu item.

2. Select an option.

Select **[Enter]** to save or **[Return]** to cancel.

Setting the display Contrast

1. Select **[Display]** -> **[Contrast]** menu item

2. Select an option.

Select **[Enter]** to save or **[Return]** to cancel.

Security

Provide password protection for Lock Phone, Change Code, and Reset to Default

Login Security

1. Select **[Security]** menu item.

2. Enter the password, and the default password is "0000".

Lock Phone

1. Select [**Lock Phone**] menu item.
2. Select an option. Selecting [**On Power Up**] will lock the phone next time phone is powered up.

Changing lock code

1. Select [**Change Code**] menu item.
2. Input new password.
3. Confirm password

Reset Security settings to default values

- 1 Select [**Reset To Default**] menu item
2. Select [**OK**] to reset, [**Cancel**] to return.

Network Service

4. Select [**Network Service**] menu item.

Disable/Enable “Call Forwarding” or “Call Waiting” Network Service.

Call Setup

Voice privacy: is used to encrypt the voice to protect privacy.

Call Guard: Confirm calls on roaming network.

When the phone is on a roaming network, if Call Guard is turned on, it will ask user to confirm making the call.

Viewing Phone Information

To view the version of software installed on your phone
Will display the related information for the phone

Chapter 6 Working with Profile

A Profile is a group of user defined settings. By switching to a different profile, user can switch all the settings at one time. Currently, the phone will support 5 different profiles.

There are profiles for **Normal**, **Outdoor**, **Car**, **Meeting** and **Silent**. Every profile can be manually changed for your special purpose.

Normal

➤ The selected one is marked by a [, here the **Normal** Profile is the selected one.

You can select one of them for setting; “Normal” will be used to demonstrate how to work with profiles.

If you chose **[Normal]**, you may see:

1. Select **[Return]** to turn back;
2. Select **[Select Profile]** to activating current profile;
3. Select **[Edit Profile]** for edit;

Edit Profile

When select **[Edit Profile]**, you will see the following menu items:

Call Prompt Mode: Select the way of alerting when there is an incoming call.

Call Ringer: Select the ringer.

Message Prompt Mode: Select how phone should alert when received a message.

SMS Ringer: Select the ringer for SMS

Volume: Set volume for ringer, speaker, key beef and alerts.

Key Tone: Select between short and long key tones

Alerts: Setting for different alerts.

Answer Call: Select how a call is answered.

Outdoor/Car/Meeting/Silent

Each of the profiles can be set the same way as the “Normal” profile.

Chapter 7 Using the Tools

The tools menu has many useful tools to convenience your everyday life, including Schedule, To Do List, Alarm Clock, Voice Memo, Calculator, World Clock,

and Stopwatch.

Note: Your phone must be turned on to use these tools. Do not turn on the phone when wireless phone use is prohibited or when it may cause interference or danger.

1. Select “Menu” in the idle screen.
2. Select “Tools” in main menu by pressing up/down key or by pressing “6” in the alphanumeric key pad.
Now you can use the tools in the Tools menu.

Using the Schedule

You can use schedule to associate an alert with an event.

Note: The alert within the Schedule cannot work when the phone is off or there is not enough power in the

battery.

To add a schedule

1. Select "Tools" in main menu.
2. Select "Schedule".
3. Select the day by pressing the up/down key and select the month by pressing the left/right key. The current date is highlighted by a black frame.
4. Select "Options".
5. Select "Add New".
6. Edit the description, and then press "Ok".
7. Edit the Alarm by pressing the alphanumeric keys and select the Ringer by pressing the up/down key, then press "OK" to save. You can use the left/right

key to exchange the focused field between Alarm and Ringer.

Using the To-Do List

You can keep track of your tasks with the to-do list tool. With this tool you can make a new note, delete an existing note, and set or change the note's status.

To add new item

1. Select "Tools" in main menu.
2. Select "To Do List".
3. Select "Add New".
4. Edit the description.

5. Select “Priority” to set the note’s priority among high, normal and low.
6. Select “Deadline” to select the date. You can use the up/down key to select the day and the left/right key to select the month.
7. Select “save”.

Using the Alarm Clock

Alarm Clock sounds an alert at the time you specified.

Note: The Alarm Clock can work only under the condition of the system clock has been set. The Alarm Clock can not work when the phone is off or there is not enough power in the battery. When the Alarm Clock is triggered, the Alarm Clock sounds an alert or turns for 30 seconds. If you do not press a key, the alarm stops for 1 minute, and then sounds again. The Alarm Clock

stays on until the alarm is turned off or a key is pressed.

Up to 3 alarms can be set at the same time.

To set the alarm time

1. Select "Tools" in main menu.
2. Select "Alarm Clock".
3. Select alarm among "Alarm1, Alarm2, and Alarm3".
4. Use "Up/Down" key to move between the fields and use "Left/Right" to select from the available options.

Turn alarm on/off in "Switch" field by "Left/Right" key.

You can set alarm time by pressing the digit keys once the "Alarm" time is highlighted.

Use “Left/Right” key to select among “Every Day, Work Day, Once”.

Press “Up/Down” key to highlight the “Ringer” field and use “Left/Right” key to select desired ringer.

5. Select “Ok”.

To turn off the alarm

1. Select “Tools” in main menu.

2. Select “Alarm Clock”.

3. Select alarm among “Alarm1, Alarm2, Alarm3,”.

4. Select “Alarm OFF” in condition field.

5. Select “Ok”

Using Voice Memo

Note: it is easy to view Voice Memo.

Using the Calculator

Note: This calculator has limited accuracy and is designed for simple calculations.

To use the calculator

1. Select "Tools" in main menu.
2. Select "Calculator".
3. Enter the number by pressing the alphanumeric key.
4. Enter an operator by pressing the up/down key or left/right key.

5. Enter another number.

6. Select "Result" to get the result.

Using the World Clock

World Clock provides a useful tool when you want to make a call to people in a different time zone.

1. Select "Tools" in main menu.
2. Select "World Clock".
3. Select the city by pressing the up/down key.
4. Select "Enter"

Using the Stop Watch

Note: The stopwatch has limited accuracy.

1. Select "Tools" in main menu.
2. Select "Stop Watch".
3. Enter the stopwatch.
4. Select "Start", the stopwatch works.
5. Select "Pause".
6. Select "Resume", the stopwatch continues working.
7. Select "Split", the stopwatch can record different duration.
8. Select "Reset" to restart stopwatch.
9. Select "Quit" to exit stopwatch.

Chapter 8 My Media

This chapter describes how to manage the resources stored in phone.

Select **[My Media]** in main menu


Manage Picture/Music/Others



Select “Picture”/“Music”/“Others” in menu



Select "Options", easy to manage some resources

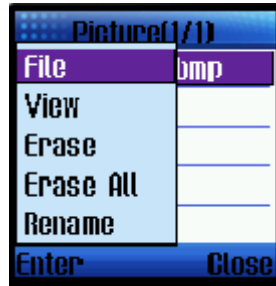

Memory Status

Select “Memory Status” to show the memory status

Sort setting

Select “Sort setting” to set sort rule

Chapter 9 R-UIM Tools

This chapter describes how to access extra tools provided by network operator.

Select [**R-UIM Tools**] in main menu

Enjoy your R-UIM service

Note: The services depend on your R-UIM.

Chapter 10 FM Radio

This chapter describes how to use FM radio

Note: Users can listen to a high performance fm radio by this function. The fm radio work only when users plug the headset in the phone, because the headset is regarded as an antenna. Users can adjust the radio band, frequency, volume etc. to their needed. Also, they can leave the radio seek channel automatically. The fm radio supports background playing; users can listen to the radio and edit SMS simultaneously and so on except make a call.

To listen to the radio

1. Plug the headset, and select the [FM RADIO] in main menu

To change the volume

2. Press the “UP” key to increase the volume and “DOWN” key to decrease the volume.

To seek the channel

3. Press the “LEFT” key to seek the channel backward and “RIGHT” key to seek the channel forward.

To mute and unmute the radio

4. Press the “OK” key to mute the radio and press “OK” key again to unmute the radio.

To save and open channels

5. Press the “Options” key to open the option menu, and select [Save as] menu item, then select one channel and input channel’s name.
6. Press the “Options” key to open the option menu, and select [Open] menu item, then select one favorite channel.

To select fm band

7. Press the “Options” key to open the option menu, select [Band Option] menu item, and then select an appropriate band.

To input radio frequency

8. Press the “Options” key to open the option menu, select [Frequency] menu item, and then input an appropriate frequency. Note that not exceed the band’s frequency range.

To listen to the radio in background

9. In play interface, press the “END” key and return to idle, users can do other things. If users make a call with someone, the fm radio function is closed automatically.

To exit

In play interface, press the “Exit” key to exit the fm radio function.

FCC Regulations

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation if this equipment does cause harmful

interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the

actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the device as reported to the FCC when tested for use at the ear is **1.270** W/kg for PCS Head SAR and when worn on the body, as described in this user guide, is **1.210** W/kg for PCS Body SAR. (Body-worn measurements differ among device models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various devices and at various positions, they

all meet the government requirement.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: **US7-IT80X**.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding

the device at the ear, position the handset a minimum of 1.5 cm from your body when the device is switched on.