

cricket[™]
wireless

cricket EZ
User Guide



cricket[™]
wireless
[Http://mycricket.com](http://mycricket.com)

This model phone meets the government's requirements for exposure to radio waves. This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear are:

on the 800MHz: 0.568/ 10g, 0.846/ 1g, on the 1900MHz: 0.446/ 10g, 0.869/ 1g, and when worn on the body, as described in this user guide, are:

on the 800MHz: 0.362/ 10g, 0.520/ 1g, on the 1900MHz: 0.252/ 10g, 0.424/ 1g (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on VR2J88.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

CONTENTS

<u>INTRODUCTION</u>	P.2
<u>PHONE COMPONENTS</u>	P.3
<u>INSERTING BATTERY AND USING THE CHARGER</u>	P.5
Inserting and Removing the Battery	P.5
Charging the Battery	P.6
Battery Charge Level	P.6
<u>BASIC FUNCTIONS</u>	P.7
Turning the Phone On and Off	P.7
On Screen Icons	P.8
Making a Call	P.8
Receiving Calls	P.8
<u>MENU TREE</u>	P.9
<u>EDITING INFORMATION</u>	P.10
<u>QUICK FUNCTION GUIDE</u>	P.12
<u>SAFETY INFORMATION</u>	P.15

Congratulations on your purchase of the Reliance cellular phone what has been designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). The CDMA system has greatly enhanced voice clarity and can provide various types of advanced features.

This is an advanced and compact phone which has diverse features as following:

- Messaging, Voice Mail, and Caller ID.
- 21-key keypad (10 number keys / 2 function keys / 2 Soft keys / 1 Ok key / 4 way navigation key / 1 Call key / 1 End key).
- Long battery stand-by and talk time.
- Menu-driven interface with prompt for easy operation and configuration.
- Voice Privacy inherent with CDMA encoding.
- Any key Answer, Auto Redial, Speed Dial up to 99 memory locations.
- Optional accessories with greater convenience and enhanced functionality.
- SMS, Group SMS.

PHONE COMPONENTS

The following shows key components of your mobile phone



Speaker/Receiver Listens to voice from the phone.

LCD Screen Displays messages & indicator icons.

Soft Keys The names of the functions of these keys appear at the bottom of the screen.

※ Left/Right Soft key

Used to display the menu of function setting and accept the highlighted choice when navigating the menu.

Send/Answer Key Allows users to place or answer calls, refer, and, redial a call from call history.

Alphanumeric Keypad These keys enable you to enter numbers and characters and choose menu items.

* **Lock Mode Key** Enable you to lock or unlock the keypad by pressing and holding this key for 2 seconds. To input "*" in input, you can select from symbol table by pressing "1" key. In Input dialog, "*" key is used to switch input mode

OK Key Selects highlighted options in menu.

4 Way Navigation Key This Navigation key allows you to quick access Messages, alarm, Calculator and Schedule.

PWR/End Key To turn power On/Off and end a call. By using this key you can return to the idle screen. When you press once, when a call is received, the phone stops ringing depending on the mode it is in. Press twice to reject the call.

Microphone Speaks to the phone.

Charger port Uses to charge the phone.

INSERTING BATTERY AND USING THE CHARGER

The phone comes with a rechargeable battery. Keep the battery fully charged while not in use in order to maximize talk and standby time when using the phone.

Inserting and Removing the Battery

※ To insert the battery, open the battery cover on the back of the phone, and insert the bottom of battery into groove at the bottom of the handset. Gently press down the cover until the latch snaps into place.

※ To remove the battery, Turn the power off.
Push the back cover down. Push the tab with one hand and lift the top of the battery.

Charging the Battery

To use the AC adapter provided with your phone:

1. Plug the AC adapter into the electrical outlet.
 2. Insert the round end of the adapter into the AC adapter jack on the bottom of the bottom of the phone. (Make sure the battery is inserted.)
- ※ When the phone is charging, the battery icon continually displays a progression from empty to full. It takes about three hours to fully recharge a completely rundown battery. When fully charged, battery icon indicates charging by twinkling.



Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor will alert you in three ways: sounding an audible tone, blinking the battery icon outline, and displaying recharge the battery. If the battery charge level becomes exceedingly low, the phone will automatically switch off and any function in progress will not be saved.

BASIC FUNCTIONS

Turning the Phone On and Off

Press and hold [END/PWR] Key for 2 seconds until the LCD screen flashes.

On Screen Icons

The phone screen displays several onscreen icons to indicate different phone function status.



“1X” Signal Strength



All Sounds Off



Voice Privacy



Alarm On



Roaming



New/Unread message



No Service



Opened/Read Message



Location On



Message Locked



E911



Conversation



Battery Level



Calendar Appointment



Missed Call



Voicemail



Alarm Only

Making a Call

Follow these steps to make a call,

1. Make sure that the phone is turned on. If not, press and hold [END/PWR] Key for 2 seconds.
2. Enter the phone number and then press [CALL] Key.
※ If the phone is locked, press the [Unlock] key.
3. To end the call, press [END/PWR] Key.

Receiving Calls

1. When the phone rings , press CALL Key or any key (if any key answer is set).

※When pressing once [CALL] Key or any key (if any key answer is set) or when a call is received, the phone stops ringing.
2. To end an answered call, press [END/PWR] Key.

MENU TREE

1 Media Gallery

- 1.1 Sounds
- 1.2 Images

2 Recent Calls

- 2.1 Missed
- 2.2 Received
- 2.3 Dialed
- 2.4 All
- 2.5 View Timers

3 Phone Settings

- 3.1 Language
- 3.2 Set Shortcut Key
- 3.3 Location
- 3.4 Security
- 3.5 System Select

4 Settings

- 4.1 Display
- 4.2 Calls
- 4.3 Sounds

5 Contacts

- 5.1 New Contact
- 5.2 Contact List
- 5.3 Groups
- 5.4 Speed Dials

6 Tools

- 6.1 Calculator
- 6.2 Calendar
- 6.3 Alarm Clock

7 Phone Info

- 7.1 My Number
- 7.2 SW Version
- 7.3 Icon Glossary
- 7.4 Status
- 7.5 Warranty Date Code
- 7.6 Refurbish Indicator

8 Message

- 8.1 New TXT Msg
- 8.2 Inbox
- 8.3 Sent
- 8.4 Drafts
- 8.5 Voicemail

9 Emergency

- 9.1 Emergency
Contact 1
- 9.2 Emergency
Contact 2
- 9.3 Emergency
Contact 3

EDITING INFORMATION

In the text input field. You can select the input modes by pressing [Left] key and choose: Word, Abc, ABC, 123. And press [1] key to enter Symbol mode. turns on/off English capitalization using [*] key.

Typing In Smart Mode

support a predictive text input mode. You can complete the words without input complete letters.

For example, to write "**Call me**", follow these steps:

1. Press [#] to change to 'Word' mode.
2. Press [2] [2] [5] [5]
3. Press [#] to enter select mode and select "Call".
4. "Call" will be displayed on the screen with a space.
5. Press [6] [3] and then press [#] to select "me".
6. Complete the word "Call me".

Typing In Abc (Multi-tap)Mode

For example, to type "Call", follow these steps:

1. Press [Left] to change letter case to Abc mode .
2. Press [2] thrice
3. Press [2] once
4. Press [5] thrice
5. Press [5] thrice

Typing In abc (Multi-tap)Mode

For example, to type "call", follow these steps:

1. Press [Left] to change letter case to Abc mode .
2. Press [*] twice
3. Press [2] thrice.
4. Press [2] once.
5. Press [5] thrice.
6. Press [5] thrice.

123(Numbers)Mode

Type numbers using one key stroke per number.

Changing to 123 mode in a text entry field by pressing [Left] to choose.

Symbol Mode

Press [1] key to enter Symbol mode and select the Symbol you want, like '*', '?', '!', and etc.

Messages

Write Text

allows users to send a message up to 150 characters at a time.

1. Press Ok Key to enter Main menu and select message.
2. Select New TXT Msg.
3. Choose the input mode.
4. Enter number. (You can enter number or select the receiver from contacts.)
5. Enter text.

Options:

※ Send

Use to send the message.

※ Save As Draft

Save this message to draft box

※ Quick Text

Select a sample message.

※ Priority

This function allows you to give the priority to message. Normal or high.

※ Cancel Msg

Cancel this message.

QUICK FUNCTION GUIDE

◆ Media Gallery

Menu 1.1 Sounds

Users can preview all the music on phone here, and set one as call ringtone.

Menu 1.2 Images

Users can preview all the images on phone here, and set one as wallpaper.

◆ Recent Calls

Menu 2.1 Missed

Allows you to view list of all Missed Calls.(Maximum 90 number are possible including Missed, Received, Dialed)

Menu 2.2 Received

Allows you to view list of all Received Calls.(Maximum 90 number are possible including Missed, Received, Dialed)

Menu 2.3 Dialed

Allows you to view list of all Dialed Calls.(Maximum 90 number are possible including Missed, Received, Dialed)

Menu 2.4 All

Allows you to view list of all Calls.

Menu 2.5 View Timers

View the duration and number of recent calls you have dialed & received.

◆ Phone Settings

Menu 3.1 Language

You can switch the Language, English or Spanish.

Menu 3.2 Set Shortcut Key

To set four Navigation keys to quick launch keys for some units in idle state.

Menu 3.3 Location

Users can choose Location on or E911 only.

Menu 3.4 Security

Users must enter a password to enter the function. Then you can operate restore settings, erase all contacts and edit code.

Menu 3.5 Security

Users can choose Automatic B, Automatic A or Home only.

◆ Settings

Menu 4.1 Display

Users can set Banner, Backlight, Wallpaper, Number on startup and Contrast.

Menu 4.2 Calls

Users can set In-Call Sounds, Answer Options, Dial Fonts and Auto Retry.

Menu 4.3 Sounds

Users can set Call Ringtone, Alert Sounds, Master Volume, Keypad Volume, Power On/Off, Roaming Indicator.

◆ Contacts

Menu 5.1 New Contact

Store up to 500 contacts, adding 4 phone numbers + 2 E-mails + Fax number + Group + Ring Tone.

Menu 5.2 Contact List

List the contact in phone book.

Menu 5.3 Groups

Group enable user to sort the records into many groups in contact. There are two preset groups in it : family and business, every group can have at most 10 records in it.

Menu 5.4 Speed dial

Speed Dial allows you to make a call faster by just pressing a corresponding number.

◆ Tools

Menu 6.1 Calculator

Allows you to calculate simple mathematical computations.

Menu 6.2 Calendar

Simply store your appointments and your phone alerts with a reminder of your appointment.

Menu 6.3 Alarm clock

Set an event alarm time.

◆ Phone Info

Menu 7.1 My Number

Users can view phone number.

Menu 7.2 SW Version

Users can view SW version information.

Menu 7.3 Icon Glossary

Users can view the meaning of icon.

Menu 7.4 Status

Users can view Status information.

Menu 7.5 Warranty Date Code

Users can view warranty date code.

◆ Message

Menu 8.1 New TXT Msg

Write and send a message. This function allows you to send a message up to 150 characters at a time.

Menu 8.2 Inbox

Store received messages.

.

Menu 8.3 Sent

Sent messages can be stored in the box.

Menu 8.4 Drafts

Store unsent or incomplete message and users can continue composing incomplete message any time he/she wants.

Menu 8.5 Voice mail

Allows you to view new voice messages recorded in the voice mail box.

◆ Emergency

User can select 3 records from contact to the Emergency contact, that means these three contacts are very important to this user, if he/she has any emergency case, but others don't know how to contact his family, maybe they can find them in the Emergency menu.

SAFETY INFORMATION

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.

Charger and Adapter Safety

※ Charger and adapter are designed for indoor use only.

Battery Information and Care

※ Please dispose of your battery properly.

※ Do not disassemble or short-circuit the battery.

※ Keep the battery's metal contacts clean.

※ Recharge the battery after long periods of non-use to maximize battery life.

※ Battery life will vary due to usage patterns and environmental conditions.

※ The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal status. In this case, remove the battery from the phone, reinsert it, and turn the phone on.

General Notice

※ Using a damaged battery or placing a battery in your mouth may cause serious injury.

※ Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.

※ Talking on your phone for long period of time may reduce call quality due

to heat generated during use.

- ※ When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- ※ Using the phone in proximity to receiving equipment (i.e. TV or Radio) may cause interference to the phone.
- ※ Do not immerse your phone in water. If this happens, remove the battery and take it to Reliance Authorized Service Center.
- ※ Do not paint your phone.
- ※ The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, picture, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- ※ Do not turn your phone on or off when the phone is close to your ear.