

 
cannice

# Bluetooth Earphone

## AS INSTRUCTION

### Start here

Following items are included

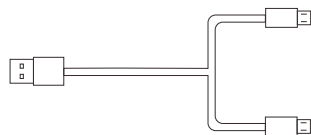


USB cable



Ear cushions

### Product overview

 
1. Charge jack
2. Multifunction button
3. Talking mic
4. Battery & Status indicator

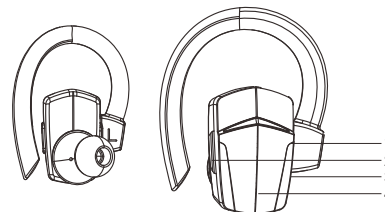

### Charging

Your new earphone has enough power to pair and make a few calls. It takes 2 hours to fully charge the earphone; while charging, the battery indicator light is red, the indicator light flashes blue once charging is complete.

 Note: The lifetime of the battery will be significantly reduced if your earphone is left uncharged for a long period. We recommend that you recharge your earphone at least once a month.

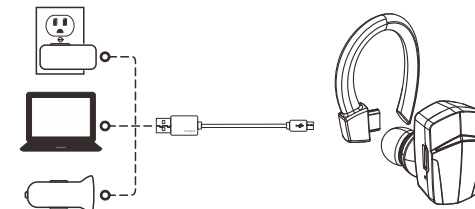

### Use

#### Power on

Press and hold Multifunction button for about 3 seconds in off state. The earphone says "power on" and the LED stays blue 2 seconds.

#### Power off

Press and hold Multifunction button for about 5 seconds in open state. The earphone says "power off" and the LED stays red 2 seconds.

Tips: When the distance between the earphone and phone is beyond effective range, earphone disconnects with phone. Earphone will power off automatically once no active for 5 minutes.

#### Charging

Stays on red while charging. Stays on blue after fully charged.

#### Answer a call

Press the multifunction button once.

#### Reject a call

Press and hold the Multifunction button for about 2 seconds.

#### End a call

Press the Multifunction button once.

### Music

(Need media player support).

#### Music play / pause

Press Multifunction button once to play / pause music. (Some phones may require you to start a media player first).

#### Volume up / down

In streaming mode or calling mode double press the multifunction button, the volume change from small to large step by step, from large to small all at once.

#### Track forward

Press and hold the multifunction button for 2 seconds in streaming state.

#### Switch Music and Call

When a call rings during a music playing, the music automatically pauses to allow you to answer or ignore the call. Once the call is ignored or ends, the music is resumed.

### Basic operation

#### Status indicator

 
Instruction	LED status	Voice prompts
Power on	Stay blue about two second	Power on
Power off	Stay red about two second	Power off
Standby	Stays on blue	/
Pairing	Flashes red and blue alternately	Pairing
Incoming call	Flashes blue quickly	Ring tone
Battery low	Blue LED turn to Red	low Battery, please charge

#### Hard reset

If the earphone cannot be turned on even when fully charged or does not respond during use, follow the instructions below to reset it.


1. While pressing and holding the multifunction button, connect the earphone to your PC's USB port or a USB power adapter with the charging cable.
2. Keep pressing and holding the Multifunction button until the earphone turns on. The earphone is now reset.

3. Select "AS". If your phone asks, enter 0000 (four zeros) for the Pass code or accept the connection. The LED indicator stops flashing red and blue once successfully paired, you hear "connected". Some phone list an option to "Play through earphone", select to use the earphones.

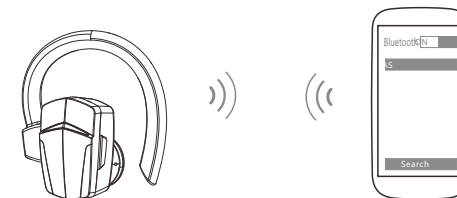

### Windows Phone 8

 - a. On your phone, open the Settings menu.
- b. Select Bluetooth. If Bluetooth is off, turn it on. The Phone will search for new devices automatically.

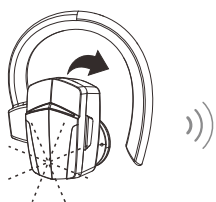

### Pairing

#### Pair one phone

Note: When the earphone and phone have been paired once, they will automatically connect when the earphone is on and Bluetooth is activated on the phone.

1. After power on L/R earphones re-connected automatically, than the L earphones enter pairing mode.
2. Activate Bluetooth on your phone (See below for more details).

#### iPhone

- a. On your phone, open the Settings menu.
- b. Select Bluetooth. If Bluetooth is off, turn it on. The iPhone will search for new devices automatically.

#### Android phone

- a. On your phone, open the Settings menu.
- b. Select Bluetooth (For old Android phone, Bluetooth is found in the Wireless & Networks). If Bluetooth is off, turn it on. Select Search for Devices if your phone does not automatically search for new devices.

### Safety and care

Using earphone at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised you keep volume levels moderate to low at all times for your safety.

Do not use while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sounds.

Do not use earphone in thunderstorm weather, the earphone may not work properly in the condition, and increase the risk of being hit by lightning.

Earphone may not work properly under high temperature or high humidity conditions.

Do not use any corrosive cleaner/oil to clean the earphone.

If the earphone comes in contact with liquids, quickly wipe away. If submerged in water, do not turn the earphone on until completely dried. Tips: liquid submersion voids the warranty.

Keep the earphone and packaging out of reach of children.

### Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.