

Switch between the earphone and phone

Press the Volume "+" for about 2 seconds during a call, the call will be switched to the mobile phone, redo this operation again, the call will be switched to the earphone.

End current call and answer new call

When a new call rings during a call, press the Multifunction button once to answer new call and end current call simultaneously.

On hold current call and answer new call

When a new call rings during a call, hold the Multifunction button for 2 seconds to hold current call and answer new call. To switch between held call and active call, hold the multifunction button for 2 seconds.

Music

(Need media player support)

Music play / pause

Press Multifunction button once to play / pause music. (Some phones may require you to start a media player first)

Trackback / forward

Press the Volume "+" for 2 seconds once to skip track forward, press Volume "-" for 2 seconds once to skip track backward.

Switch Music and Call

When a call rings during a music playing, the music automatically pauses to allow you to answer or ignore the call. Once the call is ignored or ends, the music is resumed.

Voice dial (need phone support)

In standby mode Press volume "+" and volume "-" button at the same time, wait for phone prompt and then tell the phone to dial the name of a stored contact.

Basic operation

Instruction	LED status	Voice prompts
Power on	Stays lit for 2 seconds	Power on
Power off	Stays red 2 seconds	Power off
Standby	Flashes blue twice every 5 seconds	/
Pairing	Flashes Red and Blue alternately	/
Incoming call	Flashes blue continuous	/
Battery low	Blink red	Battery low
Charging	Stays on red while charging, stays on blue after fully charged	/

Power on

Press and hold Multifunction button for about 3 seconds. The earphone says "power on" and the LED flashes blue once.

Power off

Press and hold Multifunction button for about 5 seconds. The earphone says "power off" and the LED flashes red once.

Tip: When the distance between the earphone and phone is beyond effective range, earphone disconnects with phone. Earphone will power off automatically once reconnected for 10 minutes.

Auto power off

When the distance between the earphone and the mobile phone is beyond effective range, a voice prompt "Connection lost" and earphone disconnects with the mobile phone, the earphone will power off automatically once no active for 10 minutes.

Safety and care

Using earphone at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised you keep volume levels moderate to low at all times for your safety.

Do not use while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sounds.

Do not use earphone in thunderstorm weather, the earphone may not work properly in the condition, and increase the risk of being hit by lightning.

Earphone may not work properly under high temperature or high humidity conditions.

Do not use any corrosive cleanser/foam to clean the earphone.

If the earphone comes in contact with liquids, quickly wipe away. If submerged in water, do not turn the earphone on until completely dried. Tap/drop submission voids the warranty.

Keep the earphone and packaging out of reach of children.

canjice

Bluetooth Headset

FCC ID:2ADTV-Y4S

Y4S Instruction

Start here

Following items are included

Ear cushions USB cable

Product overview

- Status indicator
- Charge jack
- Volume + / Track forward
- Talking mic
- Multifunction button
- Volume - / Track Back

Charging

Your new earphone has enough power to pair and make a few calls. It takes 2 hours to fully charge the earphone, while charging, the battery indicator light is red, the indicator light flashes blue once charging is complete.

Note: The lifetime of the battery will be significantly reduced if your earphone is left uncharged for a long period. We recommend that you recharge your earphone at least once a month.

Pairing

Note: When the earphone and phone have been paired once, they will automatically connect when the earphone is on and Bluetooth is activated on the phone.

Pair one phone

- Press and hold the Multifunction button for about 5 seconds until LED flashes blue and red alternately, you hear "Power on"
- Activate Bluetooth on your phone and set it to search for new devices.

- Select "Y4S". If your phone asks, enter 0000 (four zeros) for the passcode or accept the connection. The LED indicator stops flashing red and blue once successfully paired, you hear "Connection successful". Some phone list an option to "Play through earphone", select to use the earphones.

Pair another phone

Multipoint technology enables you to pair another phone and take a call from either. To pair with another mobile phone, follow the steps for "Pair one phone". After pairing successfully, restart the earphone to connect to 2 paired mobile phone automatically.

Call

Answer a call
Press the Multifunction button once.

Reject a call
Press the Multifunction button for about 2 seconds.

End a call
Press the Multifunction button once.

Redial the last call
Double-press the Multifunction button in standby mode. The mobile phone will redial the last call number.

Mute on/off
Press the Volume "-" for about 2 seconds to mute on/off.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: Modifications to this product will void the user's authority to operate this equipment.