



Canon

PowerShot A1300
PowerShot A810
Getting Started

Please refer to the complete user guide included on the CD-ROM for more detailed information.

- Before use, be sure to read this guide, including the safety precautions.
- This guide will familiarize you with how to use the camera correctly.
- Keep the guide handy for future reference.

ENGLISH

Package Contents

Before use, make sure the following items are included in the package. If anything is missing, contact your camera dealer.



 
Camera



AA Alkaline Batteries (x2)



Wrist Strap
WS-800



Interface Cable
IFC-400PCU



DIGITAL CAMERA
Solution Disk



Getting Started
(This Guide)



Warranty Card

- A memory card is not included (p. 3).

About Getting Started (This Guide) and the PDF Manuals

This guide introduces basic camera operations.

To master more advanced operations and use the included software, refer to the PDF manuals on the CD-ROM (p. 21).




- Adobe Reader is required to view the PDF manuals.

Contents

Package Contents	2	Safety Precautions	6
Contents	2	Initial Preparations	9
Compatible Memory Cards	3	Trying the Camera Out.....	15
Preliminary Notes and Legal Information.....	3	Included Software, PDF Manuals....	21
Part Names and Conventions in This Guide.....	4	Accessories.....	28
		Specifications	29

Compatible Memory Cards

The following memory cards (sold separately) can be used, regardless of capacity.

- SD memory cards*
- SDHC memory cards*
- SDXC memory cards* 

* Conforms to SD specifications. However, not all memory cards have been verified to work with the camera.





- Always confirm beforehand that memory cards are supported on other devices such as card readers and computers (including the current version of your operating system).

Preliminary Notes and Legal Information




- Take and review some test shots initially to make sure the images were recorded correctly. Please note that Canon Inc., its subsidiaries and affiliates, and its distributors are not liable for any consequential damages arising from any malfunction of a camera or accessory, including memory cards, that results in the failure of an image to be recorded or to be recorded in a way that is machine readable.
- Images recorded by the camera are intended for personal use. Refrain from unauthorized recording that infringes on copyright law, and note that even for personal use, photography may contravene copyright or other legal rights at some performances or exhibitions, or in some commercial settings.
- The camera warranty is valid only in the area of purchase. In case of camera problems while abroad, return to the area of purchase before contacting a Canon Customer Support Help Desk.
- Although the LCD monitor is produced under extremely high-precision manufacturing conditions and more than 99.99% of the pixels meet design specifications, in rare cases some pixels may be defective or may appear as red or black dots. This does not indicate camera damage or affect recorded images.
- The LCD monitor may be covered with a thin plastic film for protection against scratches during shipment. If covered, remove the film before using the camera.
- When the camera is used over an extended period, it may become warm. This does not indicate damage.

Part Names and Conventions in This Guide

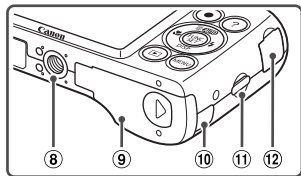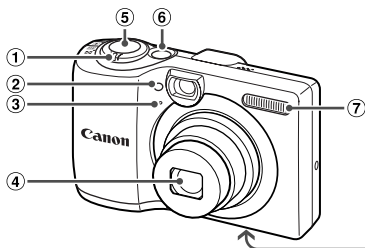





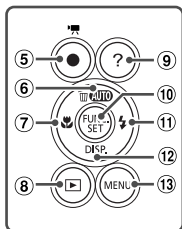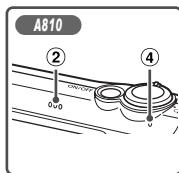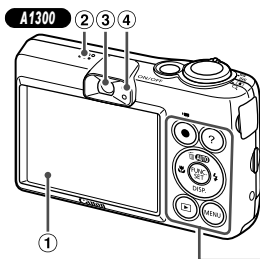


- ① Zoom lever
Shooting: (telephoto) /
 (wide angle)
Playback: (magnify) /
 (index)
- ② Lamp
- ③ Microphone
- ④ Lens
- ⑤ Shutter button

- ⑥ Power button
- ⑦ Flash
- ⑧ Tripod socket
- ⑨ Memory card/battery cover
- ⑩ DC coupler cable port
- ⑪ Strap mount
- ⑫ AV OUT (Audio/video output) / DIGITAL terminal



 - ① Screen (LCD monitor)
- ② Speaker
- A1300**
- ③ Viewfinder
- ④ Indicator
- ⑤ Movie button
- ⑥ **AUTO** (Auto) / (Single image erase) / Up button

- ⑦ (Macro) / Left button
- ⑧ (Playback) button
- ⑨ ? (Help) button
- ⑩ FUNC./SET button
- ⑪ (Flash) / Right button
- ⑫ DISP. (Display) / Down button
- ⑬ MENU button

- In this guide, icons are used to represent the corresponding camera buttons on which they appear, or which they resemble.
- The following buttons on the rear of the camera are represented by icons.
 - ▲ Up button
 - ◀ Left button
 - ▶ Right button
 - ▼ Down button
 -  FUNC./SET button
- On-screen text is indicated in brackets.
- : Important information you should know
- : Notes and tips for expert camera use
- (p. xx): Pages with related information (in this example, “xx” represents a page number)
- Instructions in this guide apply to the camera under default settings.
- For convenience, all supported memory cards are simply referred to as “the memory card”.
- The tabs shown above titles indicate whether the function is used for still images, movies, or both.
 -  **Still Images**: Indicates that the function is used when shooting or viewing still images.
 -  **Movies**: Indicates that the function is used when shooting or viewing movies.
- The following icons are used to indicate functions that differ depending on the camera model:
 -  **A1300** Functions and precautions for the PowerShot A1300 only
 -  **A810** Functions and precautions for the PowerShot A810 only
- This guide uses PowerShot A1300 illustrations and screenshots for all explanations.

Safety Precautions

- Before using the product, please ensure that you read the safety precautions described below. Always ensure that the product is used correctly.
- The safety precautions noted on the following pages are intended to prevent injuries to yourself and other persons, or damage to the equipment.
- Be sure to also check the guides included with any separately sold accessories you use.



Warning

Denotes the possibility of serious injury or death.

- **Do not trigger the flash in close proximity to people's eyes.**

Exposure to the intense light produced by the flash could damage eyesight. In particular, remain at least one meter (39 inches) away from infants when using the flash.

- **Store this equipment out of the reach of children and infants.**

Strap: Putting the strap around a child's neck could result in asphyxiation.

- **Use only recommended power sources.**
- **Do not attempt to disassemble, alter or apply heat to the product.**
- **Avoid dropping or subjecting the product to severe impacts.**
- **To avoid the risk of injury, do not touch the interior of the product if it has been dropped or otherwise damaged.**
- **Stop using the product immediately if it emits smoke, a strange smell, or otherwise behaves abnormally.**
- **Do not use organic solvents such as alcohol, benzine, or thinner to clean the product.**
- **Do not let the product come into contact with water (e.g. sea water) or other liquids.**
- **Do not allow liquids or foreign objects to enter the camera.**

This could result in electrical shock or fire.

If liquids or foreign objects come into contact with the camera interior, immediately turn the camera off and remove the batteries.

A1300

- **Do not look through the viewfinder at bright light sources (such as the sun on a clear day).**

This could damage your eyesight.

- **Use only the recommended batteries.**
- **Do not place the batteries near or in direct flame.**

The batteries may explode or leak, resulting in electrical shock or fire. This could cause injury and damage the surroundings. In the event that batteries leak and the battery electrolyte contacts eyes, mouth, skin or clothing, immediately flush with water.

- **Turn the camera off in places where camera use is prohibited.**

The electromagnetic waves emitted by the camera may interfere with the operation of electronic instruments and other devices. Exercise adequate caution when using the camera in places where use of electronic devices is restricted, such as inside airplanes and medical facilities.

- **Do not play the supplied CD-ROM(s) in any CD player that does not support data CD-ROMs.**

It is possible to suffer hearing loss from listening with headphones to the loud sounds of a CD-ROM played on an audio CD player (music player). Additionally, this could damage the speakers.



Caution

Denotes the possibility of injury.

- **When holding the camera by the strap, be careful not to bang it, subject it to strong impacts or shocks, or let it get caught on other objects.**
- **Be careful not to bump or push strongly on the lens.**

This could lead to injury or damage the camera.

- **Be careful not to subject the screen to strong impacts.**

If the screen cracks, injury may result from the broken fragments.

- **When using the flash, be careful not to cover it with your fingers or clothing.**

This could result in burns or damage to the flash.

- **Avoid using, placing or storing the product in the following places:**

- **Places subject to strong sunlight**
- **Places subject to temperatures above 40 °C (104 °F)**
- **Humid or dusty areas**

These could cause leakage, overheating or an explosion of the batteries, resulting in electrical shock, fire, burns or other injuries.

Caution

Denotes the possibility of damage to the equipment.

- **Do not aim the camera at bright light sources (such as the sun on a clear day).**

Doing so may damage the image sensor.

- **When using the camera on a beach or at a windy location, be careful not to allow dust or sand to enter the camera.**

This may cause the product to malfunction.

- **In regular use, small amounts of smoke may be emitted from the flash.**

This is due to the high intensity of the flash burning dust and foreign materials stuck to the front of the unit. Please use a cotton swab to remove dirt, dust or other foreign matter from the flash to prevent heat build-up and damage to the unit.

- **Remove and store the batteries when you are not using the camera.**

If the batteries are left inside the camera, damage caused by leakage may occur.

- **Before you discard the batteries, cover the terminals with tape or other insulators.**

Contacting other metal materials may lead to fire or explosions.

Safety Precautions

- Do not charge batteries of different types at the same time, or use older batteries together with newer batteries.
- Do not insert the batteries with the + and – terminals reversed.

This may cause the product to malfunction.

-
- Do not sit down with the camera in your pocket.

Doing so may cause malfunctions or damage the screen.

-
- When putting the camera in your bag, ensure that hard objects do not come into contact with the screen.
 - Do not attach any hard objects to the camera.


Doing so may cause malfunctions or damage the screen.



Initial Preparations

Prepare for shooting as follows.

Attaching the Strap

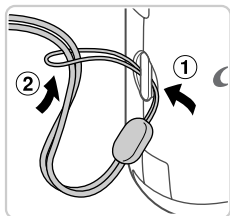

1 Attach the strap.

- Thread the end of the strap through the strap hole (①), and then pull the other end of the strap through the loop on the threaded end (②).


Holding the Camera



- Place the strap around your wrist.
- When shooting, keep your arms close to your body and hold the camera securely to prevent it from moving. Do not rest your fingers on the flash.


Inserting the Batteries

Insert the included batteries.

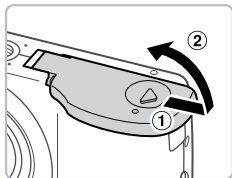


1 Open the cover.

- Slide the cover (1) and open it (2).

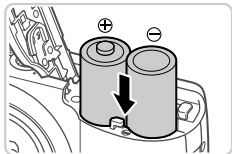

2 Insert the batteries.

- Insert the batteries as shown.

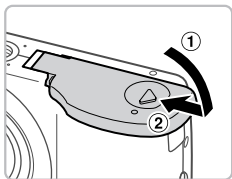

3 Close the cover.

- Lower the cover (1) and hold it down as you slide it until it clicks into the closed position (2).

Compatible Batteries

Use AA alkaline batteries or Canon AA NiMH batteries (sold separately, see *Camera User Guide*).

 


- Due to the inconsistent performance of other batteries, use of specified batteries only is recommended.
- NiMH batteries last longer in cameras than alkaline batteries do, especially in cold weather.

Inserting the Memory Card

Insert a memory card (sold separately).


Note that before using a new memory card (or a memory card formatted in another device), you should format the memory card with this camera (see *Camera User Guide*).



1 Check the card's write-protect tab.

- Recording is not possible on memory cards with a write-protect tab when the tab is in the locked (downward) position. Slide the tab up until it clicks into the unlocked position.

2 Open the cover.

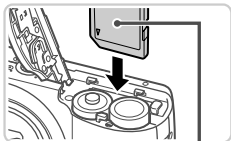


Label

3 Insert the memory card.

- Insert the memory card facing as shown until it clicks into the locked position.
- Make sure the memory card is facing the right way when you insert it. Inserting memory cards facing the wrong way may damage the camera.

4 Close the cover.


Removing the Memory Card

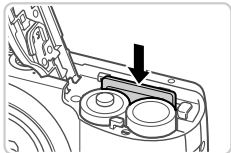

- Open the cover and push the memory card in until it clicks, and then slowly release the memory card.
- ▶ The memory card will pop up.


Setting the Date and Time

 A screen for setting the date and time is displayed the first time you turn the camera on. Be sure to specify the date and time, which is the basis for dates and times added to your images.




1 Turn the camera on.

- Press the power button.
- ▶ The [Date/Time] screen is displayed.

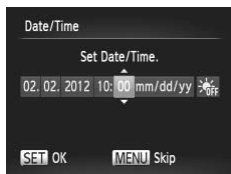




2 Set the date and time.

- Press the ◀▶ buttons to choose an option.
- Press the ▲▼ buttons to specify the date and time.
- When finished, press the  button.
- To turn off the camera, press the power button.

 


- ! Unless you set the date and time, the [Date/Time] screen will be displayed each time you turn the camera on. Specify the correct information.

-  To set daylight saving time (1 hour ahead), choose  in step 2 and then choose  by pressing the ▲▼ buttons.

Changing the Date and Time

Adjust the date and time as follows.



1 Access the camera menu.

- Press the **MENU** button.



2 Choose [Date/Time].

- Move the zoom lever to choose the **YT** tab.
- Press the **▲▼** buttons to choose [Date/Time], and then press the **FUNC SET** button.

3 Change the date and time.

 
- Follow step 2 on p. 12 to adjust the settings.
- Press the **MENU** button to close the menu.



- Date/time settings can be retained for about 3 weeks by the camera's built-in date/time battery (backup battery) after the battery pack is removed.
- Once the date/time battery is depleted, the [Date/Time] screen will be displayed when you turn the camera on. Follow the steps on p. 12 to set the date and time.
- By inserting new batteries, or connecting an AC adapter kit (sold separately, see *Camera User Guide*), the date/time battery can be charged in about 4 hours even if the camera is left off.


Display Language

The display language can be changed as needed.



1 Enter Playback mode.

 - Press the button.



2 Access the setting screen.

- Press and hold the button, and then press the **MENU** button.



3 Set the display language.

- Press the buttons to choose a language, and then press the button.
- ▶ Once the display language has been set, the setting screen is no longer displayed.



- You can also change the display language by pressing the **MENU** button and choosing [Language] on the tab.

 
Trying the Camera Out

Follow these instructions to turn the camera on, shoot still images or movies, and then view them.

Still Images

Shooting (Smart Auto)

For fully automatic selection of the optimal settings for specific scenes, simply let the camera determine the subject and shooting conditions.




1 Turn the camera on.

- Press the power button.
- ▶ The startup screen is displayed.




2 Enter **AUTO** mode.

 - Press the ▲ button repeatedly until **AUTO** is displayed.
- Aim the camera at the subject. As the camera determines the scene, it will make a slight clicking noise.
- ▶ A scene icon is displayed in the upper right of the screen.
- ▶ Frames displayed around any subjects that are detected indicate that they are in focus.



3 Compose the shot.

- To zoom in and enlarge the subject, move the zoom lever toward [▲] (telephoto), and to zoom away from the subject, move it toward [▴▴▴] (wide angle).

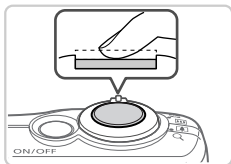


4 Focus.

- Press the shutter button lightly, halfway down. The camera beeps twice after focusing, and AF frames are displayed to indicate image areas in focus.



AF Frames

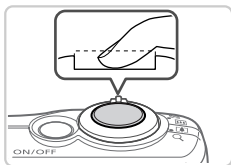


5 Shoot.


- Press the shutter button all the way down.
- ▶ As the camera shoots, a shutter sound is played, and in low-light conditions, the flash fires automatically.
- ▶ Your shot remains displayed on the screen for about two seconds.
- Even while the shot is displayed, you can take another shot by pressing the shutter button again.

Shooting Movies

You can shoot movies with camera-determined settings, simply by pressing the movie button.

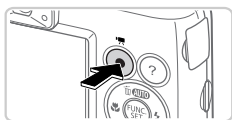

Elapsed Time

 

1 Prepare the camera for shooting.

- Follow steps 1 – 3 on p. 15 to turn the camera on and set it to **AUTO** mode, and then compose the shot.

2 Start shooting.

 
- Press the movie button. The camera beeps once as recording begins, and [●Rec] is displayed with the elapsed time.
- ▶ Black bars displayed on the top and bottom edges of the screen indicate image areas not recorded.
- Once recording begins, you can take your finger off the movie button.

3 Finish shooting.

- Press the movie button again to stop shooting. The camera beeps twice as recording stops.
- ▶ Recording will stop automatically when the memory card becomes full.


Viewing

After shooting images or movies, you can view them on the screen as follows.



1 Enter Playback mode.

 - Press the button.
- ▶ Your last shot is displayed.



2 Browse through your images.

- To view the previous image, press the button. To view the next image, press the button.
- Press and hold the buttons to browse through images quickly. Images appear grainy at this time.



- Movies are identified by a icon. To play movies, go to step 3.



3 Play movies.

- Press the button to access the movie control panel, press the buttons to choose , and then press the button again.
- ▶ Playback now begins, and after the movie is finished, is displayed.
- To adjust the volume, press the buttons.



- To switch to Shooting mode from Playback mode, press the shutter button halfway.

Erasing the Images



You can choose and erase unneeded images one by one. Be careful when erasing images, because they cannot be recovered.

1 Choose an image to erase.

- Press the ◀▶ buttons to choose an image.



2 Erase the image.


 
- Press the ▲ button.
- After [Erase?] is displayed, press the ◀▶ buttons to choose [Erase], and then press the  button.
- ▶ The current image is now erased.
- To cancel erasure, press the ◀▶ buttons to choose [Cancel], and then press the  button.



- You can also erase all images at once (see *Camera User Guide*).

Accessing the Help Menu

Access on-screen descriptions of scenes detected by the camera, shooting advice, and playback instructions as follows.

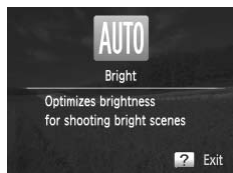

- Press the **?** button to access the Help menu.
- Press the **?** button again to return to the original display.
- In Shooting mode, a description of the scene detected by the camera is displayed. Shooting advice is also displayed depending on the scene.
- In Playback mode, press the **▲▼** buttons and choose an item. The zoom lever and buttons are displayed overlaying the illustration of the camera.
- Choose an item and press the **▶** button. An explanation of the item is displayed. To continue reading the explanation, press the **▲▼** buttons to scroll up or down the screen. Press the **◀** button to return to the left hand screen.



- The Help menu can also be used in shooting modes other than **AUTO**, and in those modes it will display the same as when in Playback mode.

Included Software, PDF Manuals

The software and PDF manuals on the included CD-ROM are introduced below, with instructions for installation, saving images to a computer, and using the PDF manuals.

Features of the Included Software

After installing the software on the CD-ROM, you can do the following things on your computer.

ImageBrowser EX

- Import images and change camera settings
- Manage images: view, search, and organize
- Print and edit images
- Update to the latest software version with the auto update function

Auto Update Function

Using the included software, you can update to the latest version, and download new functions via the Internet (some software excluded). Be sure to install the software on a computer with an Internet connection so you can use this function.



- Internet access is required to use this function, and any ISP account charges and access fees must be paid separately.

PDF Manuals

Installing the software on the CD-ROM will also install the following PDF manuals on your computer.

Camera User Guide

Once you are familiar with the information in this manual, refer to the guide for a more in-depth understanding of camera operation.

ImageBrowser EX User Guide

Refer to the software guide when using the included software.

This guide can be referenced from the ImageBrowser EX Help function.



- Depending on the country or region where you purchased your camera, the *ImageBrowser EX User Guide* may not be accessible from the Help function. In such cases, it will either be included on the CD-ROM bundled with your camera, or you can download the latest version from the Canon website.

System Requirements

The included software can be used on the following computers. Adobe Reader is required to view the PDF manuals.

Windows

Operating System	Windows 7 SP1 Windows Vista SP2 Windows XP SP3
Computer	Computers running one of the above operating systems (preinstalled), with an included USB port and Internet connection
Processor	1.6 GHz or higher (still images), Core 2 Duo 1.66 GHz or higher (movies)
RAM	Windows 7 (64 bit): 2 GB or more (still images), 1 GB or more (movies) Windows 7 (32 bit), Windows Vista (64 bit, 32 bit): 1 GB or more Windows XP: 512 MB or more (still images), 1 GB or more (movies)
Interfaces	USB
Free Hard Disk Space	440 MB or more*
Display	1024 x 768 resolution or higher

* In Windows XP, Microsoft .NET Framework 3.0 or later (max. 500 MB) must be installed. Installation may take some time, depending on computer performance.

Macintosh


Operating System	Mac OS X 10.6
Computer	Computers running one of the above operating systems (preinstalled), with an included USB port and Internet connection
Processor	Core Duo 1.83 GHz or higher
RAM	1 GB or more
Interfaces	USB
Free Hard Disk Space	550 MB or more
Display	1024 x 768 resolution or higher




- Check the Canon website for the latest system requirements, including supported OS versions.

Installing the Software and PDF Manuals

 Windows 7 and Mac OS X 10.6 are used here for the sake of illustration. Using the software auto update function, you can update to the latest version and download new functions via the Internet (some software excluded), so be sure to install the software on a computer with an Internet connection.



1 Insert the CD-ROM in the computer's CD-ROM drive.

- Insert the included CD-ROM (DIGITAL CAMERA Solution Disk) (p. 2) in the computer's CD-ROM drive.
- On a Macintosh computer, after inserting the disc, double-click the desktop disc icon to open it, and then double-click the  icon displayed.




2 Begin the installation.

 
- Click [Easy Installation] and follow the on-screen instructions to complete the installation process.




3 When a message is displayed prompting you to connect the camera, connect it to a computer.

- With the camera turned off, open the cover (①). With the smaller plug of the included interface cable (p. 2) in the orientation shown, insert the plug fully into the camera terminal (②).

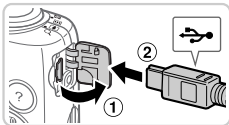



 - Insert the larger plug of the interface cable in the computer's USB port. For details about USB connections on the computer, refer to the computer user manual.



4 Install the files.

- Turn the camera on, and follow the on-screen instructions to complete the installation process.

▶ The software will connect to the Internet to update to the latest version and download new functions. Installation may take some time, depending on computer performance and the Internet connection.

- Click [Finish] or [Restart] on the screen after installation and remove the CD-ROM when the desktop is displayed.
- Turn the camera off and disconnect the cable.



 
- When not connected to the Internet, there are the following limitations.
 - The screen in step 3 will not be displayed.
 - Some functions may not be installed.
 - The first time you connect the camera to the computer, drivers will be installed, so it may take a few minutes until camera images are accessible.
- If you have several cameras that were bundled with ImageBrowser EX on the included CD-ROMs, be sure to use each camera with their included CD-ROM and follow the on-screen installation instructions for each. Doing so will ensure that each camera will receive the correct updates and new functions via the auto update function.

Saving Images to a Computer



Windows 7 and Mac OS X 10.6 are used here for the sake of illustration.

1 Connect the camera to the computer.

- Follow step 3 on p. 23 to connect the camera to a computer.



2 Turn the camera on to access CameraWindow.

- Press the  button to turn the camera on.
- On a Macintosh computer, CameraWindow is displayed when a connection is established between the camera and computer.
- For Windows, follow the steps introduced below.
- In the screen that displays, click the  link to modify the program.




- Choose [Downloads Images From Canon Camera using Canon CameraWindow] and then click [OK].




- Double-click .


CameraWindow

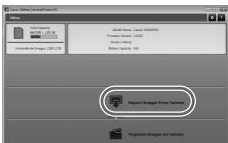

3 Save the images to the computer.

- Click [Import Images from Camera], and then click [Import Untransferred Images].
- ▶ Images are now saved to the Pictures folder on the computer, in separate folders named by date.
- After images are saved, close CameraWindow, press the  button to turn the camera off, and unplug the cable.
- For instructions on viewing images on a computer, refer to the *ImageBrowser EX User Guide*.



- In Windows 7, if the screen in step 2 is not displayed, click the  icon in the taskbar.
- To start CameraWindow in Windows Vista or XP, click [Downloads Images From Canon Camera using Canon CameraWindow] on the screen displayed when you turn the camera on in step 2. If CameraWindow is not displayed, click the [Start] menu and choose [All Programs] ▶ [Canon Utilities] ▶ [CameraWindow] ▶ [CameraWindow].
- On a Macintosh computer, if CameraWindow is not displayed after step 2, click the [CameraWindow] icon in the Dock (the bar at the bottom of the desktop).
- Although you can save images to a computer simply by connecting your camera to the computer without using the included software, the following limitations apply.
 - It may take a few minutes after you connect the camera to the computer until camera images are accessible.
 - Images shot in vertical orientation may be saved in horizontal orientation.
 - Image protection settings may be cleared from images saved to a computer.
 - Some problems may occur when saving images or image information, depending on the operating system version, the software in use, or image file sizes.
 - Some functions provided by the included software may not be available, such as editing movies or returning images to the camera.

Using the PDF Manuals


Use the included CD-ROM to install the PDF manuals, and a shortcut for the camera manual will be created on the desktop.

Adobe Reader is required to view the PDF manuals.



- It may not be possible to install the software and PDF manuals on computers that do not meet the system requirements (p. 22). To view the manuals on these computers, copy the PDF files in the Readme folder on the CD-ROM directly to a computer capable of using Adobe Reader.

Accessories

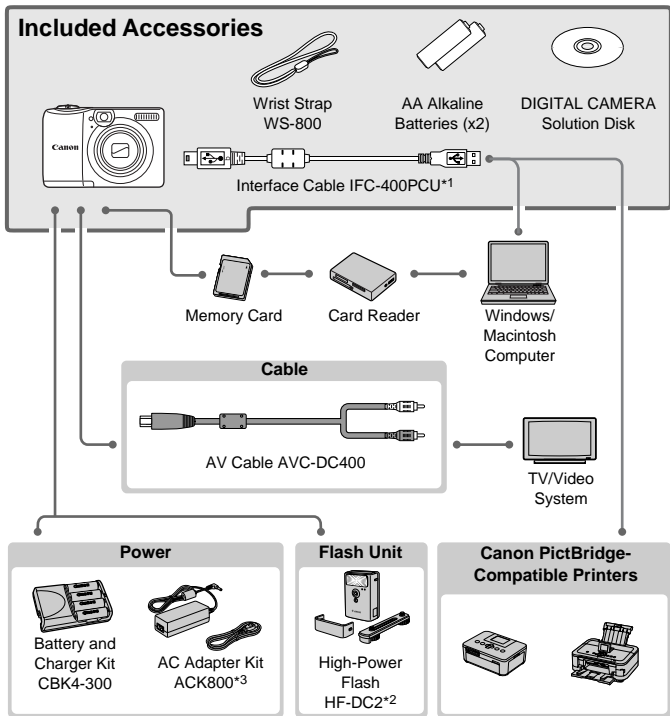

*1 Also available for purchase separately.

*2 High-Power Flash HF-DC1 also supported.

*3 DC Coupler DR-DC10 is required.

Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories.

Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.

Specifications

Camera Effective Pixels	Approx. 16.0 million pixels		
Lens Focal Length	5x zoom: 5.0 (W) – 25.0 (T) mm (35mm film equivalent: 28 (W) – 140 (T) mm)		
A1300 Viewfinder	Real-image optical zoom viewfinder		
LCD Monitor	2.7 type color TFT LCD Effective Pixels: Approx. 230,000 dots		
File Formats	Design rule for Camera File system, DPOF (version 1.1) compliant		
Data Types	Still Images: Exif 2.3 (JPEG) Movies: MOV (H.264 video data, Linear PCM (monaural) audio data)		
Interfaces	Hi-Speed USB Analog audio output (monaural) Analog video output (NTSC/PAL)		
Power	AA alkaline batteries (AA NiMH batteries (Canon NB-3AH)) x2 Compact Power Adapter CA-PS800 (included with AC Adapter Kit ACK800) • However, connection requires DC Coupler DR-DC10, sold separately		
Dimensions (Based on CIPA Guidelines)	A1300 94.7 x 61.7 x 29.8 mm (3.73 x 2.43 x 1.17 in.)		
	A810 94.7 x 61.3 x 29.8 mm (3.73 x 2.41 x 1.17 in.)		
Weight (Based on CIPA Guidelines)		Including battery and memory card	Camera body only
	A1300	Approx. 174 g (approx. 6.14 oz.)	Approx. 126 g (approx. 4.44 oz.)
	A810	Approx. 171 g (approx. 6.03 oz.)	Approx. 123 g (approx. 4.34 oz.)

Number of Shots/Recording Time, Playback Time

A1300

Power		Alkaline Batteries (Supplied)* ¹	NiMH Batteries (Sold Separately)* ²
Number of Shots	Screen On	Approx. 220	Approx. 500
	Screen Off	Approx. 750	Approx. 1100
Movie Recording Time* ³		Approx. 1 hour	Approx. 2 hours
Continuous Shooting* ⁴		Approx. 1 hour, 40 minutes	Approx. 3 hours
Playback Time		Approx. 10 hours	Approx. 13 hours

A810

Power		Alkaline Batteries (Supplied)* ¹	NiMH Batteries (Sold Separately)* ²
Number of Shots		Approx. 220	Approx. 500
Movie Recording Time* ³		Approx. 1 hour	Approx. 2 hours
Continuous Shooting* ⁴		Approx. 1 hour, 40 minutes	Approx. 3 hours
Playback Time		Approx. 10 hours	Approx. 13 hours

*1 The number of shots that can be taken may vary widely depending on the brand of alkaline batteries used.

*2 Number of shots/recording time with fully charged batteries.

*3 Time under default camera settings, when normal operations are performed, such as shooting, pausing, turning the camera on and off, and zooming.

*4 Time available when shooting the maximum movie length (until recording stops automatically) repeatedly.

- The number of shots that can be taken is based on measurement guidelines of the Camera & Imaging Products Association (CIPA).
- Under some shooting conditions, the number of shots and recording time may be less than mentioned above.



Number of Shots per Memory Card

Resolution (Pixels)		No. Shots per Memory Card (Approx.)	
		8 GB	32 GB
L (Large)	16M/4608x3456	1903	7684
M1 (Medium 1)	8M/3264x2448	3721	15020
M (Medium)*	4M/2304x1728	6638	26792
M2 (Medium 2)	2M/1600x1200	12927	52176
S (Small)	0.3M/640x480	40937	165225
W (Widescreen)	4608x2592	2531	10219

* In 30^{FPS} mode



- These values are measured according to Canon standards and may change depending on the subject, memory card and camera settings.

Recording Time per Memory Card



Image Quality	Recording Time per Memory Card	
	8 GB	32 GB
	49 min. 18 sec.* ¹	3 hr. 19 min. 3 sec.* ²
	1 hr. 28 min. 59 sec.	5 hr. 59 min. 10 sec.

  *¹ 27 min. 28 sec. for iFrame movies.




*² 1 hr. 50 min. 52 sec. for iFrame movies.

- These values are measured according to Canon standards and may change depending on the subject, memory card and camera settings.
- Recording will automatically stop when the file size of an individual clip being recorded reaches 4 GB, or when the recording time reaches approximately 29 minutes and 59 seconds (for  movies) or approximately 1 hour (for  movies).
- On some memory cards, recording may stop before the maximum clip length has been reached. Speed Class 6 or higher memory cards are recommended.

Flash Range


Maximum Wide Angle ()	50 cm – 3.0 m (1.6 – 9.8 ft.)
Maximum Telephoto ()	1.0 – 2.0 m (3.3 – 6.6 ft.)

Shooting Range

Shooting Mode	Focusing Range	Maximum Wide Angle (W)	Maximum Telephoto (T)
AUTO	—	3 cm (1.2 in.) – infinity	1.2 m (3.9 ft.) – infinity
Other modes		5 cm (2.0 in.) – infinity	1.2 m (3.9 ft.) – infinity
	 *	3 – 60 cm (1.2 in. – 2.0 ft.)	—
	 *	3 m (9.8 ft.) – infinity	3 m (9.8 ft.) – infinity

* Not available in some shooting modes.

Continuous Shooting Speed

Shooting Mode	Speed
	A1300 Approx. 2.8 shots/sec.
	A810 Approx. 2.7 shots/sec.
P	Approx. 0.8 shots/sec.

Shutter Speed

AUTO mode, automatically set range	1 – 1/2000 sec.
Range in all shooting modes	15 – 1/2000 sec.

Aperture

f/number	f/2.8 / f/7.9(W), f/6.9 / f/20(T)
----------	-----------------------------------

- All data is based on tests by Canon.
- Camera specifications or appearance are subject to change without notice.

MEMO

FCC Notice

(Digital Camera, Model PC1740, PC1741 systems)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions;

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The cable with the ferrite core provided with the digital camera must be used with this equipment in order to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A., Inc.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

Tel No. (516) 328-5600

Canadian Radio Interference Regulations

This Class B digital apparatus complies with Canadian ICES-003.

To ensure proper operation of this product, use of genuine Canon accessories is recommended.

Trademark Acknowledgments

- The SDXC logo is a trademark of SD-3C, LLC.
- This device incorporates exFAT technology licensed from Microsoft.
- The iFrame logo and the iFrame symbol are trademarks of Apple Inc.

About MPEG-4 Licensing

- This product is licensed under AT&T patents for the MPEG-4 standard and may be used for encoding MPEG-4 compliant video and/or decoding MPEG-4 compliant video that was encoded only (1) for a personal and non-commercial purpose or (2) by a video provider licensed under the AT&T patents to provide MPEG-4 compliant video. No license is granted or implied for any other use for MPEG-4 standard.

* Notice displayed in English as required.

For CA, USA only

Included lithium battery contains Perchlorate Material - special handling may apply.

See www.dtsc.ca.gov/hazardouswaste/perchlorate/ for details.



USA and Canada only:

The Nickel-Metal Hydride battery is recyclable.

Please call 1-800-8-BATTERY for information on how to recycle this battery.

Disclaimer

- Reprinting, transmitting, or storing in a retrieval system any part of this guide without the permission of Canon is prohibited.
- Canon reserves the right to change the contents of this guide at any time without prior notice.
- Illustrations and screenshots in this guide may differ slightly from the actual equipment.
- The above items notwithstanding, Canon accepts no liability for damages due to mistaken operation of the products.