


3 Open the **Canon IJ Printer Utility** dialog box.

- (1) Select **Applications** from the **Go** menu, and then double-click the **Utilities** folder.
- (2) Double-click the **Printer Setup Utility** icon.
When using Mac OS X v.10.2, double-click the **Print Center** icon.
- (3) Select the name of your printer from the **Name** list and click **Utility**.
When using Mac OS X v.10.2, select the name of your printer from the **Name** list and click **Configure**.
- (4) Select the name of your printer from the **Product** list and click **Maintenance**.

4 Print the **Nozzle Check Pattern**.

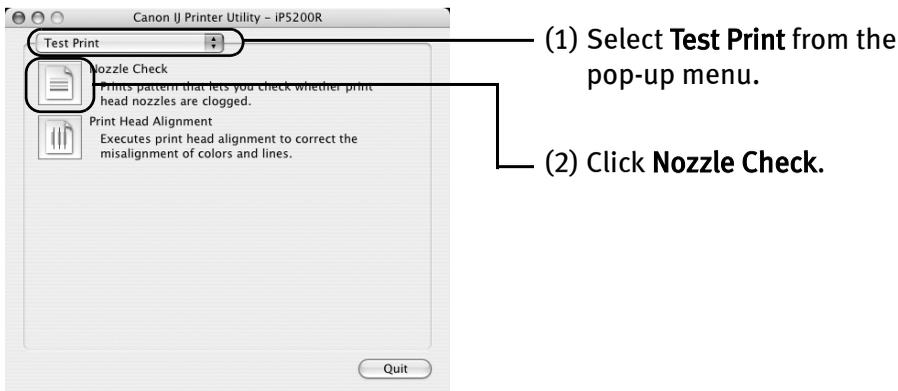

- (3) Read the message and click **Print Check Pattern**.



The nozzle check pattern will be printed.

 **Note** Clicking **Initial Check Items** displays the items to be checked before printing the pattern.

5 Examine the pattern and take the appropriate action.


See [“Examining the Nozzle Check Pattern”](#) on page 50.

■ Examining the Nozzle Check Pattern

The nozzle check pattern should appear as follows when ink is discharged properly. Examine the nozzle check pattern output by the printer, and clean the Print Head when necessary.


 **Note** The nozzle check pattern will not be printed correctly if there is not enough ink. Replace the ink tank if the remaining amount of ink is insufficient. See [“Replacing an Ink Tank”](#) on page 37.

1 Confirm the printed nozzle check pattern.

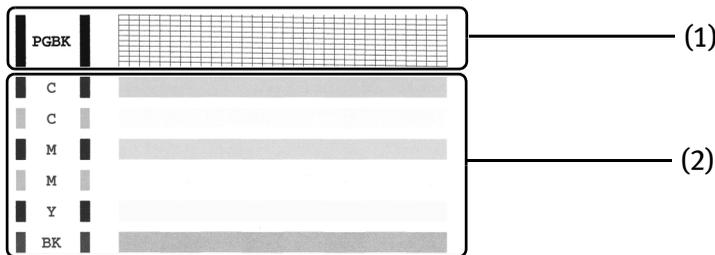

(1) If line of this pattern are missing, the “Black” print head nozzle needs cleaning.

Example: When line are missing


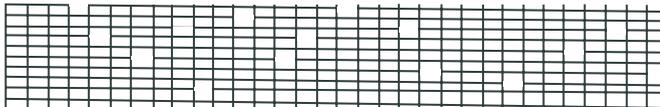


(2) If these patterns have white stripes, the “Color” print head nozzle needs cleaning.

Example: When white stripes appear



2 When cleaning is necessary, click Cleaning on the Pattern Check dialog box.

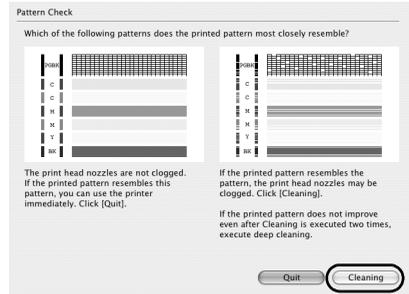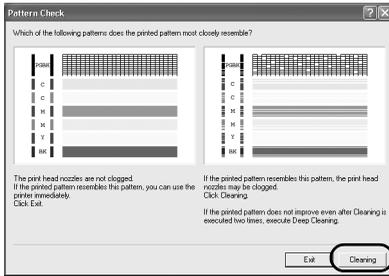

If you want to continue to clean the Print Head from here, go to step 3-(3) of the Windows or Macintosh **Print Head Cleaning** procedures as appropriate.

See **“Print Head Cleaning”** on page 52.

If no lines of the group (1) pattern are missing, and the group (2) patterns have no white stripes, click **Exit** or **Quit**.

Nozzle Check Pattern examination finishes.

Print Head Cleaning

Clean the Print Head if missing lines or white stripes appear in the nozzle check pattern. Note that cleaning the Print Head causes waste ink to be absorbed in the waste ink absorber. Cleaning the Print Head consumes ink, so perform **Print Head Cleaning** only when necessary.

 **Note** ● Ensure that the Inner Cover is closed.

Cleaning the Print Head Without a Computer

- The Print Head can also be cleaned from the printer itself. With the printer on, hold down the **RESUME/CANCEL** button until the **POWER** lamp flashes green once, and then release it immediately.

Windows


 **Note** The **Print Head Cleaning** dialog box of step 3-(3) is directly displayed when you click **Cleaning** on the **Pattern Check** dialog box. See [“Examining the Nozzle Check Pattern”](#) on page 50.

1 Ensure that the printer is on.

2 Open the printer properties dialog box.


See [“Opening the Printer Properties Dialog Box Directly from the Start Menu”](#) on page 35.

3 Start Print Head Cleaning.

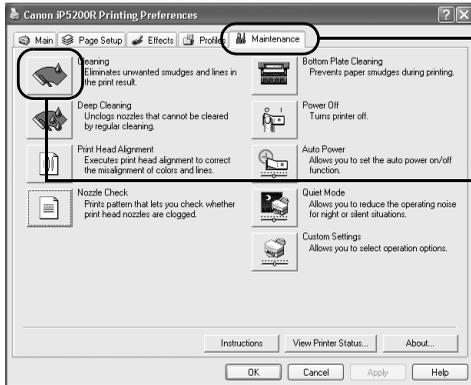

(1) Click the **Maintenance** tab.

(2) Click **Cleaning**.

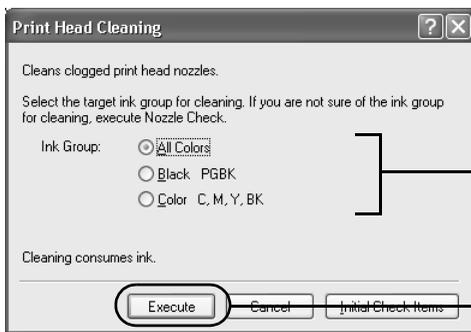

(3) Select the ink group to clean.

When cleaning the nozzles of black ink tanks: select **Black** to clean the nozzles of PGI-5BK, **Color** to clean the nozzles of CLI-8BK.

Note Clicking **Initial Check Items** displays the items to be checked before cleaning.

(4) Click **Execute**.

Print Head Cleaning starts when the **POWER** lamp starts blinking green.

Important Do not perform any other operations until the **Print Head Cleaning** finishes. This takes about 50 seconds.

(5) Read the message and click **Print Check Pattern** to print the nozzle check pattern. The nozzle check pattern is printed.

Important Do not perform any other operations until the nozzle check pattern printing finishes.

Note The nozzle check pattern will not be printed correctly if there is not enough ink. Replace the ink tank if the remaining amount of ink is insufficient. See **“Replacing an Ink Tank”** on page 37.

4 Check the Print Head condition with the printed nozzle check pattern.

See “[Examining the Nozzle Check Pattern](#)” on page 50.

 **Note** If the problem remains after performing **Print Head Cleaning** twice, try **Print Head Deep Cleaning**.

See “[Print Head Deep Cleaning](#)” on page 56.

Macintosh

 **Note** The **Cleaning** dialog box of step 3-(3) is directly displayed when you click **Cleaning** on the **Pattern Check** dialog box.

See “[Examining the Nozzle Check Pattern](#)” on page 50.

1 Ensure that the printer is on.

2 Open the **Canon IJ Printer Utility** dialog box.

(1) Select **Applications** from the **Go** menu, and then double-click the **Utilities** folder.

(2) Double-click the **Printer Setup Utility** icon.


When using Mac OS X v.10.2, double-click the **Print Center** icon.

(3) Select the name of your printer from the **Name** list and click **Utility**.

When using Mac OS X v.10.2, select the name of your printer from the **Name** list and click **Configure**.


(4) Select the name of your printer from the **Product** list and click **Maintenance**.

3 Start Print Head Cleaning.

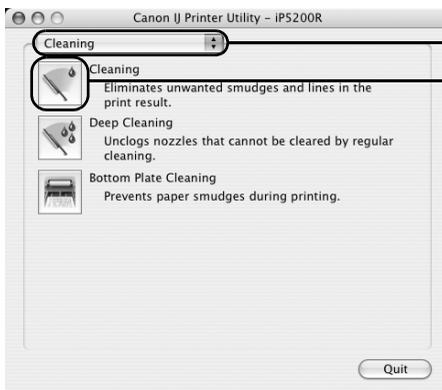

(1) Ensure that **Cleaning** is selected from the pop-up menu.

(2) Click **Cleaning**.

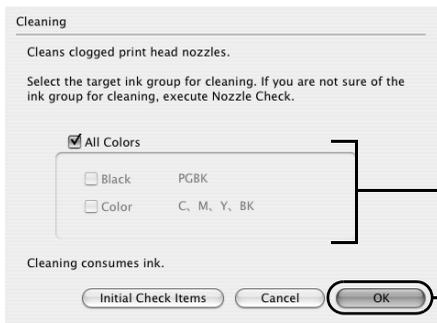

(3) Select the ink group to clean.
When cleaning the nozzles of black ink tanks: select **Black** to clean the nozzles of PGI-5BK, **Color** to clean the nozzles of CLI-8BK.

 **Note** Clicking **Initial Check Items** displays the items to be checked before cleaning.

(4) Click **OK**.

Print Head Cleaning starts when the **POWER** lamp starts blinking green.

 **Important** Do not perform any other operations until the **Print Head Cleaning** finishes. This takes about 50 seconds.

(5) Read the message and click **Print Check Pattern** to print the nozzle check pattern. The nozzle check pattern is printed.

 **Important** Do not perform any other operations until the nozzle check pattern printing finishes.

 **Note** The nozzle check pattern will not be printed correctly if there is not enough ink. Replace the ink tank if the remaining amount of ink is insufficient.
See [“Replacing an Ink Tank”](#) on page 37.

4 Check the Print Head condition with the printed nozzle check pattern.

See [“Examining the Nozzle Check Pattern”](#) on page 50.

 **Note** If the problem remains after performing **Print Head Cleaning** twice, try **Print Head Deep Cleaning**.
See [“Print Head Deep Cleaning”](#) on page 56.

Print Head Deep Cleaning

If print quality does not improve by standard **Print Head Cleaning**, try **Print Head Deep Cleaning**, which is a more powerful process. Note that cleaning the Print Head causes waste ink to be absorbed in the waste ink absorber. **Print Head Deep Cleaning** consumes more ink than standard Print Head Cleaning, so perform this procedure only when necessary.


 **Note** Ensure that the Inner Cover is closed.

Windows

- 1 Ensure that the printer is on.
- 2 Open the printer properties dialog box.


See [“Opening the Printer Properties Dialog Box Directly from the Start Menu”](#) on page 35.

- 3 Start Print Head Deep Cleaning.

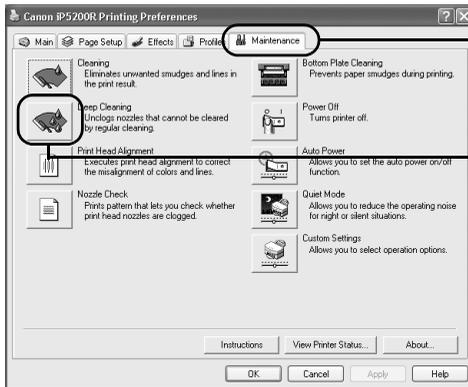

(1) Click the **Maintenance** tab.

(2) Click **Deep Cleaning**.

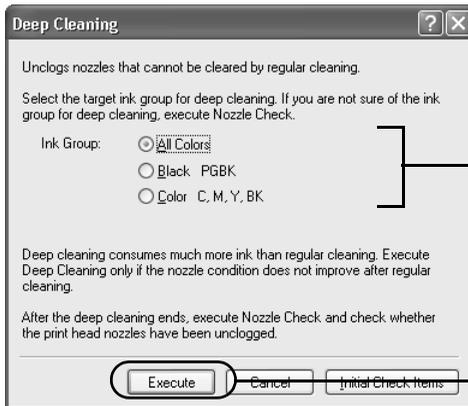

(3) Select the ink group to clean.
When cleaning the nozzles of black ink tanks: select **Black** to clean the nozzles of PGI-5BK, **Color** to clean the nozzles of CLI-8BK.

 **Note** Clicking **Initial Check Items** displays the items to be checked before cleaning.

(4) Click **Execute**.

(5) When the confirmation message is displayed, click **OK**.

Print Head Deep Cleaning starts when the **POWER** lamp starts blinking green.

 **Important** Do not perform any other operation until the **Print Head Deep Cleaning** finishes. This takes about 90 seconds.

4 Print the nozzle check pattern to check the Print Head condition.


See [“Printing the Nozzle Check Pattern”](#) on page 47.

If a particular color is not printed properly, replace the ink tank of that color. See [“Replacing an Ink Tank”](#) on page 37.


-  **Note**
- If the print head nozzles are still not clean, open the Top Cover and ensure that there are sufficient ink levels in all ink tanks and turn off the printer. Be sure to perform another **Print Head Deep Cleaning** 24 hours after turning off the printer.
 - If this does not solve the problem, the Print Head may be worn out. Contact the Customer Care Center.

Macintosh

- 1** Ensure that the printer is on.
- 2** Open the **Canon IJ Printer Utility** dialog box.
 - (1) Select **Applications** from the **Go** menu, and then double-click the **Utilities** folder.
 - (2) Double-click the **Printer Setup Utility** icon.
When using Mac OS X v.10.2, double-click the **Print Center** icon.
 - (3) Select the name of your printer from the **Name** list and click **Utility**.
When using Mac OS X v.10.2, select the name of your printer from the **Name** list and click **Configure**.
 - (4) Select the name of your printer from the **Product** list and click **Maintenance**.
- 3** Start **Print Head Deep Cleaning**.

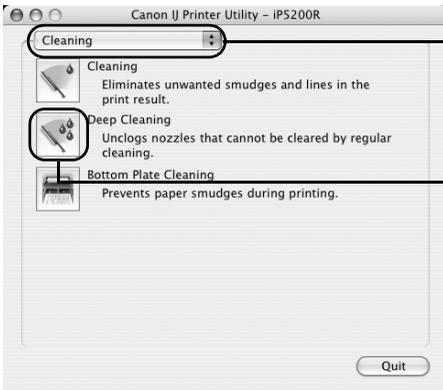

- (1) Ensure that **Cleaning** is selected from the pop-up menu.
- (2) Click **Deep Cleaning**.

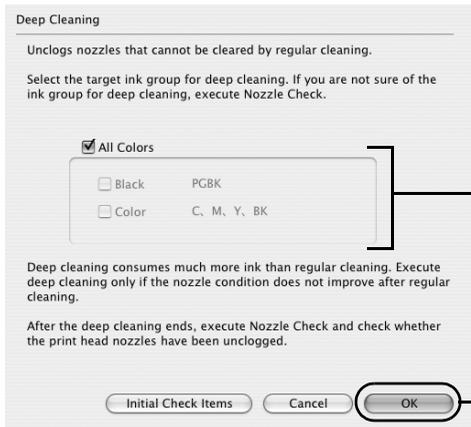

(3) Select the ink group to clean.
When cleaning the nozzles of black ink tanks: select **Black** to clean the nozzles of PGI-5BK, **Color** to clean the nozzles of CLI-8BK.

 **Note** Clicking **Initial Check Items** displays the items to be checked before cleaning.

(4) Click **OK**.

Print Head Deep Cleaning starts when the **POWER** lamp starts blinking green.

 **Important** Do not perform any other operation until the **Print Head Deep Cleaning** finishes. This takes about 90 seconds.

4 Print the nozzle check pattern to check the Print Head condition.

See [“Printing the Nozzle Check Pattern”](#) on page 47.

If a particular color is not printed properly, replace the ink tank of that color. See [“Replacing an Ink Tank”](#) on page 37.

-  **Note**
- If the print head nozzles are still not clean, open the Top Cover and ensure that there are sufficient ink levels in all ink tanks and turn off the printer. Be sure to perform another **Print Head Deep Cleaning** 24 hours after turning off the printer.
 - If this does not solve the problem, the Print Head may be worn out. Contact the Customer Care Center.

Aligning the Print Head

This operation must be carried out when using the printer for the first time. Aligning the Print Head positions allows you to print without shifts in the color registration.

Print head alignment is performed either automatically or manually. This section deals with automatic Print Head alignment only.


-  **Note** ● Automatic print head alignment cannot be performed from the Cassette. Always load paper in the Auto Sheet Feeder.
- Ensure that the Inner Cover is closed.

Aligning the Print Head Without a Computer

- The Print Head can also be aligned from the printer itself. If the printer driver is not installed in the computer, align the print head in this way.
 1. With the printer on, load a sheet of Letter-sized plain paper in the Auto Sheet Feeder.
 2. Hold down the **RESUME/CANCEL** button until the **POWER** lamp flashes green four times, and then release it immediately.


Windows

- 1 With the printer on, load a sheet of Letter-sized plain paper in the Auto Sheet Feeder.
- 2 Open the printer properties dialog box.
See “Opening the Printer Properties Dialog Box Directly from the Start Menu” on page 35.
- 3 Print the pattern.

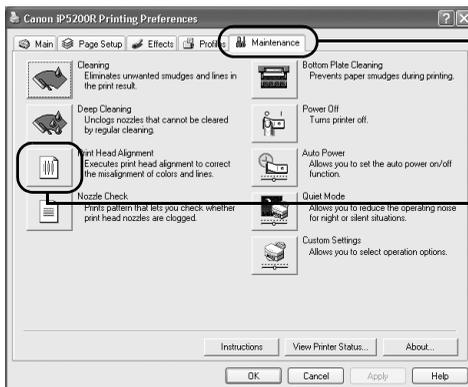

(1) Click the **Maintenance** tab.

(2) Click **Print Head Alignment**.

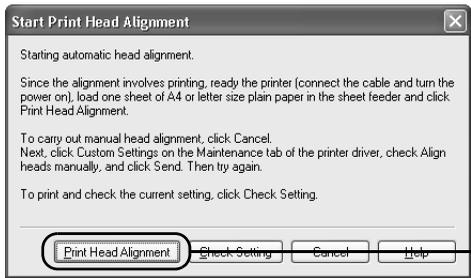


(3) Read the message and click **Print Head Alignment**.

Important It takes about four minutes to complete printing. Do not open the Top Cover while printing.

Note Clicking **Check Setting** prints the current settings and finishes the print head alignment.

4 Check the printed pattern.


If the pattern is printed as shown below, the Print Head is aligned automatically. The printer is now ready to use.

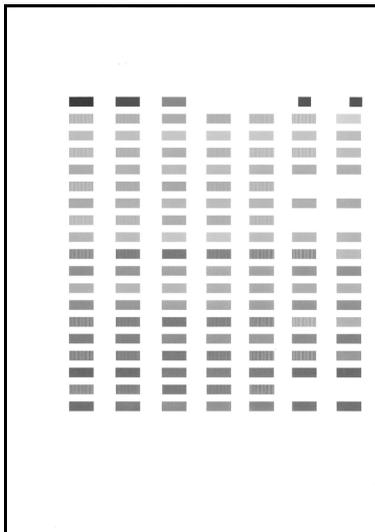

- Note**
- If the pattern is not printed successfully, refer to “Eleven flashes” in **“Handling Error Messages”** on page 77.
 - If results of Automatic Print Head Alignment are not satisfactory, refer to “Routine Maintenance” of the *User’s Guide* and align the Print Head manually.
 - The pattern is printed in black and blue.


Macintosh

- 1 With the printer on, load a sheet of Letter-sized plain paper in the Auto Sheet Feeder.
- 2 Open the **Canon IJ Printer Utility** dialog box.
 - (1) Select **Applications** from the **Go** menu, and then double-click the **Utilities** folder.
 - (2) Double-click the **Printer Setup Utility** icon.
When using Mac OS X v.10.2, double-click the **Print Center** icon.
 - (3) Select the name of your printer from the **Name** list and click **Utility**.
When using Mac OS X v.10.2, select the name of your printer from the **Name** list and click **Configure**.
 - (4) Select the name of your printer from the **Product** list and click **Maintenance**.
- 3 Print the pattern.

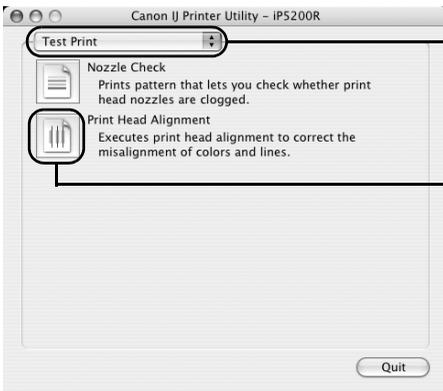

(1) Select **Test Print** from the pop-up menu.

(2) Click **Print Head Alignment**.

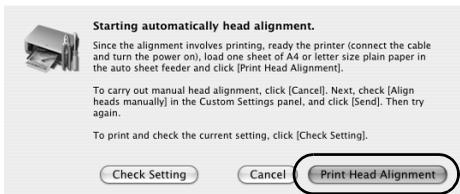


(3) Read the message and click **Print Head Alignment**.

Important It takes about four minutes to complete printing. Do not open the Top Cover while printing.

Note Clicking **Check Setting** prints the current settings and finishes the print head alignment.

4 Check the printed pattern.

If the pattern is printed as shown below, the Print Head is aligned automatically. The printer is now ready to use.

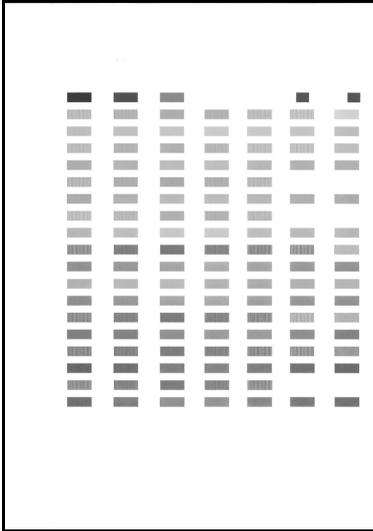

-  **Note**
- If the pattern is not printed successfully, refer to “Eleven flashes” in [“Handling Error Messages”](#) on page 77.
 - If results of Automatic Print Head Alignment are not satisfactory, refer to “Routine Maintenance” of the *User’s Guide* and align the Print Head manually.
 - The pattern is printed in black and blue.

Troubleshooting

This section provides troubleshooting tips for the most common printing problems. Troubleshooting usually falls into one of the following categories.

- **“Cannot Install the Printer Driver”** on page 65
- **“Cannot Connect to PC Properly”** on page 66
- **“Print Results Not Satisfactory or Contains Errors”** on page 67
- **“Troubleshooting Printer Hardware”** on page 70
- **“Paper Does Not Feed Properly”** on page 72
- **“Paper Jams”** on page 73
- **“Handling Error Messages”** on page 77
- **“An Error Message Appears on the Screen”** on page 79
- **“Cannot Print Properly from the Digital Camera”** on page 82


Refer to the *User’s Guide* for additional information on topics not covered in this section.

Windows


When an Error Occurs

When an error occurs in printing such as the printer is out of paper or paper jams, a troubleshooting message is displayed automatically. Take the appropriate action described in the message.

The message may vary depending on the version of your Windows operating system.

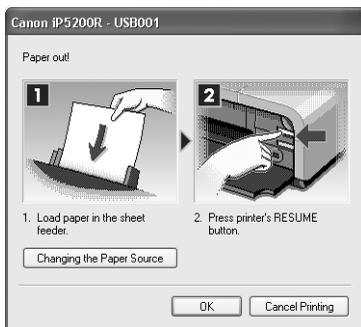

Cannot Install the Printer Driver

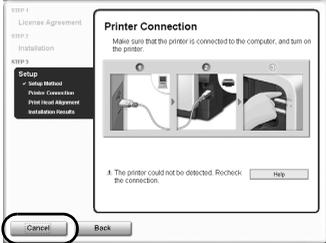Problem	Possible Cause	Try This
Cannot Install the Printer Driver	Installation procedure not followed correctly	<p>Follow the <i>Setup Guide</i> packaged with your printer for proper printer driver installation.</p> <p>Windows</p> <p>If the installer was forced to be terminated due to an error, Windows may be unstable. Remove the CD-ROM from the CD-ROM drive and restart your computer. Reinstall the printer driver. If this problem persists, refer to your Windows documentation for more information.</p>
	Installation does not start automatically when the <i>Setup Software & User's Guide CD-ROM</i> is inserted into the drive	<p>Windows</p> <p>If the printer driver installation did not start automatically when you inserted the <i>Setup Software & User's Guide CD-ROM</i> into the CD-ROM drive:</p> <ol style="list-style-type: none"> 1. Click Start and select My Computer. 2. Double-click the CD-ROM icon. <p>For non-Windows XP, open the My Computer window, and then double-click the CD-ROM icon.</p> <p>Macintosh</p> <p>Double-click the CD-ROM icon on your desktop to start installation.</p> <p>If the CD-ROM icon is not displayed on the desktop, there is a problem with the CD-ROM. Contact the Customer Care Center.</p>
	<p>Windows</p> <p>Unable to proceed beyond the Printer Connection screen</p>	 <p>Reinstall the printer driver.</p> <ol style="list-style-type: none"> 1. Click Cancel on the Printer Connection screen. 2. Click Start Over on the Installation Failure screen. 3. Click Back on the screen that appears next. 4. Click Exit on the Welcome screen, then remove the CD-ROM. 5. Turn the printer off. 6. Check the cable connection. 7. Restart the computer. 8. Make sure no other applications (including anti-virus programs) are running. 9. Carefully follow the procedures described in the <i>Setup Guide</i> and reinstall the driver.

Cannot Connect to PC Properly



Problem	Possible Cause	Try This
<p>Printing Speed Is Slow / USB 2.0 Hi-Speed Connection Does Not Work</p>	<p>Your environment is not fully compatible with USB 2.0.</p>	<p>If your environment is not fully compatible with USB 2.0, the printer will operate at a lower speed provided under USB 1.1.</p> <p>Check the following to ensure that your PC environment supports USB 2.0 Hi-Speed connection.</p> <ul style="list-style-type: none"> ● The USB port on your PC supports USB 2.0 Hi-Speed connection. ● Both the USB cable and USB hub support USB 2.0 Hi-Speed connection. Be sure to use a certified USB 2.0 Hi-Speed cable. You are recommended to use the cable no longer than 3 meters. ● Your PC supports the USB 2.0 Hi-Speed connection. Obtain the latest version of the OS update program and install it on your PC. ● The USB 2.0 Hi-Speed driver operates properly. Obtain the latest version of the USB 2.0 Hi-Speed driver and install it on your PC. <p> Important For details on checking the above, contact the maker of your computer, USB cable, or USB hub.</p>
<p>Windows When you connect to a computer running Windows XP, the screen shows the warning message “High-SPEED USB Device Plugged into non-High-SPEED USB Hub”</p>	<p>Your environment is not fully compatible with USB 2.0.</p>	<p>See “Printing Speed Is Slow / USB 2.0 Hi-Speed Connection Does Not Work” on page 66.</p>

Print Results Not Satisfactory or Contains Errors

Problem	Possible Cause	Try This
Ink does not eject properly/Printing is Blurred/Colors are Wrong/White Streaks appear	Print Head nozzles are clogged	Open the Top Cover and check if all ink tank lamps are lit. See “Replacing an Ink Tank” on page 37. Print the nozzle check pattern to check for uneven ink output. See “Printing the Nozzle Check Pattern” on page 47. When a specific color is missing from the nozzle check pattern, clean the Print Head. See “Print Head Cleaning” on page 52.
	Print Head is misaligned	Perform Automatic Print Head Alignment. See “Aligning the Print Head” on page 60. If this does not solve the problem, refer to “Routine Maintenance” of the <i>User’s Guide</i> and align the Print Head manually.
	Paper loaded wrong side up	Check the print side of the paper. Note Follow the instructions packaged with your specialty media for loading and handling.
	Incorrect paper type	Windows On the Main tab of the printer driver, ensure that the Media Type selected matches the paper loaded. Macintosh In the Print dialog box of the printer driver, select Quality & Media from the pop-up menu, and then ensure that the Media Type selected matches the paper loaded.
	Glossy photo paper other than the Canon specialty media is used	Select Other Photo Paper from Media Type . It may resolve the problem. Load one sheet at a time and remove each sheet as soon as it is printed.
	Print Quality is not set properly	Be sure to set the Print Quality setting to High in Windows, or Fine in Macintosh. Windows 1. Open the printer properties dialog box. 2. On the Main tab, click High for the Print Quality setting. When you cannot choose the High setting or when the print quality does not improve, select Custom , click Set and then adjust the Quality bar for higher print quality. Macintosh 1. Open the Print dialog box. 2. Select Quality & Media from the pop-up menu and then click Detailed Setting . 3. Drag the Print Quality slide bar to the Fine end.

Troubleshooting

Problem	Possible Cause	Try This
Printed Ruled Lines are Displaced	Print Head is misaligned	Align the Print Head. See “Aligning the Print Head” on page 60.
	Print Quality not set properly	<p>Be sure to set the Print Quality setting to High in Windows, or Fine in Macintosh.</p> <p>Windows</p> <ol style="list-style-type: none"> 1. Open the printer properties dialog box. 2. On the Main tab, click High for the Print Quality setting. When you cannot choose the High setting or when the print quality does not improve, select Custom, click Set and then adjust the Quality bar for higher print quality. <p>Macintosh</p> <ol style="list-style-type: none"> 1. Open the Print dialog box. 2. Select Quality & Media from the pop-up menu and then click Detailed Setting. 3. Drag the Print Quality slide bar to Fine end.
Printed Paper Curls or Ink Blots	Paper being used is too thin	Use High Resolution Paper, Photo Paper Pro or other Canon specialty paper to print images that have high color saturation.
	Incorrect paper type	<p>Windows</p> <p>On the Main tab of the printer driver, ensure that the Media Type selected matches the paper loaded.</p> <p>Macintosh</p> <p>In the Print dialog box of the printer driver, select Quality & Media from the pop-up menu, and then ensure that the Media Type selected matches the paper loaded.</p>
Printed Surface is Scratched/Back of Paper is Smudged	Inappropriate paper type is used	<p>Check to see if the paper you are printing on is too thick or curled. See “Print Media to Avoid” on page 4.</p> <p>Note that smudging may occur at the top and bottom edges of the paper when using Borderless Printing. Ensure that the paper you are using is compatible with Borderless Printing.</p>
	Paper feed roller is dirty	<p>Clean the paper feed roller. See “Paper Does Not Feed Properly” on page 72.</p>
	Inside of the printer is dirty	<p>If the inside of the printer is dirty, printed paper may be smudged. Periodically clean the inside of the printer. See “Cleaning the Inside of the Printer” in the <i>User’s Guide</i>.</p>

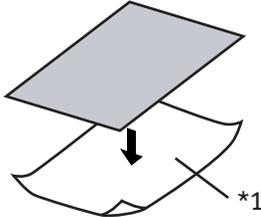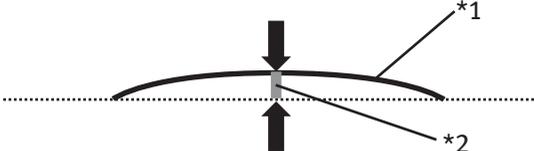Problem	Possible Cause	Try This
Printed Surface is Scratched/Back of Paper is Smudged	Thick paper is used	<p>Select the Prevent paper abrasion check box to widen the clearance between the Print Head and the loaded paper.</p> <p> Note Clear the Prevent paper abrasion check box once printing is complete.</p> <p> Windows</p> <ol style="list-style-type: none"> 1. Open the printer properties dialog box. 2. Click the Maintenance tab and then Custom Settings. <p> Important In Windows XP and Windows 2000 When not logged on as a computer administrator or Administrators, you cannot open the Custom Settings dialog box. For further information on how to log on as an administrator, refer to your Windows documentation.</p> <ol style="list-style-type: none"> 3. Select the Prevent paper abrasion check box and click Send. Click OK when the confirmation message appears. <p> Macintosh</p> <ol style="list-style-type: none"> 1. Open the Canon IJ Printer Utility dialog box. 2. Select Custom Settings from the pop-up menu. 3. Select the Prevent paper abrasion check box. <p>When the Prevent paper abrasion check box is selected in the printer properties dialog box (Windows) or selected from Custom Settings in the Canon IJ Printer Utility dialog box (Macintosh), the setting is also applied under direct printing with the digital camera.</p> <p> Note Paper abrasion can be prevented by pressing the RESUME/CANCEL button on the printer. With the printer on, hold down the RESUME/CANCEL button until the POWER lamp flashes green seven times, and then release the button. To cancel the setting, turn off the printer.</p>
	Media is curled	<p>If the paper is curled, it may become marked or not feed properly. Use paper after correcting paper curl as follows.</p> <ol style="list-style-type: none"> 1. Place the paper on a flat surface with the print side^{*1} face up, then cover it with plain regular paper to avoid damaging the surface. 2. Roll up the paper in the opposite direction as shown in the figure below. <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>(1)</p>  </div> <div style="text-align: center;"> <p>(2)</p>  </div> </div> <ol style="list-style-type: none"> 3. Check the printing paper if paper curl is corrected within approximately 2 to 5 mm / 0.08 to 0.2 in^{*2}. It is recommended to print the curl-corrected paper one sheet at a time. <div style="text-align: center;">  </div>

Troubleshooting Printer Hardware


Problem	Possible Cause	Try This
Printer Does Not Start or Printer Stops During Print Jobs	Ink tank is empty	<p>If the ink tank lamp is flashing fast, ink is empty. Replace the ink tank and close the Top Cover. If printing is not finished yet, just press the RESUME/CANCEL button on the printer to continue printing in the “no ink” state. Replace the ink tank as soon as possible after printing finishes.</p> <p>Continuing to print in the “no ink” state may cause damage to the printer. See “Replacing an Ink Tank” on page 37.</p> <p> Note If multiple ink tank lamps are flashing, check how fast they flash. Fast flashing (at about one second interval) indicates the ink is empty. Slow flashing (at about three second interval) indicates ink is low. For details on different flashing speeds, see “Getting the Ink Level Information” on page 38.</p>
	Ink tank is not installed in the correct position	<p>If an ink tank lamp is flashing even though ink remains in that ink tank, it is inserted in the wrong position. Make sure that the correct ink tank color is inserted in each position.</p> <p>See “Replacing an Ink Tank” on page 37.</p>
	Ink tank is not fully inserted	<p>When the ink tank lamp is unlit, press the  mark on the ink tank until it clicks into place. The ink tank lamp lights red when the ink tank is fully inserted.</p> <p>Make sure all of the orange tape is peeled off the ink tank as illustrated in Figure 1. If any orange parts are left like in Figure 2, remove all of the orange parts.</p> <div data-bbox="665 746 1202 1041" style="border: 1px solid black; padding: 10px;"> <p>(1) Correct * An L-shaped notch appears on the ink tank.</p> <p>(2) Incorrect There remains the orange tape. Peel off the tape completely along the perforation.</p>  </div>

Problem	Possible Cause	Try This
Printer Does Not Start or Printer Stops During Print Jobs	There may be problems with your operating system	<p>Restart your computer. It may solve the problem. Delete an undesired print job, if there is any. Use Canon IJ Status Monitor in Windows or Printer Setup Utility (or Print Center) in Macintosh for the deletion.</p> <p>Windows</p> <ol style="list-style-type: none"> 1. Open the printer properties dialog box. See “Opening the Printer Properties Dialog Box Directly from the Start Menu” on page 35. 2. Click the Maintenance tab and then View Printer Status. 3. Click Display Print Queue. 4. Select Cancel All Documents in the Printer menu. <p> Note In Windows XP and Windows 2000 The print jobs may not be selected.</p> <ol style="list-style-type: none"> 5. When the confirmation message is displayed, click Yes. The print job is deleted. <p> Note In Windows Me and Windows 98 Click to select an undesired document and select Purge Print Documents in the Printer menu.</p> <p>Macintosh</p> <ol style="list-style-type: none"> 1. Select Applications from the Go menu. 2. Double-click the Printer Setup Utility icon in the Utilities folder. When using Mac OS X v.10.2, double-click the Print Center icon. 3. Double-click the name of your printer displayed under Name in the Printer List. 4. Click to select an undesired document and click . The print job is deleted.
Cannot Print to End of Job	Incorrect page size is selected	<p>Ensure that the page size setting matches the size of the paper loaded in the printer:</p> <ul style="list-style-type: none"> ● Check the Paper Size setting from within your application to ensure that it matches the size of the paper loaded. ● Check Paper Size on the Page Setup tab in the printer properties dialog box of the printer driver (Windows) or the Page Setup dialog box of the printer driver (Macintosh) to ensure that it matches the size of the paper loaded.
	<p>Windows</p> <p>The size of the print data is too large</p>	<p>Check the size of the print data. For Windows XP and Windows 2000, if the size of the data is too large, part of it may be lost. When the spool format is EMF, follow the procedure below.</p> <ol style="list-style-type: none"> 1. Open the printer properties dialog box. 2. On the Page Setup tab, click Print Options. 3. Select the Reduce spool data size check box, and click OK. <p> Important When Reduce spool data size is set, the print quality may be degraded.</p>
	Performing automatic duplex printing	<p>Select Use reduced printing in the printer driver. It may solve the problem.</p> <p> Important Print layout may be altered with the reduced printing function.</p> <p>Windows</p> <ol style="list-style-type: none"> 1. Open the printer properties dialog box. 2. Click Print Area Setup in the Page Setup tab and select Use reduced printing. <p>Macintosh</p> <ol style="list-style-type: none"> 1. In the Print dialog box, select Duplex Printing & Margin from the pop-up menu. 2. Select Automatic Duplex Printing, and select Use reduced printing in Print Area.

Paper Does Not Feed Properly




Problem	Possible Cause	Try This
Paper Does Not Feed Properly	Inappropriate paper type is used	Check to see if the paper you are printing on is too thick or curled. See “Print Media to Avoid” on page 4. Flatten paper when it is curled.
	Paper Feed Roller is dirty	<p>Follow the steps described below to clean the Paper Feed Rollers. Cleaning the Paper Feed Rollers consumes them, so perform this procedure only when necessary.</p> <ol style="list-style-type: none"> 1. Ensure that the printer is on and there is no paper loaded in the printer. 2. Select the Paper Feed Roller of the Auto Sheet Feeder or Cassette by pressing the Paper Feed Switch on the printer. 3. Hold down the RESUME/CANCEL button and release after the POWER lamp flashes green three times. The Paper Feed Roller rotates as it cleans. 4. Repeat step 3 twice. 5. Load three or more sheets of Letter-sized plain paper lengthways in the Auto Sheet Feeder or Cassette selected in step 2. 6. Hold down the RESUME/CANCEL button and release after the POWER lamp flashes green three times. Paper is fed and output. 7. Repeat step 6 three times. <p>If repeating this procedure three times or more does not solve the problem, contact the Customer Care Center.</p>
	Paper is loaded incorrectly	Always load paper in the portrait orientation in the Auto Sheet Feeder or Cassette regardless of the print direction selected in the printer driver. Ensure that paper is loaded correctly. Slide the paper guides against the paper stack. See “Loading Paper” on page 4.

Paper Jams

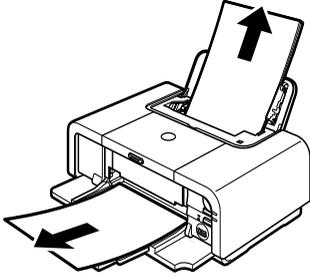
Problem	Possible Cause	Try This
Paper Jams	Paper jams in the Paper Output Slot/ Auto Sheet Feeder	<p>Remove the paper according to the following procedure.</p> <ol style="list-style-type: none"> 1. Slowly pull the paper out, either from the Auto Sheet Feeder or from the Paper Output Slot, whichever is easier.  <ul style="list-style-type: none"> • If the paper tears and a piece remains inside the printer, open the Top Cover and remove it. <p>▲ Caution Be careful not to touch the components inside the printer at this time.</p> <p>After removing all paper, close the Top Cover, turn the printer off and turn it back on.</p> <ul style="list-style-type: none"> • If you cannot pull the paper out, turn the printer off and turn it back on. The paper will be ejected automatically. <ol style="list-style-type: none"> 2. Reload the paper into the printer and press the RESUME/CANCEL button on the printer. <p>If you have turned off the printer in step 1, you will need to retry printing, because this operation cancels any print jobs in progress.</p> <p>Note When reloading the paper into the printer, refer to “Paper Does Not Feed Properly” on page 72 to confirm that you are using the correct paper and are loading it into the printer correctly.</p> <p>If you cannot remove the paper or the paper tears inside the printer, or if the paper jam error continues after removing the paper, contact the Customer Care Center.</p>

Troubleshooting

Problem	Possible Cause	Try This
Paper Jams	Landscape Credit Card-sized Paper Jams inside the Printer	<p>You cannot load Credit Card-sized paper in the landscape orientation. Remove the paper following the procedure below.</p> <ol style="list-style-type: none"> 1. Load a sheet of Credit Card-sized paper in the Auto Sheet Feeder. Do not load it in the landscape orientation. 2. Press the POWER button on the printer to turn off the power. It may take a while for the printer to turn completely off after the POWER button is pressed. 3. Press the POWER button again on the printer to turn on the power. The paper is fed and the jammed paper is ejected accordingly. <p>If you cannot remove the jammed paper or the paper jam error continues after removing the paper, contact the Customer Care Center.</p>
	Landscape 4" x 6" / 101.6 x 152.4 mm size paper loaded in the Cassette jams inside the printer	<p>Load 4" x 6" / 101.6 x 152.4 mm media in the portrait orientation regardless of the print direction. Remove the paper following the procedure below.</p> <ol style="list-style-type: none"> 1. Press the POWER button of the printer to turn off the power. Then, open the Rear Cover. 2. Fold a piece of Letter-sized plain paper in four, push it in until it hits the jammed paper, then pull out the paper folded in four. 3. Close the Rear Cover, then press the POWER button of the printer to turn on the power. Wait until the jammed paper is automatically ejected. <p>If you cannot remove the jammed paper or the paper jam error continues after removing the paper, contact the Customer Care Center.</p>

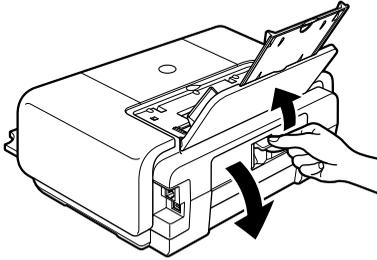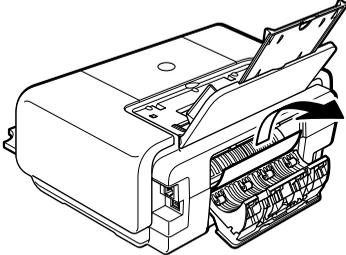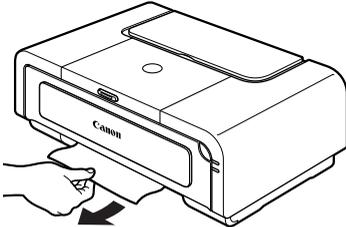Problem	Possible Cause	Try This
Paper Jams	Paper jams inside the printer (Transport Unit)	<p>Remove the paper according to the following procedure.</p> <ol style="list-style-type: none"> 1. Open the Rear Cover.  <ol style="list-style-type: none"> 2. When you can see the jammed paper, slowly pull the paper out.  <p>▲ Caution Be careful not to touch the components inside the printer. If you cannot pull the paper out, turn the printer off and turn it back on. The paper will be ejected automatically.</p> <ol style="list-style-type: none"> 3. Close the Rear Cover. 4. If you could not extract the paper in step 2, remove the Cassette. 5. Slowly pull the jammed paper out.  <ol style="list-style-type: none"> 6. If any paper is sticking out of the Cassette, reload the paper in the Cassette. 7. Insert the Cassette into the printer again, and press the RESUME/CANCEL button on the printer. <p>If you have turned off the printer in step 2, you will need to retry printing, because this operation cancels any print jobs in progress.</p> <p>Note When reloading the paper into the printer, refer to “Paper Does Not Feed Properly” on page 72 to confirm that you are using the correct paper and are loading it into the printer correctly.</p> <p>If you cannot remove the paper or if the paper tears inside the printer, or if the paper jam error continues after removing the paper, contact the Customer Care Center.</p>

Troubleshooting

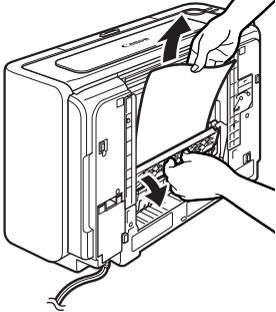Problem	Possible Cause	Try This
Paper Jams	Paper jams inside the printer (Duplex Transport Section)	<p>Remove the paper according to the following procedure.</p> <ol style="list-style-type: none">1. Remove the Cassette. If the paper is loaded in the Auto Sheet Feeder, remove the paper from the Auto Sheet Feeder and close the Paper Support.2. Stand the printer with the rear side down.3. Slowly pull the jammed paper out while pulling the green cover toward you.  <p>▲ Caution Put back the printer immediately after removing the jammed paper.</p> <ol style="list-style-type: none">4. If any paper is sticking out of the Cassette, reload the paper in the Cassette. Reload paper in the Auto Sheet Feeder, if necessary.5. Insert the Cassette into the printer.6. Press the RESUME/CANCEL button on the printer. <p>Note When reloading the paper into the printer, refer to “Paper Does Not Feed Properly” on page 72 to confirm that you are using the correct paper and are loading it into the printer correctly.</p> <p>If you cannot remove the paper or if the paper tears inside the printer, or if the paper jam error continues after removing the paper, contact the Customer Care Center.</p>

Handling Error Messages

When a printer error occurs, the **ALARM** lamp flashes orange in the way as shown below. The number of flashes (orange) indicates the type of error that has occurred. Count the flashes and take the appropriate action to correct the error.



Number of Flashes	Possible Cause	Try This
Two flashes	Printer is out of paper/Paper does not feed	Reload paper in the Auto Sheet Feeder or Cassette and press the RESUME/CANCEL button.
Three flashes	Paper jam/Paper Output Tray is closed	If paper is jammed, remove the jammed paper, reload paper in the printer, then press the RESUME/CANCEL button. If the Paper Output Tray is closed, open it. See "Paper Jams" on page 73.
Four flashes	The ink tank installed may not be installed properly/The ink has run out	<p>Possible causes are as follows:</p> <ul style="list-style-type: none"> ● The ink tank may not be installed properly (The lamp on the ink tank is off). Install the appropriate ink tank. ● The ink has run out (The lamp on the ink tank flashes). Replace the ink tank, and close the Top Cover. <p>If printing is in progress and you want to continue printing, press the RESUME/CANCEL button with the ink tank installed. Then printing can continue under the ink out condition. Replace the empty ink tank immediately after the printing. The printer may be damaged if printing is continued under the ink out condition.</p> <p> Note If multiple ink tank lamps are flashing, check how fast they flash. Fast flashing (at about one second interval) indicates the ink is empty. Slow flashing (at about three second interval) indicates ink is low. For details on different flashing speeds, see "Getting the Ink Level Information" on page 38.</p>
Five flashes	Print Head not installed/Print Head not installed correctly/Defective Print Head	Install the Print Head. If the Print Head is already installed, remove the Print Head and reinstall it. If this error still remains, the Print Head may be damaged. Contact the Customer Care Center.
Six flashes	Inner Cover is open	Close the Inner Cover and press the RESUME/CANCEL button. Do not open or close the Inner Cover during printing because this can damage the printer.
Seven flashes	The ink tank is not installed in the appropriate position	<p>Possible causes are as follows:</p> <ul style="list-style-type: none"> ● Some ink tanks are not installed in place. ● More than one ink tanks of the same color are installed. <p>Confirm that the ink tanks are installed in the appropriate positions. See "Replacing an Ink Tank" on page 37.</p>
Eight flashes	Waste ink absorber almost full	<p>The printer has a built-in waste ink absorber for the ink used during print head cleaning, for example.</p> <p>Eight flashes indicates that the waste ink absorber is nearly full. Press the RESUME/CANCEL button to cancel the error so you can continue printing. Before the waste ink absorber becomes completely full, contact the Customer Care Center. (You will need to replace a particular part of the printer.)</p> <p> Important Canon recommends that you call for service as soon as this error occurs. Once the waste ink absorber becomes completely full, printing cannot be performed until the Waste ink tank is replaced.</p>

Troubleshooting

Number of Flashes	Possible Cause	Try This
Nine flashes	A specified period of time has elapsed without receiving a response from the digital camera/The digital camera or digital video camcorder connected is not compatible with this printer	<p>Disconnect the camera cable and reconnect it.</p> <p> Note Depending on the model or brand of your device, you may have to select a print mode compliant with PictBridge before connecting the device. You may also have to turn on the device or select Play mode manually after connecting the device to the printer. Perform necessary operations according to the instruction manual supplied with your device.</p> <p>If the error is still unresolved, there is a possibility that you are using a digital camera or digital video camcorder that is not supported by this printer. Use a digital camera or digital video camcorder compatible with this printer.</p>
Ten flashes	Cannot print on both sides of the page	<p>The size of paper may not be compatible with automatic duplex printing. Pressing the RESUME/CANCEL button will discharge the paper, and restart printing from the front side of the next paper. The reverse side will not be printed when an error occurs.</p> <p>The sizes of media suitable for automatic duplex printing are Letter and 5" x 7"/127.0 x 177.8 mm.</p>
Eleven flashes	Automatic print head alignment failed	<p>Possible causes are as follows:</p> <ul style="list-style-type: none"> ● Letter-sized paper is not loaded on the Auto Sheet Feeder. Press the RESUME/CANCEL button on the printer to clear the error, then load one sheet of Letter-sized paper in the Auto Sheet Feeder. Automatic print head alignment cannot be performed using paper from the Cassette. For automatic print head alignment, always load paper in the Auto Sheet Feeder. ● Print Head nozzles are clogged. Press the RESUME/CANCEL button on the printer to clear the error, and then print out the nozzle check pattern to examine the print head condition. See "Printing the Nozzle Check Pattern" on page 47 for information on how to print a nozzle check pattern. ● The Paper Output Slot has been exposed to a strong light source preventing correct print head alignment. Press the RESUME/CANCEL button to clear the error and move the printer to a darker location. <p>After carrying out the above measures, if the problem continues after aligning the Print Head again, press the RESUME/CANCEL button to clear the error, and then perform manual print head alignment. For details on manual print head alignment, refer to "Aligning the Print Head" in the <i>User's Guide</i>.</p>
Thirteen Flashes	The remaining level of the ink tank cannot be correctly detected	<p>An ink tank that was once empty is installed. Replace the ink tank.</p> <p>Printing under the situation may damage the Print Head. Canon shall not be liable for any printer malfunction or damage caused by refilled ink tanks.</p> <p>If you want to continue printing with the refilled ink tank installed, press and hold the RESUME/CANCEL button for at least 5 seconds, and then release it. Using refilled ink tanks are memorized.</p> <p>* This operation will release the function for detecting the remaining ink level.</p>
Fourteen flashes	The ink tank cannot be recognized	<p>The ink tank may not be compatible with this printer (The lamp on the ink tank is off). Install the appropriate ink tank. See "Replacing an Ink Tank" on page 37.</p>
Fifteen flashes	The ink tank cannot be recognized	<p>Ink tank errors have occurred (The lamp on the ink tank is off). Replace the ink tank. See "Replacing an Ink Tank" on page 37.</p>

Number of Flashes	Possible Cause	Try This
 Note	POWER (green) and ALARM (orange) lamps flash alternately	An error that requires contacting the Customer Care Center may have occurred. Disconnect the printer cable from the printer, and then turn the printer off and unplug the printer from the power supply. Plug the printer back in and turn the printer back on after leaving it for a while. If the problem remains, contact the Customer Care Center.

An Error Message Appears on the Screen

Problem	Possible Cause	Try This
 Windows Writing Error/ Output Error or Communication Error in USBnnn or MPUSBPRNnn (“n” represents a number)	Printer is not ready	Ensure that the POWER lamp lights. If the POWER lamp is off, turn the printer on. The POWER lamp will flash green when the printer is initializing. Wait until the POWER lamp stops flashing. When the ALARM lamp is flashing orange, an error may have occurred in the printer. For details on how to resolve the error, refer to “Handling Error Messages” on page 77.
	Paper is not loaded	Load paper and press the RESUME/CANCEL button. If paper is loaded, ensure that the paper source is selected correctly. Select the paper source with the Paper Feed Switch on the printer, or select it in the printer driver.
	Printer port setting does not match the interface connected to the printer	Check the printer port settings. <ol style="list-style-type: none"> 1. Click Start and select Control Panel, Printers and Other Hardware, and then Printers and Faxes. For non-Windows XP, click Start, select Settings, and then Printers. 2. Select the icon of your printer. 3. Open the File menu and select Properties. 4. Click the Ports tab (or the Details tab) to confirm the port settings. A USB port is selected if either USBnnn (Canon iP5200R) or MPUSBPRNnn (Canon iP5200R) (where n is a number) is indicated. If the port setting is not correct, change the port setting according to the interface you are using on the Ports tab (or the Details tab), or reinstall the printer driver.
	Faulty connection	Ensure that the printer cable is securely connected to the computer.  Note <ul style="list-style-type: none"> ● If using a switching hub or other device, disconnect the printer and reconnect it directly to the computer and try printing again. If successful, the problem may have been with the device. ● There could also be a problem with the cable(s). Replace the cable(s) and try printing again.
	Printer driver is not installed properly	Uninstall then reinstall the printer driver. <ol style="list-style-type: none"> 1. Click Start, and select All Programs (or Programs), the name of your printer, and Uninstall. 2. Follow the on-screen instructions to uninstall the driver. 3. Follow the procedures described in the <i>Setup Guide</i> and reinstall the printer driver.

Troubleshooting

Problem	Possible Cause	Try This
 Writing Error/Output Error in CNBJNP nnnnnn	Printer is not ready	Ensure that the POWER lamp lights green. If the POWER lamp is off, turn the printer on. The POWER lamp will flash green when the printer is initializing. Wait until the POWER lamp stops flashing. When the ALARM lamp is flashing orange, an error may occur in the printer. For details on how to resolve the error, refer to “Handling Error Messages” on page 77.
	Paper is not loaded	Load paper and press the RESUME/CANCEL button. If paper is loaded, ensure that the paper source is selected correctly. Select the paper source with the Paper Feed Switch on the printer, or select it in the printer driver.
	Printer port setting does not match the interface connected to the printer	Check the printer port settings. 1. Open the Printer Properties dialog box. See “Opening the Printer Properties Dialog Box Directly from the Start Menu” on page 35. 2. Click the Port tab (or the Details tab) and select CNBJNPnnnnn (“n” represents a number) as the printer port to be used.
	The settings of both the access point and the printer are not identical	Check the settings of the access point and modify the settings of printer as same as those of the access point. For information on the access point settings, refer to the access point manual. For information on how to set a WEP, refer to “How to set a WEP key” of “Troubleshooting” in the <i>Network Guide</i> .
	The network setting of the computer is not correct	Make sure that the computer can communicate with the access point.
	The radio status is poor	Adjust the installation positions and the antenna direction while monitoring the radio status with IJ Network Tool.
	The distance between printer and access point is too far	Relocate the printer and access point as closely together as is possible.
	There is an obstruction or a source of radio wave interference	Communication between different rooms or floors is generally poor. Adjust the installation locations of the devices. There may be a device such as a microwave oven that is using the same frequency bandwidth as the wireless station. Place the wireless LAN devices as far away from the radio wave interference source as possible.
	Printer setup is not completed/The printer driver is not installed	Complete the printer setup. If the printer driver is not installed, follow the procedure described in the <i>Setup Guide</i> to install the printer driver.
	Access control is configured on the access point	On the access point, additionally register the IP address or MAC address of the printer and the computer, or disable the access control.
	The access control is set to the printer	Print out the network setting information and verify if the IP address filtering or the MAC address filtering is enabled on the printer. For details on printing the network setting information, see “Printing Out Network Setting Information” of “Changing and Confirming Network Settings” in the <i>Network Guide</i> . If the printer is configured to use the access control, register the IP address or the MAC address of your computer to the printer. For details on settings, see “Changing the Settings in the Access Control Tab (Windows)” or “Changing the Settings in the Access Control Tab (Macintosh)” of “Changing and Confirming Network Settings” in the <i>Network Guide</i> .

Problem	Possible Cause	Try This
Cannot print with Automatic Duplex Printing	Incorrect paper size is selected	<p>Check the Paper Size setting from within your application to ensure that it matches the size of the paper loaded.</p> <p>Check Paper Size on the Page Setup tab in the printer properties dialog box (Windows) or the Page Setup dialog box (Macintosh) to ensure that it matches the size of the paper loaded.</p> <p>The sizes of media suitable for automatic duplex printing are Letter and 5" x 7" / 127.0 x 177.8 mm.</p> <p> Note To print on both sides of the page manually, follow the procedure below.</p> <p> Windows On the Page Setup tab, clear the Automatic check box. Then try printing again.</p> <p> Macintosh The manual duplex printing function cannot be used.</p>
 Macintosh "Error No.: 300"	Printer is not ready	<p>Ensure that the POWER lamp lights green.</p> <p>If the POWER lamp is off, turn the printer on.</p> <p>The POWER lamp will flash green when the printer is initializing. Wait until the POWER lamp stops flashing.</p> <p>When the ALARM lamp is flashing orange, an error may have occurred in the printer. For details on how to resolve the error, refer to "Handling Error Messages" on page 77.</p>
	Printer is not properly connected	<p>Ensure that the printer is securely connected to the computer.</p> <p> Note</p> <ul style="list-style-type: none"> ● If using a switching hub or other device, disconnect the printer and reconnect it directly to the computer and try printing again. If successful, the problem may have been with the device. ● There could also be a problem with the cable(s). Replace the cable(s) and try printing again.
	Printer you want to use is not selected on the Printer pop-up menu on the Print dialog box	<p>Select iP5200R on the Printer pop-up menu on the Print dialog box.</p> <p>If iP5200R does not appear on the Printer pop-up menu, do the following to confirm the printer settings:</p> <ol style="list-style-type: none"> 1. Select Edit Printer List from the Printer pop-up menu on the Print dialog box. The Printer List opens. 2. Ensure that the iP5200R is selected in the Printer List. If iP5200R is not displayed in the Printer List, click Add to add the printer. For details, refer to the Printer Setup Utility Help in the Mac Help.
 Macintosh "Error No.: 306"	Cannot print over the wireless LAN	<p>Make sure that the printer is turned on. The printer cannot communicate through the network, refer to "Troubleshooting" in the <i>Network Guide</i>.</p>
 Macintosh "Error No.: 1700"	Waste ink absorber almost full	<p>The printer has a built-in waste ink absorber to hold the ink used during print head cleaning, for example. This error message indicates that this ink absorber is nearly full.</p> <p>Press the RESUME/CANCEL button to clear the error so you can continue printing. Before the waste ink absorber becomes completely full, contact the Customer Care Center.</p> <p>When you experience this error, you will need to call for servicing to replace the waste ink absorber and to check the printer for proper operation.</p>
 Macintosh "Error No.: 1851"	Inner Cover is open when printing starts	<p>Close the Inner Cover, then press the RESUME/CANCEL button.</p>
 Macintosh "Error No.: 1856"	Inner Cover is opened while printing	<p>Close the Inner Cover, then press the RESUME/CANCEL button.</p> <p>One page of the print data being sent at the time of the error will be erased, so print that page again.</p>

Problem	Possible Cause	Try This
 “Error No.: 2001”	A specified period of time has elapsed without receiving a response from the digital camera/The digital camera or digital video camcorder connected is not compatible with this printer	Disconnect the camera cable and reconnect it.  Note Depending on the model or brand of your device, you may have to select a print mode compliant with PictBridge before connecting the device. You may also have to turn on the device or select Play mode manually after connecting the device to the printer. Perform necessary operations according to the instruction manual supplied with your device. If the error is still unresolved, there is a possibility that you are using a digital camera or digital video camcorder that is not supported by this printer. Use a digital camera or digital video camcorder compatible with this printer.
 “Error No.: 2500”	Automatic Print Head alignment failed	See “Eleven flashes” in “Handling Blue Messages” on page 77.

Cannot Print Properly from the Digital Camera

The following are the possible errors that may occur when printing directly from a digital still camera or digital video camcorder*, and the countermeasures to eliminate them.

*Hereafter, the digital still camera and digital video camcorder are collectively called a digital camera or camera.

Camera Error Message	Possible Cause	Try This
Printer in use/Printer warming up	Images are being printed from the computer	Wait until printing ends. The printer automatically starts printing the images from the camera after completing the current printing.
	The printer is warming up	Wait until warm-up ends. When it is ready, the printer starts printing automatically.
No paper /Paper Error	No paper is loaded	Load paper in either the Auto Sheet Feeder or Cassette which you have selected with the Paper Feed Switch on the printer, and select Continue ¹ in the display on your camera.
	The Paper Output Tray is closed	Open the Paper Output Tray to resume printing.
	The Inner Cover is open	Close the Inner Cover and select Stop in the display on your camera to stop printing.
Paper jam	A paper is jammed in the printer	Select Stop in the display on your camera to stop printing. Remove the jammed paper, load new paper, and press the RESUME/CANCEL button on the printer and retry printing.
Printer cover open	The Top Cover is open	Close the Top Cover on the printer.
No printhead	The Print Head is defective or not installed (The ALARM lamp on the printer flashes orange five times.)	Install a Print Head according to the <i>Setup Guide</i> . If the Print Head has already been installed, remove the Print Head and reinstall it. If the error still remains, the Print Head may be defective. Contact the Customer Care Center.
Waste tank (ink absorber ^{*2}) full	The waste ink absorber is nearly full	The printer has a built-in waste ink absorber to hold the ink used during print head cleaning, for example. This error message indicates that the waste ink absorber is nearly full. You can continue printing by selecting Continue ^{*1} on the display on your camera. However, because printing is disabled once the waste ink absorber becomes completely full and until the waste ink tank is replaced, you are recommended to contact the Customer Care Center as early as possible. (You will need to replace a particular part of the printer.)

Camera Error Message	Possible Cause	Try This
Low ink level	It is about time to replace the ink tank with a new one	Slow flashing (about three second in red) of an ink tank lamp indicates that ink in this tank is low. Prepare a new ink tank. Select Continue *1 in the display on your camera to resume printing.
No ink	The ink tank may not be installed properly (Printer ALARM lamp flashes orange four times/Ink tank lamp is off)	Install the appropriate ink tank.
	The ink has run out (Printer ALARM lamp flashes orange four times/Ink tank lamp flashes fast (at about one second interval))	Replace the ink tank, and close the Top Cover. If printing is in progress and you want to continue printing, select Continue *1 in the display on your camera with the ink tank installed. Then printing can continue under the ink out condition. Replace the empty ink tank immediately after the printing. The printer may be damaged if printing is continued under the ink out condition.  Note If multiple ink tank lamps are flashing, check how fast they flash. Fast flashing (at about one second interval) indicates the ink is empty. Slow flashing (at about three second interval) indicates ink is low. For details on different flashing speeds, see “Getting the Ink Level Information” on page 38.
	Some ink tanks are not installed in place, or more than one ink tanks of the same color are installed (Printer ALARM lamp flashes orange seven times/Ink tank lamp flashes fast (at about one second interval))	Confirm that the ink tanks are installed in the appropriate positions. See “Replacing an Ink Tank” on page 37.
	The ink tank may not be compatible with this printer (Printer ALARM lamp flashes orange fourteen times/Ink tank lamp is off)	Install the appropriate ink tank.
Ink Error/No ink	An ink tank that was once empty is installed (Printer ALARM lamp flashes orange thirteen times)	Replace the ink tank. Printing under the situation may damage the Print Head. Canon shall not be liable for any printer malfunction or damage caused by refilled ink tanks. If you want to continue printing with the refilled ink tank installed, press and hold the RESUME/CANCEL button for at least five seconds, and then release it. Using refilled ink tanks are memorized. * This operation will release the function for detecting the remaining ink level.
Hardware Error/No ink	Ink tank errors have occurred (Printer ALARM lamp flashes orange fifteen times)	Replace the ink tank.
Printer error	An error requiring servicing might have occurred (Printer POWER lamp flashes green and ALARM lamp flashes orange alternately)	Disconnect the cable between the printer and the camera, turn off the printer, and unplug the power cord of the printer from the power supply. After a while, plug the power cord of the printer back in, turn on the printer, and then reconnect the camera to the printer. If the same error occurs, contact the Customer Care Center.

*1 To resume printing, you can press the **RESUME/CANCEL** button on the printer instead of selecting **Continue**.

*2 The waste ink absorber absorbs ink used during cleaning, for example. If this message appears, you will need to call for servicing to replace the absorber and to check the printer for proper operation.



Note

- PictBridge or Canon Bubble Jet Direct compatible digital cameras can be connected to your printer for direct printing.
- This section describes errors that are indicated on Canon-brand PictBridge- or Bubble Jet Direct-compatible cameras. The error messages and operations may vary depending on the camera you are using.
For errors on non-Canon PictBridge-compatible cameras, count the number of flashes (in orange) the **ALARM** lamp on the printer makes and check for the cause of the error and take the appropriate action. For details, see [“Handling Error Messages”](#) on page 77.
- Connecting a digital camera not compatible with PictBridge or Bubble Jet Direct makes the **ALARM** lamp on your printer flash (in orange) nine times. In such a case, unplug the cable connecting the camera to the printer.
- A communication time out occurs if printing takes a long time or if it takes too much time to send data. This may stop printing. In such a case, disconnect the cable between the printer and the camera, and reconnect it. Then, turn the camera on, if it does not automatically turn on. If the problem is still unresolved, select some other photo and check if it can be printed or not.
- Depending on the model or brand of your PictBridge compliant device, you may have to select a print mode before connecting the device.
You may also have to turn on the device or select Play mode manually after connecting the device to the printer.
Perform necessary operations according to the instruction manual supplied with your device.
- The print head nozzles may be clogged if printing becomes faint or colors are incorrect. See [“When Printing Becomes Faint or Colors are Incorrect”](#) on page 46.
- If the paper is curled or its surface is scratched during printing, make sure that you are using the correct type of paper. If this error occurs even when you are using the correct type of paper, select **Prevent paper abrasion on Custom Settings** in the printer driver. See [“Print Results Not Satisfactory or Contains Errors”](#) on page 67.
- To disconnect the cable connected between the digital camera and printer, follow the procedure below.
 1. Disconnect the cable from the printer.
 2. Turn off the digital camera.
 3. Disconnect the cable from the digital camera.When disconnecting the cable, be sure to hold the connector by its sides.
- For the errors indicated on the camera and their solution, also refer to the user’s manual of the camera. For other troubles on the digital camera, contact the manufacturer.

Appendix

■ Printing Photographs Directly from a Canon Bubble Jet Direct Compatible Digital Camera

Let's take a look at the media types that can be set on the Canon Bubble Jet Direct compatible digital camera connected to this printer and their limitations.

Media Types for Digital Camera

When you connect a digital camera, you can use the following media:

Digital Camera Setting	Media Type
Card #1	Photo Paper Pro 4" x 6" / 101.6 x 152.4 mm
Card #2	Photo Paper Plus Glossy 4" x 6" / 101.6 x 152.4 mm
	Photo Paper Plus Semi-gloss 4" x 6" / 101.6 x 152.4 mm
	Glossy Photo Paper 4" x 6" / 101.6 x 152.4 mm
Card #3	Photo Paper Plus Glossy 5" x 7" / 127.0 x 177.8 mm
LTR	Photo Paper Pro Letter
	Photo Paper Plus Glossy Letter
	Photo Paper Plus Semi-gloss Letter
	Glossy Photo Paper Letter
A4	Photo Paper Pro A4
	Photo Paper Plus Glossy A4
	Photo Paper Plus Semi-gloss A4
	Glossy Photo Paper A4

-  **Note**
- For the digital camera operation method and troubleshooting, refer to your digital camera manual. For print error messages, see **“Cannot Print Properly from the Digital Camera”** on page 82.
 - By operating the digital camera, you can make the following prints:
 - You can make a standard print from the image displayed in the single display mode or in the index display mode.
 - You can print specified numbers of images, or make an index print by editing the DPOF.
 - For the images taken with an ExifPrint-compatible digital camera, the ExifPrint function can be used.
 - If date printing is set from the digital camera, the date when the photograph was taken is to be printed (excluding the index print).
 - Images will be scaled automatically according to the image size set on the digital camera and the size of the media set on the printer.

- The digital camera does not support the following functions:
 - Print quality setting
 - Printer maintenance
- Images other than Exif may not be index-printed.

Specifications

Printer

Maximum resolution (dpi):	9600 (horizontal)* x 2400 (vertical) * Ink droplets can be placed with a pitch of 1/9600 inch at minimum.
Print speed * * Print speed will vary depending on system configuration, software, document complexity, print mode and page coverage.	Black printing (text pattern) Max Speed (Custom Setting 5): 30 ppm Standard: 15.0 ppm Color printing Max Speed (Custom Setting 5): 24 ppm Standard: 11.7 ppm
Print width:	203.2 mm max. (8.0 inches) (for Borderless Printing: 215.9 mm / 8.5 inches)
Resident print control mode:	Canon extended mode
Receive buffer:	42 KB
Interface (USB):	USB 2.0 Hi-Speed / Direct Print Port * All operations are not guaranteed for computers standard-equipped with a USB 2.0 Hi-Speed interface. * Since the USB 2.0 Hi-Speed interface is fully upwardly compatible with USB Full-Speed (USB 1.1), it can be used at USB Full-Speed (USB 1.1). Wireless LAN Interface (IEEE802.11g/IEEE802.11b) Wired LAN Interface (RJ-45)
Acoustic noise level:	Approx. 34.7 dB (A) (in the highest print quality mode)
Operating environment:	Temperature: 5 to 35°C (41 to 95°F) Humidity: 10 to 90%RH (no condensation)
Storage environment:	Temperature: 0 to 40°C (32 to 104°F) Humidity: 5 to 95% RH (no condensation)
Power supply:	AC 110-120 V, 50/60 Hz AC 220-240 V, 50/60 Hz
Power consumption:	Standby: Approx. 4.5 W Printing: Approx. 19 W OFF: Approx. 0.4 W
Dimensions (with the Paper Support and Paper Output Tray retracted):	444 (W) x 309 (D) x 160 (H) mm 17.4 (W) x 12.1 (D) x 6.4 (H) inches
Weight:	7.5 kg (16.5 lb.)
Print Head:	Black (PGI-5BK): 512 nozzles Cyan, Magenta, Yellow, Black (CLI-8BK): 512 x 6 nozzles

Appendix

Network

Protocol	TCP/IP
Operating Systems	Windows XP/Windows 2000/Windows Me/Windows 98 Mac OS X v.10.2.1 to 10.3.x

Wireless LAN

Supported Networks	IEEE802.11g/IEEE802.11b
Interface	IEEE802.11g/IEEE802.11b Network Interface
Transfer Standard	IEEE802.11g/IEEE802.11b
Access Mode	CSMA/CA
Transmission Method	OFDM/DS-SS
Frequency Bandwidth	2.412 GHz - 2.462 GHz
Wireless Channel	1 to 11
Network Type	Infrastructure
Communication Distance	Indoors 50 m* * Effective range differs depending on the installation environment and location.
Security	Encryption by WPA-PSK (TKIP/AES), WPA2-PSK* (TKIP/AES), or WEP (64/128 bits), access control by IP address and MAC address filtering, passwords * When changing the encryption method to WPA2-PSK, the settings must be configured by using Canon iP5200R Network Configuration. For details, see “Modifying the Printer Settings from a Web Browser” in the <i>Network Guide</i> .
Certification	Wi-Fi, TELECOM, FCC, IC, ETSI, iDA

Wired LAN

Supported Networks	100BASE-TX/10BASE-T
Interface	Wired LAN Interface (100BASE-TX/10BASE-T)
Compliant Standard	IEEE802.3u (100BASE-TX)/IEEE802.3 (10BASE-T)
Transfer Speed	10 Mbps/100 Mbps (auto switchable)

Camera Direct Print (Canon Bubble Jet Direct)

Interface	Direct Print Port (Connect a iP5200R-compatible digital camera or digital video camcorder using the USB cable supplied with the camera.)
Compatible digital cameras and digital video camcorders	iP5200R-compatible digital cameras and digital video camcorders
Compatible Paper	Card #1 (Photo Paper Pro 4" x 6"/101.6 x 152.4 mm) Card #2 (Photo Paper Plus Glossy, Photo Paper Plus Semi-gloss, or Glossy Photo Paper 4" x 6"/101.6 x 152.4 mm) Card #3 (Photo Paper Plus Glossy 5" x 7"/127.0 x 177.8 mm) LTR (Photo Paper Pro, Photo Paper Plus Glossy, Photo Paper Plus Semi-gloss, or Glossy Photo Paper Letter size) A4 (Photo Paper Pro, Photo Paper Plus Glossy, Photo Paper Plus Semi-gloss, or Glossy Photo Paper A4 size)
Layout Print	Standard: Borderless / with border, Index Print: 6-80 images (depending on the size of print media)
Effect	Exif2.21 compliant
DPOF Functions	Ver. 1.00 compliant (Index print, number of copies, select images, print special characters (date))

Camera Direct Print (PictBridge)

Paper size

Default (Photo Paper Plus Glossy 10 x 15 cm/4" x 6")
10 x 15 cm/4" x 6" (Photo Paper Plus Glossy, Photo Paper Pro, Photo Paper Plus Semi-gloss, Glossy Photo Paper, Photo Stickers^{*1})
13 x 18 cm/5" x 7" (Photo Paper Plus Glossy)^{*2}
A4/8.5" x 11" (Photo Paper Plus Glossy A4/Letter, Photo Paper Pro A4/Letter, Photo Paper Plus Semi-gloss A4/Letter, Glossy Photo Paper A4/Letter, Plain Paper A4/Letter)

5.4 x 8.6 cm/Credit Card (Glossy Photo Paper Card Size)

^{*1} Canon-brand sticker. Printing on this paper is available only when the Layout function on your camera has a 16-up option. See "[Canon Specialty Media](#)" on page 19.

^{*2} If using a Canon PictBridge-compatible camera, you can select it.

Paper type

Default (Photo Paper Plus Glossy), Photo (Photo Paper Plus Glossy, Glossy Photo Paper), Fast Photo (Photo Paper Pro), Plain Paper (Only A4/Letter)

Layout

Default (Borderless), Borderless, Bordered, N-up (2, 4, 9, 16)^{*1}, 35-up^{*2}

^{*1} Layout compatible with Canon-brand sticker above. See "[Canon Specialty Media](#)" on page 19.

^{*2} Photos are printed in 35 mm Film Style layout (contact printing layout). This option can be selected for Canon PictBridge-compliant devices only. (Note that this option cannot be used for some models.)

For a Canon PictBridge-compliant device, selecting the item displayed with the [i] icon prints the shooting information (Exif data) in list format, or in the margins of specified photos. (Note that these options cannot be used for some models.)

Trimming

Default (Off: No trimming), On (follow camera's setting), Off

Image optimize

Default (ExifPrint), On, Off, "VIVID"^{*}, "NR" (Noise Reduction)^{*}, "VIVID+NR"^{*}, "Face"^{*}

^{*} If using a Canon PictBridge-compatible camera, you can select it.

Date/File No. print

Default (Off: No printing), Date, File No., Both, Off

Canon IJ Printer Driver System Requirements

Windows

- A computer on which Windows XP, Windows 2000, Windows Me or Windows 98 operates.
- USB 2.0 Hi-Speed interface*¹
USB 2.0 Hi-Speed operation can only be guaranteed under the environments below.
OS: Windows XP / Windows 2000
USB 2.0 Hi-Speed driver: USB 2.0 driver for Windows*²
USB 2.0 Hi-Speed interface: a PC and a USB cable that comply with USB 2.0 Hi-Speed standard*³
- *¹ Since the USB 2.0 Hi-Speed interface is fully upwardly compatible with USB Full-Speed (USB 1.1), it can be used at USB Full-Speed (USB 1.1).
- *² Microsoft's authorized drivers are available through Windows Update or Service Pack installation. Any non-Microsoft USB 2.0 drivers are not guaranteed.
- *³ All operations are not guaranteed for computers standard-equipped with a USB 2.0 Hi-Speed interface.
- USB interface
USB operation can only be guaranteed on a PC with pre-installed Windows XP, Windows 2000, Windows Me, or Windows 98.
- CD-ROM drive
- Available hard-disk space for printer driver installation
Windows XP/Windows 2000: 105 MB
Windows Me/Windows 98: 20 MB
- Canon IJ Status Monitor cannot be used under the following conditions:
 - When sharing this printer on a network (Windows Me, Windows 98)

Macintosh

- A Macintosh series computer equipped with USB interface on which Mac OS X v.10.2.1 to 10.3.x operates.
See www.canontechsupport.com for Mac OS update compatibility.
- USB 2.0 Hi-Speed interface*
USB 2.0 Hi-Speed operation can only be guaranteed under the environments below.
OS: Mac OS X v.10.2.7 to 10.3.x
An internal USB 2.0 Hi-Speed port and a USB cable that comply with the USB 2.0 Hi-Speed standard (USB 2.0 Hi-Speed operation on the expansion board is not guaranteed.)
- * Since the USB 2.0 Hi-Speed interface is fully upwardly compatible with USB Full-Speed (USB 1.1), it can be used at USB Full-Speed (USB 1.1).
- USB interface
- CD-ROM drive
- Available hard-disk space for printer driver installation
Mac OS X v.10.2.x to 10.3.x: 105 MB
- The following functions are not supported:
 - Manual Duplex Printing
 - Photo Optimizer PRO
 - Poster Printing
 - Fit-to-Page Printing
 - Booklet Printing
 - Reverse Order Printing (supported with Mac OS X v.10.3.x)

Additional System Requirement for On-screen Manuals

Windows

Browser: Windows HTML Help Viewer

Note: Microsoft Internet Explorer 5.0 or later must be installed. The on-screen manual may not be displayed properly depending on your operating system or Internet Explorer version. We recommend that you keep your system up to date with Windows Update.

Macintosh




Browser: Help Viewer

Note: The on-screen manual may not be displayed properly depending on your operating system. We recommend that you keep your system up to date.




⚠ Safety Precautions

Please read the safety warnings and cautions provided in this manual to ensure that you use your printer safely. Do not attempt to use printer in any way not described in this manual.

⚠ Warning You may cause an electric shock, fire or damage the printer if you ignore any of these safety precautions.

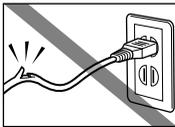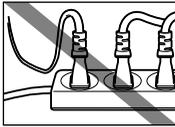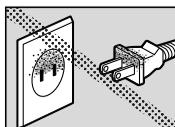Choosing a location	Do not place the printer close to flammable solvents such as alcohol or thinners.	
Power supply	Never attempt to plug in or unplug the printer from the power supply when your hands are wet.	
	Always push the plug all the way into the power outlet.	
	Never damage, modify, stretch or excessively bend or twist the power cord. Do not place heavy objects on the power cord.	
	Never plug the printer into a power socket that is shared with other equipment (extension lead/cord, 2- or 3-way adapter, etc.).	
	Never use the printer if the power cord is bundled or knotted.	
	If you detect smoke, unusual smells or strange noises around the printer, immediately unplug the printer at the power supply and call for service.	
Cleaning the printer	Use a damp cloth to clean the printer. Never use flammable solvents such as alcohol, benzene or thinners. If flammable solvents come in contact with electrical components inside the printer, it could cause a fire or electric shock.	
	Always unplug the printer from the power outlet before cleaning the printer. If you accidentally switch the printer on while cleaning it, you could injure yourself or damage the printer.	
Maintaining the printer	Do not attempt to disassemble or modify the printer. There are no user serviceable parts inside the printer. The printer contains high-voltage components. Never attempt any maintenance procedure not described in this guide.	
Working around the printer	Do not use flammable sprays near the printer. This could cause a fire or electric shock if the spray comes into contact with electrical components inside the printer.	

▲ Caution You may cause injury or damage the printer if you ignore any of these safety precautions.
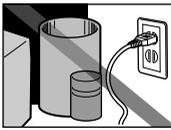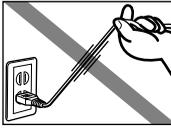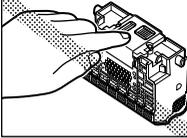
<p>Choosing a location</p>	<p>Do not install the printer in a location that is unstable or subject to excessive vibration.</p> <p>Do not install the printer in locations that are very humid or dusty, in direct sunlight, outdoors, or close to a heating source. To avoid the risk of fire or electric shocks, install the printer in a location with an ambient temperature range of 5°C to 35°C (41°F to 95°F) and humidity of 10% to 90% (condensation free).</p> <p>Do not place the printer on a thick rug or carpet.</p> <p>Do not place the printer with its back attached to the wall.</p>
<p>Power supply</p>	<p>Ensure that the area around the power outlet is kept clear at all times so you can easily unplug the power cord if necessary.</p>  <p>Never remove the plug by pulling on the cord.</p>  <p>Do not use an extension lead/ cord.</p>  <p>Never use a power supply source other than the one rated for the printer in the country where you purchased the printer. AC 110-120 V, 50/60 Hz AC 220-240 V, 50/60 Hz</p>
<p>Working around the printer</p>	<p>Never put your hands or fingers in the printer while it is printing.</p> <p>Do not place any object on the printer.</p> <p>Do not place metal objects (paper clips, staples, etc.) or containers of flammable solvents (alcohol, thinners, etc.) on top of the printer.</p> <p>If any foreign object (metal or liquid) fall into the printer, unplug the power cord and call for service.</p> <p>Do not transport or store the printer on a slant, vertically or upside-down, as the ink may leak and damage the printer.</p>
<p>Print heads and ink tanks</p>	<p>For safety reasons store Print Heads and ink tanks out of the reach of small children. If a child ingests any ink, consult a doctor immediately.</p> <p>Do not shake Print Heads or ink tanks. Ink may leak out and stain clothing or the surrounding area.</p> <p>Never touch the electrical contacts on a Print Head after printing. The metal parts may be very hot and could cause burns.</p> 
<p>Radio wave interference</p>	<p>Since the microwave oven and the wireless LAN system use the same frequency bandwidth, the microwave oven can be the potential source of interference when the microwave oven is on. Placing this product close to microwave oven may result in the poor status of radio.</p>

Regulatory Information

Color Printer Model: K10253 (Contains FCC ID: AZDK30254)

This device complies with Part 15 of the FCC Rules and RSS-210 of the IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of a shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC Rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

FCC ID: AZDK30254

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment. This equipment should be installed and operated with minimum distance at least 20cm between the radiator and persons body (excluding extremities: hands, wrists, feet and legs) and must not be co-located or operated with any other antenna or transmitter.

Canon U.S.A., Inc.
One Canon Plaza
Lake Success, NY 11042
1-516-328-5600

Canadian Radio Interference Regulations

This digital apparatus does not exceed Class B limits for radio noise emissions from a digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus", ICES-003 of the Industry Canada.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur NMB-003 d'Industrie Canada intitulée «Appareils numériques».

CANON U.S.A., INC. LIMITED WARRANTY --- (USA Only)

The limited warranty set forth below is given by Canon U.S.A., Inc. ("Canon USA") with respect to the new or refurbished Canon-brand product ("Product") packaged with this limited warranty, when purchased and used in the United States only.

The Product is warranted against defects in materials and workmanship under normal use and service (a) for a period of one (1) year from the date of original purchase when delivered to you in new condition in its original container or (b) for 90 days from the date of original purchase for refurbished Products. Defective parts or a defective Product returned to a Canon USA repair facility or a Canon USA Authorized Service Facility ("ASF"), and proven to be defective upon inspection, will be repaired, exchanged for new or comparable rebuilt parts, or exchanged for a refurbished Product, as determined by the Canon USA repair facility or the ASF. Warranty repair or replacement shall not extend the original warranty period of the Product. A dated proof of purchase is required at the time of warranty service. A copy of your dated bill of sale will satisfy this requirement. This warranty does not cover any accessories, or any consumables, such as paper or ink cartridges, as to which there shall be no warranty or replacement.

This limited warranty shall only apply if the Product is used in conjunction with compatible computers, peripheral equipment and software. Canon USA shall have no responsibility for such items except for compatible Canon brand peripheral equipment covered by a separate warranty ("Separate Warranty"). Repairs of such Canon brand peripheral equipment shall be governed by the terms of the Separate Warranty. Non-Canon brand equipment and software that may be distributed with the Product are sold "as is" and without warranty of any kind by Canon USA, including any implied warranty regarding merchantability or fitness for a particular purpose, and all such warranties are disclaimed. The sole warranty, if any, with respect to such non-Canon brand items is given by the manufacturer or producer thereof.

This limited warranty covers all defects encountered in normal use of the Product and does not apply in the following cases:

- (a) Loss of or damage to the Product due to abuse, neglect, mishandling, improper packaging by you, alteration, accident, electrical current fluctuations, improper use, failure to follow operating or maintenance instructions in, or environmental conditions prescribed in, Canon USA's user's manual or other documentation, or services performed by someone other than a Canon USA repair facility or ASF. Without limiting the foregoing, dropping the Product, scratches, and abrasions will be presumed to have resulted from misuse, abuse or failure to operate the Product as set forth in the user's manual or other documentation for the Product.
- (b) Use of parts or supplies (other than those sold by Canon USA) that cause damage to the Product or cause abnormally frequent service calls or service problems.
- (c) If the Product has had its serial number or dating defaced, altered or removed.

ANY SYSTEM SOFTWARE (WHETHER FACTORY LOADED ON THE PRODUCT OR CONTAINED ON THE SOFTWARE DISKETTES OR CD-ROMS ENCLOSED WITH, OR ACCOMPANYING, THE PRODUCT), AND ANY UTILITY SOFTWARE, DISTRIBUTED WITH OR FOR THE PRODUCT, IS SOLD "AS IS" AND WITHOUT WARRANTY BY CANON USA. THE SOLE WARRANTY WITH RESPECT TO SUCH SOFTWARE IS CONTAINED IN THE SOFTWARE MANUFACTURER'S LICENSE AGREEMENT DISTRIBUTED THEREWITH, INCLUDING ANY LIMITATIONS AND DISCLAIMERS THEREON. PLEASE CONTACT CANON USA IMMEDIATELY IF YOU HAVE NOT RECEIVED A COPY OF THE SOFTWARE MANUFACTURER'S LICENSE AGREEMENT.

NO IMPLIED WARRANTY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, APPLIES TO THE PRODUCT AFTER THE APPLICABLE PERIOD OF THE EXPRESS LIMITED WARRANTY STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BIND CANON USA, OR ITS ASF. (SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.) CANON USA SHALL NOT BE LIABLE FOR LOSS OF REVENUES OR PROFITS, INCONVENIENCE, EXPENSE FOR SUBSTITUTE EQUIPMENT OR SERVICE, STORAGE CHARGES, LOSS OR CORRUPTION OF DATA, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE, OR INABILITY TO USE THE PRODUCT REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CANON USA OR ITS ASF HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST CANON USA OR ITS ASF BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE POSSESSION, USE, MISUSE, OR INABILITY TO USE THE PRODUCT SOLD BY CANON USA NOT CAUSED SOLELY AND DIRECTLY BY THE NEGLIGENCE OF CANON USA, OR ITS ASF. (SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU.) THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THE PRODUCT OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT, AND STATES YOUR EXCLUSIVE REMEDY.

Appendix

Canon USA offers a range of customer technical support* options:

- Interactive troubleshooting, e-mail technical support, the latest driver downloads and answers to frequently asked questions (www.canontechsupport.com)
- Toll-free live technical support Monday-Saturday (excluding holidays) at **1-800-828-4040**
- Telephone Device for the Deaf (**TDD-1-866-251-3752**)
- Repair or Exchange Service Options:
In the event service is required for the Product during the limited warranty period, Canon USA offers two hardware support options:

Authorized Service Facility Carry-In / Mail-In Service

Canon USA's Carry-In/Mail-In Service provides repair or exchange, at Canon USA's option, through Canon USA's Authorized Service Facility (ASF) network. The name and telephone number of the ASF(s) near you may be obtained from Canon USA's Web site at: www.canontechsupport.com or by calling the Canon USA Customer Care Center at 1-800-828-4040, or any time while speaking to a technical support person. A Product covered by this limited warranty will be repaired or exchanged, as determined by Canon USA, and returned without charge by the ASF.

InstantExchange Service **

A Canon Customer Care Center or ASF technician will attempt to diagnose the nature of the problem and, if possible, correct it over the telephone. If the problem cannot be corrected over the telephone, and you elect the InstantExchange option, a reference number will be issued to you. You will be asked for the Product serial number and other information pertaining to your defective Product and for a ship-to location for the replacement Product (must include street address).

The Canon USA repair facility will ship out the replacement Product, via 2nd day Air freight service, prepaid by Canon USA. After receipt of the replacement Product (with instructions and a prepaid waybill), follow the enclosed instructions on how to ship the defective Product to the Canon USA repair facility. The defective Product must be returned in the shipping carton in which the replacement Product was packed and include the reference number, A COPY OF YOUR DATED PROOF OF PURCHASE (BILL OF SALE), and a complete explanation of the problem. DO NOT INCLUDE ANY OTHER ITEMS WITH THE DEFECTIVE PRODUCT IN THE RETURN SHIPPING CARTON, AND BE SURE TO RETAIN YOUR PRINTHEAD AND INK CARTRIDGE(S) AND TANK(S).

InstantExchange Service expedites, usually by the second business day, the exchange of a defective Product with a replacement Product, which will normally be shipped the same day if your request for this service is by 3 p.m. E.T. Monday through Friday, except holidays (three (3) business day InstantExchange Service for Alaska and Hawaii). Canon USA does not guarantee expedited shipping service in the event of the occurrence of factors beyond its reasonable control. The replacement Product you receive may be a refurbished or reconditioned unit and will be covered for the balance of the period remaining on your original limited warranty. NOTE THAT BY USING THIS SERVICE YOU WILL KEEP THE REPLACEMENT PRODUCT THAT IS SENT TO YOU. CANON USA WILL RETAIN THE DEFECTIVE PRODUCT THAT YOU ORIGINALLY PURCHASED, WHICH SHALL BECOME THE PROPERTY OF CANON USA. InstantExchange warranty program service is available only during the express limited-warranty period for your Product and only in the continental United States, Alaska and Hawaii during such period.

This limited warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

* Support program specifics are subject to change without notice.

** InstantExchange warranty service is subject to the availability of refurbished or new replacement units.

Canon U.S.A., Inc.
One Canon Plaza
Lake Success, NY 11042
USA

Canon is a registered trademark of Canon Inc.

©2005 Canon U.S.A., Inc. Canon is a registered trademark of Canon Inc. in the United States and may also be a registered trademark in other countries.

Index

A

Accessing the Printer Driver	35
Advanced Printing	28
ALARM lamp.....	77
Aligning the Print Head	60
An Error Message Appears on the Screen	79
Automatic Duplex Printing.....	81

B

Borderless Printing	68
---------------------------	----

C

Camera Direct Print	89
Camera Error Message	82
Canceling Print Jobs (Windows)	22
Canceling Printing.....	26
Cannot Connect to PC Properly	66
Cannot Install the Printer Driver	65
Cannot Print Properly from the Digital Camera.....	82
Canon IJ Printer Utility dialog box (Macintosh).....	49
Canon IJ Status Monitor (Windows)	71
CANON U.S.A., INC. LIMITED WARRANTY --- (USA Only)..	95
Cleaning	53, 54
CLI-8BK Black.....	37
CLI-8C Cyan.....	37
CLI-8M Magenta.....	37
CLI-8Y Yellow	37
Cover Guide	8

D

Deep Cleaning.....	56, 58
Driver	
settings (Macintosh)	24
settings (Windows).....	21

E

Easy-PhotoPrint	36
Easy-WebPrint.....	36
Examining the Nozzle Check Pattern	50
ExifPrint	36

G

Getting the Ink Level Information	38
Glossy Photo Paper	19

H

Handling Error Messages	77
Help button	2
High Resolution Paper.....	19

I

Ink tank lamp	
Ink Level Indication on the Printer	38
Insert the ink tank	44

K

Knowing When to Replace Ink Tanks	40
---	----

L

Load Limit Mark	8, 13
Loading Paper	4
Loading Paper in the Auto Sheet Feeder	7
Loading Paper in the Cassette	11

M

Matte Photo Paper	19
Media	
specialty	18
to avoid	4
Media Type	19, 21, 24

N

Nozzle Check	48, 49
Nozzle Check Pattern	
examining	50
printing	47

O

Open Button.....	7
Opening the Printer Properties Dialog Box Directly from the Start Menu (Windows)	35
Opening the Printer Properties Dialog Box from Your Application Program (Windows).....	35

P

Page Setup (Macintosh)	24, 71
Page Setup dialog box (Macintosh)	24
Paper Does Not Feed Properly	72
Paper Feed Roller	72
Paper Feed Switch.....	5
Paper Jams.....	73, 75, 76
Paper Size.....	24
Paper Support Load Limit	19
PGI-5BK Black	37
Photo Paper Plus Double Sided	19
Photo Paper Plus Glossy	19
Photo Paper Plus Semi-gloss.....	19
Photo Paper Pro	19
Photo Stickers.....	19
PhotoRecord	36

Index

POWER button	2
POWER lamp	2
Print dialog box	21, 24
Print Head Alignment	60, 62
Print Head Cleaning.....	52
Print Head Deep Cleaning.....	56
Print Head Holder	42
Print Media to Avoid	4
Print Quality	22, 67
Print Results Not Satisfactory or Contains Errors.....	67
Printer Driver Setting for Media Type	19
Printer Properties dialog box	21, 35, 47
Printing Photographs Directly from a Canon Bubble Jet Direct Compatible Digital Camera	85
Printing Photographs Directly from a PictBridge Compliant Device	28
Printing the Nozzle Check Pattern.....	47
Printing with Macintosh	23
Printing with Windows.....	20

R

Regulatory Information.....	94
Replacing an Ink Tank	37
RESUME/CANCEL button.....	22

S

Safety Precautions	92
Specialty Media	19
Specifications	87
Super White Paper.....	19

T

Transparencies.....	19
Troubleshooting	64
Troubleshooting Printer Hardware	70
T-Shirt Transfers.....	19
Turning off the Printer	3
Turning on the Printer.....	2

U

Uninstalling the printer driver (Windows)	79
USB 2.0 Hi-speed Connection Does Not Work Properly..	66
Using Specialty Media.....	18
Using the Auto Sheet Feeder and the Cassette.....	5
Using the Bundled Software	36

W

Warranty	95
When Printing Becomes Faint or Colors are Incorrect	46