 




### BEFORE STARTING

Remove the insulation tape at the back of calculator before use.

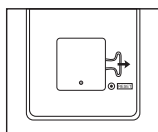

### ENGLISH

 
### LOADING AND REPLACING BATTERIES

#### LOADING

- 1) Remove the battery cover by sliding in the direction of the arrow. (Figure 1)
- 2) Load 4 new AA batteries as illustrated. (Figure 2)
- 3) Replace the cover.

#### REPLACEMENT


- Low battery power may cause printing problems, or random paper advances. It can also disable the  $\frac{CE}{C}$  key.
- If the display is dim or the printing speed decreases or the "Low Batt" icon appears (Figure 3), then the batteries may need to be replaced. Replace batteries to resume normal operations.
- Remove the batteries if you do not plan to use the unit for a long period of time.

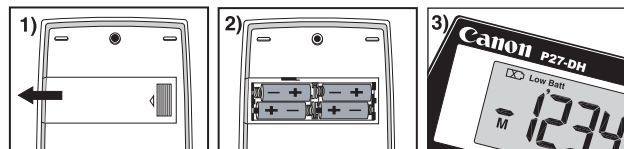

### AC OPERATION

#### CANON AC ADAPTER AC-380 (INCLUDED)

 
- Use only the Canon AC Adapter AC-380.
- Turn the power switch to OFF before connecting or disconnecting the AC Adapter.
- If the adapter is misplaced or lost, please purchase Canons' AD-38 Adapter.
- For more information please visit <http://www.eshop.usa.canon.com>
- When plugging in the AC adapter during the "ON" mode.
- Press  $\frac{CE}{C}$  key to restart the calculator.

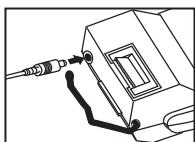

### REPLACING THE INK ROLLER (CP-13)


**Note:** Turn power switch off.

 - 1) Remove the printer cover. (Figure 4)
  - 2) Hold the left side of the ink roller indicated as "pull up" and lift the ink roller up to remove it. (Figure 5)
  - To maintain clear printing, change the ink roller after about 8 rolls of printing paper have been used.
  - 3) Insert a new ink roller. (Figure 6)
  - 4) Replace the printer cover. (Figure 7)
- CAUTION:** The edge of the paper cutter may be sharp, please handle with care!
- Use only the Ink Roller CP-13
  - Do not attempt to refill the ink roller, since this may cause mechanical difficulties.

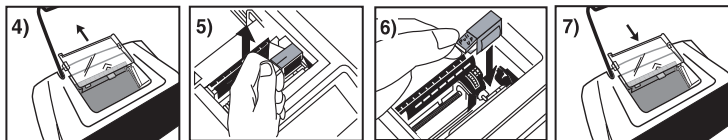

### INSERTING PRINTING PAPER

 - 1) Lift up the paper arm. (Figure 8)
- When inserting the paper, cut the edge of the paper as shown.
- 2) Place the new paper roll on the arm. The edge of the paper should be positioned as shown (Figure 9)
- Suitable paper roll – Width : 57mm (2-1/4") / Diameter : 86mm (3-3/8") max.
- 3) Insert the paper into the slit located at the back of the machine as indicated (Figure 10).
- 4) Turn the power switch on. Press the paper feed key  $\frac{FEED}{\text{FEED}}$  to advance the paper (Figure 11).

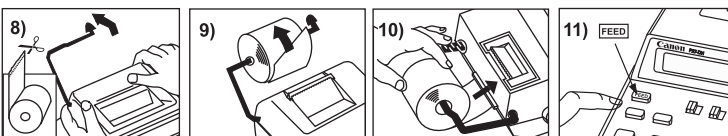


### REPLACING BACKUP BATTERY

Memory backup battery retains the tax rate, calendar and clock setting, when the power is off or even when the AC cord is disconnected.

Battery : 1 Lithium battery (Type: CR2032)

Battery life : Backup time 2000 hours

 **CAUTION :** Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instruction.

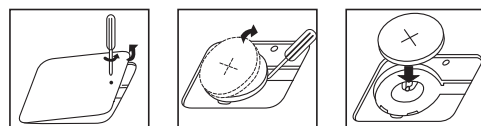

### GENERAL MAINTENANCE

- 1) Do not use or leave the calculator in the direct sunlight. Areas subject to quick temperature changes, high humidity and dirt should also be avoided.
- 2) Use a dry cloth to clean the unit. Do not use water or cleaners.
- 3) Avoid using the calculator in places where there are iron filings, as this may affect the electrical circuits of the calculator.
- 4) Do not place anything on top of the machine, particularly on top of the printer mechanism.
- 5) In case of electrical fault (i.e. smoke), disconnect the plug from the electrical point immediately.
- 6) The power outlet shall be installed near the equipment and shall be easily accessible.

### DECIMAL POINT SELECTOR SWITCH

$\frac{0.23}{0.23}$  : Used for designating the decimal point position (0 2 3) for calculated results.

$\frac{+}{+}$  (Add-Mode) : Addition and subtraction functions are performed with an automatic 2-digit decimal. It is convenient for currency calculations.

$\frac{F}{F}$  (Floating Decimal Point) : All effective numbers up to 12 digits are printed or displayed.

### ROUNDING SWITCH

$\frac{\uparrow}{5/4}$  : Used for round-up [ $\uparrow$ ], round-off [5/4], or round-down [ $\downarrow$ ] to the pre-selected decimal digits in the result.

### POWER / PRINT / ITEM COUNT / RATE SET SWITCH

$\frac{\text{Power Off}}$  : Turns power off.

$\frac{\text{Power On/Print Off}}$  : Turns power on. Entries and results will appear on the display, but will not be printed out.

$\frac{\text{Power On/Print On}}$  : Entries and results will appear on the display and will be printed out.

**Item** : Set switch to "ITEM" to count the number of times the  $\frac{+}{+}$ ,  $\frac{-}{-}$ ,  $\frac{M\pm}{M\pm}$  and  $\frac{M\%}{M\%}$  keys have been pressed. The item count will be printed on the left hand side of the paper roll (up to 999 times) when the  $\frac{C}{C}$ ,  $\frac{X}{X}$ ,  $\frac{M\<}{M\<}$  or  $\frac{M\>}{M\>}$  keys are pressed.

**Rate Set** : Set switch to "RATE SET" for setting or recalling the TAX rate.

### OVERFLOW

In the following cases, when "E" is displayed, a dotted line is printed, the keyboard is electronically locked, and further operation is impossible. Press  $\frac{CE}{C}$  to clear the overflow. The overflow occurs when:

1. The result or the memory content exceeds 12 digits to the left of the decimal point.
2. Dividing by "0".
3. The sequential operation speed is faster than the calculation processing speed. (Buffer Register Overflow)

■ Electromagnetic interference or electrostatic discharge may cause the display to malfunction or the contents of the memory to be lost or altered. Should this occur, use the tip of a ball point pen (or similar sharp object) to press the [RESET] button at the back of the calculator. After resetting, be sure to set the calendar, clock and tax rate again.



### SPECIFICATIONS

 
Operation Temperature: 0°C to 40°C (32°F to 104°F)  
Calculating Capacity: 12 digits maximum  
Automatic Power-off: approx. **7 minutes**  
Dimension : 231mm (L) x 163.5mm (W) x 55.5mm (H) / 9-1/8" (L) x 6-7/16" (W) x 2-3/16" (H)  
Weight : 424g (15 oz) without batteries / 510g (18 oz) with batteries  
**(Subject to change without notice)**

#### FOR CA, USA ONLY

Included battery contains perchlorate material – special handling may apply. See <http://www.dts.ca.gov/hazardouswaste/perchlorate/> for detail.

### ANTES DE EMPEZAR

Retire la cinta de aislamiento antes de usar el organizador.

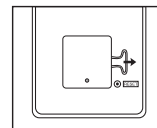

### ESPAÑOL

 
### CARGANDO Y REEMPLAZANDO BATERÍAS SECAS

#### CARGA

- 1) Retire la tapa de la batería deslizando en la dirección de la flecha. (Figura 1)
- 2) de carga de 4 pilas AA nuevas como se ilustra. (Figura 2)
- 3) Coloque la tapa.

#### REEMPLAZO


- Un bajo voltaje de las baterías puede causar defectos de impresión ó avance del papel intermitentemente. También puede inhabilitar la  $\frac{CE}{C}$  tecla.
- Si la pantalla está oscura o disminuye la velocidad de impresión o en el icono aparece "Low Batt" (Figura 3), a continuación, las baterías pueden necesitar ser reemplazadas. Reemplace las baterías para reanudar las operaciones normales.
- Remueva la baterías si no planea usar la unidad por un largo periodo de tiempo.

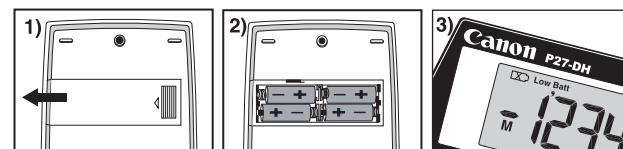

### OPERACIÓN POR CA

#### ADAPTATEUR de AC AC-380 de CANON (INCLUIDO)

 - Use únicamente el Adaptador de AC AC-380 de Canon.
- Girar el interruptor de encendido en OFF antes de conectar o desconectar el adaptador de CA.
- Si extraíu el adaptador, compre como reemplazo el AD-38 de Canon.
- Para más información visite <http://www.eshop.usa.canon.com>
- Cuando vuelva a conectar el adaptador de CA durante el mode "ON". Pulse la tecla  $\frac{CE}{C}$  tecla para reiniciar la calculadora.

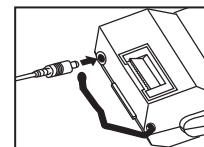


### REEMPLAZANDO EL RODILLO DE TINTA (CP-13)

**Nota:** El interruptor de poder de vuelta completamente.

- 1) Retire la cubierta del impresor. (Figura 4)
- 2) Tal como un clip para papel, en el lado izquierdo del rodillo de tinta, levante el rodillo de tinta y retírelo. (Figura 5)
- Para mantener nítida la impresión, cambie el rodillo de tinta después de que aproximadamente 8 rollos de papel de impresión hayan sido usados.
- 3) Introduzca un nuevo rodillo de tinta en su posición. (Figura 6)
- 4) Reponga la cubierta del impresor. (Figura 7)


**PRECAUCIÓN:** El borde de la cortadora de papel puede agudo, por favor, hndle con cuidado!

 - Use únicamente el Rodillo de Tinta CP-13.
- No intente recargar el rodillo de tinta, debido a que esto podría causar dificultades mecánicas.

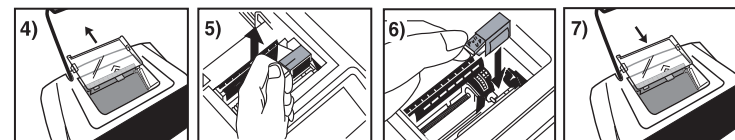

### INSTALANDO PAPEL DE IMPRESIÓN

 - 1) Cubierta de la impresora. (Figura 8)
- Antes de introducir el papel, corte el borde del papel como se muestra.
- 2) Papel en el brazo de la calculadora. El borde del papel deberá ser colocado como se muestra en la Figura 9.
- Rollo de papel adecuado - Ancho: 57mm (2-1/4") / Diámetro: 86mm (3-3/8") max.
- 3) Introduzca el papel en la ranura posterior de la máquina, como se indica en la Figura 10.
- 4) Encienda el interruptor de energía. Presione la tecla de avance del papel  $\frac{FEED}{\text{FEED}}$  para avanzar el papel, como se indica en la Figura 11.

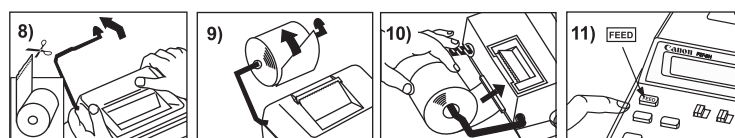


### REEMPLAZANDO BATERÍA DE SEGURIDAD SECAS

La batería de seguridad de la memoria conserva la carga y el ajuste del calendario y del reloj cuando se interrumpe la alimentación o incluso cuando se desconecta el cable de CA.

Pila : 1 pila de litio (Type : CR2032)

Duración de la pila : Tiempo de backup 2000 horas.

 **PRECAUCIÓN :** Existe un riesgo de explosión si se utiliza un tipo de batería incorrecto. Siga las instrucciones para desechar las baterías.

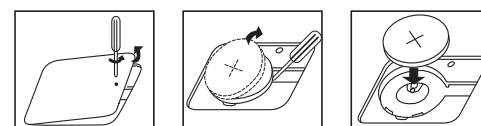

### MANTENIMIENTO GENERAL

- 1) No utilice ni deje la calculadora bajo los rayos directos del sol. Los lugares sometidos a cambios rápidos de temperatura, mucha humedad y suciedad también deben evitarse.
- 2) Utilice un paño seco para limpiar la unidad. No use agua o productos de limpieza.
- 3) Evite usar la calculadora en lugares con limaduras de hierro, debido a que esto puede afectar los circuitos eléctricos de la calculadora.
- 4) No coloque objetos sobre la calculadora, especialmente sobre el mecanismo de impresión.
- 5) En caso del defecto eléctrico (e.g. humo), desconecte el tapón del punto eléctrica inmediatamente.
- 6) La toma de corriente debe instalarse cerca del equipo y debe ser fácilmente accesible.

### INTERRUPTOR SELECTOR DE PUNTO DECIMAL

$\frac{0.23}{0.23}$  : Utilizado para designar la posición del punto decimal para (0 2 3) los resultados calculados

$\frac{+}{+}$  (Modo de Adición): Las adiciones y subtracciones son realizadas con dos dígitos decimales automáticamente. Es conveniente para cálculos monetarios

$\frac{F}{F}$  (Punto Decimal Flotante): Todos los números efectivos hasta 12 dígitos son impresos o desplegados.

### CONMUTADOR DE REDONDEO

$\frac{\uparrow}{5/4}$  : Es usado para redondear el resultado hacia arriba [ $\uparrow$ ], redondear [5/4], o redondear hacia abajo [ $\downarrow$ ] a la cantidad de decimales pre-seleccionados.

### ENCENDIDO / IMPRESIÓN / RECUENTO ITEM / RATE SET

$\frac{\text{Suministro Desactivado}}$ : Desactiva la calculadora.

$\frac{\text{Suministro Activado / Impresión Desactivado}}$ : Activa la calculadora. Entradas y resultados aparecerán en la pantalla, pero no serán impresos.

$\frac{\text{Suministro Activado / Impresión Activado}}$ : Entradas y resultados aparecerán en pantalla y serán impresos.

**Recuento:** Fije en (ITEM) para imprimir el número de veces que las teclas  $\frac{+}{+}$ ,  $\frac{-}{-}$ ,  $\frac{M\pm}{M\pm}$  y  $\frac{M\%}{M\%}$  han sid o usadas (hasta 999). La cuenta de items se imprimirá del lado izquierdo del papel de rollo cuando las teclas  $\frac{C}{C}$ ,  $\frac{X}{X}$ ,  $\frac{M\<}{M\<}$  o  $\frac{M\>}{M\>}$  son presionadas.

**Rate Set:** Sitúe el interruptor en "RATE SET" para fijarlo en el modo de "TAX". Cuando fije o recupere el tipo de cambio.

### REBOSE

En los siguientes casos, cuando aparece una "E" en la pantalla, una línea de puntos es impresa, el teclado se bloquea electrónicamente, y la operación subsiguiente no es posible, presione  $\frac{CE}{C}$  para borrar el rebose. La rebose ocurre cuando:

1. El resultado o el contenido de la memoria excede de 12 dígitos a la izquierda del punto decimal.
2. Divide por "0".
3. La velocidad de la operación secuencial es más rápida que la velocidad del proceso de cálculo. (Rebosamiento del registro de la memoria intermedia)

■ Las interferencias eléctricas o la electricidad estática pueden ocasionar mal funcionamiento de la pantalla o la pérdida del contenido de la memoria. En caso de que esto se produzca, pulse la tecla [RESET], y reinicie el funcionamiento de su calculadora. Después de reiniciar, asegúrese de introducir nuevamente los valores de cambio e impuestos.



### ESPECIFICACIONES

Temperatura de operación: 0°C a 40°C (32°F a 104°F)  
Capacidad de Cálculos: Máximo de 12 dígitos  
Desconerion automática: approx. **7 minutos**  
Dimensiones: 231mm (longitud) x 163.5mm (ancho) x 55.5mm (alto) / 9-1/8" (longitud) x 6-7/16" (ancho) x 2-3/16" (alto)  
Peso: 424g (15 oz) Sin baterías / 510g (18 oz) con baterías  
**(Sujeto a cambios sin previo aviso)**

#### PARA EL CA, LOS E.E.U.U. SOLAMENTE

La batería incluida contiene el material del perchlorate – El manejo especial debe ser aplicado. Para el detalle, por favor ver <http://www.dts.ca.gov/hazardouswaste/perchlorate/>.



## CLOCK AND CALENDAR FUNCTION FUNCIÓN DEL RELOJ Y DEL CALENDARIO

**SETTING / AJUSTE :** **MODE** **12/24** **CLOCK/DATE SET** **AM/PM** **FORMAT**

- Used to switch between calendar or clock mode. Sirve para cambiar entre los modos de calendario y reloj.
- Used to switch between 12 or 24 hour at clock mode. Sirve para cambiar entre 12 o 24 horas en el ajuste horario del modo de reloj.
- Used to set the date and time in calendar & clock mode. Sirve para fijar la fecha y la hora en los modos de calendario y reloj.
- Used to switch between AM or PM at clock mode time setting. Sirve para cambiar entre AM o PM en el ajuste horario del modo de reloj.
- Used to select date format between "YYYY/MM/DD", "DD/MM/YYYY" or "MM/DD/YYYY" at calendar mode. Sirve para seleccionar el formato de fecha entre "AAAA/MM/DD", "DD/MM/AAAA" o "MM/DD/AAAA" en el modo de calendario.

### Date setting / Ajuste de la fecha Example / Ejemplo : September 10 2009

Step/Paso	Operation / Operación	Display / Exponer	Print out / Imprimir
1.		01-01-2006	01-01-2006.....
2.	(Hold 3 seconds/ Mantenga 3 segundos)	01-01-2006	09-10-2009.....
3.	(0 9 1 0)  (2 0 0 9)	09-10-2009	
4.	(Return to calculation mode/ Volver al modo de cálculo de)	0.	0.C

### Time setting / Ajuste de hora Example / Ejemplo : 3 : 18 pm

Step/Paso	Operation / Operación	Display / Exponer	Print out / Imprimir
1.	(On Calculation mode/El Modo de cálculo)	AM 12-00-18	09-10-2009..... 12-00.....
2.	(Hold 3 seconds/ Mantenga 3 segundos)	AM 12-00 18	03-18.....
3.	(0 3 1 8)  (AM/PM)	PM 03-18-00	
4.	(Return to calculation mode/ Volver al modo de cálculo de)	0.	0.C

## CALCULATION EXAMPLES / EJEMPLOS DE CÁLCULO

**SETTING / AJUSTE :** **MODE** **12/24** **CLOCK/DATE SET** **AM/PM** **FORMAT**

- If switches on your calculator do not match the example below, please set switches as shown.
- Si los interruptores en su calculadora no hacen juego con el ejemplo debajo, por favor coloque interruptores como se muestra.

Calculation / Cálculo	Operation / Operación	Print out / Imprimir
$2+(3 \times 4)-5=9$		0. C 2.00 + 3. x 4. = 12.00 * 12.00 + 5.00 - 9.00 *
$123 \times 756 = 56,088$ (456)		123. x 456. = 56,088.00 *
$123 \times 456 = 56,088$ (6)		123. x 456. = 56,088.00 *

## MEMORY CALCULATION / CÁLCULOS CON MEMORIA

Calculation / Cálculo	Operation / Operación	Print out / Imprimir
$243 \times 2 = 486$ $+) 576 \times 5 = 2,880$ 3,366		0. C 243. x 2. = 486.00 M+ 576. x 5. = 2,880.00 M+ 3,366.00 M<> 75.00 + 103.00 + 178.00 * 3,188.00 M*
$-) 75 + 103 = 178$ 3,188		

## DATA PRINTOUT / IMPRESIÓN DE LOS DATOS

Calculation / Cálculo	Operation / Operación	Print out / Imprimir
Oct. 12 2009 1,860 1,420		# 10.12.2009..... 1,860.00 + 1,420.00 +
Oct. 13 2009 2,380 2,200 +) 2,200		# 10.13.2009..... 2,380.00 + 2,200.00 + 7,860.00 *

## ITEM COUNTING / RECUENTO DE ITEMS

**SETTING / AJUSTE :** **MODE** **12/24** **CLOCK/DATE SET** **AM/PM** **FORMAT**

Calculation / Cálculo	Operation / Operación	Print out / Imprimir
18 ..... 1) 14 ..... 2) +) 23 ..... 3) 55 - 20 ..... 4) +) 10 ..... 5) 45		18.00 + 14.00 + 23.00 + 003. .... 55.00 < 20.00 - 10.00 + 005. .... *

## TAX CALCULATION FUNCTION FUNCIÓN DE CÁLCULO DE IMPUESTOS

**SETTING / AJUSTE :** **MODE** **12/24** **CLOCK/DATE SET** **AM/PM** **FORMAT**

- TAX+** **Add Tax Key** : Used for adding the tax amount to the displayed figure. **Tecla de Sumar Impuesto**: Se utiliza esta tecla para sumar el importe del impuesto a la cifra que aparece en la pantalla.
- TAX-** **Deduct Tax Key** : Used for deducting the tax amount from the displayed figure. **Tecla de Restar Impuesto**: Se utiliza esta tecla para deducir el importe del impuesto a la cifra que aparece en la pantalla.

Calculation / Cálculo	Operation / Operación	Print out / Imprimir
Set Tax Rate Rate: 5%		0. % 5. %
Add the Tax Amount Price \$2,000 (without tax)		2,000. 2,000. 5. % 100.00 Δ 2,100.00 *
Deduct the Tax Amount Selling Price \$3,150 (with tax)		3,150. 5. % -150.00 Δ 3,000.00 *

- Note:** The entered tax rate will remain stored even when the calculator is turned off. In case the adapter or batteries are disconnected, the entered rate will be cleared. In this case, please enter the rate again.
- Nota:** El ratio de cambio de divisas o el porcentaje de impuesto se queda en la memoria cuando se apaga la calculadora. Sin embargo, cuando se desconecta de la red los ratios se eliminan. En este caso introduzca otra vez el ratio.

## TIME CALCULATION / CÁLCULO DEL TIEMPO

**SETTING / AJUSTE :** **MODE** **12/24** **CLOCK/DATE SET** **AM/PM** **FORMAT**

- Used for calculate the amount of time or duration of activities, such as wages hours and cost estimation. Se usa para calcular la cantidad de tiempo o duración de actividades, tales como horas de salario y estimación de costo.
- Used to switch between 12 or 24 hour at time calculation mode. Se usa para alternar entre 12 ó 24 horas en el modo de cálculo del tiempo.
- Used to switch between AM or PM in time calculation. Utilizado al switch en medio cálculo de la o del P.M. a tiempo.

**Example / Ejemplo 1:**  
Calculating wages for a part-time job : 10:30 to 22:15 US\$7 per hour / Salarios calculadores para un trabajo por horas: 10:30 a 22:15 US\$7 por hora

Calculation / Cálculo	Operation / Operación	Print out / Imprimir
10:30 to 22:15 (24 hour mode/24 horas de modo)		10-30 22-15 = (Hours work/ Heures de travail)
US\$7 per hour/por hora		11.75 x 7. = 82.25 *

**Example / Ejemplo 2:**  
Calculating wages for a part-time job: 8:30 to 11:45 am plus 1:00 to 5:30 pm, 20 days per month, US\$9 per hour / Salarios calculadores para un trabajo por horas: 8:30 al 11:45 más 1:00 al 5:30 PM, 20 días por el mes, US\$9 por hora

Calculation / Cálculo	Operation / Operación	Print out / Imprimir
8:30 am to 11:45 am (12 hours mode / 12 horas de modo)		08-30 11-45 = 3-15 = 3-15 + .. 01-00 .. 05-30 4-30 = 7-45 *
1:00 pm to 5:30 pm		7.75 x 20. x 20. x 9. = 1,395.00 *
20 days per month / 20 días por mes US\$9 per hour/por hora		(Amount due/ Salaire dû)

**Example / Ejemplo 3:**  
Calculating wages for a part-time job: 4:15 hours (In morning) plus 3:30 hours (In afternoon), US\$12 per hour / Salarios calculadores para un por horas: horas del 4:15 (por mañana) más las horas del 3:30 (por tarde), US\$12 por hora

Calculation / Cálculo	Operation / Operación	Print out / Imprimir
4:15 hours (In morning / por mañana)		4-15 + 3-30 + 7-45 *
3:30 hours (In afternoon / por tarde)		7.75 x 12. = 93.00 *
US\$12 (per hour / por hora)		(Amount due / Salaire dû)

- \*\* Minutes input value : 0 to 59. Values greater than 59 are automatically adjusted by adding to the hour(s).
- \*\* Calculation range : -99 hours 59 minutes to 99 hours 59 minutes. If the input/output value out of the allowable range, the time calculation will overflow.
- \*\* Valor de entrada de minutos: 0 a 59. Los valores mayores a 59 son ajustados automáticamente agregándolos a la(s) hora(s).
- \*\* Rango de cálculo: -99 horas 59 minutos a 99 horas 59 minutos. Si el valor de entrada/salida está fuera del rango disponible, el cálculo del tiempo se desbordará.

## OVERFLOW / REBASAMIENTO DE CAPACIDAD

Calculation / Cálculo	Operation / Operación	Print out / Imprimir
$550000000000$ x) $\frac{23}{1265000000000}$ (ERROR)		550,000,000,000. x 23. = ..... 12.65000000000 * 0. C
$6 \div 0 = 0$ (ERROR)		6. ÷ 0. = ..... 0. * 0. C

## COST-SELL-MARGIN CALCULATION CÁLCULO DE COSTES-VENTAS-MARGEN

**SETTING / AJUSTE :** **MODE** **12/24** **CLOCK/DATE SET** **AM/PM** **FORMAT**

- Used for calculating the cost, selling price and profit margin amount. Enter the value of any 2 items to obtain the balance value item. (e.g. enter the value of the cost and the selling price to obtain the profit margin %.)
- Se utiliza para calcular el coste, el precio de venta y el porcentaje del margen. Introduzca el valor de dos de estas tres variables para obtener el resultado del balance cor respondiente. (Por ejemplo, introduzca el valor del coste y del precio de venta para obtener el margen de beneficio %).

Calculation / Cálculo	Operation / Operación	Print out / Imprimir
Calculating Cost Selling Price : \$2,000 Profit Margin : 30% Cost = ?(\$1,400)		2,000. ** 30. M% 1,400.00 C*
Calculating Selling Price Cost : \$1,500 Profit Margin : 20% Selling Price = ?(\$1,875)		1,500. C* 20. M% 1,875.00 **
Calculating Profit Margin Cost : \$1,500 Selling Price : \$2,000 Profit Margin = ?(25%)		1,500. C* 2,000. ** 25.00 M%

**CANON CONSUMER CALCULATOR LIMITED WARRANTY**  
The limited warranty set forth below is given by Canon U.S.A., Inc., (Canon U.S.A.) and Canon Canada Inc., (Canon Canada) with respect to Calculators purchased and used in the United States and Canada respectively.

This limited warranty is only effective upon presentation of proof of purchase (bill of sale) to Canon U.S.A. or Canon Canada Factory Service Center. Canon Calculators, when delivered to you in a new condition in the original container, are warranted against defective materials or workmanship as follows: for a period of one (1) year from the date of original purchase, defective parts or Calculators returned to a Canon U.S.A. or Canon Canada Factory Service Center and proven to be defective upon inspection, will be exchanged at Canon U.S.A.'s or Canon Canada's sole option, for new or comparable rebuilt parts or calculators (of the same or similar model). Warranty for replacement shall not extend the original warranty period of the defective calculator.

When returning Calculators under this limited warranty, you must pre-pay the shipping charges, if any, and enclose a complete explanation of the problem. Calculators covered by this limited warranty will be repaired at Canon U.S.A.'s or Canon Canada's sole option, and returned to you without charge by any Canon U.S.A. or Canon Canada Service Center. This warranty does not cover rechargeable batteries that may be supplied with the Calculator, as to which batteries there shall be no warranty or replacement.

Information Technology Services and CANON CANADA INFORMATION/SERVICE CENTER will refer you to the nearest Factory Service Center. Repairs not under warranty will be at such cost as Canon U.S.A. or Canon Canada may from time to time generally establish.

This limited warranty covers all defects encountered in normal use of the calculators, and does not apply in the following cases:  
(a) Loss or damage to the Calculator due to abuse, mishandling, alteration, accident, electrical current fluctuations, failure to follow operating instructions, maintenance and environmental instructions prescribed in Canon U.S.A.'s or Canon Canada's instruction manual or service performed by other than a Canon U.S.A. or Canon Canada Factory Service Center.  
(b) Use of parts (other than those distributed by Canon U.S.A. or Canon Canada) which damage the Calculator or cause abnormally frequent service calls or service problems.  
(c) If any Calculator has had its serial numbers or dating altered or removed.  
(d) Loss or damage to the Calculator due to leaking batteries (other than rechargeable batteries supplied as original equipment with the Calculator by Canon U.S.A. or Canon Canada) or water damage.

**NO IMPLIED WARRANTY (OR CONDITION) INCLUDING ANY IMPLIED WARRANTY (OR CONDITION) OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, APPLIES TO THE CALCULATORS AFTER THE APPLICABLE PERIOD OF EXPRESS WARRANTY STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTEE, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THE CALCULATORS SHALL BIND CANON U.S.A. OR CANON CANADA. (SOME STATES OR PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.) NEITHER CANON U.S.A. NOR CANON CANADA SHALL BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR FOR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE CALCULATOR, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CANON U.S.A. OR CANON CANADA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST CANON U.S.A. OR CANON CANADA BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE CALCULATOR SOLD BY CANON U.S.A. OR CANON CANADA AND CAUSING THE ALLEGED DAMAGE, WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE, MISUSE OR INABILITY TO USE ANY CALCULATOR SOLD BY CANON U.S.A. OR CANON CANADA NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF CANON U.S.A. OR CANON CANADA. (SOME STATES OR PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.) THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF ANY CALCULATOR OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT AND STATES YOUR EXCLUSIVE REMEDY.**

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.  
Canon U.S.A., Inc. One Canon Plaza, Lake Success, New York 11042-1198  
Canon Canada Inc. 6390 Dixie Road, Mississauga, Ontario L5T 1P7 \*CANADA

Canon Information Technology Services in the United States  
For all general inquiries, operational assistance, accessory orders or for the location of the nearest service facility for this product in the United States, please contact:  
Canon U.S.A., Inc.  
One Canon Plaza, Lake Success, NY 11042,  
Customer Relations Division  
1-800-828-4040

Please keep a copy of your original bill of sale. In order to obtain warranty service, you will need to present a copy of your original bill of sale and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
Also please keep all packing materials and the original packing box to protect your equipment, should you need to transport it for service.

Canon Information/Service Centers in Canada  
Should service be necessary, please call 1 800-OK CANON for information regarding the nearest Authorized Service Facility:  
Canon Canada Inc. 5990 ch Côte-de-Liesse, Montréal, Québec H4T 1V7  
Canon Canada Inc. 6390 Dixie Road, Mississauga, Ontario L5T 1P7

**FCC REGULATIONS**  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
1) this device may not cause harmful interference, and  
2) this device must accept any interference received, including interference that may cause undesired operation.  
**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
• Reorient or relocate the receiving antenna.  
• Increase the separation between the equipment and receiver.  
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
• Consult the dealer or an experienced radio/TV technician for help.  
Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.  
Canon U.S.A., Inc.,  
One Canon Plaza, Lake Success, New York, NY 11042, USA  
Phone : (516) 328-5000

**Interference-Causing Equipment Regulations**  
This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus", ICES-003 of the Industry Canada.

**CANON ELECTRONIC BUSINESS MACHINES (H.K.) CO., LTD.**  
17/F., Ever Gain Plaza, Tower One, 82-100 Container Port Road, Kwai Chung, New Territories, Hong Kong  
**CANON U.S.A., INC.**  
One Canon Plaza, Lake Success, NY 11042, U.S.A.  
**CANON CANADA INC.**  
6390 Dixie Road, Mississauga, Ontario, L5T 1P7, Canada  
**CANON LATIN AMERICA, INC.**  
703 Waterford Way, Suite 400, Miami, FL 33126, U.S.A.