

A



## Operation Manual

Wireless Charger

B

### Suitable for some smart phones or more

Samsung series : note2,3,4, S3,4,5,6.....

Nokia: Lumia series, like 1520, 820,825,830,920,

Google : Nexus 5 ,Nexus 6 or more for new one

LG: G3,G4,

C

### WARRANTY

1.Two years warranty service from the date you buy it. We provide the free service or product exchange within the warranty period with any quality problem of product itself.

2.When the product cannot be repaired during the warranty period, you can get a new one replaced the same type of product you purchased from us.

3.If other reasons such as strong impact, fire, water, and so on, lead the product failing to use, or after warranty period, we will charge the repair fee when the product might be repaired and used again. .

D

### Accessories

Wireless charger  
USB cable  
User manual


### Note

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



### OPERATION INSTRUCTION:

- Using a cable to connect an adapter or computer, you can start to charge.
- Just put your mobile phone on the device directly without cable.
- Confirm your mobile phone is built-in or insert a wireless receiver before charging
- you can take your phone away for calling or place it back for charging freely.

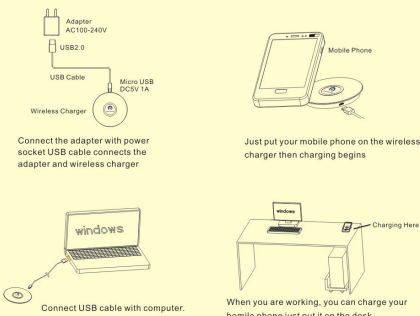

### Specification

Input:DC5V---1.5A

Output:DC5V---1A (max)

Working Temperature: -10°C--42°C

Charging distance: 0-6mm,

### Attention:

- 1.The wireless charger has no interference on all household appliances .
- 2.Do not place other magnetic cards like bank card or ID card near the product to prevent magnet failing to work .
- 3.As usual, it does not need any maintenance . The power is in sleep mode automatically when not charging. Just clean the surface if dust or metal on it .
- 4.If the wireless charger cannot work normally, or other interference or abnormal situation happens, please unplug the adaptor or move the interference device away. Replace the USB cable or adapter for use again.

E

F

G

H