## **CR3 Information to User**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.

Product Type: Router Model name: CR3

Brand (Trade) Name: CaptionCall

Installation

Before installing the Router, make sure your PC is connected to the Internet through the broadband service successfully. If there is any problem, please contact your ISP. After that, please install the Router according to the following steps. Don 't forget to pull out the power plug and keep your hands dry.



Figure 1-1

- 1. Make sure all devices, including your PCs, modem and Router are powered down.
- 2. Using an Ethernet network cable, connect the LAN or Ethernet network port of the cable or xDSL modem to the Router's WAN port.
- 3. Power on the cable or xDSL modem, and power on the PC you wish to use to configure the Router.
- 4. Connect the accessary power adapter to the Router. And connect the other end of the adapter to an electrical outlet.

## Caution!

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. Endusers and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Software Specification		
Practical function  ■ DDNS  ■ Wireless relay  ■ Quick Setup	Network Settings  WAN connection types supported: PPPoE,  DHCP, Static IP  MAC Clone  Diagnostics  Static Router	<ul> <li>System configuration</li> <li>Software upgrade</li> <li>Save&amp;reload settings</li> <li>System log</li> <li>NTP server</li> <li>Language</li> </ul>
Security Settings  WEB management  Remote WEB management  SSH access Telnet	<ul> <li>DHCP Settings</li> <li>DHCP Server</li> <li>DHCP Client</li> <li>The client list</li> <li>Static IP</li> </ul>	Firewall  DMZ  Port Forward  Port/URL/MAC filter
<ul><li>Wireless basic function</li><li>Wireless enable/disable</li><li>Mutilple SSID</li></ul>	<ul><li>Wireless Security</li><li>W64/128-bit WEP</li><li>Encryption</li><li>WPA/WPA2、WPA-</li><li>PSK/WPA2-PSKK</li></ul>	