



1.6 User Manual

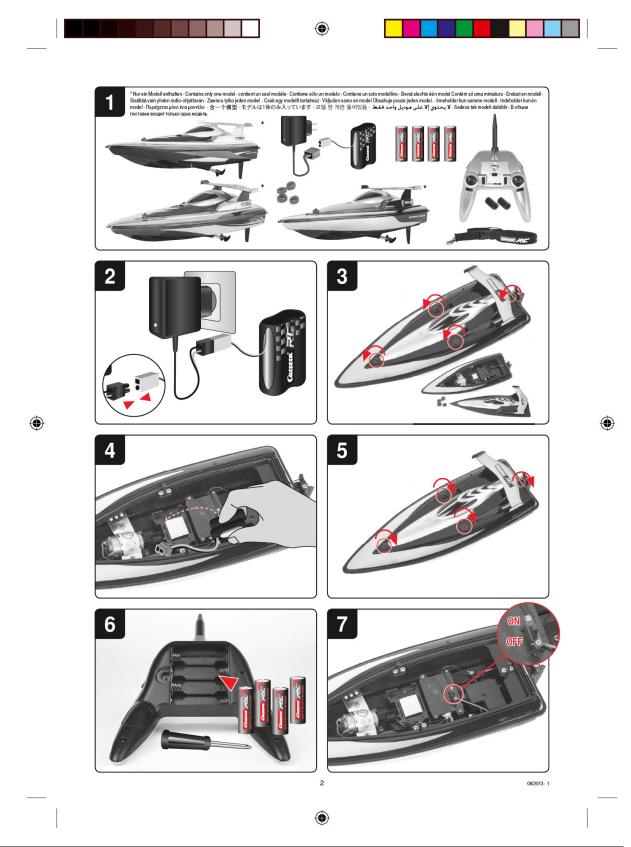







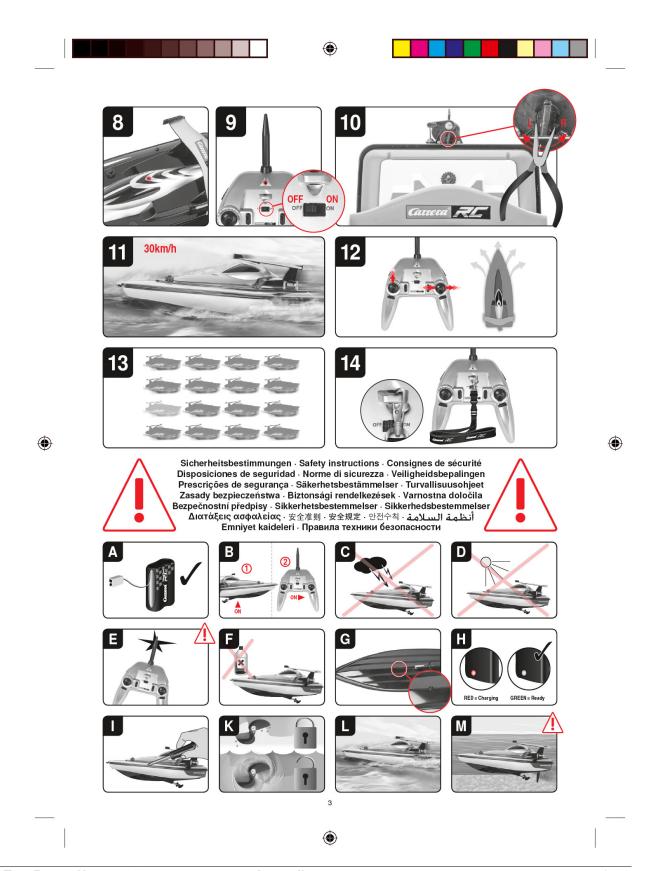

Test Report No.: 14033625 001 Appendix 4 page 10 of 13









Dear customer

BE

ENGLI

Congratulations on purchasing a Carrera RC model be manufactured in accordance with the latest technology. As it is our constant endeavour to develop and improve our products, we reserve the right to make modifications, either of a technical nature or with respect to features, materials, and design, at any time, and without prior notice. For this reason, no claims will be accepted for any slight deviations in your product from the data and illustrations contained in these instructions. These operating and assembly instructions are an integral part of the product. Non-observance of these operating instructions and the safety instructions they contain will render the guarantee null and void. These instructions are to be kept for future reference and in the event that the product is passed on to a third party.

Guarantee conditions

Carrera products are technically advanced products (NO TOYS) which should be handled with care. It is important to follow the directions given in the operating instructions All components have been subjected to careful inspection (technical modifications and alterations to the model for the purpose of product improvement are reserved).

Should any faults nevertheless occur, guarantee is assumed within the scope of the following conditions: The guarantee covers demonstrable material or manufactur-

ing defects that existed at the time that the Carrera product was purchased. The guarantee period is 24 months beginning with the date of purchase. The guarantee does not extend to wearing parts (such as Carrera RC rechargeable batteries, antennas, tyres, gearbox components etc.), damage caused by improper treatment or use, or unauthorised intervention. Repair may only be performed by Stadlbauer Marketing + Vertrieb GmbH itself or by a company it has authorised to do so. Within the scope of this guarantee, either the product as a whole or only the defective components will be replaced or equivalent substitution performed, as deemed appropriate by Stadlbauer Marketing + Vertrieb GmbH The guarantee does not cover transport, packaging or travel costs or any damage for which the buyer is responsible. These costs are to be covered by the buyer. Guarantee claims will only be accepted from the original purchaser of the Carrera product.

- Guarantee claims can only be accepted when:

 The card has been filled in properly and sent in together with the defective Carrera product and the purchase receipt/invoice/cash-register receipt.
- No unauthorised alterations have been made by the buyer to the guarantee card.
- The toy has been treated in accordance with the operating.
- The damage/faulty operation is not due to acts of God or normal wear and tear.

Guarantee cards cannot be replaced

Note for EU countries: Reference is hereby made to the seller's statutory guarantee obligation, to the extent that this guarantee obligation is not restricted by the product guarantee.

Declaration of conformity

Stadlbauer Marketing + Vertrieb GmbH hereby declares that this model including the controller conforms with the fundamental requirements of the following EC directives: EC Directives 2009/48 and 2004/108/EC regarding electro-magnetic compatibility and the other relevant regulations of Directive 1999/5/EC (R&TTE).

The original declaration of conformity can be requested from



Warning!

This remote-controlled model is NOT A PLAYTHING and is only suitable for young people over 14 years of age. This model is not intended for use by children, unless they are supervised by a responsible adult. Inappropriate use may result in severe injuries and/or damage to property. It has to be operated with care and caution and requires both mechanical and mental skills. The operating instructions contain notes on safety and technical regulations as well as information on maintaining and operating the product. It is indispensable to read these instructions thoroughly before the first usage. Only this helps to avoid accidents with injuries and damage.



This symbol, showing refuse bins with a cross through them, denotes that empty batteries, rechargeable batteries, button cells, recharge-

able battery packs, equipment batteries, disused electri-cal equipment, etc. should not be disposed of in domestic refuse, as they are harmful to the environment and health. Please help to preserve environment and health and talk to your children about the correct disposal of used batter-ies and disused electrical equipment. Batteries and disused electrical equipment should be handed in to the usual collection points where they can be properly recycled. Do not mix dissimilar battery types or employ new and used batteries together. Empty batteries should be removed from the product. Do not attempt to recharge non-rechargeable batteries. Rechargeable batteries are only to be charged by adults. Exhausted batteries are to be removed from the toy. Rechargeable batteries should be removed from the product before charging. Supply terminal are not to be short-circuited. Only use the batteries recommended or equivalent types. If in regular use the charger must be examined for damage to the cord, plug, covers and all other parts. If any signs of damage are found the charger may only be used again after repair work has been completed.

Requirement for FCC Part 15

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply

with the limits for a Class B digital device, pursuant to Parl 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful inter-ference to radio communications.

However, there is no guarantee that interference will not ocour in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one

- or more of the following measures:

 Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit dif-ferent from that to which the receiver is connected. Consult the dealer or an experienced radio/TV
- technician for help.

Safety instructions

A Carrera RC boat is a remote controlled model boat that uses special rechargeable batteries for this purpose.

Only original Carrera RC Li-Ion rechargeable bat-teries may be used. Rechargeable batteries are to be removed from the boat before being charged.

When starting, always switch on the boat first, then the controller. To switch off after the run, always follow the В

reverse order!

Do not run your boat during a thunderstorm! At-С mospheric interference can lead to malfunctions.

Do not expose the Carrera RC boat to direct sunlight. To avoid the electronics in the boat overheat ing, when temperatures are above 35 °C, regular hort pauses in operation are essential

Handle the tip of the antenna with care. Danger of E

Never use strong solvents for cleaning your model.

se clean the water sensor contacts regularly G with tap water and a little vinegar-based cleaner

To avoid malfunctions to the control system resulting in uncontrolled operation of the Carrera RC boat, check that the controller batteries and the rechargeable batteries in the boat have sufficient charge. Supply terminals are not to be short-cir-

The Carrera RC boat must be inspected before and after operation, each time it is used, to ensure that it has not become disassembled. Any screws or nuts that may have become loosened during operation must be tightened.

Safety propeller

The propeller switches off on being taken out of the water.

Please note particularly that the propellers have no function out of the water.

The boat is to be operated in water only when fully assembled.

Please ensure your remote control batteries have the required capacity and make sure the LI-lon power pack is fully charged.

Be sure not to allow the propeller or the rudder to touch the bed of the water.

If this is allowed to happen it may lead to permanent damage and severely affect the manoeuvra-bility and speed of the boat.

If necessary, change the propeller for the replacement propeller.







(







Contents of package



- 1x Carrera RC Boat 1x Controller
 - 1x Lanvard

 - 1x Battery Charger 1x Rechargeable Battery 2x Joystick extensions
 - 1x Set of replacement parts
 - 4x 1.5 V Mignon AA batteries (non-rechargeable)

Charging the rechargeable battery



First connect the Carrera RC rechargeable battery to the battery charger supplied. The connection terminals between the battery and the charger are designed to prevent connection with the wrong polarity. Connect the charger to a power source.

When the battery is properly connected and charging normally, the red LED is constantly lift.


Once the battery is fully charged, the red LED switches to green. The battery can now be disconnected and installed in the Carrera RC boat.


The boat is now ready for use.

After use, the battery must be allowed to cool down for at least 20 minutes before it can be fully recharged. Failure to observe this pause may damage the battery.

Always recharge the battery immediately after use to prevent its becoming deep discharged. Recharge the battery occasionally (suggested every 2-3 months). Failure to treat the battery as described above can lead to its becoming defective. Rechargeable batteries are only to be charged by adults.


Installing the rechargeable battery

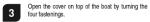

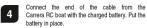

Close the cover on top of the boat by turning the 5 four fastenings back. Be sure to check that the cover is seated correctly.

Inserting the batteries

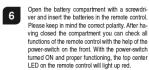

When the control LED flashes rapidly, the batteries in the controller must be changed

Now you can drive the boat



The Carrera RC boat and the controller are bonded at the factory.

1. Switch the boat on at the ON-/OFF switch.The ON-/OFF switch is located under the cover. Turn the switch to ON. Be sure to check that the cover is seated correctly. A connection can only be made when the boat is in contact with the water.

The LED on the top of the boat flashes regularly. 8

2. Switch on the controller. The LED on top of the 9 controller will flash rhythmically.

> the controller will light continuously, meaning the bind has been mad.

Adjusting the steering
If when you run the Carrera RC boat it tends to veer either to right or left, the course can be cor-rected by using the adjusting lever located above the rudder.

Let's practise!



Caution: this boat can reach speeds up to 30

When first starting, be very careful when operating the gas pedal. Practice running slowly for at least two to three full charges of the battery before you start practising faster manoeuvres.

- Before launching from the bank, make sure the boat and the controller are connected (see above)
 Avoid constant motor operation.
- Bring the boat back to the bank after about 15 minutes to change the battery
 After use, remove or disconnect the battery.
- · After the run, turn the switch under the
- boat's cover back to OFF.

 Never run more than 2 batteries down one after the other. After running down two fullycharged batteries, a pause in running for at least 20 minutes is essential.

 • After sailing it, clean the Carrera RC boat
- carefully
- Always recharge the battery immediately after use to prevent its becoming deep discharged.
- Always keep the Carrera RC battery stored outside the boat.



Right joystick: steering right and left with variable lock for precise steering. Please also note that, due to the "turning effect", the steering radius of a left-hand curve is greater than that of a

Thanks to 2.4 GHz technology, up to 16 boats can be operated on one course at the same time. This is possible even without harmonising frequencies

Attach the lanyard to the eyelet on the controller and let the controller hang from your neck.

Troubleshooting

Boat does not move

Cause: Either the switch on the controller or the boat is set

Solution: Switch on

Cause: There is no rechargeable battery in the boat or the attery is too weak. Solution: Insert charged battery

Cause: The overheat protection has caused the boat's motor to cut out due to excess temperature. Solution: Switch off the receiver.

Leave the RC boat to cool down for approx. 30 minutes.

Cause: The battery or rechargeable battery in the transmitter Solution: Insert new battery or recharged battery.

Cause: The boat is very warm. Solution: Allow the RC boat to cool down for about 30 min-

Cause: The controller is possibly not correctly connected with the receiver in the model.

Solution: Establish contact between model and controller

as described under "Now you can drive the boat".

Boat cannot be controlled

Cause: Boat starts moving unintentionally..
Solution: First switch on the boat, then the controller.

Solution: Please replace the batteries in the controller or switch the controller on.

For the latest version of these operating instructions and information on replacement and spare parts avail-

able, please visit carrera-rc.com in the service area.

Errors and changes excepted Colours / final design – changes excepted Technical changes and design-related changes excepted Pictograms = symbolic photos



ISH

75

2





You can use the joysticks to carry out precise steering and driving manoeuvres.

Left joystick: Ahead movement at various

between the racing drivers.

Caution! Danger of strangulation!





