


1.6 User Manual

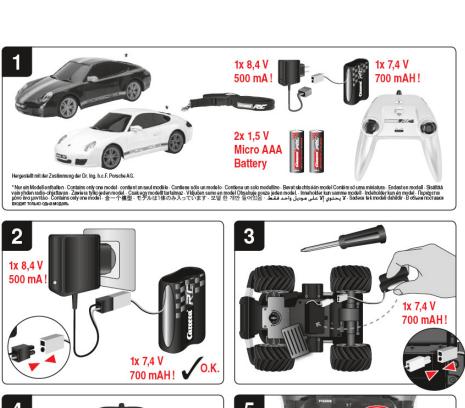

(1)





(











(


'

Test Report No.: 14035562 001

Appendix 4

(



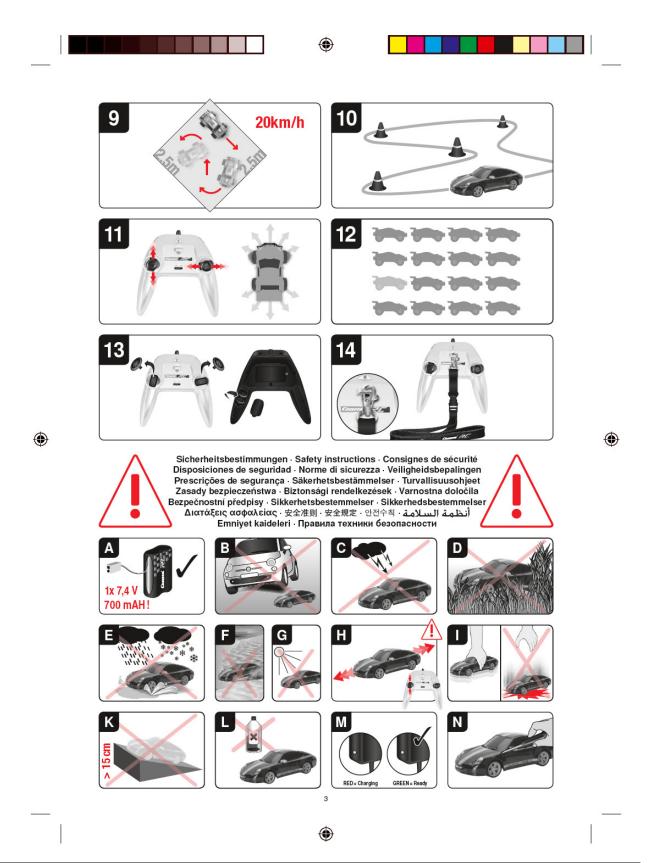

동

ENGLI





Dear customer

Congratulations on purchasing a Carrera RC model car, manufactured in accordance with the latest technology. As it is our constant endeavour to develop and improve our products, we reserve the right to make modifications, either of a technical nature or with respect to features, materials, and design, at any time, and without prior notice. For this reason, no claims will be accepted for any slight deviations in your product from the data and illustrations contained in these instructions. These operating and assembly instructions are an integral part of the product. Non-observance of these operating instructions and the safety instructions they contain will render the guarantee null and void. These instructions are to be kept for future reference and in the event that the product is passed on to a third party.

Guarantee conditions

A Carrera product is built to high technical standards and is ise ensure that you observe all ted with care. Plea the instructions contained in this guide. All components have been subjected to careful inspection (technical modifications and afterations to the model for the purpose of product improvement are reserved).

Should any faults nevertheless occur, guarantee is assumed within the scope of the following conditions:

The guarantee covers demonstrable material or manufacturing defects that existed at the time that the Carrera product was purchased. The guarantee period is 24 months begin-ning with the date of purchase. The guarantee does not extend to wearing parts (such as Carrera RC recharge able batteries, antennas, tyres, gearbox components etc.), damage caused by improper treatment or use (such as performing jumps in excess of the recommended height, dropping the product etc.), or unauthorised intervention. Repair may only be performed by Stadlbauer Marketing + Vertrieb GmbH itself or by a company it has authorised to do so. Within the scope of this guarantee, either the product as a whole or only the defective components will be replaced or equivalent substitution performed, as deemed appropriate by Stadibau-er Marketing + Vertrieb GmbH The guarantee does not cover transport, packaging of travel costs or any damage for which the buyer is responsible. These costs are to be covered by the buyer. Guarantee claims will only be accepted from the original purchaser of the Carrera product

Guarantee claims can only be accepted when

- . The card has been filled in property and sent in together with the defective Carrera product and the purchase re-ceipt/invoice/cash-register receipt. No unauthorised alterations have been made by the buyer
- to the guarantee card.
- The toy has been treated in accordance with the operating
- instructions and subjected to its intended use.

 The damage/faulty operation is not due to acts of God or

normal wear and tear. Guarantee cards cannot be replaced.

Note for EU countries: Reference is hereby made to the seller's statutory guarantee obligation, to the extent that this guarantee obligation is not restricted by the product guarantee

Declaration of conformity

Stadlbauer Marketing + Vertrieb GmbH hereby declares that this model including the controller conforms with the fundamental requirements of the following EC directives: EC Directives 2009/48 and 2004/108/EC regarding electrons magnetic compatibility and the other relevant regulations of Directive 1999/5/EC (R&TTE).

The original declaration of conformity can be requested from







Warning!

WARNING! This toy contains small parts which can be swallowed and is therefore not suitable for children under 3 years of age. WARNING! danger of pinching during operation! Re-move all packaging materials and wire fastenings be-fore handing the toy over to the child. Please retain the packaging and address for information and in the event of any questions.



This symbol, showing refuse bins with a cross through them, denotes that empty batteries, rechargeable batteries, button cells, recharge-

able battery packs, equipment batteries, disused electri-cal equipment, etc. should not be disposed of in domestic refuse, as they are harmful to the environment and health. Please help to preserve environment and health and talk to your children about the correct disposal of used batteries and disused electrical equipment. Batteries and disused electrical equipment should be handed in to the usual collection points where they can be properly recycled. Do not mix dissimilar battery types or employ new and used batteries together. Empty batteries should be removed from the product. Do not attempt to recharge non-rechargeable batteries. Rechargeable batteries are only to be charged by adults. Ex-hausted batteries are to be removed from the toy. Rechargeable batteries should be removed from the product before charging. Supply terminal are not to be short-circuited. Only use the batteries recommended or equivalent types. If in regular use the charger must be examined for damage to the cord, plug, covers and all other parts. If any signs of damage are found the charger may only be used again after repair

Requirement for FCC Part 15

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a resi-dential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not oc-cur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one

- r more of the following measures: Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and
- Connect the equipment into an outlet on a circuit dif-ferent from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Safety instructions

- A Carrera RC vehicle is a remote-controlled model car that uses special rechargeable batteries for this purpose.Only original Carrera RC Li-Ion rechargeable batteries may be used. Rechargeable batteries are to be removed from
 - the toy before being charged.
- The Carrera RC vehicle is designed for hobby use only and may only be operated on tracks and in spaces especially intended for this purpose. В WARNING! Do not use the Carrera RC vehicle
- Do not operate the car beneath overhead highvoltage cables or broadcasting masts or during a storm! Atmospheric disturbances can affect the operation of the vehicle. When there a large temperature differences between your car's ga-rage and the running track, please wait until the vehicle has had time to acclimatise. This will help prevent condensation forming and the possibility of malfunctions resulting
- Never operate the product on grass surfaces There is the risk of grass hindering the movement of the axles, which can lead to the motor overheating. Do not use the Carrera RC vehicle for transporting goods, persons or animals.
- Never use the Carrera RC vehicle outdoors during rain or snowfall. The car must not be run through water, puddles
 - and snow, and must always be kept stored in a dry place. Wet surfaces without puddles will not affect the car's performance as the electronic equipment is protected against spray
- Never operate the vehicle near rivers, ponds or lakes, to avoid the risk of the Carrera RC car falling into the water.

 Avoid running on courses which are laid exclu
 - sively with sand.
- Do not expose the Carrera RC vehicle to direct G
 - sunlight.
 To avoid the electronics in the car overheating, when temperatures are above 35 °C, regular short pauses in operation are essential.
- Never subject the Carrera car to repeated changн es of load - that means continuously reversing it
- Always place the car on the floor by hand. Never throw the car on the floor from a standing position.
- Avoid jumping from jumps or ramps higher than 15 cm (0.49 ft.).
- Never use strong solvents for cleaning the car.
- To avoid malfunctions to the control system result M ing in uncontrolled operation of the Carrera RC vehicle, check that the controller batteries and the rechargeable batteries in the vehicle have suffi
 - cient charge.
 Supply terminals are not to be short-circuited.
 - The Carrera RC vehicle must be inspected be fore and after operation, each time it is used, to ensure that it has not become disassembled. Any screws or nuts that may have become loosened during operation must be tightened.



 \oplus









Contents of package



- 1x Carrera RC Vehicle 1x Controller
- 1x Lanvard

- 1x Battery Charger 1x Rechargeable Battery 2x 1.5 V Micro AAA batteries (non-rechargeable)

Charging the rechargeable battery



First connect the Carrera RC rechargeable battery to the battery charger supplied. The connecor the battery charger supplied. The colline to the total the tota

When the battery is property connected and charging normally, the red LED is constantly lit. Once the battery is fully charged, the red LED switches to green. The battery can now be dis-connected and installed in the Carrera RC car. The car is now ready for use. After use, the bat tery must be allowed to cool down for at least 20 minutes before it can be fully recharged. Failure to observe thispause may damage the battery.

Always recharge the battery immediately after use to prevent its becoming deep discharged. Recharge the battery occasionally (suggested every 2-3 months). Fallure to treat the battery as described above can lead to its becomindefective. Rechargeable batteries are only to be charged by adults.

Installing the rechargeable battery



Using a screwdriver, remove the cover of the battery compartment in the Carrera RC car.
Connect the end of the cable from the Carrera RC vehicle with the charged battery. Put the battery in place. Replace the compartment cover using a

Inserting the batteries



Open the battery compartment with a screwdriver and insert the batteries in the remote control. Please keep in mind the correct polarity. Different ty-pes of batteries or new and used batteries are not to be mixed. After having closed the compartment you can check all functions of the remote control with the help of the power-switch on the front.
With the power-switch turned ON and proper functioning, the top center LED on the remote control will light up red.

Now you can drive the car

- The Carrera RC car and the remote control are bound as a factory setting.
- 1. Switch the car ON at the ON/OFF switch. The LED on top of the car will flash rhythmically.



2. Switch on the controller. The LED on top of the controller will flash rhythmically.

After a few seconds, the LEDs on the car and on the controller will light continuously, meaning the bind has been made

Adjusting the steering

If the Carrera RC vehicle is found to pull towards the left or right while moving, use the adjuster control shown in the illustration to adjust the car's track precision.

Let's practise!



Warning! This vehicle reaches speeds up to 20 km/h (13 mph). Practice on an empty surface at least 2.5 metres (8.2') square. When first starting, be very careful when operating the



Now it's time to practise! Set up a Carrera RC vehicle racing track in a large empty area, us-ing cornerposts, empty cans, or similar objects. The basic technique to adopt when operating a Carrera RC is to drive fast on the straight sections and to slow down in the curves.

- en changing from the first battery to the second battery, you must stop running for at least ten minutes. At the next change, a pause of at least 20 minutes is absolutely es-
- Avoid constant motor operation.
- If the car switches itself off several times one after another, the battery is dead. Please recharge the battery.

 • After 30 minutes inactivity, the controller
- and vehicle switch off automatically. To re-start, switch the ON/OFF switch on the controller & the car to OFF and then back to ON.
- To switch off after use, follow the steps in the reverse order.

 After use, remove or disconnect the battery.
- Always recharge the battery immediately after use to prevent its becoming deep dis-
- Always keep the rechargeable battery stored outside the vehicle.
- Clean the Carrera RC car after use.

Controller functions



SERVO TRONIC You can use the joysticks to carry out precise steering and driving manoeuvres.

Left joystick: forwards and backwards at dif-

ferent speeds. Please note that the vehicle runs faster forwards than it does backwards. Right joystick: steering right and left with variab-le lock for precise steering

- Thanks to 2.4 GHz technology, up to 16 cars can be run together on one race-track. This is possible even without harmonising frequencies between 12 the racing drivers.
- The joysticks are removable. Alternatively, the vehicle can be controlled with a rocker. The joysticks can be stored in the special compartment at the
- Attach the lanvard to the evelet on the controller and let the controller hang from your neck.

Warning! Danger of strangulation!

Troubleshooting

Car does not move

Cause: Either the switch on the controller or the car is set

Solution: Switch on

Cause: There is no rechargeable battery in the car or the battery is too weak. Solution: Insert charged battery

e: The car has come to a stop at an obstacle. Solution: The voltage surge protector has switched the car off. Turn the ON/OFF switch on the car to OFF, then back to ON, and place the car on a clear surface

Cause: The battery or rechargeable battery in the transmitter or model is too weak Solution: Insert new battery or recharged battery.

Cause: The remote control is possibly not correctly frequency bound with the receiver on the model

Solution: Carry out a frequency bind between the model and the remote control as described in "Now you can drive

Cause: The transmitter has switched itself off after 30 mi-Solution: To restart, switch the ON/OFF switch on both con-

troller & vehicle to OFF and then back to ON... Cause: The vehicle is very warm.

Solution: Switch both car and controller off and allow the car to cool down for about 30 minutes.

Cause: The overheat protection has caused the car's motor to cut out due to excess temperature.

Solution: Switch off the receiver. Leave the RC car to cool down for approx. 30 minutes.

Car cannot be controlled.

Cause: Vehicle starts moving unintentionally.

Solution: First turn on the transmitter, only then the vehicle.

For the latest version of these operating instructions and information on replacement and spare parts available, please visit carrera-rc.com in the service area.

Errors and changes excepted Colours / final design - changes excepted Technical changes and design-related changes excepted Pictograms = symbolic photos



덩





