USER MANUAL

Model: SMART PHONE

Brand: ILU

Directory

One. An Important safety precautions	6
Two. Your phone	8
1. Technical Reference	9
2. Display	10
2.1Display site map	10
Three. Start using	11
1. A phone is switched on / off	11
2. Installation and removal SIM card/memory card	
3. Battery charging	
Four. Quick Start Guide	14
1. Calling features	14
1.1. Call 15	
1.2. An incoming call	15
1.3. Call options	15
1.4. Call records	16
1.5. Adjust the volume	16
2. Enter text	16
Five. Function menu	18
1. Phone	18
2. Contacts	

3. Messaging	21
3.1. Write new message	21
3.2. Reply to message	22
3.3. New MMS	22
3.4. Forwarding information	22
3.5. Delete information	23
3.6. Remove the session	23
3.7. Information setting	23
4. Browser	23
5. Camera	24
6. Gallery	25
7. Downloads	25
8. File Manager	26
9. Sound Recorder	27
10. Calculator	27
11. Music	28
12. Clock	28
13. Calendar	29
14. Settings	29
14.1 Wi-Fi	29
14.2 Bluetooth	30
14.3 SIM cards	31
14.4 Data usage	31
14.5 More	32
14.6 Display	33
14.7 Sound & notification	34
14.8 Apps	35

14.9 Storage & USB	
14.10 Battery	
14.11 Smart settings	
14.12 Location	
14.13 Security	
14.14 Language & input	
14.15 Backup & reset	
14.16 Date & Time	
14.17 Schedule power on & off	
14.18 About phone	
15. Email	
16. Gmail	
17. FM Radio	40
Six. Common problems and solutions	41
Seven .Reference information	45
Seven .Reference information 1. Access password	 45 45
Seven .Reference information	 45 45
Seven .Reference information 1. Access password 1.1 . Cell phone password 1.2 .PIN code	 45 45 45 46
Seven .Reference information 1. Access password 1.1 . Cell phone password 1.2 .PIN code 1.3. PIN2 code	 45 45 46 46
Seven .Reference information 1. Access password 1.1 . Cell phone password 1.2 .PIN code 1.3. PIN2 code 1.4. PUK code	45 45 46 46 47
Seven .Reference information 1. Access password 1.1 . Cell phone password 1.2 .PIN code 1.3. PIN2 code	45 45 46 46 47
Seven .Reference information 1. Access password 1.1 . Cell phone password 1.2 .PIN code 1.3. PIN2 code 1.4. PUK code	45 45 45 45 46 46 46 47 47
Seven .Reference information 1. Access password 1.1 . Cell phone password 1.2 .PIN code 1.3. PIN2 code 1.4. PUK code 1.5. PUK2 code	45 45 45 46 46 46 47 47 47 48
Seven .Reference information 1. Access password 1.1 . Cell phone password 1.2 .PIN code 1.3. PIN2 code 1.4. PUK code 1.5. PUK2 code 1.6. Barring password	45 45 45 46 46 46 47 47 47 48 48

2.3. Use of the environment	51
2.4. Electronic equipment	51
2.5. Other important information	53

One. An Important safety precautions

Read the following simple instructions, and comply with, Beware of dangerous or illegal. Detailed safety information, see the P47 "Health and safety information"

Traffic Safety first

Do not use the car phone, should be used after stopping

To turn off when refueling

Do not use the phone at the gas station, or near flammable liquids and chemicals agents,

On the plane to shut down

Mobile phones can cause signal interference, cell phone use on planes is not only illegal and dangerous

 $\boldsymbol{\nu}$ This set the phone into flight mode, aircraft communication

systems, interference cannot shut down

In the hospital to shut down

To comply with the various rules and regulations of the hospital, shut down in the vicinity of the medical set

Interference

Mobile communications may be subject to radio interferen ce, radio interference will affect the phone's performance Comply with the special provisions

Comply with the special provisions, and in any place that pr ohibit the use of cell phones or anything that may cause i nterference or danger, the phone is turned off (for exampl e, in the hospital)

Rational use of

Use the phone in the normal position (near the ears). Phon e is switched on for no reason; do not touch the antenna Accessories and batteries

Applies only to mobile phone accessories and batteries Professional services

Installation or repair must be performed by service profess ionals

Two. Your phone

The phone is a WCDMA / GSM / EGPRS digital mobile p hones. You can read this manual, a comprehensive under standing of the use of mobile phones, a taste of its perf ect function and simple operation.

It is a 3G smart phone. In addition to the basic call and SMS functions, also provide you with intelligent text inpu t, clock / alarm, front and rear camera, music player (Mic ro SD card), tape recorders, calculators, browsers, e-mail,

FM scenarios, timer on / off, including a variety of pract ical features to facilitate your work and leisure activities. In addition, the phone using a personalized man-machine interface design, improved functionality to meet your ne eds.

1. Technical Reference

Specification

s / Model

Size / volum

- Weight To the actual subject
- Standby time 400_Hour * Depending on the specifi c network environment
- Call time 300_Minute * Depending on the specifi c network environment

The display

Camera

USB data int 5pin

erface

Headset Stereo

2. Display

2.1 Display site map

The display consists of three parts:

Range	Description
The first line	Display a variety of stand-icon
The middle o f the content	Display the network information, stand
	by small tools (such as the clock, poi
	nt the king 'and so on, according to
	different type change) desktop functio
	n icon
The last line	Currently assigned to the function of the t wo soft keys and dial touch buttons

Three. Start using

1. A phone is switched on / off

Press and hold button on phone boot or shut down.

2. Installation and removal SIM card/m emory card

When you apply for a network, you will get a SIM card, which contains proprietary information, such as the PIN, you can get the service options.

- use a SIM card please note the following informatio n:
 - all miniature SIM cards should be placed on the c hildren of the reach;
 - the SIM card and its contacts can easily scratch o r be damaged due to bending, so
 - Carry, to be extra careful when you insert or remove the SIM card;
 - Before installing the SIM card, be sure to turn off th e phone
 - Installation and removal of the SIM card as follows

- If necessary, press and hold power key to turn off the phone;
- The upward pull from the battery cover, remove the battery cover;
 - The SIM card into the SIM card holder, until no t move.
 - ♦ The gold contacts of the SIM card face down;
 - The gap of the SIM card, such as the shell at th e identification;
- Install the battery cover
- Installation and removal of the T-flash card
 - The phone uses a the clamshell Micro SD deck;
 - Install the T-flash card. Open the clamshell T-Flas h card connector, the metal of the T-flash card fa ce down, according to the identity of the shell at the memory card into the slot, will deck down to hear the "label" sound can ;
 - Remove the T--flash. Push up the deck to hear t he sound release the "label", you can Remove the memory card

3. Battery charging

- Connect the charger to plug in the power;
- The charger connector into the bottom of the phon e's USB interface; At this time, the upper-left corne r of the phone screen battery indicator will flash;;
 - If the charger is turned off, the screen displays c harging video and indicates that the battery charg e
 - If the phone power is low, is still excessive use, charging starts, it may take some time before the charging indicator appears on the screen;
 - When the battery indicator icon is displayed on the screen is full, and no longer flashing, indicates that the charge has been completed.
- During charging, batteries, cell phones and charger s may have a fever, is a normal phenomenon;
- After charging is completed, disconnect the AC p ower outletand mobilephone charger.

Four. Quick Start Guide

1. Calling features

- When the network provider's logo appears on the d isplay, you can call or answer the phone
- Three interfaces: dial, caller ID and call this function;
- Display the upper-left corner of the information bar shows the network signal strength.
- The call quality by the impact of obstacles, so the move in a small area can effectively improve the si gnal strength.

Note:

v In any country using the digital GSM network, if you ar e in the network coverage area (you can check the phon e display network signal strength indicator in the upper I eft corner learned), you should be able to use the call fu nction.

v If your network provider does not provide roaming servi ces in the region, will be displayed on the display "can make emergency calls (Emergency)", to tell you that only such call. v If you are in network coverage, even without a SIM car d to make emergency calls.

1.1. Call

·Click the dial-up icon, enter the dial-up interface

•Press the number keys, enter the phone number

•Press the dial key to call

•Press the end key to end the call.

1.2. An incoming call

New calls when the phone non-standby, press the green answer

button or the side buttons to answer the call; reject a c

all press the red hang up button

Description:

Insert the headset, you can use the headset key to answer. If you set the auto-answer, and insert the headset, answer automatically after 5 seconds.

1.3. Call options

During a call, you can proceed as follows:

- > Show dial pad
- Add call
- On Hold

- Mute: turn off the microphone, so the other cannot hear their own voice
- > Speaker
- Start recording
- End

1.4. Call records

- Call records in the function menu, View specific infor mation
- Dial-up interface view call records option

1.5. Adjust the volume

Press the side buttons adjust the volume size.

2. Enter text

When edit text, using the Android keyboard or input met hod of the network to download to edit Chinese, English,

numbers, symbols. Such as add contacts, edit informatio n.

Switch the input method:

- Enter the text editing interface;
- · Text editing area, pop-up menu of the edit text;

Input method in the Input menu, select the input method.
 Description: press the number sign key, switch numbers an d symbols input input mode, click on the file to toggle the case of letters.

Five. Function menu

1. Phone

- •Click the dial-up icon, enter the dial-up interface
- •Press the number keys, enter the phone number
- •Press the dial key to call
- •Press the end key to end the call
- Note:
- Some settings require network support. Call barring loca I network and SIM card opening of this function to mak e the setting effective

2. Contacts

This feature allows you to browse the address book, store, edit, delete the name and phone number in the phone and SIM card. For the convenience of the records management, the phone set group function and related items in the same group.

Options:


New: New number to the phone, SIM1, SIM2 Contacts to display: Display options settings Import/Export: Import/export contacts Accounts: Add、edit accounts Settings: Set display options Send contacts by SMS/MMS: Use SMS/MMS Send contacts

Batch delete: Batch deletes contacts

New:

- The function to add a new phone addresses book record. Can be added to the SIM card
 - 1, SIM card or phone, as follows:

add records in the SIM card memory
 ↓
 Select to SIM card 1 or SIM card 2
 ↓
 Enter your contact information

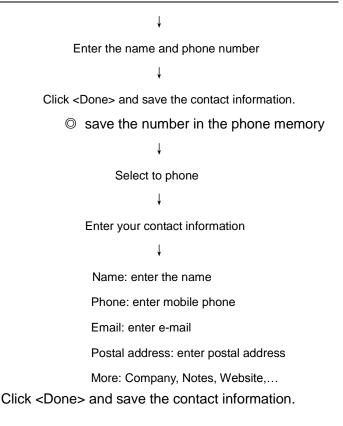

3. Messaging

Screen in the standby interface point to enter the main menu, and then select the information, and will enter the information center interface.

- formation Center, including the sub-menu: establishm ent of information, Inbox, Outbox, templates, text mes saging is set;
- This phone can store 5000 SMS, and can store up t o the amount of information due to the SIM is differe nt;

3.1. Write new message

The main screen standby screen, click the information ic on, enter the information interface;

Click the new information, enter New message interface;

Enter the recipient number or select a contact from th

e phonebook as a recipient

Enter the message content

Click to send, send text messages Note: The information session in the form of the mobile ph one in order to access the inbox and outbox.

3.2. Reply to message

□ When new information is received the top event notificati on indication bar display and the corresponding prompt rep ly, and you can view information

Short message list interface, click the corresponding ses

- □ Enter the reply
- □ Click Send to complete the reply

3.3. New MMS

- The main screen standby screen, click the information ic on, enter the information interface;
- Click the new information, enter the new editing interfac e;
- Enter the recipient number or select a contact from the phonebook as a recipient
- Press the Menu key, choose to add the theme to input MMS theme;
- Editorial content, insert images, audio;
- Click to send, send MMS.

3.4. Forwarding information

main standby screen interface, click the information icon, enter the information interface; > Open a session record, tap and hold a message, select the forwarding information.

3.5. Delete information

- main standby screen interface, click the information butt on, enter the information interface ;
- The point hold the record of a session, choose to delet e the session;
- Press OK to delete the message.

3.6. Remove the session

- main standby screen interface, click the information butt on, enter the information interface;
- open a session record, tap and hold a message, choose to delete the session;
- Click the confirmation to remove the session

3.7. Information setting

The relevant parameters of the setup information, such a s: SMS limit, send a report.

4. Browser

Using the web browser

Do one of the following to open the browser and start s

urfing the Web:

- 1. On the Home screen, tap
- ➢ Going to a web page
- On the browser screen, tab the URL box on top of the screen.
- Enter the webpage address using the keyboard. As you enter the address, matching webpage address will appear on the screen.
- 3. Do one of the following:
 - Tap an address to go directly to that webpage.
 - Continue typing in the webpage address, then tap "GO" on the keyboard.

5. Camera

- Into the camera can switch to Camcorder, Camera a nd Panorama, please refer to the camera using the f unction
- The camera options are as follows:
 - > Photo: Open the photo to view the photos.
 - > Picture size: set the photo size

- White Balance: White balance settings, you can cho ose Auto, Incandescent, Daylight, Fluorescent, Cloud y
- Scene mode: Auto, Night, Sunset, Party, Portrait and so on.
- The effects settings: select None, Mono, Sepia, Nega tive, Posterize, Aqua and other shooting effects
- > Restore defaults : the initial settings of the camera

6. Gallery

- 1. Click the gallery on the home interface
- 2. You want to see the picture
- Sliding around in the horizontal direction, touch screen, you can switch to the previous or next image.
- 4. If you want to play slide, please click the slide show
- 5. To share or edit images, please click on the menu to s elect the appropriate option.

7. Downloads

You can download some new content to your phone

(Hint: Use only the services of your credit and their sup pliers can provide the necessary security protection, to r esist the intrusion of unwanted software, please contact your service provider offers different services and charge s)

8. File Manager

In the standby interface points into the main menu, then select the file management, access to the file managem ent interface.

This feature needs to insert the T-FLASH card can be u sed. Tone file and image files to be managed through th is module.

- Graphics files can be sent to the wallpaper, screen s aver on / off animation can also be sent as an MM S;
- Tone file can be sent to the scene mode, set caller r ing tones, SMS ring tones, alarm tones can also be sent as an MMS
- File management options include:

- > Open: open the folder or file
- > Folder: new folder in the storage card or folder
- > Formatting: Formatting the memory card
 - This operation will delete all the data in the stora ge
- Remove: Select the memory card, you can perform t o remove function to remove the memory card in a safe.

9. Sound Recorder

"record " button to select the cursor where the correspondi ng functions through the screen in accordance with the dis play prompts, Can be realized recording, playback, attach, r ename, delete, send and other functions, you can also set t he audio file storage format.

10. Calculator

- From the Application menu, [Calculator]
- Calculate

Deleting an entered character: [Del]

Switching between function pad and arithmetic operation pad:

- $\blacksquare \rightarrow [\text{Advanced panel}] / [\text{Basic panel}]$
- Alternatively, flick left or right.

Cutting/Copying/Pasting: Touch and hold mathematical expression display field→Operate to cut/copy/paste

11. Music

- Play: Play the OK key or press the play button.
- Pause: pause the music player, press the OK but ton or point press the pause button.
- Switch songs: according to the list to select a so ng, press the option key to switch songs in the p layer interface.
- volume adjustments: up and down the side button s to adjust the volume or pen point increase and decrease the volume icon

12. Clock

You can set Alarm Clock, World Time, Timer and Stopw atch in Clock.

13. Calendar

Never miss an important date again. Use the Calendar app to schedule your events, meetings, and appointments.

- From the Application menu, [Calendar]
- Main operations in the Calendar screen
 Switching display unit: Tap year and month at the upper I eft screen→[Day] / [Week] / [Month] / [Agenda]
 Setting a calendar: → [Settings]→[General settings]→Set required items.

14. Settings

In the idle screen, tap the screen to select Settings, and will enter the setting interface.

You can you use this menu option used to set up your phone.

14.1 Wi-Fi

- In the Home interface, click Settings>Wireless and networ k.
- 2. Click the WLAN to turn on the WLAN capability.

Tip: When the phone battery is very low, in order to pr

otect the data in the system, will be prohibited to open Wi-Fi capability.

3. Click on the WLAN settings, Wi-Fi network will display t he search to the network name and security settings.

Tip: When you select an open network, the phone will auto matically connect to the network; if you select an encrypte d network, you must first enter the password for the (securit y), and then click the link.

4. Click on a Wi-Fi network can be connected.

Tip: After a successful connection, the status bar will displ ay the Wi-Fi icon and displays the signal strength at this ti me, your phone has access to the network.

14.2 Bluetooth

1.Click on the home interface Settings> Wireless and net working.

2. Click the Bluetooth to turn on the Bluetooth function.

Tip:

• Opens the phone to automatically search for visi ble Bluetooth devices nearby, and display the Bl uetooth icon in the status bar.

 When the cell phone battery is low, in order to protect the data in the system will be prohibited to open the Bluetooth function.

3. Click on the Bluetooth settings Bluetooth devices scan t o select the equipment you want to connect

4. Enter a pass code to pair connection.

Tip: When paired and connected after the success of t he status bar will display the Bluetooth transmission ic on, you can with the Bluetooth devices transfer data.

14.3 SIM cards

1. Standby setting: open or close the SIM card.

2. Mobile Data network: select the SIM card connected to the network.

4. SMS messages: Send message settings Select SIM card, can also be set always prompt.

14.4 Data usage

You can enable Internet access via mobile network, set limit

of mobile data communications on graph or set alert when usage exceeds the limit.

14.5 More

Airplane mode

You could Open / Close airplane mode.

Default SMS app

You could select the default SMS application.

Tethering & Portable hotspot

Use your phone as a Portable WLAN hotspot

VPN

Add / setup and manage virtual private network.

- Mobile networks
- 1. Click on the Settings

2. Click on the mobile networks into the mobile network se ttings.

 Data enabled: Check this box to connect to login_After successful login, Phone status bar will appear to the 3
 G network connection icon, After that you can normal use of the Internet-related applications on the phone.

- Data roaming: Check this when the phone is in roa ming state can also be the normal use of the Inter net-related applications on the phone.
- UPLMN setting
- Preferred network type: Select preferred network mod e.
- Access Point Names: Select Access Point.
- Network operators: To enter this menu, you can cond uct a web search and automatic selection of network operation.
- Tip: the opportunity according to the user to insert pe rsonal identification card (USIM/SIM/UIM) to automatical ly select the network. Tip: the opportunity according t o the user to insert persona I identification card (USIM / SIM / UIM) to automatically select the network.

14.6 Display

Brightness level: the brightness slider to the left to red uce the brightness of the screen, drag to the right you c an increase the brightness.

- Adaptive brightness: Optimize brightness level for avai lable light
- Sleep: adjustment screen to be automatic locking the delay before
- Daydream: set daydream and when to daydream
- Font size: Select a font size
- When device is rotated: the screen will automatically r otating horizontal screen or vertical screen

14.7 Sound & notification

- Profile: The scene modes include: General, Silent, Vibration, outdoor
- Volume: adjust the volume
- Phone ringtone: Set ringtone
- Notification sound: Select the notification you want to use ring tones
- Vibrate: Vibrate devices for incoming calls
- Dial pad touch tones: Play tones when using dial pad
- Touch sounds: Play sound when marking screen selection
- Screen lock sound: lock and unlock the screen to play a s

ound

Vibrate on touch: Vibrate when pressing soft keys and on certain UI interactions.

14.8 Apps

- Viewing permitted operation of the applications in the terminal
 - 1. From the Home screen, [Settings]→[Apps]
 - 2. Select an application
 - Deleting application data or cache
 - 1. From the Home screen, [Settings]→[Apps]
 - 2. Select an application→[Clear data]/[Clear cache]
 - When [Clear data] is selected, tap [OK].
 - Uninstalling applications

You cannot uninstall some pre-installed applications by default. And if pre-installed applications are uninstalled, you can reset the terminal to restore.

- 1. From the Home screen, [Settings]→[Apps]
- 2. Select an application→[Uninstall]→[OK]

14.9 Storage & USB

You can check memory space of the terminal, SD card. Sho w the total mobile phone SD card capacity, free space

- Install the SD card: Insert the SD card to install
- Formatting the SD card: clear all data in the phone's SD ca rd, such as music and photos

14.10 Battery

Check battery usage status.

14.11 Smart settings

- Non-touch operation: None touch to operating unlock, standby page, music, gallery
- TP Smart Wakeup: When open, off-screen painting "c
 " can enter the "Camera", "E" can enter the "Browse
 r", double-lit screen, etc.
- Smart answer: When an incoming call, close to the e ar automatically answer
- Pocket mode: In pocket, the sound is automatically tr

ansferred to the maximum

- Flip mute calls: When an incoming call, reverse the p hone instantly mute
- Flip mute alarms: When the alarm sound, reverse the phone instantly mute

14.12 Location

- 1. From the Home screen, [Settings]→[Location]
- 2. Turn [Location] to [ON] \rightarrow [Agree] \rightarrow [Yes]

14.13 Security

- You can set up your phone menu security options, to a void illegal use of your phone or SIM card.
- Screen lock: use pattern, PIN or password to lock the s creen
- Set up SIM card lock: open that need to enter a PIN lock password every time you start, otherwise you cannot us e the SIM card; settings, enter the correct PIN code. Thre e input error when asked to enter the PUK (Personal Unbl ocking Key). PUK code is used to unlock and change a bl

ocked PIN code and PUK code is not provided or missin g please contact the network operator.

- Make passwords visible: the password visible when the input
- Device administrators: Add or remove device administrat ors
- Use secure credentials: Allows applications to access th e security credentials and other documents
- Install from SD card: Install encrypted certificates from SD card
- Clear storage: clear all the contents of the certificate store and reset their passwords

14.14 Language & input

Select a language and keyboard settings

14.15 Backup & reset

- Backup & Restore: Back up app data, WI-FI pas swords, and other settings to Google servers
- Factory date reset: Clear all the data on the phone

14.16 Date & Time

Set the city, time and date display format

14.17 Schedule power on & off

Can be set to the time of the Switcher, off by default

14.18 About phone

Display the phone's some basic information, such as: stat us messages, electricity usage, legal information, phone mo del, version, etc.

15. Email

Before using the e-mail function, please set the e-mail accoun

t

- Send and receive: automatically send e mail in the Ou tbox and receive new mail.
- Edit E-mail: edit an e-mail
- Inbox: Displays the current account to receive mail.
- Refresh: Refresh the inbox.

- Compose: Edit an e-mail
- Folders: Switch Inbox, Drafts, Inbox, Sent.
- Accounts: Add or edit an account.
- Account settings: set E-mail parameters

16. Gmail

- Gmail is Google's web-based email service.
- Gmail can be configured when you set up your phone at the first time.
- Depending on your settings of the synchronization, Gmail on your phone may be synchronized with your Gmail account on the web automatically.



- If you do not log in your Google Account, tap next in the screen of Add a Google Account.
- Tap "Create" to create an account, or tap "Sign in" to sign in the Google account.
- Please follow the on-screen instruction to log in.
- Once logged in, you can begin reading and sending emails from your Gmail account.

17. FM Radio

FM radio , Must to be plug in your headphones into the

FM radio interface can listen to FM radio

Search Channel: Please click the Search button, it will a utomatically search for channels, when the search will a utomatically stop after a channel searched.

Fine-tune the channel: When search to a channel please click on the search button next to the fine-tuning, fine-t une the operation of the channel can be.

Speaker Play: when click the headset button, switch to t he speaker playing the radio

Background Play: Touch HOME key to exit the FM radio. Play FM radio into the background.

Six. Common problems and solut ions

Before and after-sales service contact, follow these simpl e checks, you might be able to avoid unnecessary maint enance time and cost of waste.

Frequently	Causes and solutions
Asked Que	
stions	

Cannot boot		n check whether to hold the power butto n for at least one second;
		Check the battery connection is bad, ple ase remove and then reinstall and retry t
		he boot;
		Check the battery power is exhausted, pl ease charge ;
Unable to c		n signal weak, please move to the stron
onnect to th		g signal to retry;
e network		outside the network service provider's net work to cover:
		SIM card is invalid, contact your network provider;
Boot time, t he display i		check the SIM card (SIM card inserted), whether SIM card is installed correctly (s
nformation	_	ee page P12)
		phone lock password, set the phone loc k, phone password must be entered prior to use;
		enter the PIN, chose to enter the PIN ev
		ery time you turn, you must enter the PI
		N code;
		PUK code: the connection three times t
		o enter the wrong PIN code will lock the
		SIM card, you should enter the network
		operators to provide the PUK code;
Poor call q		Check to see if volume adjustment inapp

uality	 ropriate (see P19) use of mobile phones in poor reception areas, such as high-rise near or baseme nt, radio waves can not be effectively co mmunicated; use of mobile phones in the call-intensive period, the above working hours, line co ngestion caused not call;
Standby tim e is shorter	 Standby time network system settings, w hich may in a poor reception area. When no signal is received, the phone will continue to launch in order to find the base station, consume a large amount of batt ery power, resulting in the standby time i s shorter. Move to a strong signal or tem porarily turn off the phone; need to replace the battery, replace the new battery
SIM card er ror	 SIM card metal surface dirt, with a clea n cloth, wipe the SIM card metal contact points; the SIM card is not installed; n SIM car d is damaged, contact your network servi ce provider.
Can not ma ke calls	 Make sure whether to press the dial key after dialing; Make sure whether to be banned due to

	arrears call;
	Please Confirm SIM is valid;
	Please confirm whether the call barring
	feature is set;
	Make sure to set fixed dialing;
The recipie	Make sure the phone is switched on, an
nt is unable	d connect to the network;
to contact	Make sure whether to be banned due to
you	arrears incoming;
	Make sure the SIM card is valid;
	Please confirm whether the call barring
	feature is set;
	Make sure to set fixed dialing;
Can not be	bad contact, check the plug is connecte
charged	d;
	charge in less than 40 ° C or above 55
	° C environment, to change the chargin
	g environment;
	battery or charger is damaged, in need o
	f replacement
Some featur	operating error;
es can not	
be set	network provider does not support this fe
	ature, or you did not request this

Seven .Reference information

1. Access password

The phone and SIM card to use several access passwords. These passwords help protect your phone from unauthorized use.

Security Settings option in the main menu settings can b e used to modify the access password (PUK and PUK2 codes excluded), see page P52.

1.1 . Cell phone password

The phone password can be used to prevent unauthoriz ed use of mobile phones. Select Phone Password featur e, every time you turn the phone automatically locked, y ou need to use a password to open the phone lock.

- Before start using the phone, it is recommended that you modify the phone password.
- A new password for confidentiality and kept in a safe place, the best mobile phone separate.

1.2 .PIN code

PIN (Personal Identification Number) protects your SIM c ard stolen. Usually provided with the SIM card PIN code. Need to enter the PIN code every time you turn to sel ect the PIN test.

If the PIN code three times in a row input errors, sh ould enter the PUK code, then enter the new PIN co de to confirm re-enter the new PIN code again and c onfirm.

1.3. PIN2 code

Some SIM cards may provide PIN2, the PIN2 code, cert ain features are in use, such as call billing. Only the SI M card supports these features in order to use these fe atures.

If the PIN2 code three times in a row to enter the w rong PUK2 code, then enter the new PIN2 code conf irmation, re-enter again a new PIN2 code and confir m.

1.4. PUK code

The PUK (Personal Unblocking Key) used to change you r PIN locked. The PUK code is provided with the SIM c ard. If not provided, please contact your local service pr ovider to ask for the PUK code.

- If the connection is ten times enter the wrong PUK c ode, SIM card can not continue to use please contac t your ISP to replace the new SIM card.
- The PUK code can not be changed. If you have lost the PUK code, please contact the service provider.

1.5. PUK2 code

PUK2 code, supplied with some SIM cards. Used to cha nge the locked PIN2 code.

- If the connection is ten times enter an incorrect PUK 2 code, SIM card will no longer continue to use the new SIM card,
- PUK2 code can not be changed. If lost, please conta ct the service provider.

1.6. Barring password

Call barring, 4 barring password. To apply this function, you can get the password from your service provider.

2. Health and safety information

2.1. Battery

- Do not short-circuit the battery device, which will dam age the battery to generate heat and may cause fire.
 Prohibit the battery in hot or thrown into the fire, this
 - will cause an explosion. Used batteries should be re turned to the supplier or on the designated collection points, and can not be placed in household garbag e.

2.2. Traffic Safety

The wireless phone has a powerful voice communication function, almost at any time, anywhere communications and liaison. But there are a number of important respons ibilities, have the advantage of the wireless phone, each user must fulfill these responsibilities.

While driving, driving is your primary duties, answer the phone while driving should be vigilant and keep in mind the following tips:

- Understanding of the wireless phone and its features, such as speed dial and redial. If these features can help you make a call, rather than to make your drivi ng hours of heart.
- If hands-free device, you should use a hands free. If possible, use either supply hands-free accessories th at you can improve the convenience and security of wireless phone use.
- Wireless phone is placed in an easy-to-find place. Do not need to divert attention from the road, you can use the phone. If you receive an incoming call at an inconvenient time, as much as possible to apply the voice mail answers the phone.
- Told to call each other in your car; hang up when ne cessary, in the case of traffic jams or bad weather. R

ain, sleet, snow, ice and even heavy traffic is very d angerous.

- Airbags, brakes, speed control system and fuel injecti on system should be free from the influence of wirele ss transmission. If you are experiencing the problems mentioned above, please contact the car dealer.
- Please turn off your phone when refueling, the same situation also applies to prohibit the use of two-way wireless devices. Please do not flammable, explosive materials and the phone on with the internal spark m ay cause a fire.
- Turn off the phone before the plane took off. In order to prevent interference with aircraft communications systems, never allowed to use the phone in flight. Co nsent in accordance with the safety requirements for the crew to allow before take-off of the aircraft did n ot use the phone.
 - Set to flight mode of the phone will not communic ation system of the aircraft interference can not s

hutdown.

2.3. Use of the environment

- Should comply with this no matter where the special provisions, and turn off the phone when in use or m ay be dangerous.
- When connected to the mobile phones and other dev ices, you should read the user manual to learn more about the safety instructions, you cannot connect wit h incompatible products.
- As with other mobile radio transmitting equipment, it is recommended that users: For satisfactory use of the equipment and personnel security, and should only be used in the normal work location.

2.4. Electronic equipment

Most electronic equipment is shielded from RF signals. However, some electronic equipment may not be shielde d against the RF signals generated by the wireless hand set.

- Pacemakers
 - When the phone is switched on, must be kept aw ay from pacemakers six inches (15cm) above the distance;
 - phone should not be carried in a breast pocket;
 - use of the pacemaker on the other side of the ea r to answer, may cause interference to reduce to a minimum.
- Hearing aids

Some digital wireless phones may interfere with some he aring aids, if there is such interference, the deliberations

of substitutes can be used with your hearing aid manuf acturer.

Other medical devices

If other personal medical devices, please consult the device manufacturer, to confirm these equipment is shielded from external RF energy. Physician can help you obtain this information.

Posted notice of the place

Posted a notice to shut down places to turn off the pho

ne.

2.5. Other important information

- Use only the first wife or by the manufacturer approv ed accessories. The use of any unauthorized accesso ries, there may affect the use of the phone's perform ance, damage your phone, and even lead to physical danger or violation of the relevant provisions of the national communication terminal products.
- Clean your phone use a slightly damp or antistatic cl oth, do not use dry or easy to produce static cloth. Clean the surface of the phone, be careful not to us e cleaning agents, chemicals. Cleaning your phone, p lease turn off.
- Your phone will generate electromagnetic fields, pleas e do not place magnetic storage medium such as co mputer disks and the like. Use the phone near the te levision, telephone, radio and personal computers and other electrical equipment may cause interference, th

us affecting the performance of the phone.

- Do not your mobile phone exposure in strong sunligh t, avoid heat.
- Avoid all kinds of liquid into the phone's internal, so as not to cause damage.
- Do not drops, knock the phone Rough handling can break internal circuit boards.
- Please do not connect with other ancillary equipment.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This SMART PHONE meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations

through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: ILU

(FCC ID: 2AIYZSSPILU) has also been tested against this SAR limit. The highest SAR value reported under

this standard during product certification for use at the ear is 0.442W/kg and when properly worn on the body is 0.998W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.