

QV-R40 User Documentation Files

- The QV-R40 user documentation available here has been divided among a number of files in order to facilitate downloading. You can download the entire manual, or you can save time by using the table of contents below to find specific information and then download only the files you need.

File 1 (File name : qvr40_e_1.pdf)

2 INTRODUCTION

Unpacking	2
Features	9
Precautions	11
General Precautions	11
Data Error Precautions	18
Operating conditions	18
Condensation	19
Lens	19
Other	20

21 QUICK START GUIDE

First, charge the batteries!	21
To configure display language and clock settings	22
To record an image	23
To view a recorded image	23
To delete an image	24

File 2 (File name : qvr40_e_2.pdf)

25 GETTING READY

About This Manual	25
General Guide	26
Monitor Screen Contents	28
REC mode	28
PLAY mode	30
Changing the Contents of the Monitor Screen	31
Indicator Lamps	31
Attaching the Strap	32
Power Requirements	32
Charging Batteries	33
To load batteries	37
To remove the batteries from the camera	38
Using AC Power	41
Turning the Camera On and Off	43
Configuring Power Saving Settings	44
Using the On-screen Menus	45
Configuring Display Language and Clock Settings ...	47
To configure display language and clock settings	48

51 BASIC IMAGE RECORDING

Recording an Image	51
Recording Precautions	53
About Auto Focus	54
About the REC Mode Monitor Screen	54
Using the Optical Viewfinder	55
Using Zoom	55
Optical Zoom	55
Digital Zoom	56
Using the Flash	58
Flash Unit Status	59
Changing the Flash Intensity Setting	60
Flash Precautions	60

Using the Self-timer	61
Specifying Image Size and Quality	63
To specify the image size	63
To specify image quality	64

File 3 (File name : qvr40_e_3.pdf)

65 OTHER RECORDING FUNCTIONS

Selecting the Focus Mode	65
Using Auto Focus	65
Using the Macro Mode	67
Using the Infinity Mode	67
Using Manual Focus	68
Using Focus Lock	69
Exposure Compensation (EV Shift)	70
Adjusting White Balance	71
Adjusting White Balance Manually	72
Using the Best Shot Mode	73
Creating Your Own Best Shot Setup	75
Combining Shots of Two People into a Single Image (Coupling Shot)	77
Recording a Subject onto an Existing Background Image (Pre-shot)	79
Using the Movie Mode	81
Using the Histogram	82
REC Mode Camera Settings	84
Specifying ISO Sensitivity	84
Selecting the Metering Mode	85
Using the Filter Function	86
Specifying Color Saturation	86
Specifying Contrast	87
Specifying Outline Sharpness	87
Turning the On-screen Grid On and Off	88
Turning Image Review On and Off	88
Assigning Functions to the [◀] and [▶] Keys	89
Specifying Power On Default Settings	90
Resetting the Camera	91

File 4 (File name : qvr40_e_4.pdf)

92 PLAYBACK

Basic Playback Operation	92
Zooming the Display Image	93
Resizing an Image	94
Cropping an Image	95
Playing a Movie	96
Displaying the 9-image View	97
Selecting a Specific Image in the 9-image View	98
Displaying the Calendar Screen	98
Rotating the Display Image	99
Using Image Roulette	100

102 DELETING FILES

Deleting a Single File	102
Deleting All Files	103

File 5 (File name : qvr40_e_5.pdf)

104 FILE MANAGEMENT

Folders	104
Memory Folders and Files	104
Protecting Files	105
To protect a single file	105
To protect all files in memory	106
DPOF	106
To configure print settings for a single image	107
To configure print settings for all images	108
PRINT Image Matching II	109
Exif Print	109
Using USB DIRECT-PRINT	110
Using the FAVORITE Folder	112
To copy a file to the FAVORITE folder	112
To display a file in the FAVORITE folder	114
To delete a file from the FAVORITE folder	115
To delete all files from the FAVORITE folder	116

File 6 (File name : qvr40_e_6.pdf)

117 OTHER SETTINGS

Specifying the File Name Serial Number	
Generation Method	117
Turning the Key Tone On and Off	118
Specifying an Image for the Startup Screen	118
Configuring Power Down Image Settings	119
Using the Alarm	121
To set an alarm	121
Stopping the Alarm	122
Setting the Clock	123
To select your Home Time zone	123
To set the current time and date	124
Changing the Date Format	124
Using World Time	125
To display the World Time screen	125
To configure World Time settings	125
To configure summer time (DST) settings	126
Changing the Display Language	127
Formatting Built-in Memory	128

129 USING A MEMORY CARD

Using a Memory Card	130
To insert a memory card into the camera	130
To remove a memory card from the camera	130
Formatting a Memory Card	131
Memory Card Precautions	132
Copying Files	133
To copy all the files in built-in memory	
to a memory card	133
To copy a file from a memory card to built-in memory	134

135 VIEWING IMAGES ON A COMPUTER

Using the Camera with a Windows Computer	135
USB Connection Precautions	140
Using the Camera with a Macintosh Computer	140
USB Connection Precautions	143
Operations You Can Perform from Your Computer ..	144

Using a Memory Card to Transfer Images	
to a Computer	144
Memory Data	145
DCF Protocol	145
Memory Directory Structure	146
Image Files Supported by the Camera	147
Built-in Memory and Memory Card Precautions	147

148 USING THE CAMERA WITH A COMPUTER

Using the Album Feature	148
Creating an album	148
Selecting an Album Layout	149
Configuring Detailed Album Settings	150
Viewing Album Files	152
Saving an Album	155
Installing the Software from the CD-ROM	155
About the bundled CD-ROM	155
Computer System Requirements	156
Installing Software from the CD-ROM in Windows ...	157
Getting Started	157
Selecting a Language	157
Viewing the Contents of the "Read me" File	158
Installing an Application	158
Viewing User Documentation (PDF Files)	159
User Registration	159
Exiting the Menu Application	159
Installing Software from the CD-ROM	
on a Macintosh	160
Installing Software	160
Viewing User Documentation (PDF Files)	161

162 APPENDIX

Menu Reference	162
Indicator Lamp Reference	164
REC mode	165
PLAY mode	166
Charger Unit	166
Troubleshooting Guide	167
Display Messages	170
Specifications	171
Main Specifications	171