

# 1 Introduction

















## 1.2 Key

Key	Function
Left/Right Soft Key	Press to perform the function currently displayed in the bottom left/right corner of the screen. In idle mode, press Left Soft Key to access Main Menu.
Messaging Key	In idle mode, press to access messaging.

Navigation Key	In idle mode, Navigation Key UP to access messaging. Press the Navigation Key Down to access STK. Press the Navigation Key Left to access Phonebook. Press the Navigation Key Right to access Fun & Games.
OK Key	In idle mode, press to access Internet Service. Press to confirm a selection.
Dial/Answer Key	Press to make/answer a call. In idle mode, press to display call list.
End/Power Key	Press to end a call. Press and hold to power on/off the phone.
Facebook Key	Press to access the Facebook.
FN Key	Activate FN mode to enter digits or characters printed on the top part of the keys. Press the FN Key once to activate it once. Press the FN Key twice to activate the FN mode all of the time. To deactivate the FN mode, press the FN key.

### 1.3 Icons and symbols

	Vertical bars indicate the signal strength of the GSM
	Indicates the battery charge level.
	Indicates your phone is locked.

	Indicates your phone uses the alert type of "Ring".
	Indicates your phone uses the alert type of "Vibrate".
	Indicates your phone uses the headsets profile
	Indicates the alarm clock is set.
	Indicates a missed call.
	Indicates new text message(s).
	Indicates new multimedia message(s).
	Indicates new voice mail message(s).
	Indicates WAP push messages.
	Indicates stopwatch is enabled.
	Indicates your phone has logged onto GPRS.

## 2 Getting Started

### 2.1 Inserting the SIM Card

2.1.1 Remove the back cover(1), remove the battery (2), and insert the SIM card (3)



(1)



(2)

(3)

**2.1.2 Install the battery (4) and back cover (5)**



(4)

(5)

**2.1.3 Inserting a T-Flash Card**



## 3 Text Entry

### 3.1 Input Method

Your cellular phone supports several input methods, which include:

**ABC/Abc/abc/ES/Es/es**

**Numeric (123)**

#### 3.1.1 Changing the input modes

During text editing, you can press the **Shift Key** to switch input modes.

Or press the Left Soft Key [Options] and choose **Input Method** to select different input modes.

#### 3.1.2 Entering Symbols

In any input mode, press the **Symbol Key** to open the symbols input screen. Use the **Navigation key** to choose the desired symbol and press the Ok key to select it.

### 3.2 Key Input

Letters and symbols represented by each key are as follows:

Key	Function
All related keys	Press to input letters
FN Key	Activate FN mode to enter digits or characters printed on the top part of the keys, Press the FN Key once to activate it once, press the FN Key twice can activate FN mode all the time, in this case, to deactivate the FN mode, press the FN key.
Space Key	Press to input space
Shift Key	Press to switch input methods when entering text.
Symbol Key	Press to enter symbol screen

Example: How to enter the word "Happy2013!"

Press the Shift Key to activate the "ABC" mode, press the H Key to enter "H".

Press the Shift Key to activate the "abc" mode, press the a, p, p, y key to enter "appy".

Press the FN Key twice to activate FN mode, press the 2, 0, 1, 3, ! Key to enter "2013!".

## **4 Call functions**

### **4.1 Making a Call**

1. In idle mode, enter the phone number.
2. Press the Dial / Answer Key to dial the number.
3. Press the End / Power Key to end the call.

### **4.2 Making an International Call**

1. Press the + Key and "+" appears on the screen.
2. Enter the country code.
3. Enter the area code (normally without the 0 before it) followed by the phone number.
4. Press the Dial / Answer Key to call directly.

### **4.3 Answering or Rejecting an incoming Call**

1. Press the Dial / Answer Key to answer a call.
2. Press the End / Power key to reject a call.

## **5 Using the Menus**

The phone offers a range of functions that allows you to tailor it to your needs. These functions are arranged in menus and submenus. You can scroll and access these menus by pressing Navigation Keys.

### **5.1 STK(Claro)**

---

Note: The submenus of this feature depend on the operator and different operators may provide different services (some SIM cards do not support STK), which cannot be modified.

---

## 5.2 Messaging

### 5.2.1 Creating a text message

1. Select **Menu > Messaging > Write message > Text message**.
2. Write a message, please refer to the **Text entry** section of this manual for detailed information.
3. After entering text, you can access the send options by pressing the Left Soft Key [Options] and then select **Send to**.

### 5.2.2 Creating a multimedia message

1. Select **Menu > Messaging > Write message > Multimedia message**.
2. Edit the content of the message; press the Left Soft Key [Options] can add the picture, sound and other object into the message.
3. After entering text, you should press the Left Soft Key [Options] and then select **Send to**.
4. Enter the recipient and then press the OK Key to send the message.

### 5.2.3 Broadcast Message

1. Select **Menu > Messaging > Broadcast messages**.
2. In Broadcast messages menu select **Receive mode** and Press navigation Key up to activate this function.
3. Press the Navigation Key Down to select **Channel settings** to enter the channel number.

## 5.3 Ideas

Ideas lets you enjoy your mobile lifestyle to the fullest, anytime.

With Ideas, you can be updated with news alerts, get access to sports or finance information, be entertained with music or games contents and much more, while you are on the go. Before you use any Ideas applications, you need to activate GPRS on your SIM card. For the activation, please contact your service provider.

## 5.4 Call center

### 5.4.1 View Call History

1. Select **Menu > Call center > Call history**.
2. Press the Navigation Key to view different call logs.
3. Choose a particular number and press the Dial Key to call the number directly.

### 5.4.2 Call Settings

1. Select **Menu > Call center > Call settings**.
2. Press the Navigation Key to view different call settings.

## 5.5 Multimedia

### 5.5.1 Camera

#### How to ...

Launch Camera	Select <b>Menu &gt; Multimedia &gt; Camera</b> .
Adjust settings	Press the Left Soft Key
Take a picture	Press the OK Key.
Exit	Press the End Key or the Right Soft Key

### 5.5.2 Image Viewer

This menu lists the picture from **File Manager > Phone/Memory card > Mis fotos** according to its storage setting.



### 5.5.3 Video recorder

This option allows you to record short videos. You can play the video and store it in the memory card or the phone. You can also send the video to your friends via MMS or bluetooth.

### 5.5.4 Video player

It can play videos saved in your phone and SD card .

#### To play the video

1. In Multimedia menu, choose **Video player**, and select the file you wish to play.
2. After a certain video clip is selected, press **OK key** to play.

### 5.5.5 Audio Player

#### Keys Operation

The keypad operations during music playback are as follows:

Key	Description
The OK Key	List the audio file from the storage you set.
Navigation Key Down ▼	Press to stop the music.
Navigation Key ◀ or ▶	Short press to select the previous song/next song. Press and hold to rewind/fast forward the track during playback.
+, -	Adjust volume.
Left Soft Key [List]	List the audio file from the storage you set.
Right Soft Key [Back]	Return to previous menu.
Navigation Key Up ▲	Press to Start/Pause/resume the current music.

### 5.5.6 Sound Recorder

1. Select **Menu > Multimedia > Sound Recorder**.
2. Press the Left Soft Key [Options] and select **Settings** to set your preferred storage and audio quality.
3. Back to the previous menu, select **New Record**.

4. In the recording screen, you can press the Left Soft Key to pause or continue.
5. If you have finished, press the Right Soft Key [Stop] and then select Yes to **Save**.

### 5.5.7 FM Radio

Note: The radio will not work unless the headset is attached. Attach the headset to the USB port located at the left of the phone.

To operate the radio:

1. Press the Navigation Key Down to activate or deactivate the FM radio.
2. Press the + / - Key to adjust the volume.
3. Press the Navigation Key Up to activate or deactivate **Auto search**.
4. Press the Navigation Key Right/Left to switch the channels. If auto search is activated, pressing the Navigation Key Right/Left will switch the available searched channels; if auto search is deactivated, pressing the Navigation Key Right/Left will switch to varying channels by 0.1 intervals.
5. Press the Left Soft Key [Options] to access FM settings.

## 5.6 Phonebook

### 5.6.1 Search contact

1. Press **Menu > Phonebook**.
2. Enter the first few letters of the contact name to search.

Note: You can also press the Navigation key Down to access the contact list.

### 5.6.2 Add New Contact

To create a new SIM/phone contact:

1. Select **Menu > Phonebook > Add new contact**.
2. Enter all related information about the contact.

3. Press the soft Key[Done] to save the contact details.

### 5.6.3 Phonebook settings

1. Select **Menu > Phonebook**.  
If you select a contact, press the Left Soft Key [Options] can send message, call, edit, copy, move, and so on.
2. Select one item, press the Left Soft Key [Options] and select **Phonebook settings**.
3. Now you can set the preferred storage, view the memory status, Delete all contacts, and so on.

## 5.7 Fun & Games

Your cellular phone provides you with several games.

You can also adjust the game settings when you enter the game menu.

## 5.8 Settings

You can configure your cellular phone to best suit your usage preferences.

### 5.8.1 Phone settings

This menu option allows you to set phone parameters such as time and date, schedule power on/off, language, Pref. input methods, Display, Dedicated key,Auto update time ,Flight mode and Misc.settings.

### 5.8.2 Network settings

Here you can search the network, set your preferred network and change the GPRS connection.

### 5.8.3 Security settings

#### **SIM security**

This function allows you to lock the phone with a specific **SIM** card. The feature is designed to prevent the use of your SIM card by means of another person's phone if your **SIM** cards lost. You can switch on or off to activate the PIN Lock function.

### **Phone security**

To prevent your cellular phone from illegal use, you can activate the Phone Lock option. If activated, you will need to enter the correct Phone lock password before you can use the phone.

When you set it to on or off, the phone lock password is also required.

If you forget the password, contact your service provider for assistance in unlocking the phone.

Note: The initial password is 1234. If you want to change your password, go to **Settings > Security Setting >Phone security> Change Password.**

#### **Auto keypad lock**

Select to set the time for auto keypad lock. If the time expires, the keypad will be locked automatically.

#### **Certificate manager**

Select to view, delete, or set the key usage.

### **5.8.4 Connectivity**

#### **Bluetooth**

Your phone is designed to be compliant with Bluetooth technology. Bluetooth technology enables wireless connections between electronic devices. The Bluetooth connection can be used to listen to stereo music, send images, video, texts and vCards.

#### **Data account**

You can access WAP via **GPRS**. To get the analogue number or ISDN number information, you may need to contact your operator for the service. To get the access point of GPRS, you may need to contact your operator for the service.

#### **Data service**

This feature allows you to turn on or off your data service.

#### **Internet service**

Your phones support Web Browser. You can obtain various services such as up-to date news, weather, sport, and other

information as well as other Internet services. These services are designed and maintained by WAP service providers.

Note: To activate WAP service, you may need to contact your service provider.

## **Homepage**

To access the browser from the standby mode, go to Internet service and select Homepage. Once connected, the homepage is displayed. The content depends on the service provider. To exit the browser, press the End Key.

You can access the homepage address in **Internet service > Homepage**.

## **Bookmarks**

You can use this menu to save URL addresses to quick access a website.

## **Search or Input URL**

You can key in the URL address. When you are done, select **Options >Go to**. Your phone will connect the URL you just keyed in. After the address is entered, you may select the URL and select **Options > Go to** to connect next time.

## **Last web address**

Press to access the last web address you visited.

## **Recent pages**

You can view the recent pages you have visited.

## **Settings**

you may key in settings manually.

You can also restore browser settings here.

## **5.8.5 Restore factory settings**

This function allows you to reset the most of the phone setting to the original setting when it is produced. The phone lock password is needed to access this function.

## **5.9 Calculator**

Calculator applies simple calculator function such as addition, subtraction, multiplications and division.

## **5.10 Alarm**

1. Select **Menu> Alarm**.

2. Select an alarm and then press the Left soft Key [Edit] to create.
3. Use the **Navigation Key** to turn it on or off.
4. Enter other information, such as time, repeat, and so on.

## 5.11 Organizer

This menu contains features and options designed to keep you organized and informed while on the go.

### 5.11.1 Calendar

This feature allows you to keep track of your schedule and tasks saved in the calendar. You can also switch on the alarm with the task for reminding.

To make a note and reminder in Calendar for the first time:

1. In **Organizer** menu, choose **Calendar**.
2. Select a day in the calendar
3. Select **Options > View** to view the event. You can also select **Options > Add event** to add a new event.
4. Choose a type of the event and then Input other details. After you finish editing the event, select **OK key** to save.

### 5.11.2 Tasks

You can also view, edit or delete the tasks from the options under this feature. For the first-time user, you will need to follow the steps below:

1. Select **Add** in the **Task List**.
2. Edit your **Task** by entering date, time, Subject, Alarm, Repeat and other information.
3. You can choose to turn the alarm on as the reminder.
4. Select **OK key** to save your task.

### 5.11.3 World clock

You can view the local date and time via selecting the city. When the cross points out a certain city, it will show the local date and time.

### 5.11.4 Stopwatch

This function is designed to store the timepiece, which is to start or stop for exact timing.

To use stopwatch

1. From the main menu select **organizer > Stopwatch**.
2. Select Typical stopwatch. You can choose different record methods and view records.
  - **Split Timing:** When you select this, the timepiece will be saved and continue to count when you press Split. The 2nd timepiece is recorded based on the continuous timing. You can stop and resume anytime.
  - **Lap Timing:** When you select this, the timepiece will be saved and start the new timing when you press Lap. The 2nd timepiece is recorded in new timing. You can stop and resume anytime.
  - **View records:** You can view those timepieces you have recorded or delete the records.

Select nWay stopwatch. You can make four records.

### 5.11.5 Unit converter

This feature helps you to convert either the weight or length to a different unit.

## 5.12 User Profiles

Your phone provides 5 different profiles, including General, Meeting, Outdoor, Silent and My style profile.

### To activate a Profile

1. In Profile menu, select a profile.
2. Select **Options > Activate**.

### To edit the Profile

You can customize Profile settings to meet your preference.

1. In Profile menu, select a profile.
2. Select Options > Customize.

## 5.13 File Manager

1. Select **Menu > File manager**.
2. Press the Left Soft Key [Options] and select Open to

view different folders.

Note: If you want to view the files in T-Flash card, please insert the T-Flash card first.

## 5.14 WLAN

Your phone supports WI-FI function, you can connect to Internet via a wireless network access point.

Go to Menu > WIFI, your phone will search networks automatically and list the available networks.

Press Navigation Key Up/Down to select one network, and then choose Options > Connect to connect to the network. Input correct password if a password is required before connecting.

Once a WI-FI network is connected successfully, the WI-FI connecting icon will be displayed on the status bar. You can choose Options > Disable WLAN to close WI-FI.

You can also access other options by pressing Left Soft Key [Options].

- **Disconnect:** press to disconnect current available Wi-Fi network.
- **Add:** This feature allows you to add a wireless network access point here. You are required to enter Connection name, SSID, Network type and other details.
- **Edit:** Allows you to edit current available network details. After editing, press Right Soft Key [Done] to choose Save or not.
- **Delete:** Press Delete to disable WLAN connection.
- **Change priority:** Press to change the Wi-Fi network priority.
- **WLAN status:** Press to view WLAN status which including Phone MAC address, SSID, and others.
- **Disable WLAN:** press to disable WLAN connection.



- **Power Save Mode:** To lower the battery usage when Wi-Fi is ON, you are allowed to select a power save mode here.
- **Refresh:** Press to refresh available network list at the Wi-Fi signal range.

## 6 Safety Information and Notices

### Using the Cellular Phone and Charger

#### **Danger:**

Only use the battery and charger approved by the manufacturer. Using other brands may cause battery leakage, overheating, explosion or even fire.

#### **Caution:**

Keep the phone away from dust, water and damp areas. Dust, water or other liquids may cause overheating, electrical leakage, and/or phone failure.

The phone, battery, charger and AC adapter are not waterproof. Keep them away from rain and liquid.

When charging, please place the phone in an environment that has a normal room temperature and good ventilation. It is recommended to charge the phone in an environment with a temperature that ranges from 0°C ~40°C.

The maximum operating ambient temperature of the equipment declared by the manufacturer is 55 °C.

#### **Warning:**

Do not bump, shake or tamper with the phone or charger. This may cause battery leakage, overheating, explosion or even fire.

Do not place the battery, phone or charger near a microwave or high-voltage device. This may cause battery leakage, overheating, explosion or even fire. Also prevent the phone and AC adapter from overheating, smoking or short circuiting.

Do not use the phone around volatile oil. This may cause fire, breakdown or damage.

To avoid any damage or breakdown, do not disassemble the phone, battery, charger or internal components by yourself.

### **Using the Cellular Phone**

#### **Warning:**

Do not use the phone while you are driving. Pull over and stop your automobile to dial or listen to a phone call.

Usage of cellular phones in aircrafts or hospitals is prohibited.

Switch the phone off to prevent interference with electronic medical devices. Follow any rules or regulations in such places.

Do not use the phone at a gas station, near fuel or near chemicals.

Do not use the phone near electronic medical devices such as hearing aids, pacemakers and auto-control devices such as fire detectors and automatic doors.

If you have to use your cellular phone near an electronic medical device such as a pacemaker, please contact your manufacturer or dealer for information about preventing interference.

Use the phone in a temperature range between 0~40°C and humidity of 35%~85%.

Excessive sound pressure may harm your hearing.

#### **Caution:**

Electronic systems in automobiles such as anti-lock brakes, speed control, or fuel spraying systems, are usually not influenced by wireless devices. Manufacturers of these systems will tell you whether they encompass good screening mechanisms. If you suspect that an automobile failure is caused by a wireless wave, please contact your automobile dealer.

Avoid using your phone in crowded places.

Do not store your cellular phone near or with a credit card, disk or other magnetic materials. This may affect information stored on your phone.

### **Using the Battery**

#### **Danger:**

Do not dispose of the battery into a fire. Doing so may cause battery explosion or even fire.

If you have difficulties installing the battery, do not force the installation. This may cause battery leakage, overheating, explosion or even fire.

Keep metal objects away so they do not come in contact with the battery or its connectors as it may cause the battery to short circuit, overheat or explode.

Do not weld the polarities of the battery directly together. This may cause battery leakage, overheating, explosion or even fire.

Battery liquid is severely harmful for your eyes. If battery liquid gets in your eyes, do not rub them. Instead, wash your eyes with water first and then go directly to a doctor for help.

Do not use or store your phone in high temperature areas. This may cause battery leakage, overheating, explosion or even fire.

#### **Warning:**

Replace the battery when the normal usage time begins to decrease or if you notice the battery is overheated or has changed shape or color.

If battery liquid leaks onto your skin or clothes, immediately wash the affected parts with water.

If the battery begins to leak or emits a strange odor, properly dispose of the battery according to local regulations. Do not throw it into a fire.

#### **Caution:**

Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 60°C (140°F), such as on a car dashboard, window sill, or behind a glass that is

exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

### **Specific Absorption Rate (SAR) information**

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The body-worn operating configuration should be test with the belt-clips and holsters attached to the device and positioned against a flat phantom in normal use configurations.

When using any body worn accessory , please help to make sure it as least 1.5cm clearance between phone and human body. The body worn accessory should not contain any metal.

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure of measurement is known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Transmitting at its highest certified power level in all Your

mobile phone is a radio transmitter and receiver. It is at the highest certified power level, the well below the maximum value. This is power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The FCC has granted an Equipment Authorization for evaluated as in compliance with the FCC RF exposure guidelines.

The highest SAR value for the model phone when tested for use at the ear is 0.793W/kg and when worn on the body, as described in this user guide, is 1.321W/kg (Body-worn measurements differ among phone models, depending upon available accessories .)

SAR information on this model the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: T38C2523.

### **§ 15.105 Information to the user.**

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try

to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **12 MONTH LIMITED WARRANTY**

Gong Qing Cheng Cellon Communications Technology Co., Ltd (the Company) warrants to the original retail purchaser of this handheld portable cellular telephone, that should this product or any part there of during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty does not apply to:

Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage; Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.

Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;

Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;

Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;  
Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

When sending your wireless device to Gong Qing Cheng Cellon Communications Technology Co., Ltd for repair or service, please note that any personal data or software stored on the device may be inadvertently erased or altered.

Therefore, we strongly recommend you make a back up copy of all data and software contained on your device before submitting it for repair or service. This includes all contact lists, downloads (i.e. third-party software applications, ringtones, games and graphics) and any other data added to your device. In addition, if your wireless device utilizes a SIM or Multimedia card, please remove the card before submitting the device and store for later use when your device is returned, Gong Qing Cheng Cellon Communications Technology Co., Ltd is not responsible for and does not guarantee restoration of any third-party software, personal information or memory data contained in, stored on, or integrated with any wireless device, whether under warranty or not, returned to Gong Qing Cheng Cellon Communications Technology Co., Ltd for repair or service.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Gong Qing Cheng Cellon Communications Technology Co.,LTD  
New Industrial Park, Gong Qing Cheng City  
Jiang xi Province 332020 PRC.  
(86)0792-7720000