
C8646

User Manual

Phone display & key basics

To turn on your phone, press **Power Key**.

 
To turn off your phone, press and hold **Power Key** till Phone options menu appears. And then touch **Power off**.

HOME Key: Press to return to the Home screen. Press and hold to bring up the recent applications window.

MENU Key: Press to open a list of actions you can take on the current screen.


BACK Key: Within a menu, press to return to the previous screen or to dismiss a dialog box or menu. When the onscreen keyboard is open, press to close the onscreen keyboard.

Volume Keys: Press to adjust the volume.

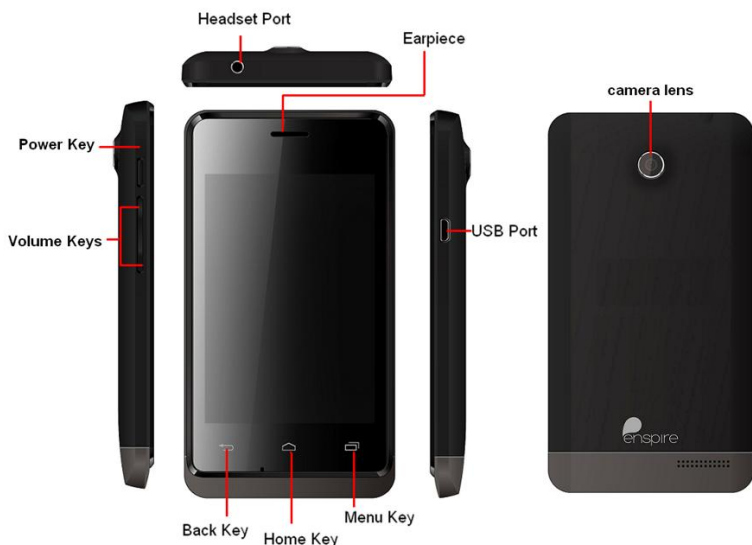


Installing the battery and SD Card

 
(1) Remove the back cover

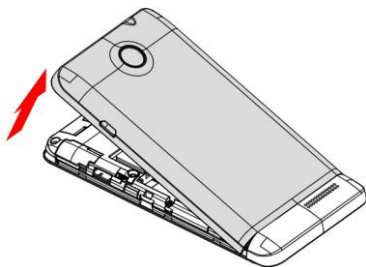

 
(2) Remove the battery

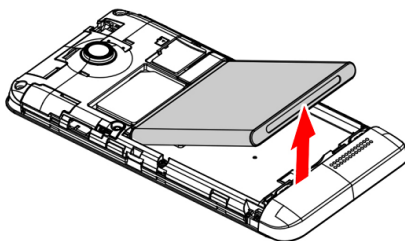

 
(3) Install the SIM card

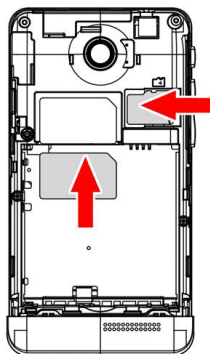

 
(4) Install the battery

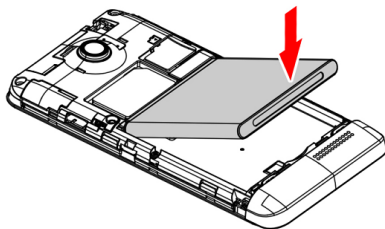

 (5) Install the back cover

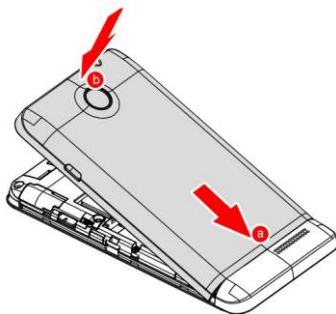

 (6) Insert T-flash card

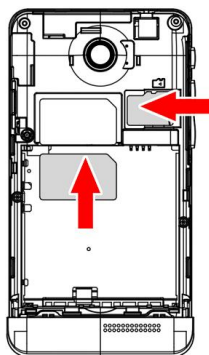


Home screen

Wherever you are, whatever you're doing on your phone, simply press **HOME Key** to return to Home screen.

The home screen is your starting point for using applications on your phone. You can customize your Home screen as you like. To add a Home screen item, touch and hold an empty area to access the context menus, choose an item you want to add it to Home screen.

 To remove items from the Home screen, touch and hold an item until Remove icon  appears, drag it to the Trash icon.

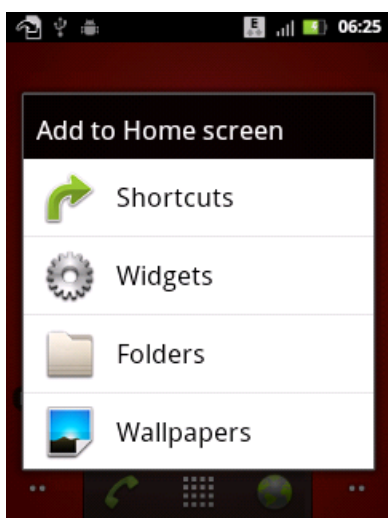


Onscreen Keyboard

When you start a program or select a field that requires text or numbers, the onscreen keyboard becomes available.

When you do not need the keyboard, you can close it by pressing Back Key.

 To adjust onscreen keyboard settings, you can go to **Settings > Language & keyboard > Android keyboard**. If you select the Quick fixes, Show suggestions and Auto-complete, the phone offers you smart word suggestions as you type, so you can enter text more quickly and accurately on the onscreen keyboard.

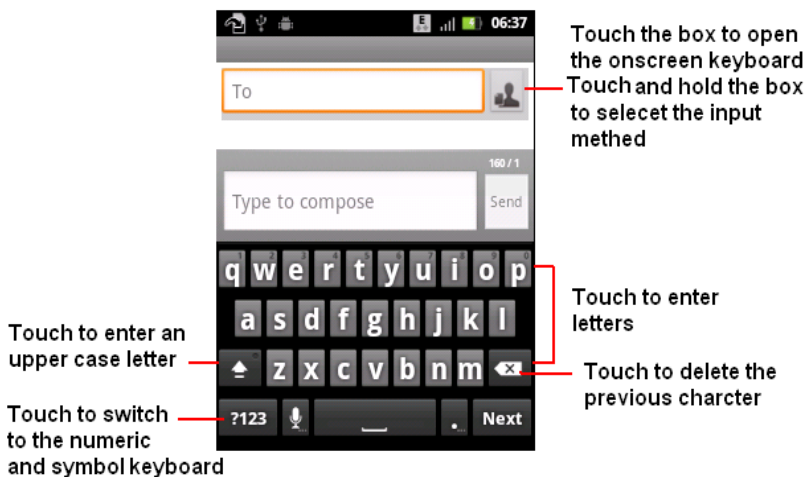

Applications

The applications tab holds all applications on your phone. All applications that you downloaded and installed from Android Market or from the web are also added to the Application tab. To open an application, press Home Key, touch application tab, and slide your finger up/down to choose an application. To manage and remove installed applications, you can go to **Settings > Applications > Manage applications**.



Phone calls

 
To make a call, touch a phone number in Contacts, an Email, a text message or anywhere on your phone.

You can also enter the phone number manually by virtual keypad and dial directly.

To answer a call, drag the green phone icon to the right.

To reject a call, drag the red phone icon to the left.

To end a call, touch the End Call icon .

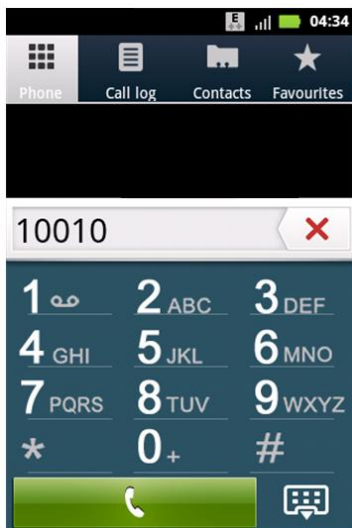

Gallery

Gallery lets you to access photos and videos you have taken. For photos, you can do basic editing tasks, set them as wallpaper or contact picture and share them to your friends.

 
To view a picture, press Home Key, touch the application tab and

then touch Gallery icon .

Slide your finger left or right to move between pictures.

To zoom in or out on a picture, touch the screen to activate the zoom control  . Touch  to zoom in and touch

 to zoom out.

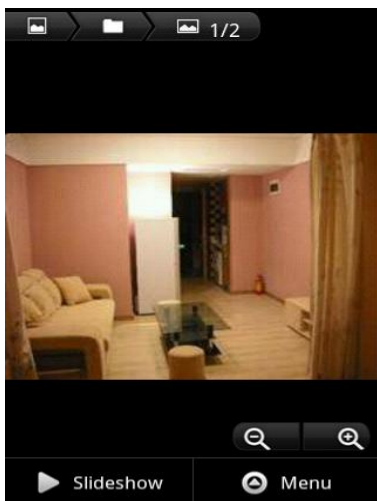

Camera

 
Your phone lets you take pictures and record videos with the built-in camera.

To open camera, press Home Key, touch the application tab and then select **Camcorder**.

Before using the camera, please insert an SD card. All the pictures and videos you captured are stored on SD card.

In picture mode, touch icon  to take a picture.

In video mode, touch icon  to record a video.

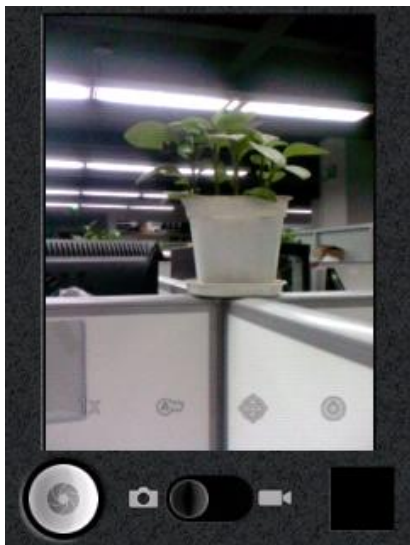

Music

Music only plays audio files saved on SD card. Please insert SD card correctly before playing music.

At any level in your music library, touch and hold a list (RECENT, ARTISTS, ALBUM, SONGS and so on) to open the context menu. Select a song to play and go to the playback screen.

 
The following actions are available on the playback screen:

Shuffle songs: Shuffle songs in random order. Touch  to toggle shuffle on or off. When the icon is gray, shuffle is off.

Go to any point in song: Slide fingertip in progress bar  to desired point in a song.

Pause/resume play: Touch  to pause; touch  to resume play.

Repeat mode: Touch  to switch the repeat modes.

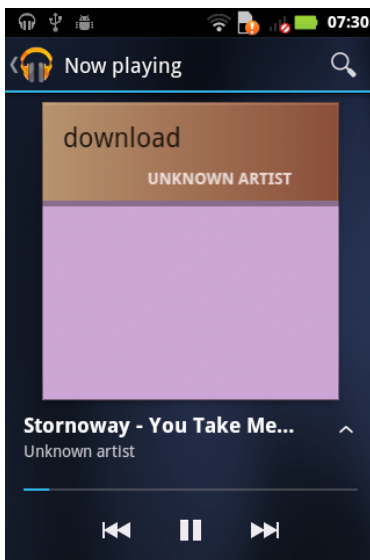


Video

To record a video, press Home key, touch application tab and then touch **Camcorder**. You can also drag  icon to right and switch to video mode in **Camera** menu.

You can adjust the quality, and other settings if you wish. Or leave them on automatic.

 Touch the Record button to start recording. Touch it again to stop recording. An image from your most recent video is displayed as a thumbnail at the bottom right.

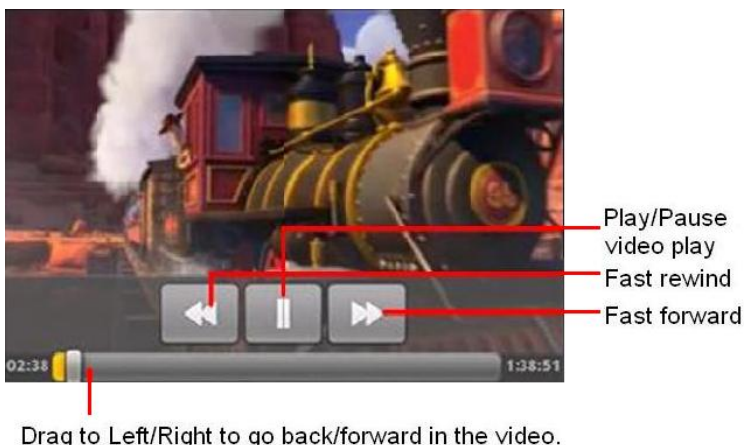

Browser

 
Browser supports you to browse web pages when your phone is connected to available network.

To connect to WLAN (hotspot) or enable mobile network, you can go to **Settings > Wireless & networks**.

Open the Browser screen and tap the web address tab to enter the address you'd like to visit.

To zoom in or zoom out within a web page, slide your finger to one direction on the screen to activate the zoom controls .

You can also pinch your fingers together or apart to zoom in or out.

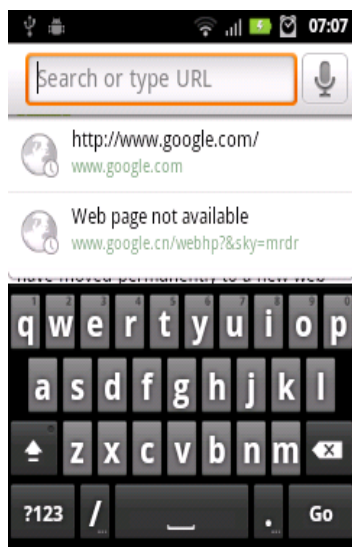


Copy & Paste

To copy text within a web page, you can press **MENU key** and select **More > Select text**. Then slide your finger to select the text you want to copy (the selected text will be highlighted), release your finger and touch icon, your phone prompts “Text copied to clipboard”.

To paste the text you have copied, long press the text entry field till context menu “Edit text” appears. Touch Paste to paste.

 To copy text in message or other similar text page, you should long press the text to open the context menu “Edit text”. You can select words what you want to copy ,then long press the text entry field again till context menu “Edit text” appears. Touch Paste to paste.

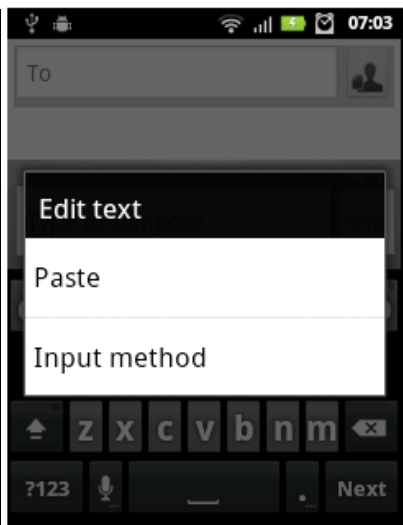



Clock

Your phone has a built-in alarm clock which enables you to set multiple clocks.

To set an alarm, touch **Add alarm**. After editing the alarm details, touch **Done** to save the alarm.

To turn alarm off, long press an alarm and select **Turn alarm off** on the context menu that appears. Or you can directly change the alarm icon to .

  To delete an alarm, long press the alarm and select **Delete alarm** on the context menu that appears.

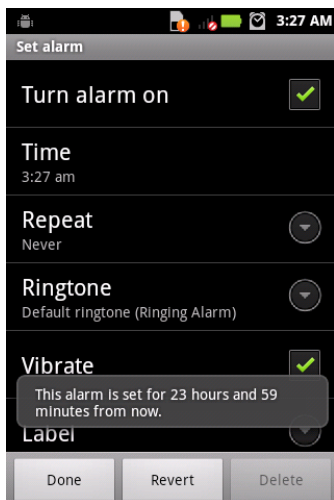
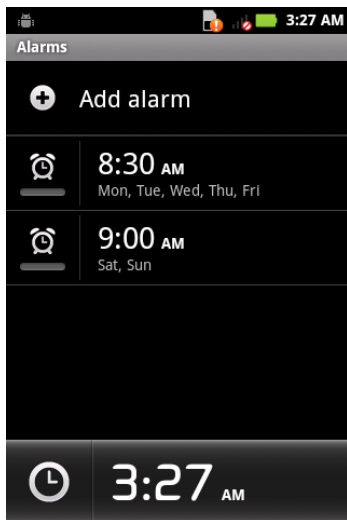


Search

To search your phone, press Menu key and touch the **Search icon** to open the search bar.

Type in what you'd like to search, the search results will be listed under the search bar.

  To make search faster, you can select the search type like All, Web, Apps, Contacts or others.

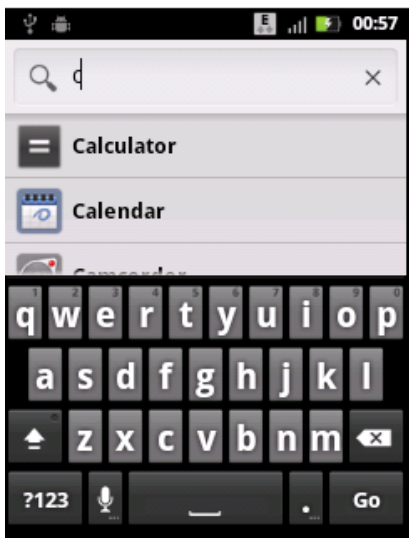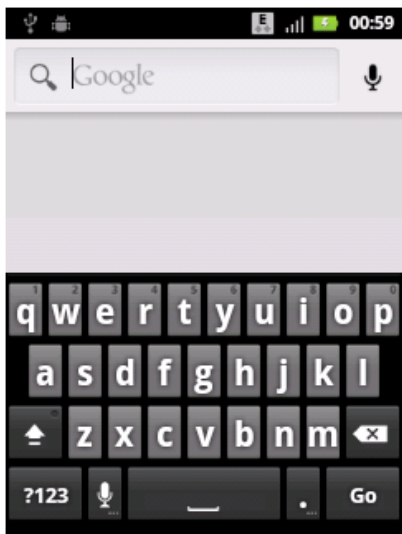

Safety Information and Notices

Failure to comply with the following precautions may be dangerous or illegal.

Please carefully read and observe the terms below:

Safe power on

Do not use your mobile phone where it is forbidden to use or you might cause a disturbance or danger.

Safe transportation first

Please observe all related local laws and regulations.

Please drive with both hands.

Transportation security should be considered when driving.

Disturbance

All mobile phone performances might be disturbed

Turn off when in hospital

Please follow related limitations.

Please turn off your mobile phone when near a medical instrument.

Turn off on an airplane

Please follow related limitations.

Do not use your phone on an airplane.

Turn off when at a gasoline station

Do not use your mobile phone at a filling station or around fuels or chemicals.

Turn off around exposure Area

Please observe related limitations and do not use your mobile phone around an area where explosions can occur.

Proper use

As described in this manual, your mobile phone can be used only in right location.

If possible, please do not touch the antenna area on your phone.

Use qualified after sale service

Only a qualified maintainer can install or repair your mobile phone.

Accessories and batteries

Only use the authorized accessories and batteries and do not connect to unmatched manufacturers or products.

Waterproof

Your mobile phone is not waterproof. Please keep it away from water.

Backup

Do remember to make a backup or keep a written record of all important information saved in your mobile phone.

Connect to other devices

Please read the user manual of the device to get more detailed security instructions before connecting to other devices and do not connect to unmatched product.

SOS emergency calls

Make sure your mobile phone is switched on and in a service area. In home screen, tap the dial key, input the SOS number, then press the Dial Key. Tell where you are and do not hang up without permission.

You can use a shielded USB cable connecting to the PC for data Communication.

Specific Absorption Rate (SAR) information

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States, Industry Canada of Canada.

During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation of 10 mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg, and 1.6W/kg by Industry Canada.

This device is complied with SAR for general population /uncontrolled exposure limits in ANSI/IEEE C95.1-1992 and Canada RSS 102, and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C, and Canada RSS 102. This device has been tested, and meets the FCC, IC RF exposure guidelines when tested with the device directly contacted to the body.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: T38C8646.

For this device, the highest reported SAR value for usage against the head is 0.47W/kg, for usage near the body is 0.72 W/kg.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirements.

SAR compliance for body-worn operation is based on a separation distance of 10 mm between the unit and the human body. Carry this device at least 10 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 10 mm between this device and your body. RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory should be avoided.

FCC Regulations

This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

12 MONTH LIMITED WARRANTY

Gong Qing Cheng Cellon Communications Technology Co., Ltd (the Company) warrants to the original retail purchaser of this handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty does not apply to:

Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage; Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.

Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;

Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;

Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;

Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

When sending your wireless device to Gong Qing Cheng Cellon Communications Technology Co., Ltd for repair or service, please note that any personal data or software stored on the device may be inadvertently erased or altered. Therefore, we strongly recommend you make a back up copy of all data and software contained on your device before submitting it for repair or service. This includes all contact lists, downloads (i.e. third-party software applications, ringtones, games and graphics) and any other data added to your device. In addition, if your wireless device utilizes a SIM or Multimedia card, please remove the card before submitting the device and store for later use when your device is returned, Gong Qing Cheng Cellon Communications Technology Co., Ltd is not responsible for and does not guarantee restoration of any third-party software, personal information or memory data contained in, stored on, or integrated with any wireless device, whether under warranty or not, returned to Gong Qing Cheng Cellon Communications Technology Co., Ltd for repair or service. To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18

MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

GongQingCheng Cellon Communications Technology Co.,LTD
New Industrial Park, GongQingCheng City
Jiangxi Province 332020 PRC.
(86)0792-7720000