

# 1. Introduction

## 1.1 Phone Display



We continuously strive to improve our products. We reserve the right to revise this user manual or withdraw it at any time without prior notice.

## 1.2 Key

Key	Function
Dial/ Answer Key	Make or answer a call. View call logs in standby mode.
End/ Power Key	Press and hold to turn the phone on/off. End a call or reject an incoming call. Return to idle mode.
Left Soft Key	In idle mode, press to enter the <b>Main</b> menu in idle mode. Press to perform the function currently displayed in the bottom left corner of the screen.
Right Soft Key	Access <b>Phonebook</b> in idle mode. Return to the previous menu. Press to perform the function currently displayed in the bottom right corner of the screen. When the keypad is locked, press the Right Soft key and # to unlock the keypad.

[键入文字]

OK	Enter the <b>Main</b> menu in idle mode. Confirm a selection.
Numeric Key	Enter numbers, letters or characters. Select a submenu item labeled with the corresponding number.
*	Press twice quickly to enter '+' to make an international call. Press and hold to enter the pause character (P) or the wait character (W) when entering a number. Press to enter a symbol when editing text.
#	Press and hold to activate or deactivate the silent mode in idle mode. Press to switch input modes when entering text.
Navigation Key	Within a menu, press Up, Down, Left or Right to scroll through menu Option.












Note: "Press" in this manual, means press the key and release; "press and hold" means to press and hold the key for at least two seconds.

## 1.3 Icons & Symbols

Icon	Description
------	-------------

[键入文字]

	Network - The left portion indicates whether your phone is already registered with a network and the right portion indicates signal strength (from no signal to strongest).
	Battery - Indicates battery level. When charging, a scrolling icon will be displayed. The more bars, the stronger the charge.
	Message - Indicates you have one or more unread messages.
	Missed call - Indicates there is a missed call.
	Call Divert - Indicates that "Divert All Voice Calls" is activated.
	Alarm-Indicates that the alarm clock is on.
	Headset-Indicates that headset profile is activated.
	Alert type is "Ring".
	Vibrate- Indicates that the vibrator is on.

## 2. Getting Started

### 2.1 Inserting the SIM Card

2.1.1 Remove the back cover(1), remove the battery (2), and insert the SIM card (3)


[键入文字]



(1)




(2)

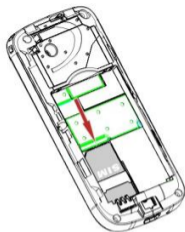

(3)

## 2.1.2 Installing the battery and back cover

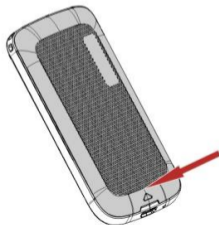

[键八叉子]

## 2.2 Turning on the Phone

To turn the phone on, press and hold the End/Power Key.

## 2.3 Charging the Battery

1. Make sure the battery is inserted. To charge the battery, plug in the charger connector at the bottom of your phone (charger port) and then plug the other end into an AC power socket.
2. The battery symbol indicates the charging status. During charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged.
3. Disconnect the charger from the phone.
4. Disconnect the charger from the AC power socket.

# 3. Text Entry

## 3.1 Input Method

During text editing, you can press the # Key to switch input modes.

In any input mode, press the \* Key to open the symbols input screen.


## 3.2 Predictive Text entry

"2~9"	Press to input letters.
1	Press to input symbols.
0	Press to enter a space.

[键入文字]

Navigation Key ▲/▼/◀/▶	Press to browse the last or next available word.
Left Soft Key [Select]	Press to confirm the letter or word.
Right Soft Key [Clear]	Press to clear a letter, press and hold to clear all entries.
#	Press to switch the input modes.
*	Press to activate punctuation mode.

Example: How to enter the word " ERROR "

1. Press the # Key to switch to ABC.
2. Press 3 7 7 6 7, "ERROR" appears.
3. Press the OK Key to confirm "ERROR".

### 3.3 Multi-tap Input

Using this mode requires you to press a key as many times as the order of the letters listed on the key. For example, to enter the word "casa" in basic text input mode "abc", press key 2 (ABC) three times, press key 2 (ABC) once, press key 7 (PQRS) four times, press key 2 (ABC) once.

### 3.4 Numeric Input

Press the # Key to select "123" then enter the numbers using the keypad.

[键入文字]

## 4. Calling

### 4.1 Making a Call

1. In idle mode, enter the phone number.
2. Press the Dial Key to dial the number.
3. Press the End/Power Key to end the call.



Note: During a call, press the Navigation Key Up/Down to adjust the volume.

#### 4.1.1 Making an International Call

1. Press \* twice quickly to enter "+" appears on the screen.
2. Enter the country code.
3. Enter the area code (normally without the 0 before it) followed by the phone number.
4. Press the Dial Key to call directly.

### 4.2 Answering a Call

Press the Answer Key to answer it.

Press the End/Power key to reject it.

[键入文字]



## 5. Phonebook

Your phone features two phonebooks, the SIM phonebook and the smart phonebook which is integrated in the phone memory.

### 5.1 Search contact

1. Press **Menu > Phonebook > Quick search**.
2. Enter the first few letters of the contact name to search.



Note: You can also press the Right Soft Key in the idle mode to access the contact list.

### 5.2 Add New Entry

To create a new SIM/phone contact:

1. Select **Menu > Phonebook > Add new entry**.
2. Press the **Option > Edit** to enter the contact information.
3. Press the OK Key or **Done** to save the contact.

## 6. Messages

### 6.1 Create Message

1. Select **Menu > Messages > Write message**.
2. Write a message, please refer to the **Text entry** section of this manual for detailed information.

[键入文字]

3. After entering text, you can access the send Option by pressing the Left Soft Key [Option] and then select **Send only**.
4. Add the recipient by inputting the number manually or search for them in the phonebook.
5. Finally, select Option and select send to send the message.

## 6.2 Voice Mail Server

This menu allows you to set your voice mailbox number and listen to your voice messages.

To set your voice mailbox number, select **Messages > Voice mail**.



Note: You can forward your calls to your voice mailbox (the phone number for callers to leave a message) via the call forwarding feature.

## 6.3 Broadcast Message

1. Select **Menu > Messages > Broadcast message**.
2. Press Navigation Key Up/Down to set this function On/Off.
3. Press the Navigation Key Down to select **Channels** to enter the channel number.

[键入文字]

## 7. Call history

### 7.1 Missed Calls

To view Missed Calls

In Call center menu, choose **Call history > Missed calls**, and press the Navigation Key up and down to view the records.

### 7.2 Dialed Calls

To view Dialed Calls

In Call center menu, choose **Call history > Dialed calls**, and press the Navigation Key up and down to view the records.

### 7.3 Received Calls

To view Received Calls

In Call center menu, choose **Call history > Received calls**, and press the Navigation Key up and down to view the records.

### 7.4 Delete call logs

Your phone allows you to delete Records from the Missed Calls list, Dialed Calls list, Received Calls list, or Delete all.

### 7.5 Call time

Your phone allows you to view the duration of your incoming and outgoing calls.

[键入文字]

## 7.6 Call Cost

This function allows you to check the cost of your last phone call or total cost.

To reset the cost, you need to enter PIN2 code. The password can be obtained from your service provider.

# 8. Settings

You can configure your cellular phone to best suit your usage preferences.

## 8.1 Phone setup

This menu option allows you to set phone parameters such as time and date, schedule power on/off, language, Input method, Display, Wallpaper, Screen saver, Greeting text, Speed dial, Auto update of date and time and main menu style.

## 8.2 Call setup

1. Select **Menu > Settings > Call setup**.
2. Now you can set the caller ID, call waiting, call divert, call barring, Line switching, call time reminder, auto redial, closed user group, IP number, black list, auto hands free and so on.

[键入文字]

## 8.3 Network setup

Here you can search the network, set your preferred network.

## 8.4 Security setup

This function allows you to activate password to protect your phone against unauthorized use.

**SIM lock:** This function allows you to lock the phone with a specific SIM card. The feature is designed to prevent the use of your SIM card by means of another person's phone if your SIM cards lost. You can switch on or off to activate the PIN Lock function.

**Phone lock:** You can switch on or off to activate the phone lock function to protect your phone. If you switch Phone Lock on, you need to enter the password to set the request on. The default password is "1122".

**Auto keypad lock:** This allows you to lock the phone's keypad to prevent accidental key pressed. In Auto Keypad Lock submenu, select the time that after the last key press will be disabled.

**Fixed dial:** This function dials only the numbers in the fixed dialing list .To save and edit numbers on the list, you need the PIN2 code.

**Barred dial:** Allows you to switch on or off restricted call function. However, you need to check if your SIM supports this function.

**Change password:** This menu allows you to change the phone password.

[键入文字]

## 8.5 Restore factory settings

This function allows you to reset the most of the phone setting to the original setting when it is produced. The phone lock password is needed to access this function.

# 9. Fun & Games

There are games that are built into your cellular phone.

## 9.1 Stopwatch

Your phone features two kinds of stopwatches: Typical stopwatch and nWay stopwatch.

### Typical stopwatch

**Split timing:** The timepiece will be recorded and continue to count when you press **Split**. The 2nd timepiece is recorded based on the continuous timing.

**LAP timing:** When you select this, the timepiece will begin recording and it will start new timing when you press **Lap**. The 2nd timepiece is recorded in new timing. You can stop and resume anytime.

Note: If you press the End/Power key while timing, the activated stopwatch will not stop if you try to enter another stopwatch, (either Split time or Lap timing), a confirmation screen will appear asking if you want to stop the previous stopwatch. Select **Yes** to stop the previous stopwatch and to enter the next

[键入文字]

stopwatch.

**View record:** Select to view, delete, or delete all saved records.

### nWay stopwatch

Press the Left Soft Key [Start] to activate the stopwatch, and then press the Navigation Key Left/Right/Up/Down to record four different groups of data.

This menu contains features and Option designed to keep you organized and informed while on the go. Below is a list of some important features.

## 9.2 Game Setting

You can adjust the following settings by selecting Game setting:

- ◆ **Audio:** Select to set the game sound On or Off.
- ◆ **Vibration:** Select to set vibration On or Off.

## 10. FM Radio



Note: The radio will not work unless the headset is attached. Attach the headset to the USB port located at the bottom of the phone.

[键入文字]

To operate the radio:

1. Select **Menu > FM Radio**.
2. Press the Navigation Key down to activate or deactivate the FM Radio.
3. Press the \* / # Key to adjust the volume.
4. Press the Navigation Key up to activate or deactivate **Auto search**.
5. Press the Navigation Key Right/Left to switch the channels. If **auto search** is activated, pressing the Navigation Key Right/Left will switch the available searched channels. If **auto search** is deactivated, pressing the Navigation Key Right/Left will switch to varying channels by 0.1 intervals.  
Press the Left Soft Key [Option] to access the Option.

## 11. User profiles

1. Select **Menu > User profiles**.
2. Select one of the profiles.
3. Select **Customize** to adjust the settings.
4. Back to previous menu, select **Activate**.



Note: A headset profile can only be activated by plugging in a headset.

[键入文字]



## 12. Organizer

### 12.1 Calendar

1. Select **Menu > Organizer > Calendar**.
2. Press the Navigation Key to select a date.
3. Press the Left Soft Key [Option] and select **View tasks**.
4. Press Left Soft Key[Add].
5. Enter the event information.
6. Press the Right Soft Key [OK] to save.

### 12.2 Tasks

You can also view, edit or delete the tasks from the options under this feature. For the first-time user, you will need to follow the steps below:

1. Select **Add** in the **Task List**. Then choose the task type.
2. Edit your **Task** by entering date, time, Subject, alarm, repeat and other information.
3. You can choose to turn the alarm on as the reminder.
4. Select **OK** to save your task.

### 12.3 Set an alarm

1. Select **Menu > Organizer > Alarm**.

[键入文字]

2. Select an alarm and then press the Left Soft Key [Edit] to create.
3. Press the Navigation Key Left or Right to turn it on or off.
4. You may enter other information and save your settings.

## 12.4 World clock

You can view the local date and time via selecting the GMT and city. When the cross points out a certain city, it will show the local date and time.

## 12.5 Calculator

Your phone has a built in calculator. Enter the numbers using the keypad. An icon will appear on the screen indicating how to do calculations:

Keys	Operation
Up	Addition
Down	Subtraction
Left	Multiplication
Right	Division
Left Soft Key	To calculate
Right Soft Key	To clear or exit Calculator

[键入文字]

# key	To enter decimal point
-------	------------------------

## 12.6 Unit converter

This feature helps you to convert either the weight or length to a different unit.

## 12.7 Currency Converter

This application allows you to convert currency.

First, input the rate and press the # Key to enter a decimal point, Press the Left Soft Key [OK] to input the local value and then press the Left Soft Key [OK] to view the foreign value.

## 12.8BMI

This application supports to show your body mass index.

1. Select **Menu > Organizer > BMI**, and then choose Male or Female.
2. Input your Height and Weight. Then go to **Compute** and press OK. Your BMI value will display..

## 13. Shortcuts

This feature allows you to make a list of shortcuts for quick use.

Press Left soft key to add shortcuts.

[键入文字]

## 14. Services



Note: The submenus of this feature depend on the operator. Each operator may provide different services (some SIM cards do not support STK).

[键入文字]

## 15. Precautions



Please carefully read and observe the terms below:

### **Safe power on**

Do not use your cellular phone where it is forbidden to use or you may cause a disturbance or danger.



### **Safe transportation first**

Please observe all related local laws and regulations.

Please drive with both hands.

Safe transportation should be considered when driving.



### **Disturbance**

All cellular phone performances may be disturbing.



### **Turn off when in the hospital**

Please follow related limitations.

Please turn your cellular phone off when near a medical instrument.

**Turn off on an airplane**

Please follow related limitations.

Do not use your cellular phone on an airplane.

**Turn off when at a gasoline station**

Do not use your cellular phone at a filling station or around fuels or chemicals.

**Turn off around exposure Area**

Please observe related limitations and do not use your cellular phone near an area where explosions may occur.

**Proper use**

As described in this manual, your cellular phone can only be used in a proper location.

If possible, please do not touch the antenna area of your phone.

**Use qualified after sale service**

Only a qualified technician can install or repair your cellular phone.

[键入文字]



### **Accessories and batteries**

Only use the authorized accessories and batteries and do not connect the phone to incompatible products.



### **Waterproof**

Your cellular phone is not waterproof. Please keep it away from water.



### **Backup**

Remember to create a backup or keep a written record of all important information saved on your cellular phone.



### **Connect to other devices**

Please read the user manual of the device to get more detailed security instructions before connecting to other devices and do not connect to an incompatible product.



### **SOS emergency calls**

Make sure your cellular phone is switched on and in a service area. In idle mode, input the SOS number, then press the Dial Key. Advise where you are and do not hang up without permission.

[键入文字]

● This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

[键入文字]



-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

[键入文字]

## 16. Troubleshooting

Common issue	Reason	Troubleshooting
Bad connection	Using the cellular phone in an area where the network connection is poor, such as around a tower or basement where a radio wave cannot be sent effectively.	Try to avoid.
	Using the cellular phone when the network is busy, such as an on-off duty time, line busy.	Try to avoid.
	Related to the distance of the service area of the network.	Ask your operator to provide a map of your service area.
Aftersound or cacophony	It is caused by the network connection and it is a regional problem.	Hang up and redial the number.
	Network connection is not good in some areas.	
Idle time becomes short	Idle time is related to network settings.	If the cellular phone is in an area where the network connection is not good, please temporarily shut off your phone.

[键入文字]

	Need to change battery.	Insert a new battery.
	When you cannot receive signals, your cellular phone will continue to send to find a basis. A lot of battery power is used, so as to limit idle time.	Please move to an area where the signal is strong or temporarily turn off your phone.
Cannot switch on	Battery is drained.	Check battery volume or charge the battery.
Wrong SIM card	The SIM card is damaged.	Contact your operator.
	The SIM card is not inserted properly.	Make sure the SIM card is inserted properly.
	Dirt on the metal side of the SIM card.	Wipe the metal point of the SIM card with a clean cloth.
Cannot connect to network	The SIM card is invalid.	Contact your operator.
	Out of GSM service area.	Request service area to operator.
	Feeble signal.	Please move to an area where the signal is stronger and try again.

[键入文字]

Cannot call	Activate call barring.	Cancel call barring.
Wrong PIN code	Entered the wrong PIN code three times.	Contact your operator.
Cannot charge	Battery or charger is damaged.	Change battery or charger.
	Charge in area where the temperature is lower than 0°C or higher than 40°C.	Change the charging environment.
	Bad connection	Check the connection between the phone and the charger.
Cannot add contact	Contacts memory is full.	Delete some contacts.
Cannot set some functions	Operator does not support the function or you have not applied the function.	Contact your operator.

[键入文字]

## 17. Safety Information and Notices

### Using the Cellular Phone and Charger

#### Danger:

Only use the battery and charger approved by the manufacturer. Using other brands may cause battery leakage, overheating, explosion or even fire.

#### Caution:

Keep the phone away from dust, water and damp areas. Dust, water or other liquids may cause overheating, electrical leakage, and/or phone failure.

The phone, battery, charger and AC adapter are not waterproof. Keep them away from liquid.

#### Warning:

Do not bump, shake or tamper with the phone or charger. This may cause battery leakage, overheating, explosion or even fire.

Do not place the battery, phone or charger near a microwave or high-voltage device. This may cause battery leakage, overheating, explosion or even fire; also prevent the phone and AC adapter from overheating, smoking or short circuiting.

Do not use the phone around volatile oil. This may cause fire, breakdown or damage.

To avoid any damage or breakage, do not disassemble the phone, battery, charger or internal components by yourself.

[键入文字]

## Using the Cellular Phone

### Warning:

Do not use the phone while you are driving. Pull over and stop your automobile to dial or answer a phone call.

Usage of cellular phones in aircrafts or hospitals is prohibited. Turn the phone off to prevent interference with electronic medical devices. Follow any rules or regulations in such places.

Do not use the phone at a gas station, near fuel or near chemicals.

Do not use the phone near electronic medical devices such as hearing aids, pacemakers and auto-control devices such as fire detectors and automatic doors.

If you have to use your cellular phone near an electronic medical device such as a pacemaker, please contact your manufacturer or dealer for information about preventing interference.

### Caution:

Electronic systems in automobiles such as anti-lock brakes, speed control, or fuel spraying systems, are usually not influenced by wireless devices. Manufacturers of these systems will tell you whether they are provided with good screening functions. If you suspect that an automobile failure is caused by a wireless wave, please contact your automobile dealer.

Avoid using your phone in crowded places.

Do not store your cellular phone near or together with a credit card, disk or other magnetic materials. This may affect information stored on your phone.

[键入文字]

Keep your phone away from pins. Pins can be absorbed by the phone's receiver magnet, which may cause harm.

### **Using the Battery**

#### **Danger:**

Do not dispose of the battery into a fire. Doing so may cause battery explosion or even fire.

If you have difficulties installing the battery, do not force the installation. This may cause battery leakage, overheating, explosion or even fire.

Keep metal objects away so they do not come in contact with the battery or its connectors as it may cause the battery to short circuit, overheat or explode.

Do not weld the polarities of the battery directly together. This may cause battery leakage, overheating, explosion or even fire.

Battery liquid is severely harmful for your eyes. If battery liquid gets in your eyes, do not rub them. Instead, wash your eyes with water first and then go directly to a doctor for help.

Do not use or store your phone in high temperature areas. This may cause battery leakage, overheating, explosion or even fire.

#### **Warning:**

Replace the battery when the normal usage time begins to decrease or if you notice the battery is overheated or has changed shape or color.

If battery liquid leaks onto your skin or clothes, immediately wash the affected parts with water.

[键入文字]

If the battery begins to leak or emits a strange odor, properly dispose of the battery according to local regulations. Do not throw it into a fire.

**Caution:**

Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 60°C (140°F), such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

**Using the Charger**

**Danger:**

Only use the charger that came with the phone. Using a different charger may cause the phone to breakdown or explode.

If the charger short circuits, a fire may occur.

Do not use a damaged, worn or broken charger. This may cause a fire.

Clean dust away from the power socket to avoid the possibility of a fire.

Do not store the charger near any liquids. If liquids spill onto the charger it may cause it to overheat or breakdown.

If liquid does spill onto the charger, immediately unplug the power cable to prevent overheating, fire or another type of breakdown.

Do not use the charger in places with high humidity like a bathroom. This may cause a fire or other

[键入文字]



breakdown.

Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.

**Caution:**

Keep the environment temperatures within the range of 0°C ~40°C while charging. Temperature below 0°C or higher than 40°C will cause insufficient charging, terminate charging or even cause the battery to explode.

Unplug the charger from its power source before cleaning it.

Do not place heavy objects on the power cord. This may cause electric shock or fire.

Hold the plug while unplugging the power cord. This will avoid any potential damage or even fire.

**Requirements for Cellular Phone**

Avoid using your cellular phone in extremely high or low temperatures. Use the phone in a temperature range between 0°C ~40°C and humidity of 35%~85%.

It is recommended that you do not use your cellular phone near a telephone, TV set, radio or other radio frequency sensitive devices.

**Requirements for the Battery**

When not in use, store the battery in a cool, well-ventilated place with sunlight.

If you will not be using the cellular phone for an extended period of time, charge the battery on a regular basis to avoid battery breakdown.

The phone battery wears out fast. If after charging the battery does not improve its performance, it is time

[键入文字]

to replace the battery. Properly dispose of the battery according to local regulations. Do not throw it into a fire.

### **Requirements for the Charger and AC Adapter**

Do not charge your phone under the following circumstances: sunlight, temperatures equal to or lower than 0°C, temperatures equal to or higher than 40°C, high humidity, dust, high vibration areas, or near a TV, a radio, etc.

### **Specific Absorption Rate (SAR) information**

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This models (FCC ID: T38PCD1001) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.36 W/kg and when properly worn on the body is 0.741 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

[键入文字]

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **Cleaning and Maintenance**

The cellular phone, the battery and the charger are not waterproof. Do not use them in places with high humidity like a bathroom and also avoid spilling any liquids on them.

Use a soft cloth to clean the cellular phone, the battery and the charger.

Do not use alcohol, diluted liquid or benzene to clean the cellular phone.

If dust gets in the sockets the phone can be damaged, short-circuit or even lose the ability to be re-charged. Be sure to clean the socket regularly.

## 12 MONTH LIMITED WARRANTY

PERSONAL COMMUNICATIONS DEVICES (the Company) warrants to the original retail purchaser of this PCD handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;

Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.

Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;

[键入文字]

Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;

Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;  
Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

When sending your wireless device to PERSONAL COMMUNICATIONS DEVICES for repair or service, please note that any personal data or software stored on the device may be inadvertently erased or altered. Therefore, we strongly recommend you make a back up copy of all data and software contained on your device before submitting it for repair or service. This includes all contact lists, downloads (i.e. third-party software applications, ringtones, games and graphics) and any other data added to your device. In addition, if your wireless device utilizes a SIM or Multimedia card, please remove the card before submitting the device and store for later use when your device is returned, PERSONAL COMMUNICATIONS DEVICES is not responsible for and does not guarantee restoration of any third-party software, personal information or memory data contained in, stored on, or integrated with any wireless device, whether under warranty or not, returned to PERSONAL COMMUNICATIONS DEVICES for repair or service.

[键入文字]

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing. In addition, for reference to an authorized Warranty station in your area, you may telephone in the United States (800) 229-1235, and in Canada (800) 465-9672 (in Ontario call 416-695-3060).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

[键入文字]

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

**IN USA: PERSONAL COMMUNICATIONS DEVICES**

555 Wireless Blvd.  
Hauppauge, NY 11788  
(800) 229-1235

**IN CANADA: PCD COMMUNICATIONS CANADA LTD.**

5535 Eglinton Avenue West  
Suite# 234  
Toronto, ON M9C 5K5  
(800) 465-9672

[键入文字]