

1 Introduction

1.1 Phone Display





We continuously strive to improve our products. Therefore, we reserve the rights to revise this user manual or withdraw it at any time without prior notice.

1.2 Key

Key	Function
Dial / Answer Key	Press to answer a call or make a call after you enter a phone number. In idle mode, press to view the call log.
End / Power Key	Press to end a call. Press and hold to turn the phone on/off. Within a menu, press to return to idle mode.
Left Soft Key	In idle mode, press to enter the Main Menu . Press to access the option listed directly above it on the display.
Right Soft Key	In idle mode, press to access the Call center . Press to access the option listed directly above it on the display. Within a menu, press to return to the previous screen.
OK Key	In idle mode, press to enter the Internet service .
Numeric key	Press to enter the corresponding number, letter or symbol located on the key. Within a menu, press to access the corresponding menu option.











*Key	Press the * Key twice quickly to enter '+' to make an international call. Press and hold the * Key to toggle between *, +, (pause character) P, and (wait character) W. Press to enter symbol when editing text.
#Key	In idle mode, press and hold to activate or deactivate the silent mode. Press to switch input modes when entering text.
Navigation Key	Within a menu, press Up, Down, Left or Right to scroll through menu options.



Note: "Press" in this manual, means to press and release the key; "press and hold" means to press and hold the key for at least 2 seconds.

1.3 Icons & Symbols

Icon	Description
	Network - The left portion indicates whether your phone is already registered with a network and the right portion indicates signal strength (from no signal to strongest).
	Battery - Indicates battery level. When charging, a scrolling icon will be displayed. The more bars, the stronger the charge.


	To log onto GPRS - The icon will be displayed only when you have logged onto GPRS.
	MMS - Indicates you have one or more unread MMS messages.
	Message - Indicates you have one or more unread messages.
	Push Message-Indicates that you have received a new push message.
	Voicemail- Indicates voice messages that have not been heard.
	Missed Call - Indicates there is a missed call.
	Call Divert - Indicates that "Divert All Voice Calls" is activated.
	Alarm-Indicates that the alarm clock is on.
	Headset-Indicates that headset profile is activated.
	Alert type is "Ring".

2 Getting Started

Please read the safety instructions in the "Safety Information and Notices" section before use.

2.1 Inserting the SIM Card

2.1.1 Remove the back cover(1), remove the battery (2), and insert the SIM card (3)

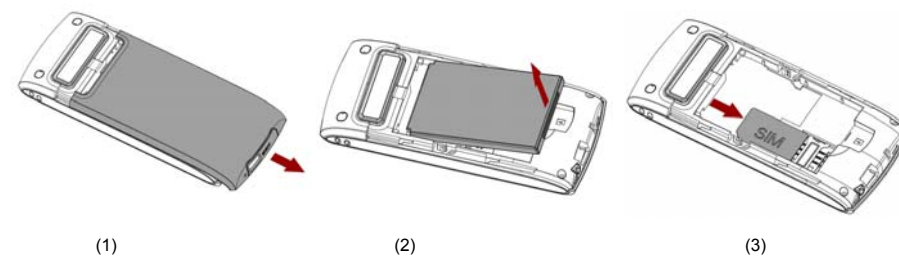


(1)

(2)

(3)

2.1.2 Install the battery and back cover

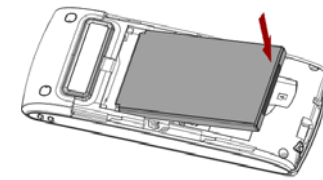

(4)



(5)

2.2 Turning the phone on

To turn the phone on, press and hold the End / Power key. Enter the PIN code if required.

2.3 Charging the Battery


1. Ensure the battery is inserted in the handset. To charge the battery, plug in the charger connector at the bottom of your phone (USB interface) and then plug the other end into an AC power socket.
2. The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged.
3. Disconnect the charger from the phone.
4. Disconnect the charger from the AC power socket.



Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

2.4 Inserting a T-Flash Card

With the metal contacts facing down, gently slide the T-Flash card into the slot.

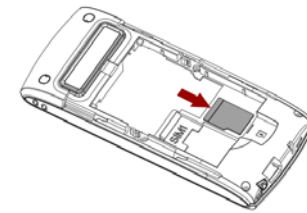

2.5 Important Password

Phone lock password is 1234.

3 Text Entry

3.1 Input Method

During text editing, you can press the # Key to switch input modes or press the Left Soft Key [Options] and select **Input method** to select different input modes.

3.1.1 Entering Symbols



In any input mode, press the * Key to open the symbols input screen.

3.2 Smart Input Method

2 to 9	Press to input letters.
1	Press to input symbol.
0	Press to input space.
◀/▶	Press to confirm the letter or word, or move the cursor to the left or right.
▲/▼	Press to browse the last or next available word.
Left Soft Key (Select) or the OK Key	Press to confirm the letter or word.
Right Soft Key (Clear)	Press to clear a letter, press and hold to clear all entries.
#	Switch between input mode.


*	Press to activate punctuation mode
---	------------------------------------

Example: How to enter the word "HOME"


1. Press the # Key to switch to  **ABC**;
2. Press 4 6 6 3, the first word "GOOD" appears;
3. Press  to browse and select "HOME";
4. Press the Left Soft Key [Select] or OK Key to confirm "HOME".

3.3 Multi-tap Input

Using this mode requires you to press a key as many times as needed to enter the desired letter.

To enter the word "casa" in Multi-tap input mode , press key 2 (ABC) three times, press 2 (ABC) once, press key 7 (PQRS) four times, press key 2 (ABC) once.

3.4 Numeric Input

Press the # Key to select  then you can enter the numbers.

4 Calling

4.1 Making a Call

Note: You can make a call only when the network name appears on the screen.

1. In idle mode, enter the phone number.
2. Press the Dial / Answer Key to dial the number.
3. Press the End / Power Key to end the call.



Note: During a call, press the Navigation Key Up/Down to adjust the volume.
You can press the Left Soft Key [Options] to choose **Sound Recorder**.

Note: In most countries, recording telephone conversations is subject to legislation. We advise you to notify the caller if you intend to record your conversation and only do so if they agree.

4.2 Making an International Call

1. Press the * Key twice quickly until "+" appears on the screen.
2. Enter the country code.
3. Enter the area code (normally without the 0 before it) followed by the phone number.
4. Press the Dial / Answer Key to call directly.

4.3 Answering or Rejecting a incoming Call

1. Press the Dial / Answer Key to answer a call.
2. Press the End / Power key to reject a call.

5 Function Menu

5.1 Main Menu

Messages	Games	STK
Call center	Portal Ideas	Phonebook
Organizer	Multimedia	Settings

5.2 Messages

5.2.1 Creating a text message

1. Select **Menu > Messages > Write message > Text message**.
2. Write a message, please refer to the **Text entry** section of this manual for detailed information.
3. After entering text, you can access the send options by pressing the Left Soft Key [Options] and then select **Send to**.

5.2.2 Creating a multimedia message

1. In idle mode, press the Left Soft Key [Menu] to enter the main menu.
2. Select **Messages > Write message > Multimedia message**. The MMS editing screen will appear.
You are now able to add a picture, sound and attachment into your message.
3. After you are finished, select **Options** and then **Send to**.
4. Add the recipient by inputting the number manually or searching them in the phonebook.
5. Select Options and select the send option to send the message.

5.2.3 Voicemail Server

This menu allows you to set your voice mailbox number and listen to your voice messages.
To set your voice mailbox number, select **Messages > Message settings > Text message > Voicemail server**.
Note: You can forward your calls to your voice mailbox (the phone number for callers to leave a message) via the Call forwarding feature.

5.2.4 Broadcast Message

1. Select **Menu > Messages > Broadcast message**.
2. Press the Left Soft Key [On] to activate this function.

3. Press the Navigation Key Down to select **Channel settings** to enter the channel number.

5.3 Games

Your cellular phone provides you with several games.
You can also adjust the game settings when you enter the game menu.

5.4 STK Service



Note: The submenus of this feature depend on the operator and different operators may provide different services (some SIM cards do not support STK), which cannot be modified.

5.5 Call center

5.5.1 View Call History.

1. Select **Menu > Call center > Call history**.
2. Press the Navigation Key to view different call logs.
3. Choose a particular number and press the Dial Key to call the number directly.

5.5.2 Adjust Call Settings.

1. Select **Menu > Call center > Call settings**.
2. Now you can set the caller ID, call waiting, call divert, call barring etc.

5.6 Portal Ideas

Your phones support Web Browser. You can obtain various services such as up-to date news, weather, sport, and other information as well as other Internet services. These services are designed and maintained by WAP service providers.

5.7 Phonebook

Your phone features two phonebooks, the SIM phonebook and the smart phonebook which is integrated into the phone memory.

5.7.1 Search contact

1. Press **Menu > Phonebook**.
2. Enter the first few letters of the contact name to search.

5.7.2 Add New Contact

To create a new SIM/phone contact:

1. Select **Menu > Phonebook > Add new contact**.
If you want to change the storage position, press the Left Soft Key [Options] and then select

Phonebook settings > Preferred storage to set the storage position.

2. Press the **Options > select** to enter the contact information.
3. Press the OK Key or **Done** to save the contact.

5.7.3 Phonebook settings

1. Select **Menu > Phonebook**
2. If you select a contact, press the Left Soft Key [Options] can call, edit, copy, move, etc.
3. Select one item, press the Left Soft Key [Options] and select **Phonebook settings**.

Now you can set the speed dial, view the memory status, copy or move contacts, etc.

5.8 Organizer

This menu contains features and options designed to keep you organized and informed while on the go.

5.8.1 Facebook

Facebook is a social utility that connects people with friends and others who work, study and live around. This feature supports quick and easy access to Facebook on your phone. You can use facebook to keep up with friends. You can also send messages, photos and notes from your phone straight to Facebook. To access Facebook, you need to get internet service first. Please contact your network operator for more details.

5.8.2 Twitter

Twitter is an online social networking and microblogging service that enables you to send and read text-based posts of up to 140 characters in length.

To access Twitter, you need to get internet service first. Please contact your network operator for more details.

5.8.3 Calendar

This feature allows you to keep track of your schedule and tasks saved in the calendar. You can also switch on the alarm with the task for reminding.

To make a note and reminder in Calendar for the first time:

1. In **Organizer** menu, choose **Calendar**.
2. Select a day in the calendar.
3. Select **Options > View** to view the event. You can also select **Options > Add event** to add a new event.
4. Choose a type of the event. Input the start and end time of your event, and describe the event contents in **Subject** and **Details**, after you finish editing the contents of your event, select **Options > Done** to save your description.
5. Choose **Alarm clock** to turn on or off.
6. Choose **Once/ Everyday/Custom/ Weekly/ Monthly** in **Repeat**.
7. Then you can edit other information.

8. Press **Done** to save the event.

5.8.4 Create a new task

You can also view, edit or delete the tasks from the options under this feature. For the first-time user, you will need to follow the steps below:

1. Select **Add** in the **Task list**. Then choose the task type.
2. Edit your Task by entering date, time, subject, alarm, repeat, and other information.
3. You can choose to turn the alarm on as the reminder.
4. Select **Done** and **Yes** to save your Tasks list.

5.8.5 Set an alarm

1. Select **Menu > Organizer > Alarm**.
2. Select an alarm and then press the Left soft Key [Edit] to create.
3. Use the **Navigation Key** to turn it on or off.
4. Enter other information, such as time, repeat, and so on.

5.8.6 World clock

You can view the local date and time via selecting the GMT and city. When the cross points out a certain city, it will show the local date and time.

5.8.7 Calculator

The calculator applies simple calculator function such as addition, subtraction, multiplications and division.

To start using

1. Go to **Organizer** and select **Calculator**.
2. Enter the number with keypad, and then click the "+" for addition, or click the "-" for Subtraction, or click the "*" for Multiplication, or click the "/" for Division.
3. Click Left soft key or **Navigation** key to calculate.
4. To exit calculator, press the End Key or the Right soft Key.

5.8.8 Currency converter

This application allows you to convert currency.

First, input the rate, press the # Key to enter a decimal point, then input the local value. Press the Left Soft Key [OK] to view the foreign value.

5.8.9 Stopwatch

This function is designed to store the timepiece, which is to start or stop for exact timing.

To use stopwatch

1. From the main menu select **Organizer > Stopwatch**.
2. Select **Typical stopwatch**. You can choose different record methods and view records.
 - **Split timing**: When you select this, the timepiece will be saved and continue to count when you press Split. The 2nd timepiece is recorded based on the continuous timing. You can stop and resume anytime.
 - **Lap timing**: When you select this, the timepiece will be saved and start the new timing when you press Lap. The 2nd timepiece is recorded in new timing. You can stop and resume anytime.
 - **View records**: You can view those timepieces you have recorded or delete the records.

Select **nWay stopwatch**. You can make four records.

This menu contains features and options designed to keep you organized and informed while on the go. As most of the features are very simple, here you can only view some important features.

5.8.10 Torch

To light in darkness, you may activate Torch by below operations:

In idle screen, select **Menu > Organizer > Torch**. Press **Left Soft Key / OK Key** to switch torch **on** or **off**.

5.9 Multimedia

5.9.1 imagenes

imagenes,iTonos,iMstore allow you to access specified URLs. Depending on different SIM cards and

different countries, the URLs are different. For more details, please contact your network operators.

5.9.2 Camera

Your cellular phone features a camera that allows you to take pictures, store them, set them as wallpaper or send them to your friends. Please ensure that the camera lens is clean before you take pictures, as small dust particles can strongly affect the picture quality.

Take a photo

Launch Camera	From idle mode, press the Left Soft Key to enter the main menu then select Multimedia > Camera
Take a picture	Press the OK Key. After taking, the picture will be saved as JPG format in Menu > Multimedia > File manager > Phone / Memory card > Photos menu automatically.
Exit	Press the End/Power Key or the Right Soft Key [Back].

Camera Option Menu

When the camera mode is activated you can change a number of settings by pressing the Left Soft Key before taking a picture.

To set the image size, you can press the Left Soft Key and select **Image settings > Image size**.

To restore the default settings, you can press the Left Soft Key and select **Restore default**

You can also access the Photos , Scene mode and Camera settings here.



Note: When there is not enough memory space, you will be unable to save the picture and prompted with a warning message. So you should delete existing pictures before you can store new ones. Storage capacity also depends on the size of the T-Flash card that you insert.

5.9.3 Image viewer

This menu lists the picture from **Multimedia > File Manager > Phone/Memory card > Fotos** according to its storage setting.

5.9.4 Audio Player

Keys Operation

The keypad operations during music playback are as follows:

Key	Description.
The OK Key	List the audio file from the storage you set.
Navigation Key Down ▼	Press to stop the music.
Navigation Key ◀ or ▶	Short press to select the previous song/next song. Press and hold to rewind/fast forward the track during playback.
*, #	Adjust volume. Once you have set the volume, the settings will be saved until the next time you adjust the volume.
Left Soft Key [List]	List the audio file from the storage you set.

Right Soft Key [Back]	Return to the previous menu.
Navigation Key Up ▲	Press to Start/Pause/Resume the current music.



MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson. Supply of this product does not convey a license nor imply any right to distribute MPEG Layer-3 compliant content created with this product in revenue-generating broadcast systems(terrestrial, satellite, cable and/or other distribution channels), streaming applications(via internet, intranets and/or other networks), other content distribution systems(pay-audio or audio-on-demand applications and the like) or on physical media(compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required. For details, please visit <http://mp3licensing.com>.

5.9.5 Sound Recorder

1. Select **Menu > Multimedia > Sound recorder**.
2. Press the Left Soft Key [Options] and select **Settings** to set your preferred storage, file format and audio quality.
3. Go back to the previous menu, select **New record**.
4. In the recording screen, you can press the Left Soft Key to pause or continue.
5. If you have finished, press the Right Soft Key [Stop] to stop recording.



Note: Saved sound files can be found in the **Multimedia > File Manager > Phone/ Memory card > Audio** menu according to your storage setting.

5.9.6 Radio FM

Note: The radio will not work unless the headset is attached. Attach the headset included with your phone to the USB port located at the bottom of the phone.

To operate the radio:

1. Press the Navigation Key **Down** to activate or deactivate the FM radio.
2. Press the * / # Key to adjust the volume.
3. Press the Navigation Key **Up** to activate or deactivate **Auto search**.
4. Press the Navigation Key **Right/Left** to switch the channels. If auto search is activated, pressing the Navigation Key Right/Left will switch the available searched channels; if auto search is deactivated, pressing the Navigation Key **Right/Left** will switch to varying channels by 0.1 intervals.
5. Press the Left Soft Key [**Options**] to access FM settings.

5.9.7 File manager

1. Select **Menu > Multimedia > File manager**.
2. Press the Left Soft Key [**Options**] and select **Open** to view different folders.



Note: Some folders may not appear, such as "My Music", if user enters Multimedia > Audio Player, "My Music" folder will automatically be created in File Manager.

5.10 Settings

5.10.1 User profiles

Your phone provides 6 different profiles, including General, Meeting, Outdoor, Indoor, Silent and Headset profile.



Note: If you customize the alert type, the indication icon may be changed. The Headset profile is activated when the headset is plugged in.

To activate a Profile

1. In Profile menu, select a profile.
2. Select **Options > Activate**.

To edit the Profile

You can customize Profile settings to meet your preference.

1. In Profile menu, select a profile.
2. Select **Options > Customize**.

5.10.2 Phone settings

This menu option allows you to set phone parameters such as time and date, schedule power on/off, language, Pref. input methods, Display, Dedicated key, Auto update of date and time, Flight mode and LCD backlight.

5.10.3 Network settings

Here you can search the network, set your preferred network and change the GPRS connection.

5.10.4 Security settings

This function allows you to activate password to protect your phone against unauthorized use.

PIN lock: This function allows you to lock the phone with a specific SIM card. The feature is designed to prevent the use of your SIM cards by means of another person's phone if your SIM cards are lost. You can switch on or off to activate the PIN Lock function.

Phone lock: You can switch on or off to activate the phone lock function to protect your phone. If you switch Phone Lock on, you need to enter the password to set the request on. The default password is "1234".

Auto keypad lock: This allows you to lock the phone's keypad to prevent accidental key pressed. In Auto Keypad Lock submenu, select the time that after the last key press will be disabled.

Fixed Dial: This function dials only the numbers in the fixed dialing list . To save and edit numbers on the list, you need the PIN2 code.

Barred Dial: Allows you to switch on or off restricted call function. However, you need to check if your SIM supports this function.

Change password: This menu allows you to change the phone password.

5.10.5 Connectivity

Data account: You can access Internet service via GPRS. To get the analogue number, ISDN number information or the access point of GPRS, you may need to contact your operator for the service.

Internet service:

Your phones support Web Browser. You can obtain various services such as up-to date news, weather, sport, and other information as well as other Internet services. These services are designed and maintained by WAP service providers.

Note: To activate WAP service, you may need to contact your service provider.

Do not switch the phone on when the wireless phone use is prohibited or when it may cause interference or danger.



[Homepage](#)

To access the browser from the standby mode, go to Internet service in Services and select Homepage. Once connected, the homepage is displayed. The content depends on the service provider. To exit the browser, press the End Key.

You can set the homepage address in **Settings >Connectivity > Internet service > Homepage**.

Bookmarks

You can use this menu to save URL addresses to quick access a website.

Recent pages

You can view the recent pages you have visited.

Input address

You can key in the URL address. When you are done, select Options > Done. Your phone will connect the URL you just keyed in. After the address is entered, you may select the URL and select Options > Go to to connect next time.

Service inbox

WAP push messages are saved here.

Settings

GPRS (General Packet Radio Service) is a technology that use for sending and receiving data over the mobile network.

If the settings have been made by the service provider, you may begin immediately. If the accessed profiles have been assigned by your service provider, select a profile and activate it. Otherwise, you may key in settings manually. For appropriate settings, contact your network operator or service provider.

Key in the service settings manually

1. From the main menu, select **Settings >Connectivity > Internet service > Settings**.
2. Select the **Profiles**.
3. Select a profile from the list. Select **Activate profile** to activate the selected profile. You may edit the profile in **Profile name**, **Homepage**, **Data account**, **Connection type**, **User name** and **Password**. To get more information, you may need to contact your operator.



Note: In most cases, you only need to use one of the default profiles to access the Internet. The settings are different from operator to operator. Please consult your operator or service provider for the correct settings and proceed with care. Wrong settings will cause the connection to fail.

5.10.6 Restore factory settings

This function allows you to reset the most of the phone setting to the original setting when it is produced. The phone lock password is needed to access this function.

6 Precautions



Please carefully read and observe the terms below:

Safe power on

Do not use your cellular phone where it is forbidden to use or where there may be a disturbance or danger.



Safe transportation first

Please observe all related local laws and regulations.

Please drive with both hands.

Safe transportation should be considered first when driving.



Disturbance

All cellular phone performances may be affected.



Switch off in a hospital

Please follow related limitations.

Please switch your cellular phone off when near a medical instrument.



Switch off on airplane
Please follow related limitations.
Do not use your cellular phone on an airplane.



Switch off when pumping gasoline
Do not use your cellular phone at a filling station or around fuels or chemicals.



Switch off near exposure area
Please observe related limitations and do not use your cellular phone near an area where explosions can occur.



Proper use
As described in this manual, your cellular phone can be used only in an acceptable location.
If possible, please do not touch the antenna area of your phone.



Use qualified after sales service.
Only a qualified technician can repair your cellular phone.



Accessories and batteries

Only use the authorized accessories and batteries and do not connect to incompatible products.



Waterproof

Your cellular phone is not waterproof. Please keep it away from water.



Backup

Remember to make a backup or keep a written record of all important information saved in your cellular phone.



Connect to other devices

Please read the user manual of the device to get more detailed security instructions before connecting to other devices and do not connect to an incompatible product.



SOS emergency calls

Make sure your cellular phone is switched on and in a service area. In idle mode, input the SOS number, then press the Dial Key. Advise where you are and do not hang up without

permission.

7 Troubleshooting

Common issue	Reason	Troubleshooting
Bad connection	Using a cellular phone in an area where the network connection is poor, such as around a tower or basement where radio wave cannot be sent effectively.	Try to avoid.
	Using a cellular phone when the network is busy, such as an on-off duty time or if the line is busy.	Try to avoid.
	Related to the distance of the send basis of the network.	Ask your operator to provide a map of your service area.
Aftersound or cacophony	It is caused by network connection and it is a regional problem.	Hang up and redial the number.
	Network connection is not good in some areas.	

Idle time becomes short	Idle time is related to network settings.	If the cellular phone is in the area where the network connection is not good, please temporarily shut off your phone.
	Need to change battery.	Insert a new battery.
	When you cannot receive signals, your cellular phone will continue to send to find a basis. A lot of battery power is used, so as to limit idle time.	Please move to an area where the signal is strong or temporarily turn off your phone.
Cannot switch on	Battery is drained.	Check the battery volume or charge the battery.
Wrong SIM card	SIM card is damaged.	Contact your operator.
	SIM card is not inserted properly.	Make sure SIM card is inserted properly.
	Dirt on metal side of SIM card.	Wipe metal point of SIM card with a clean cloth.

Cannot connect to network	SIM card is unusable.	Contact your operator.
	Out of GSM service area.	Request service area to operator.
	Feeble signal.	Please move to an area where the signal is stronger and try again.
Cannot call	Activate call barring	Cancel call barring
	Activate fix dialing	Cancel fix dialing
Wrong PIN code	Entered the wrong PIN code three times.	Contact your operator.
Cannot charge	Battery or charger is damaged.	Change battery or charger.
	Charge in area where the temperature is lower than 0°C or higher than 40°C.	Change charging environment.
	Bad connection	Check the connection between the phone and the charger.

Cannot add contact	Contacts memory is full.	Delete some contacts.
Cannot set some functions	Operator does not support the function or you have not applied the function.	Contact your operator.

8 Safety Information and Notices

Using the Cellular Phone and Charger

Danger:

Only use the battery and charger approved by the manufacturer. Using other brands may cause battery leakage, overheating, explosion or even fire.

Caution:

Keep the phone away from dust, water and damp areas. Dust, water or other liquids may cause overheating, electrical leakage, and/or phone failure.

The phone, battery, charger and AC adapter are not waterproof. Keep them away from rain and liquid.

Warning:

Do not bump, shake or tamper with the phone or charger. This may cause battery leakage, overheating, explosion or even fire.

Do not place the battery, phone or charger near a microwave or high-voltage device. This may cause battery leakage, overheating, explosion or even fire. Also prevent the phone and AC adapter from overheating, smoking or short circuiting.

Do not use the phone around volatile oil. This may cause fire, breakdown or damage.

To avoid any damage or breakdown, do not disassemble the phone, battery, charger or internal components by yourself.

Using the Cellular Phone

Warning:

Do not use the phone while you are driving. Pull over and stop your automobile to dial or listen to a phone call.

Usage of cellular phones in aircrafts or hospitals is prohibited. Switch the phone off to prevent interference with electronic medical devices. Follow any rules or regulations in such places.

Do not use the phone at a gas station, near fuel or near chemicals.

Do not use the phone near electronic medical devices such as hearing aids, pacemakers and auto-control devices such as fire detectors and automatic doors.

If you have to use your cellular phone near an electronic medical device such as a pacemaker, please contact your manufacturer or dealer for information about preventing interference.

Caution:

Electronic systems in automobiles such as anti-lock brakes, speed control, or fuel spraying systems, are usually not influenced by wireless devices. Manufacturers of these systems will tell you whether they encompass good screening mechanisms. If you suspect that an automobile failure is caused by a wireless wave, please contact your automobile dealer.

Avoid using your phone in crowded places.

Do not store your cellular phone near or with a credit card, disk or other magnetic materials. This may affect information stored on your phone.

Keep your phone away from pins. Pins can be absorbed by the phone's receiver magnet, which may

cause harm.

Using the Battery

Danger:

Do not dispose of the battery into a fire. Doing so may cause battery explosion or even fire.

If you have difficulties installing the battery, do not force the installation. This may cause battery leakage, overheating, explosion or even fire.

Keep metal objects away so they do not come in contact with the battery or its connectors as it may cause the battery to short circuit, overheat or explode.

Do not weld the polarities of the battery directly together. This may cause battery leakage, overheating, explosion or even fire.

Battery liquid is severely harmful for your eyes. If battery liquid gets in your eyes, do not rub them. Instead, wash your eyes with water first and then go directly to a doctor for help.

Do not use or store your phone in high temperature areas. This may cause battery leakage, overheating, explosion or even fire.

Warning:

Replace the battery when the normal usage time begins to decrease or if you notice the battery is overheated or has changed shape or color.

If battery liquid leaks onto your skin or clothes, immediately wash the affected parts with water.

If the battery begins to leak or emits a strange odor, properly dispose of the battery according to local regulations. Do not throw it into a fire.

Caution:

Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 60°C (140°F), such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

Using the Charger

Danger:

Only use the charger that came with the phone. Using a different charger may cause the phone to break or explode.

If the charger short circuits, a fire may occur.

Do not use a damaged, worn or broken charger. This may cause a fire.

Clean dust away from the power socket to avoid the possibility of a fire.

Do not store the charger near any liquids. If liquids spill onto the charger it may cause it to overheat or break.

If liquid does spill onto the charger, immediately unplug the power cable to prevent overheating, fire or another issue.

Do not use the charger in places with high humidity like a bathroom. This may cause a fire or other issue.

Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.

Caution:

Keep the environment temperatures within the range of 0°C ~40°C while charging. Temperature below

0°C or higher than 40°C will cause insufficient charging, terminate charging or even cause the battery to explode.

Unplug the charger from its power source before cleaning it.

Do not place heavy objects on the power cord. This may cause electric shock or fire.

Hold the plug while unplugging the power cord. This will avoid any potential damage or even fire.

Requirements for Cellular Phone

Avoid using your cellular phone in extremely high or low temperatures. Use the phone in a temperature range between 0~40°C and humidity of 35%~85%.

It is recommended that you do not use your cellular phone near a telephone, TV set, radio or other radio frequency sensitive devices.

Requirements for the Battery

When not in use, store the battery in a cool, well-ventilated place with sunshine.

If you will not be using the cellular phone for an extended period of time, charge the battery on a regular basis to avoid battery failure.

The phone battery wears out fast. If charging the battery does not improve its performance, it is time to replace the battery. Properly dispose of the battery according to local regulations. Do not throw it into a fire.

Requirements for the Charger and AC Adapter

Do not charge your phone under the following circumstances: sunlight, temperatures equal to or lower than 0°C, temperatures equal to or higher than 40°C, high humidity, dust, high vibration areas, or near a

TV, a radio, etc.

Specific Absorption Rate (SAR) information

This mobile phone meets the government's requirements for exposure to radio waves. This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.958 W/kg and when worn on the body, as described in this user guide, is 0.566 W/kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: T38PCD1020P.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

FCC Regulations:

● This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cleaning and Maintenance

The cellular phone, the battery and the charger are not waterproof. Do not use them in places with high humidity like a bathroom and also avoid spilling any liquids on them.

Use a soft cloth to clean the cellular phone, the battery and the charger.

Do not use alcohol, diluted liquid or benzene to clean the cellular phone.

If dust gets into the sockets, the phone can be damaged, short-circuit or even the lose the ability to be re-charged. Be sure to clean the socket regularly.

12 MONTH LIMITED WARRANTY

PERSONAL COMMUNICATIONS DEVICES (the Company) warrants to the original retail purchaser of this PCD handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;

Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.

Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;

Damage resulting from connection to, or use of any accessory or other product not approved or

authorized by the Company;

Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;
Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

When sending your wireless device to PERSONAL COMMUNICATIONS DEVICES for repair or service, please note that any personal data or software stored on the device may be inadvertently erased or altered. Therefore, we strongly recommend you make a back up copy of all data and software contained on your device before submitting it for repair or service. This includes all contact lists, downloads (i.e. third-party software applications, ringtones, games and graphics) and any other data added to your device. In addition, if your wireless device utilizes a SIM or Multimedia card, please remove the card before submitting the device and store for later use when your device is returned. PERSONAL COMMUNICATIONS DEVICES is not responsible for and does not guarantee restoration of any third-party software, personal information or memory data contained in, stored on, or integrated with any wireless device, whether under warranty or not, returned to PERSONAL COMMUNICATIONS DEVICES for repair or service.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone

number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing. In addition, for reference to an authorized Warranty station in your area, you may telephone in the United States (800) 229-1235, and in Canada (800) 465-9672 (in Ontario call 416-695-3060).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

IN USA: PERSONAL COMMUNICATIONS DEVICES

555 Wireless Blvd.
Hauppauge, NY 11788
(800) 229-1235

IN CANADA: PCD COMMUNICATIONS CANADA LTD.

5535 Eglinton Avenue West
Suite# 234
Toronto, ON M9C 5K5
(800) 465-9672