

 
GPTV1148 User Manual

YOUR PHONE	5
STANDBY MODE	6
GETTING STARTED	6
INSTALLING THE SIM CARD AND THE BATTERY	6
INSTALLING A MICROSD CARD	7
CHARGING THE BATTERY	8
SWITCHING THE PHONE ON AND OFF	8
CALL FUNCTIONS	8
MAKING A CALL	8
ANSWERING OR REJECTING AN INCOMING CALL	8
CALL WAITING	8
INPUT METHOD	9
PHONEBOOK	9
SEARCH.....	9
ADD NEW CONTACT.....	9
CALLER GROUPS.....	10
PHONEBOOK SETTINGS.....	10
STK (SIM TOOLKIT).....	10
CALL CENTER	10
CALL HISTORY	11
<i>Missed Calls</i>	11
<i>Dialed Calls</i>	11
<i>Received Calls</i>	11
<i>Delete Call Logs</i>	11
<i>Call timers</i>	11
<i>Call Cost</i>	11
<i>Text Message Counter</i>	11
<i>GPRS Counter</i>	11
CALL SETTINGS	12
<i>Advance Settings</i>	12
SETTINGS.....	12
PHONE SETTING	12
<i>Time and Date</i>	12
<i>Schedule Power On/Off</i>	12
<i>Language</i>	12
<i>Writing Language: Allows you to predefine your writing Language</i>	13
<i>Display</i>	13
<i>Themes</i>	13
<i>Greeting Text</i>	13
<i>Dedicated Key</i>	13
<i>Auto Update Of Date and Time</i>	13
<i>Flight Mode</i>	13
<i>Misc. Settings</i>	13
NETWORK SETTINGS	13

SECURITY SETTINGS.....	13
CONNECTIVITY	14
<i>Conn. Management</i>	14
<i>Data Account</i>	14
RESTORE FACTORY SETTINGS	14
SOUND EFFECTS	14
MESSAGING.....	14
WRITING A MESSAGE	14
INBOX.....	15
DRAFTS	15
OUTBOX	15
SENT MESSAGES.....	15
DELETE MESSAGES	15
BROADCAST MESSAGE	15
TEMPLATES.....	15
MESSAGE SETTINGS.....	15
MULTIMEDIA	16
MOBILE TV	16
CAMCORDER.....	17
IMAGE VIEWER	18
VIDEO PLAYER	18
AUDIO PLAYER	18
<i>Playing Music</i>	19
SOUND RECORDER.....	19
FM RADIO	19
FILE MANAGER	20
FUN & GAMES	20
ORGANIZER.....	20
CALENDAR.....	20
TASKS	21
ALARM.....	21
WORLD CLOCK.....	21
SERVICES	22
INTERNET SERVICE	22
<i>Homepage</i>	22
<i>Bookmarks</i>	22
<i>Recent Pages</i>	22
<i>Offline Pages</i>	22
<i>Input Address</i>	22
<i>Service Inbox</i>	22
<i>Settings</i>	22
USER PROFILES.....	23
EXTRA	24
CALCULATOR.....	24

CURRENCY CONVERTER	24
STOPWATCH.....	24
GENERAL INFORMATION	24
ACCESSORIES	24
GPRS/EDGE.....	24
PRECAUTIONS	24
TROUBLESHOOTING	25
SAFETY INFORMATION AND NOTICES	27
USING THE CELLULAR PHONE AND CHARGER.....	27
<i>Danger:</i>	27
<i>Caution:</i>	27
<i>Warning:</i>	27
USING THE CELLULAR PHONE.....	27
<i>Warning:</i>	27
<i>Caution:</i>	28
<i>Danger:</i>	28
<i>Warning:</i>	28
<i>Caution:</i>	28
USING THE CHARGER	28
<i>Danger:</i>	28
<i>Caution:</i>	29
REQUIREMENTS FOR THE BATTERY	29
REQUIREMENTS FOR THE CHARGER AND AC ADAPTER	29
SPECIFIC ABSORPTION RATE (SAR) INFORMATION	29
CLEANING AND MAINTENANCE	29
12 MONTH LIMITED WARRANTY	30

Your Phone

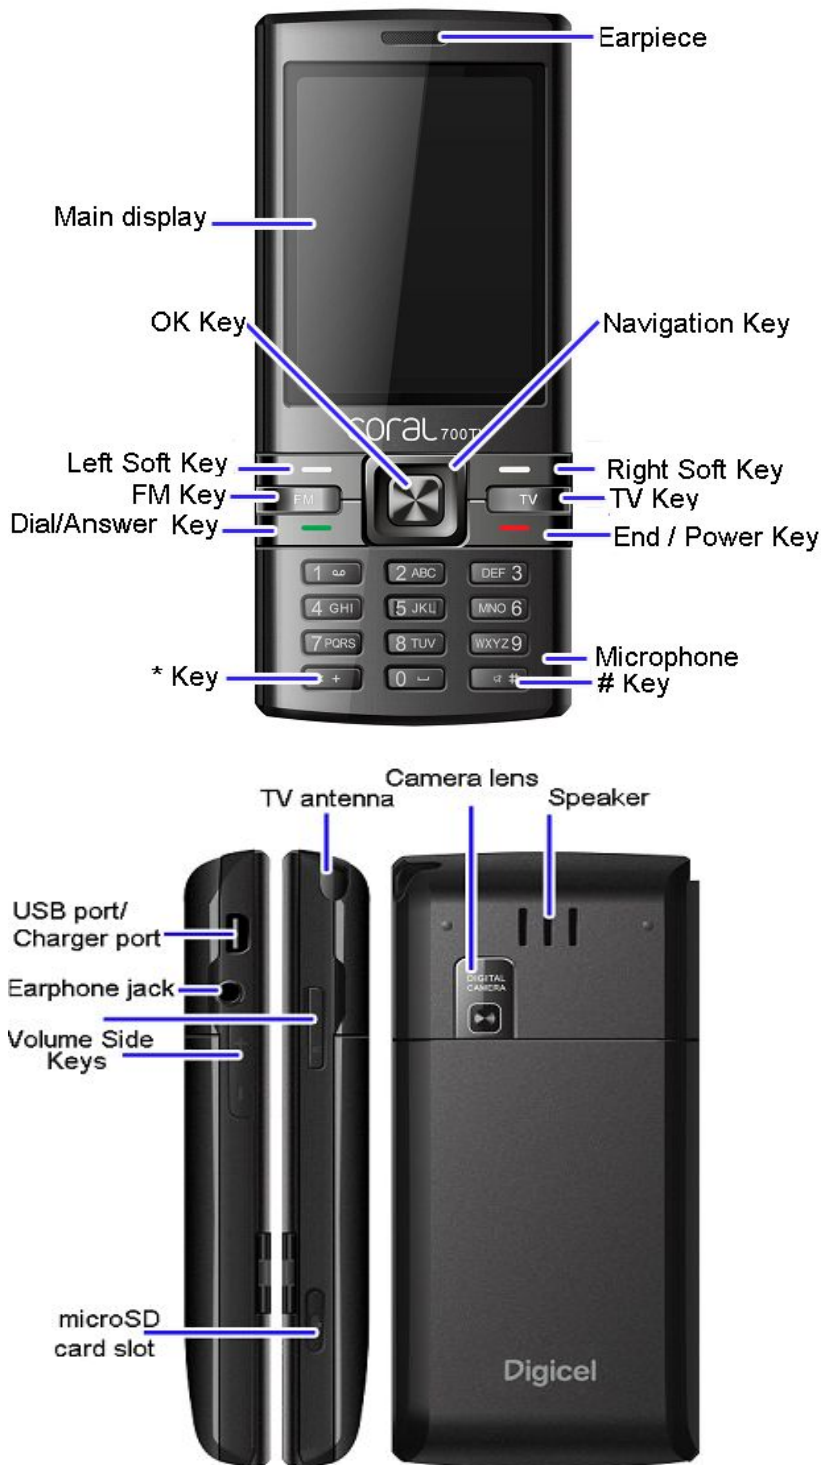

Left/Right soft Key

- Press to perform the function currently displayed in the bottom left/right corner of the screen.

Navigation Key

- In the standby mode, Navigation Key UP to access the Audio player
- In the standby mode, Navigation Key DOWN to access the Alarm
- Press the Navigation Key Left to access the user profiles
- Press the Navigation Key Right to access the Tone settings.

OK Key

- In the standby mode, press to enter the main menu.
- Confirm a selection.

Dial/Answer Key

- Press to make a call.
- Press to answer a call.
- In idle mode, press to display call list

End/ Power Key

- Press to end a call.
- Press and hold to power on/ off the phone.

FM Key

- In idle mode, press to access FM radio.

TV Key

- In idle mode, press to access TV player.

Volume Side Keys

- Press to increase or decrease the volume.

Standby mode

In the main display, you may see several icons displayed on your status bar. The meaning for each icon is explained below:

	Vertical bars indicate the signal strength of the GSM network signal.
	Indicates the battery charge level.
	Indicates your phone is locked.
	Indicates your phone uses the alert type of "Ring".
	Indicates your phone uses the alert type of "Vibrate and ring".
	Indicates your phone uses the alert type of "Vibrate Only".
	Indicates your phone uses the alert type of "Vibrate then ring".
	Indicates your phone uses the headsets profile settings.
	Indicates the alarm clock is set.
	Indicates a missed call.
	Indicates new text message(s).
	Indicates new multimedia message(s).
	Indicates new voice mail message(s).
	Indicates WAP push messages.
	Indicates your phone has logged onto GPRS.

 
Getting started

Installing the SIM card and the battery


You need to insert the SIM card and charge the battery before using the phone.

- Keep all miniature SIM cards out of the reach of little children.
- Be careful to handle, insert or remove the SIM card since the SIM card and the contacts inside can easily be damaged by scratching or bending.
- Before installing/removing the SIM card, always make sure that the phone is switched off.

1. Remove the back cover (1) and lift the battery away (2).

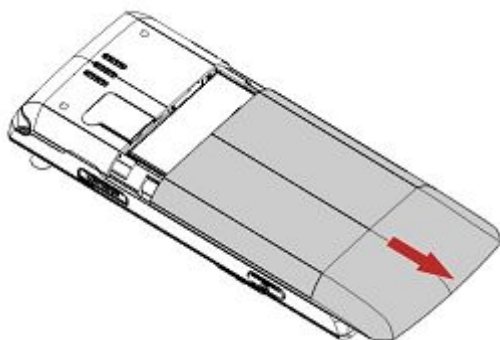


 
(1)

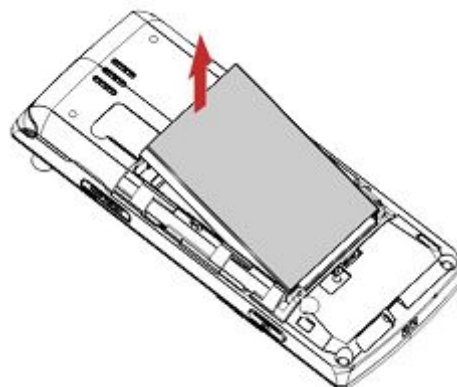


(2)

2. Insert the SIM card (3), install the battery (4) and attach the battery cover as shown (5).

  (3)

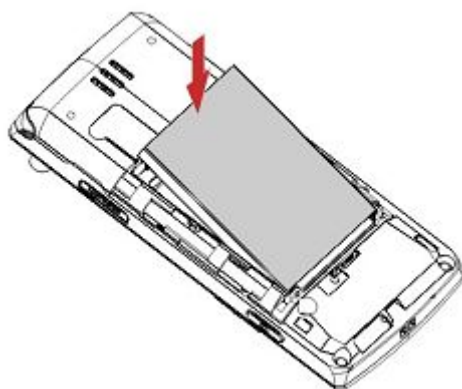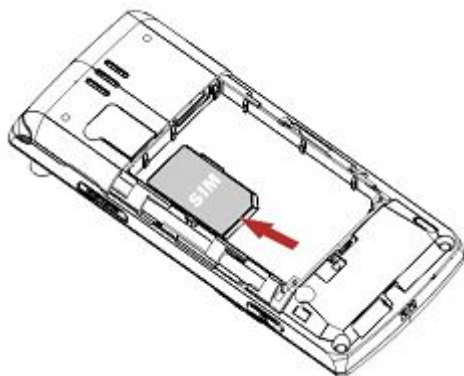

 (4)

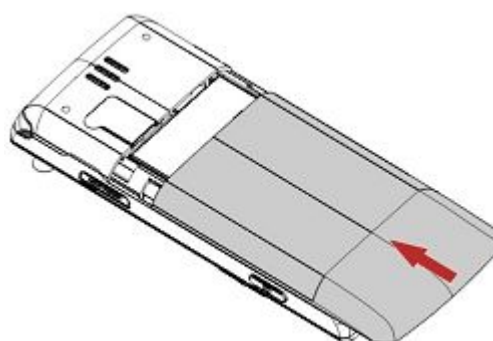

(5)

Note: make sure that the metallic contacts of the battery are facing the metallic contacts in the battery slot.

Installing a microSD Card

1. The microSD card slot is on the right side of your phone.
2. With the metal contacts facing to the metal contacts in the slot, gently slide the SD card into the slot and press down until the card locks into place (6).
Note: the metal contacts are facing front.
3. If you want to get the microSD card out, gently press the microSD card, then you can remove it from your phone.

(6)



Charging the battery

You must fully charge the battery before using your phone for the first time.

1. Connect Charger cable to the micro charger port on the left of your phone.
2. Connect charger to an AC wall outlet.

When all the battery scroll bars are steady, the battery is fully charged. Then you can disconnect the charger.

Switching the phone on and off

- Press and hold the Power Key.



Notes:

1. You can also use the phone without SIM card. If the phone asks PIN code, key in the PIN code, and press the Left Soft Key (LSK) to confirm.
2. Do not switch the phone on when the phone use is prohibited or when it may cause interference or danger.

Call Functions

This section gives you information about the calling service supported in your phone.

Making a call

In standby mode, key in the number, including the area code, and press the Dial Key.

To make a call from the Phonebook

In the standby mode, press the **Left soft key** to enter the main menu, and then select **Phonebook**. Scroll to the desired contact name or type the name in the search bar, and then press the Dial Key to make the call.

To make an international call

1. For international calls, enter the international prefix (**Press the * Key twice quickly until "+" appears on the screen**).
2. Key in the country code, area code and the phone number.
3. Press the Dial key to call.

Answering or rejecting an incoming call

- Press the Answer key to answer the call when the phone rings.
- To reject an incoming call, press the End key to reject the call.

Call Waiting

If you want to answer another incoming call, you should activate the call waiting function for the SIM at first.

During a call, press the Answer key to answer the new incoming call. You can swap back anytime by pressing the Left Soft Key (LSK) and select **Swap**.

Input Method

You can key in text by pressing the keypad.

To select a writing language

Before you key in text, press **Options** and select **Writing Language**.

To insert a space

You could press the **Space** key to insert spaces.

To insert the symbols

Pressing the * key can access the symbols.



Multi-tap Input

Using this mode requires you to press a key as many times as needed to enter the desired letter. To enter the word «home» in Multi-tap input mode "**abc**", press key 4(GHI), 4 (GHI), 6(MNO), 6(MNO), 6(MNO), 6(MNO), 3(DEF), 3 (DEF).

Numeric Input

Press the # Key to select "**123**" then you can enter the numbers.

Phonebook

Your phonebook list is saved either on the SIM card's memory or Phone's memory. You can also choose to list both.

Search

In standby mode, press the **Left Soft** key to enter the main menu, and then select **Phonebook**.

Now you can search names and numbers saved in the **Phonebook**

Key in full name or first character of contact person's name and the phonebook list will automatically jump to the character you have entered, or the matched contact will be displayed.

Add New Contact

Allows you create a new entry into the phonebook list. It will be saved either in phone memory or SIM card.

To add a new contact

1. In **Phonebook** menu, select **Add New Contacts**, press **Left Soft** key to choose **Options > Select**, and then enter the contact information.

2. Press **Options > Done** to save the new contact.

Note, If you want to change the storage location, please select **Options > Phonebook Settings > Preferred Storage**.



Notes:

1. Your phone allows you to save 1,000 entries of phone numbers.
2. Image and video can be selected from both default and file manager.

Caller Groups

In Standby Mode, press the **Left Soft** key to enter the main menu, then select **Phonebook**, press **Left Soft Key** to select **Options**, then select **Caller Groups**.

You can also add a **New Caller** group. With the **Caller Group** function, you can send a message to all members of a group at the same time.

Phonebook Settings

To access the **Phonebook Settings**, in standby mode, press the **Left Soft** key to enter the main menu, and then select **Phonebook**, press **Left Soft** key to select **Options**, and then select **Phonebook Settings**

Your phone provides you various setting options to personalize your phone, including,

- **Preferred Storage:** You can choose your preferred storage in phone, SIM or both.
- **Speed dial:** If you assign the number to one of the speed dialing keys (from the key 2 to key 9) saved in the **Phonebook List**, you can dial the phone number by pressing and holding the number of the key assigned in standby mode. First, you should turn this feature on, and then set the number by associating with a contact.
- **My Number:** Allows you to define number or name.
- **Extra numbers:** Allows you to view owner number, fixed dial number (FDN), some SIM card cannot support it.
- **Memory Status:** You can check how many entries are stored in the SIM card or the phone's memory.
- **Copy contacts:** Allows you to copy the contacts among two storages.
- **Move contacts:** Allows you to move the contacts among two storages.
- **Delete all contacts:** Allows you to delete the contacts from the phone or SIM.

STK (SIM Toolkit)

In addition to the functions available on the phone, your service provider may offer additional applications such as weather or stock market information via the SIM card. This function is only supported when a SIM card is inserted. The submenu of this feature depends on the operator, and different operators may provide different services (some SIM cards do not support STK).

Call center

Your phone can save the call records of missed calls, received calls, dialed calls, durations and cost of calls in the **Call History** menu.

**Notes:**

1. Once the call list exceeds the memory limitation, the oldest one is deleted.
2. For the call logs, you can press the Dial key in standby mode to have a quick review.

Call history

Missed Calls

To view Missed Calls:

In the **Call Center** menu, choose **Call History > Missed Calls**, and press the **Navigation Key** to view the records.

Dialed Calls

To view Dialed Calls:

In the **Call Center** menu, choose **Call history > Dialed Calls**, and press the **Navigation Key** to view the records.

Received Calls

To view Received Calls:

In the **Call Center** menu, choose **Call History > Received Calls**, and press the **Navigation Key** to view the records.

Delete Call Logs

Your phone allows you to delete calls from the Missed Calls list, Dialed Calls list, Received Calls list, or All Calls lists.

Call timers

Your phone allows you to view the duration of both your incoming and outgoing calls.

Call Cost

This function allows you to check the cost of your last phone call, or the total cost of all calls made. Some SIM card cannot support this function.

Text Message Counter

This function allows you to check the numbers of text messages you've sent. You can press **Reset** to reset the message counter.

In **Call center** menu, choose **Call history > Text Msg Counter** to view the records.

The following items are available for the Text Message Counter:

- **Sent:** The number of Text messages you've sent.
- **Received:** The number of text messages you've received.

GPRS Counter

This function allows you to check the data size (both message and WAP) of the GPRS packet you've used.

In the **Call Center** menu, choose **Call History > GPRS Counter** to view the content.

The following options are available for the GPRS counter:

- **Last Sent:** The GPRS volume that you sent last time.
- **Last Received:** The GPRS volume that you received last time.
- **All Sent:** The total GPRS volume that you've sent.
- **All Received:** The total GPRS volume that you've received.
- **Reset Counter:** Press to reset the counters.

Call Settings

- **Caller ID:** Allows you to either send or hide your ID during calling or sending out the message. Your phone is defaulted in **Set By Network**, which means your ID is determined by your service provider.
- **Call Waiting:** Allows you to enable the call waiting function.
- **Call Divert:** Allows you to set the call condition by which the calls are diverted to another number.
- **Call Barring:** Allows you to restrict both incoming calls and outgoing calls from your phone.
- **Closed User Group:** This is a network service.

Advance Settings

- **Auto Redial:** If turned on, your phone will make repeated attempts to connect the call after an unsuccessful call attempt.
- **Call Time Display:** Allows you to enable or disable the call time display on the phone screen.
- **Call Time Reminder:** Allows you to set a time reminder alarm during a call.
- **Auto Quick End:** Allows you to set the time when the call will be ended automatically.
- **Reject By Messaging:** Allows you to set it on or off. If it is on, you can reject a call by sending a message when a call is incoming.

Settings

Phone Setting

Time and Date

This function allows you to set your home city and view/change the time and date settings in your phone. You can also choose to update with time zone.

Schedule Power On/Off

You are allowed to schedule the power on and off time for 4 different time settings.

Language

This phone allows you to set a language for the display in this phone.

In the **Settings** menu, choose **Phone Settings > Language**.



Note: The option of **Automatic** depends on your service provider and languages supported by your phone. If you select **Automatic**, your phone will auto detect the language supported by your SIM and phone.

Writing Language: Allows you to predefine your writing Language.

Display

This feature allows you to personalize your display setting through these following options:

- **Wallpaper:** Allows you to change your wallpaper displayed on the idle screen.
 1. In the **Settings** menu, choose **Phone Settings > Display > Wallpaper**.
 2. Choose **User Defined** and select an image from the **File Manager**.
 3. Or, choose **System** and press **OK**.
- **Screen Saver:** Allows you to play different screen savers. The waiting time after which the screen saver is activated is from 5 sec. to 1 min.

After the above setting is completed, go back to the **Screen Saver** submenu and choose **Select** to enter either **System** or **User Defined** to choose an image as your screen saver.

- **Power On Display:** Allows you to set the power-on animation from the system or the **File Manager**.
- **Power off display:** Allows you to set the power-off animation from the system or the **File Manager**.
- **Main Menu Style:** Press to set the style of main menu to matrix.
- **Show Date and Time:** If turned on, the time and date will be shown in **Standby** mode.
- **Show Owner Number:** If turned on, the owner number will be shown in **Standby** mode.
- **Screen switch effect:** Allows you to set it None/Normal/Best

Themes

You can choose the theme that you prefer.

Greeting Text

This function indicates the message when you power on in the main screen display. You may edit any message for your welcome note.

Dedicated Key

This function allows you change the features with the Navigation keys.

Auto Update Of Date and Time

You can set on or off.

Flight Mode

Select from **Normal** mode, **Flight** mode and **Query** when power is on.

Misc. Settings

This menu allows you to set the LCD backlight.

Network Settings

While in this mode, you can search the network, set your preferred network, or change the GPRS connection.

Security Settings

This function allows you to activate a password to protect your phone against unauthorized use. Your phone provides the following options for your selection:

- **SIM Lock:** To prevent your SIM card from illegal use, your SIM card is protected by a PIN code. If you set the SIM lock to **On**, you can only use your cellular phone by entering the correct PIN code every time you turn it on. If you enter the wrong PIN code three times, your SIM card will be locked and a PUK code will be required. Contact your service provider for more information.
- **Phone Lock:** You can turn Phone Lock on or off to protect your phone from unauthorized use. If you switch the phone lock on, you need to enter the password to set the request on. The default password is 1122
- **Auto Keypad Lock:** This allows you to lock the phone's keypad to prevent accidental key pressing. In the **Auto Keypad Lock** submenu, select the time and press **OK**
- **Change Password:** Allows you to change PIN, PIN2 and the **Phone Lock Password**.

Connectivity

Conn. Management

This function allows you to see the connection.

Data Account

You can access WAP via **GSM Data** or **GPRS**. To get the analogue number or ISDN number information, you may need to contact your operator for the service. To get the access point of GPRS, you may need to contact your operator for the service.

Restore Factory Settings

This function allows you to reset most of the original factory phone settings back to their original settings. The **Phone Lock Password** is needed to access this function.

Sound effects

This function allows you to choose the audio effect and bass enhancement.

Messaging

Your phone supports voice mail notification messages and text messages. Voice mails, short message service (text messages) and multimedia message (MMS) are network service. Please check your service provider for further details on the fees.

Writing a Message

To write a message:

1. From the main menu, select **Messaging**.
2. Choose **Write Message > Text Message / Multimedia Message**.
3. In multimedia message content, you are able to add a picture, sound, video, and/or an attachment into your message.
4. After you're finished, select **Options** and then **Send To**.
5. Add the recipient by inputting the number manually or searching them in the phonebook.
6. Finally, select **Options** and select the **Send** option to send the message.



Notes:

1. To key in the content, please refer to "**Input Method**".

2. To use the multimedia message function, your network operator or service provider support is necessary. Only phones equipped with this function can receive and display multimedia messages.

Inbox

Your phone saves the text messages and multimedia messages (MMS) that have been received in the **Inbox** folder.

To Read Messages

When you've received a message, icons will indicate that this is a message is from a SIM card or another phone in the **Inbox**. If your inbox is full since the messages you have received are saved in SIM as default setting, your message will be saved on the phone instead of the SIM card. If the phone's inbox is full also, there will be a pop-up window to remind you that your inbox is full and cannot accept any new messages.

1. From the main menu, select **Messaging**.
2. Then select **Inbox**. All received messages are listed in this folder.

Drafts

Your phone saves the saved messages in the **Draft** folder.

Outbox

Your phone saves the messages that **unsent** in the **Outbox** folder.

Sent Messages

Your phone saves the messages sent successfully in the **Sent Messages** folder.

Delete Messages

You are able to delete all of the messages in a folder, or even the total messages at once.

Broadcast Message

Your phone allows you to receive commercial messages. You can either enable or disable the receiving mode and set some other settings based on your personal preference.

Templates

There are several default text message and MMS templates in your phone.

Message Settings

Your phone allows you to set up default settings in the text message and MMS features.

1. Go to **Messaging** and choose **Message Settings**.
2. Then select **Text Message** or **Multimedia Message** to change the settings.
3. Choose the field you would like to change.

You can customize your text message with the following options:

- **Profile Settings:** If more than one message profile is allowed by your SIM, you may edit the profiles separately.
- **Voice mail Server:** Your phone allows you to access your voice mailbox quickly if your operator supports this function. Your voice mail number will be provided by your service provider and displayed in the phone. In the **Standby** mode, press and hold the 1 key to call your voice mail directly.

- **Common Settings:** If **Delivery Report** is on, the network will send delivery reports on your messages. If **Reply Path** is on, you'll transmit the number of your text message center together with the message. The recipients can then reply using your text message center, and not theirs. This can speed up the rate of transmission of the message. This feature is subscription dependent. If **Save Sent Message** is turned on, the successfully sent messages will be saved in **Sent** box.
- **Memory Status:** Allows you check your memory status in either the phone, or the SIM card.
- **Preferred Storage:** Allows you to change your preferred storage to either your SIM, or the phone.
- **Preferred Connection:** Allows you to set your preferred connection.

MMS message provide the following options to customize:

Profiles: You may receive and send multimedia messages through a certain network or service provider.

To activate a profile setting, select it and then choose **Activate**.

Common Settings: see following settings.

- **Compose:** You can compose the format of your phone based on the options listed below:
 - **Slide Time:** Define the time for the delay between each slide.
 - **Creation Mode:** If you select **Restricted**, the device prevents you from sending messages that may not be supported. To include content in your message without notifications, select **Free**.
 - **Picture Resizing:** Define the size of the image in an MMS.
 - **Auto Signature:** Define whether you want to add a signature at the end of an MMS automatically.
 - **Signature:** Define the signature that you want to be added.
- **Sending:** This setting contains the options, such as priority, delivery report, and so on.
- **Retrieval:** This setting contains the options, such as roaming, read report, and so on.
- **Memory Status:** Allows you check the used and free memory.



Note: You may contact with your network service operator to consult MMS settings.

Multimedia

Mobile TV

Your phone is capable of delivering full length analog, broadcasting television programs from some of the most popular TV channels. TV function may only be available in an analog signal coverage region.

To start using

1. To open TV, press the **TV** key in idle mode. The system will show program availability in your location. In the first start-up, this may take a few minutes. You can pull out the TV antenna and adjust it for better reception.
2. To select a program, you can press **Options** and choose **Change Channel**.

If it cannot find any program when you open TV, please press **Options** and choose **Auto Search** to search for a signal again. Be sure to check if your country & region is correctly set.

Your phone provides the following selections for your option:

- **Country & Region Setting:** Allows you to choose your current country and region.

- **Auto Search:** Allows you to auto scan the TV channels without having to press the forward or backward key over and over. The station searched will be automatically memorized in the **Channel** list.
- **Change Channel:** Allows you to change a channel by choosing a channel from **Channel** List.
- **Brightness:** Allows you to adjust the brightness of the screen.
- **Sound Settings:** Allows you to switch 3D Surround and Mute on or off.
- **Add to Favorite:** Allows you to edit your **Favorite Channel** list.
- **TV Recorder:** Allows you to record the current TV program.
- **Storage:** Allows you to choose the storage for recording file.
- **Restore Default:** Allows you to restore the default settings.
- **Exit:** Exit from mobile TV mode and return to idle mode

Shortcut Key Definition

Key	Key Definition
Right Soft Key	Go back
Left Soft Key	Options
End/ Power Key	Go back to idle screen
Volume Side Keys	Volume Up/Down
# Key	Adjust the play speed
Navigation Keys	→ EV Up ↑ Channel Down ↓ Channel Up ← EV Down
Numeric Keys	Jump to Channel

Camcorder

Your mobile phone features a digital camera that allows you to take pictures, store them, set them as wallpaper, or send them to your friends. Please ensure that the camera lens is clean before you take pictures, as small dust particles can strongly affect the picture quality. The camera lens is on the back of the phone and the display of the phone works as a viewfinder.

How To:

Launch Camera	From idle mode, press the OK key to enter the main menu then select Multimedia > Camcorder
Zoom Out/In	Press the Navigation key left or right ►/◄
Adjust Brightness	Press the Navigation key up or down ▲/▼
Options	Press the Left Soft key
Take a Picture	Press the OK key After taking, the picture will be saved automatically to File Manager. The picture will be saved in JPEG format.
Exit	Press the End/Power key, or the Right Soft key.

At any point in time, you can press the Hang-Up key to cancel the current operation and return to the idle mode.

Camera Option Menu

When the camera mode is activated, you can change a number of settings by pressing the Left Soft key before taking a picture:

Options	Description
Switch to	Photo Album: Enter the album according to the storage. If the storage is the phone, it will shortcut to File Manager > Phone > Photos . Video Recorder: You can jump to the video recorder mode by pressing OK key.

Capture mode	Normal / Continuous shot
Scene mode	Auto/Night
Image Size	Allows you to select the resolution of the picture you want to take.
Highlight	On/off
Self-timer	Off / 5 Sec. / 10 Sec./15 sec.
White Balance	Auto / Daylight / Tungsten / Cloudy / Incandescence
Effects	Allows you to choose the effects on the picture.
Adv. settings	Storage: Phone/Memory card Image quality: Normal / Good / Fine Shutter sound: Off/ Sound 1/ Sound 2 / Sound 3 Anti-flicker: 50Hz / 60Hz Restore default settings: Restores factory defaults

Note: When there is not enough memory space, you will not be able to save the picture and you will be prompted with a warning message. You must delete existing pictures before you can store new ones.

Record a Video

Launch Video	In idle mode, press the OK key to enter the main menu. Select Multimedia > Camcorder . Press the Left Soft key to select Switch to , select Video Recorder .
Adjust Brightness	Press the Navigation key Up or Down ▲/▼.
Zoom Out/In	Press the Navigation key left or right.
Options	Press the Left Soft key.
Record a Video	Press the OK key once to begin recording. Press the OK key again to pause. Press the Right Soft key [Stop] to stop recording. It will be stored in File Manager > Phone/Memory card > Videos . The saved video is 3gp format .
Exit from Video mode and return to idle mode	Press the End key or the Right Soft key .

Image Viewer

All images from photo folders can be reviewed from here and storage is located in either the phone or memory card. You may choose to view your images in **List Style** or **Matrix Style**.

To change the storage, select **Options** and select **Storage**.

Video Player

It stores videos saved from your phone or one's downloaded from your PC.

Playing A Video:

1. In the **Multimedia** menu, choose **Video Player**, and then select the file you wish to play.
2. After a certain video clip is selected, select **Options > Play**.

Audio Player

Key Operation

The keypad operations during music playback are as follows:

Key	Description
The OK Key	Show the play list in File Manager > My Music .
Navigation Key ◀ or ▶	Short press to select the previous song/next song. Press and hold to rewind/fast forward the track during playback.

Navigation Key Up ▲	Press to Start/Pause/Resume music playback.
Navigation Key Down ▼	Press to stop the music playback.
Volume Side Keys	Adjust volume.
Left Soft Key [List]	Show the play list in File Manager > My Music.
Right Soft Key [Back]	Return to previous menu.

Audio Player Setting Menu

Press Left Soft key [List] to list the audio files, and then press the Left Soft key [Option] to choose **Settings**. You can set your preferred play list, list auto gen, repeat, shuffle, background play and so on.

Note: This menu lists the music file in **File Manager > Phone/Memory Card > My Music**. It supports the audio format of MP3, AMR and WAV.

Playing Music

If you are a first-time user, select **List > Options > Settings > Player Settings > Pre. Playlist** to set the storage for adding music tracks. Your music player will automatically detect and add all the music tracks into the default play list.

 **Note:** MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson. Supply of this product does not convey a license, nor imply any right to distribute MPEG Layer-3 compliant content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), streaming applications (via internet, intranets and/or other networks), other content distribution systems (pay-audio or audio-on-demand applications and the like), or on physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards). An independent license for such use is required. For details, please visit <http://mp3licensing.com>.

Sound Recorder

The **Sound Recorder** is a simple sound-recording tool that provides all of the required functionalities for you to manage voice files.

To Start Recording

1. In **Multimedia** menu, choose **Sound Recorder**.
2. Select **Options > New record** to start recording.

 **Notes:**

1. During recording, you can pause or continue the voice recording anytime by pressing the OK key.
2. After the recording is completed, the voice file is saved as AMR, WAV or AWB format.

FM Radio

This feature allows you to listen to your favorite FM radio station anytime with frequency ranging from **87.5 MHz** to **108.0 MHz**.

To Start Using

1. From the main menu, choose **Multimedia > FM Radio**.
2. If FM is off, press the OK key to turn on the FM radio.
3. You can choose to either turn on or off the auto search by pressing the Navigation Up key.
4. Press the Navigation Left or Right key to start searching.

Your phone provides the following options for your selection:

- **Channel List:** Allows you to bookmark up to 9 radio stations by entering the channel name and frequency. You can have quick access to 9 radio stations by assigning a station a numeric key. You are allowed to play, delete or edit a selected radio station frequency.
- **Manually Input:** Allows you to key in the radio station frequency manually.
- **Auto Search:** Allows you to auto scan through the radio stations, and the station chosen will be memorized in the **Channel** list.
- **Settings:** Allows you to change the settings of background play, skin, loud speaker, record format, audio quality, or record storage.
- **Record:** Allows you to record your favorite program.
- **Append:** Allows you to resume the file you have recorded and continue to record at the same file.
- **File List:** Allows you to list the radio program you have recorded. You may send the file to your friends.

File Manager

In this menu, you can manage images, audio, music, photos, videos and other contents you have downloaded. Two storages will be displayed:

To check files saved in the File Manager

1. From the main menu, select **File Manager**. You may see one more drive named **Memory Card** if you insert the T-Flash card in.
2. Scroll to the menu to **Phone** and press **Options** to open options list.
3. When you choose **Open**, you will see a list of the folders. Note, some folder, such as **My Music** may be hidden until you enter the menu of **Music Player**.

Fun & Games

This phone is built with creative games.

You can get the game instructions from the "Help" submenu.

Organizer

Calendar

This feature allows you to keep track of your schedule and tasks saved in the calendar. You can also switch on the alarm with the task for reminding.

To make a note and reminder in **Calendar** for the first time:

1. In **Organizer** menu, choose **Calendar**.
2. Select a day in the calendar.
3. Select **Options > View** to view the event. You can also select **Options > Add Event** to add a new event.
4. Choose a type of the event. Input the start and end time of your event, and describe the event contents in **Subject** and **Details**.

5. After you finish editing the contents of your event, select **Options > Done** to save your description.
7. Choose **Alarm Clock** to turn on or off.
8. Choose **Once/ Everyday/ Custom/ Weekly/ Monthly** in **Repeat**.
9. Then you can edit other information.
10. Press **Done** to save the event.

Tasks

You can also view, edit or delete the tasks from the options under this feature. For the first-time user, you will need to follow the steps below:

1. Select **Add** in the **Task List**. Then choose the task type.
2. Edit your **Task** by entering date, time, subject, alarm, repeat, and other information.
3. You can choose to turn the alarm on as the reminder.
4. Select **Done** and **Yes** to save your **Tasks** list.

Alarm

This function allows you to set the alarm to ring at the time specified. The alarm clock works even when the phone is switched off.

1. In the **Organizer** menu, choose **Alarm**.
2. Turn the alarm **ON**, and select **Edit** to set the alarm time.
3. To set the alarm, directly input the hours and minutes using the numeric keys.
4. Choose **Once/Everyday/Custom0.....** in the **Repeat** option for your ring mode.
5. In **Alarm Tone** option, you may customize the alarm tone from different tone selections provided, or from an FM Radio channel. Press the Navigation Left/Right keys to switch between **Tone / FM radio** options.
6. In **Snooze (Min)** option, you may set the alarm as default, or you can set it to snooze from 1 to 10 minutes after the alarm time is up. After the phone alerts you at the set alarm time, you may select **Snooze** to activate the snooze function. If you don't like your phone to alert you the second time, select **Stop** to end the **Snooze** function.
7. In the **Alert Type** option, you may set the alert method on how you would like your phone to remind you. You may select from three options: **Vib. Only, Vib. and Ring, or Ring Only**.
8. After you finish all the settings above, select **Done** to save the alarm setting.

When the Alarm Expires:

If the alarm time is reached while the device is powered off, the phone will switch itself on and the alarm will start to alert. If you select **Stop**, the phone asks whether you want to power on the phone, or not. Select **No** to power off the phone, or **Yes** to power on the phone. When the alarm alerts while the phone is powered on, the display flashes the alarm clock image and shows the current time. To turn off the alarm, select **Stop**. To stop the alarm for snooze minutes, select **Snooze**.

World Clock

You can view the local date and time via selecting the GMT and city. When the cross points out a certain city, it will show the local date and time.

 **Note:** If you want to change the home city, please go to **Settings > Phone Settings > Time and Date > Set Home City**.

Services

Services described in the following are supported by your service provider. If you cannot connect either one of the services, you should contact your service provider for further information.

Internet Service

This phone supports a WAP Browser. You can obtain various services such as up-to date news, weather, sport, and other information- as well as other Internet services. These services are designed and maintained by WAP service providers.

Notes:

1. To activate WAP service, you may need to contact your service provider.
2. Do not switch the phone on when wireless phone use is prohibited, or when it may cause interference or danger.

Homepage

To access the browser from the **Standby** mode, go to **Internet Service** in **Services** and select **Homepage**. Once connected, the homepage is displayed. The content depends on the service provider. To exit the browser, press the **End** key.

You can set the homepage address in **Services > Internet Service > Settings > Profiles**.

Bookmarks

You can use this menu to save important URL addresses to a quick access WAP page.

Recent Pages

You can view the recent pages that you've visited.

Offline Pages

You can view the saved offline pages that you've visited.

Input Address

You can key in the URL address. When you are done, select **Options > Done**. Your phone will connect you to the URL address that you've just keyed in. After the address is entered, you may select the URL and then select **Options > Go To** to connect to next time.

Service Inbox

WAP push messages are saved here.

Settings

GPRS (General Packet Radio Service) is a technology that is used for sending and receiving data over the mobile network.

WAP Setting

If the settings have made by the service provider, you may begin immediately. If the accessed profiles have been assigned by your service provider, select a profile and activate it. Otherwise, you may key in the setting manually. For appropriate settings, contact your network operator or service provider.

Key In The Service Settings Manually:

1. From the main menu, select **Services > Internet Service > Settings > Profiles**.
2. Select a profile from the list. Select **Activate Profile** to activate the selected profile. You may edit the profile in **Profile Name, Homepage, Data Account, Connection Type, User Name, or Password**. To get more information, you may need to contact your operator.

 **Note:** In most cases, you only need to use **ONE** of the default profiles to access the Internet. The settings are different from operator to operator. Please consult your operator or service provider for the correct settings and proceed with care. Wrong settings will cause the connection to fail.

Browser Options

You can set the timeout value for the browser. The purpose is to stop the browser from connecting to the website if the website does not respond within the timeout. Also, you can choose to either to turn **On**, or turn **Off** the image while browsing.

Service Message Settings

You can choose either to receive or reject the service messages that are saved in the service inbox sent by your service provider.

Clear Cache

The information or data you have accessed is all stored in the cache of the phone. A cache is a file buffer used to store data only temporarily. You can clear the cache by selecting this option.

Clear Cookies

Under the consideration of privacy and security issue, we would suggest you to clear cookies which may contain sensitive information just in case your phone is misplaced, lost or stolen.

Trusted Certificates

This function is used to indicate your trusted certificates while browsing, and allows you to manage your trust list.

User profiles

Your phone provides 6 different profiles, including General, Meeting, Outdoor, Indoor, Silent and Headset profiles.

Note: If you customize the alert type, the indication icon may be changed.

The Headset profile is activated when the headset is plugged in.

To Activate a Profile

1. In the **Profile** menu, select a profile.
2. Select **Options > Activate**.

To Edit The Profile

You can customize profile settings to meet your preference.

1. In **Profile** menu, select a profile.
 2. Select **Options > Customize**.
-

Extra

Calculator

The calculator applies simple calculator functions, such as addition, subtraction, multiplications and division.

Currency Converter

First, you should enter the rate, and then enter the local data.

Press the OK key, and the foreign data conversion will be shown automatically.

Stopwatch

This function is designed to store the timepiece, which is to start or stop for exact timing.

To use stopwatch

1. From the main menu select **Extra > Stopwatch**.
2. Select **Typical stopwatch**. You can choose different record methods and view records.
 - **Split Timing:** When you select this, the timepiece will be saved and continue to count when you press **Split**. The 2nd timepiece is recorded based on the continuous timing. You can stop and resume anytime.
 - **Lap Timing:** When you select this, the timepiece will be saved and start the new timing when you press **Lap**. The 2nd timepiece is recorded in new timing. You can stop and resume anytime.
 - **View records:** You can view those timepieces you have recorded or delete the records.
3. Select **nWay stopwatch**. You can make four records by pressing the Navigation Key.

GENERAL Information

Accessories

There are various accessories for your mobile phone. Your pack will include standard battery x 1, headset x 1, and travel adapter x 1. Please note:

- Use only accessories and charging devices approved by the phone manufacturer, otherwise you would risk serious damage to health and property.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions.

GPRS/EDGE

Please Note: Only RX supports EDGE, and only TX supports GPRS.

PRECAUTIONS

Please carefully read and observe the terms below:



Safe power on

Do not use your cellular phone where it is restricted to use or you might cause a disturbance or danger.

Safe transportation first



Please observe all related local laws and regulations.
Please drive with both hands.
Safe transportation should be considered when driving.



Disturbance
All cellular phone services may be disrupted.



Turn off when in the hospital
Please follow related restrictions.
Please switch your cellular phone off when near a medical instrument.



Turn off on an airplane
Please follow related restrictions.
Do not use your cellular phone on an airplane.



Turn off when at a gasoline station
Do not use your cellular phone at a filling station or around fuels or chemicals.



Turn off near exposure Area
Please observe related limitations and do not use your cellular phone near an area where explosions can occur.



Proper use
As described in this manual, your cellular phone can be used only in proper locations.
If possible, please do not touch the antenna area of your phone.



Use qualified after sales service
Only a qualified technician can repair your cellular phone.



Accessories and batteries
Only use the authorized accessories and batteries and do not connect to incompatible products.



Waterproof
Your cellular phone is not waterproof. Please keep it away from water.



Backup
Remember to make a backup or keep a written record of all important information saved in your cellular phone.



Connect to other devices
Please read the user manual of the device to get more detailed security instructions before connecting to other devices and do not connect to an incompatible product.



SOS emergency calls
Make sure your cellular phone is switched on and in a service area. In idle mode, input the SOS number, then press the Dial Key. Advise where you are and do not hang up without permission.

TROUBLESHOOTING

Common issue	Reason	Troubleshooting
--------------	--------	-----------------

Bad connection	Using the cellular phone in an area where the network connection is poor, such as around a tower or basement where a radio wave cannot be sent effectively.	Try to avoid.
	Using the cellular phone when the network is busy, such as an on-off duty time or the line is busy.	Try to avoid.
	Related to the distance of the send basis of the network.	Ask your operator to provide a map of your service area.
Aftersound or cacophony	It is caused by the network connection and it is a regional problem.	Hang up and redial the number.
	Network connection is not good in some areas.	
Idle time becomes short	Idle time is related to network settings.	If the cellular phone is in an area where the network connection is not good, please temporarily shut off your phone.
	Need to change battery.	Insert a new battery.
	When you cannot receive signals, your cellular phone will continue to send to find a basis. A lot of battery power is used, so as to limit idle time.	Please move to an area where the signal is strong or temporarily turn off your phone.
Cannot switch on	Battery is drained.	Check battery volume or charge battery.
Wrong SIM card	SIM card is damaged.	Contact your operator.
	SIM card is not inserted properly.	Make sure SIM card is inserted properly.
	Dirt on metal side of SIM card.	Wipe metal point of SIM card with a clean cloth.
Cannot connect to network	SIM card is unusable	Contact your operator.
	Out of GSM service area.	Request service area to operator.

	Feeble signal.	Please move to an area where signal is stronger and try again.
Cannot call	Call barring is activated	Cancel call barring
Wrong PIN code	Entered the wrong PIN code three times.	Contact your operator.
Cannot charge	Battery or charger is damaged.	Change battery or charger.
	Charge in area where the temperature is lower than 0°C or higher than 40°C.	Change charging environment.
	Bad connection	Check the connection between the phone and the charger.
Cannot add contact	Contacts memory is full.	Delete some contacts.
Cannot set some functions	Operator does not support the function or you have not applied the function.	Contact your operator.

SAFETY INFORMATION AND NOTICES

Using the Cellular Phone and Charger

Danger:

Only use the battery and charger approved by the manufacturer. Using other brands may cause battery leakage, overheating, explosion or even fire.

Caution:

Keep the phone away from dust, water and damp areas. Dust, water or other liquids may cause overheating, electrical leakage, and/or phone failure.

The phone, battery, charger and AC adapter are not waterproof. Keep them away from liquid.

Warning:

Do not bump, shake or tamper with the phone or charger. This may cause battery leakage, overheating, explosion or even fire.

Do not place the battery, phone or charger near a microwave or high-voltage device. This may cause battery leakage, overheating, explosion or even fire; also prevent the phone and AC adapter from overheating, smoking or short circuiting.

Do not use the phone around volatile oil. This may cause fire, breakdown or damage.

To avoid any damage or breakage, do not disassemble the phone, battery, charger or internal components by yourself.

Using the Cellular Phone

Warning:

Do not use the phone while you are driving. Pull over and stop your automobile to dial or answer a phone call. Usage of cellular phones in aircrafts or hospitals is prohibited. Turn the phone off to prevent interference with

electronic medical devices. Follow any rules or regulations in such places.

Do not use the phone at a gas station, near fuel or near chemicals.

Do not use the phone near electronic medical devices such as hearing aids, pacemakers and auto-control devices such as fire detectors and automatic doors.

If you have to use your cellular phone near an electronic medical device such as a pacemaker, please contact your manufacturer or dealer for information about preventing interference.

Caution:

Electronic systems in automobiles such as anti-lock brakes, speed control, or fuel spraying systems, are usually not influenced by wireless devices. Manufacturers of these systems will tell you whether they are provided with good screening functions. If you suspect that an automobile failure is caused by a wireless wave, please contact your automobile dealer.

Avoid using your phone in crowded places.

Do not store your cellular phone near or together with a credit card, disk or other magnetic materials. This may affect information stored on your phone.

Keep your phone away from pins. Pins can be absorbed by the phone's receiver magnet, which may cause harm.

Using the Battery

Danger:

Do not dispose of the battery into a fire. Doing so may cause battery explosion or even fire.

If you have difficulties installing the battery, do not force the installation. This may cause battery leakage, overheating, explosion or even fire.

Keep metal objects away so they do not come in contact with the battery or its connectors as it may cause the battery to short circuit, overheat or explode.

Do not weld the polarities of the battery directly together. This may cause battery leakage, overheating, explosion or even fire.

Battery liquid is severely harmful for your eyes. If battery liquid gets in your eyes, do not rub them. Instead, wash your eyes with water first and then go directly to a doctor for help.

Do not use or store your phone in high temperature areas. This may cause battery leakage, overheating, explosion or even fire.

Warning:

Replace the battery when the normal usage time begins to decrease or if you notice the battery is overheated or has changed shape or color.

If battery liquid leaks onto your skin or clothes, immediately wash the affected parts with water.

If the battery begins to leak or emits a strange odor, properly dispose of the battery according to local regulations. Do not throw it into a fire.

Caution:

Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 60°C (140°F), such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

Using the Charger

Danger:

Only use the charger that came with the phone. Using a different charger may cause the phone to breakdown or explode.

If the charger short circuits, a fire may occur.

Do not use a damaged, worn or broken charger. This may cause a fire.

Clean dust away from the power socket to avoid the possibility of a fire.

Do not store the charger near any liquids. If liquids spill onto the charger it may cause it to overheat or breakdown.

If liquid does spill onto the charger, immediately unplug the power cable to prevent overheating, fire or another type of breakdown.

Do not use the charger in places with high humidity like a bathroom. This may cause a fire or other breakdown.

Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.

Caution:

Keep the environment temperatures within the range of 0°C ~40°C while charging. Temperature below 0°C or higher than 40°C will cause insufficient charging, terminate charging or even cause the battery to explode.

Unplug the charger from its power source before cleaning it.

Do not place heavy objects on the power cord. This may cause electric shock or fire.

Hold the plug while unplugging the power cord. This will avoid any potential damage or even fire.

Requirements for Cellular Phone

Avoid using your cellular phone in extremely high or low temperatures. Use the phone in a temperature range between -10~55°C and humidity of 35%~85%.

It is recommended that you do not use your cellular phone near a telephone, TV set, radio or other radio frequency sensitive devices.

Requirements for the Battery

When not in use, store the battery in a cool, well-ventilated place with sunlight.

If you will not be using the cellular phone for an extended period of time, charge the battery on a regular basis to avoid battery breakdown.

The phone battery wears out fast. If after charging the battery does not improve its performance, it is time to replace the battery. Properly dispose of the battery according to local regulations. Do not throw it into a fire.

Requirements for the Charger and AC Adapter

Do not charge your phone under the following circumstances: sunlight, temperatures equal to or lower than 0°C, temperatures equal to or higher than 40°C, high humidity, dust, high vibration areas, or near a TV, a radio, etc.

Specific Absorption Rate (SAR) information

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This model (FCC ID: T38PCD2090C) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.225 W/kg and when properly worn on the body is 1.257 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Cleaning and Maintenance

The cellular phone, the battery and the charger are not waterproof. Do not use them in places with high humidity like a bathroom and also avoid spilling any liquids on them.

Use a soft cloth to clean the cellular phone, the battery and the charger.

Do not use alcohol, diluted liquid or benzene to clean the cellular phone.

If dust gets in the sockets the phone can be damaged, short-circuit or even lose the ability to be re-charged. Be sure to clean the socket regularly.

12 MONTH LIMITED WARRANTY

PERSONAL COMMUNICATIONS DEVICES (the Company) warrants to the original retail purchaser of this PCD handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;

Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.

Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;

Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;

Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;

Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

When sending your wireless device to PERSONAL COMMUNICATIONS DEVICES for repair or service, please note that any personal data or software stored on the device may be inadvertently erased or altered. Therefore, we strongly recommend you make a back up copy of all data and software contained on your device before submitting it for repair or service. This includes all contact lists, downloads (i.e. third-party software applications, ringtones, games and graphics) and any other data added to your device. In addition, if your wireless device utilizes a SIM or Multimedia card, please remove the card before submitting the device and store for later use when your device is returned, PERSONAL COMMUNICATIONS DEVICES is not responsible for and does not guarantee restoration of any third-party software, personal information or memory data contained in, stored on, or integrated with any wireless device, whether under warranty or not, returned to PERSONAL COMMUNICATIONS DEVICES for repair or service.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing. In addition, for reference to an authorized Warranty station in your area, you may telephone in the United States (800) 229-1235, and in Canada (800) 465-9672 (in Ontario call 416-695-3060).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

IN USA: PERSONAL COMMUNICATIONS DEVICES

555 Wireless Blvd.
Hauppauge, NY 11788
(800) 229-1235

IN CANADA: PCD COMMUNICATIONS CANADA LTD.

5535 Eglinton Avenue West
Suite# 234
Toronto, ON M9C 5K5
(800) 465-9672